	CITROEN BLD Function List (Note:For reference on	ly)				
NOTES:						
• This function is supp	ported.					
	e supported, which depends on the actual condition of the	vehicle.				
\odot This function is not	supported.					
▲ This function is the	new feature in this version.					
Model	Model Type	BLD				
BERLINGO	BERLINGO (2) (2002 - 2008)					
BERLINGO	BERLINGO (2) (M69)					
BERLINGO	BERLINGO (B9)	•				
BERLINGO	BERLINGO Electric (B9E)	•				
C-ELYSEE	C-ELYSEE	•				
C-QUATRE	C-QUATRE (4)	•				
C-QUATRE	C-QUATRE (5)	•				
C-TRIOMPHE		•				
C3	C3 (A51)	•				
C3	C3 (Ai51)	•				
C3	C3 (AIRCROSS) (A88)	•				
C3	C3 (AIRCROSS) (Ai58)	•				
C3	C3 (B618)	•				
C3	C3 (PICASSO) (A58)	•				
C3	C3 (PICASSO) (Ai58)	•				
C3	C3 (XR)	•				
C4	C4 (2004 - 2010)	•				
C4	C4 (B7) (2010 -)	•				
C4	C4 (BZ3) (CHINA)	•				
C4 C4 C4	C4 (L) (B7)	•				
C4	C4 (PICASSO) (2006 - 2013)					
C4	C4 (PICASSO) (B78) (2013 -)	•				
C4	C4 (SEDAN) (2006 -)					
C4 C5	C5 (3rd Generation)					
C5	C5 (AIRCROSS)					
C5	C5 (X7) (2007 -)	_				
C6	C6	¥				
C6	C6 (CHINA)	¥				
C8	C8 (CAN) (2005 -)	_				
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	_				
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)					
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)					
JUMPY/DISPATCH	JUMPY/DISPATCH (K0) (2016 -)					
SPACETOURER						
SFACETOOKEK	CITRONE BLD Function List (Note:For reference on	ly)				
Bleeding						
Bleeding Of The Hyd	raulic Block					
Bleeding Of The Hydraulic Block ABS MK100 Bleeding Of The Hydraulic Block ASR8.0						
	raulic Block ESP MK100					
Bleeding Of The Hyd						

	CITROEN BMS Function List (Note:For reference or	nly)
NOTES:		
This function is sup		
	be supported, which depends on the actual condition of the	e vehicle.
○ This function is not		
	new feature in this version.	DN 40
Model	Model Type	BMS
BERLINGO	BERLINGO (B9)	•
BERLINGO	BERLINGO Electric (B9E)	•
C3	C3 (A51)	•
C3	C3 (AIRCROSS) (A88)	•
C3	C3 (B618)	•
C3	C3 (PICASSO) (A58)	•
C4 C4	C4 (2004 - 2010)	•
C4	C4 (B7) (2010 -)	•
C4	C4 (PICASSO) (2006 - 2013)	
C4	C4 (PICASSO) (B78) (2013 -)	
C4 C5	C4 (SEDAN) (2006 -)	•
C5	C5 (3rd Generation)	•
C5	C5 (AIRCROSS)	•
C5	C5 (X7) (2007 -)	
C6	C6	
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	
JUMPY/DISPATCH	JUMPY/DISPATCH (K0) (2016 -)	•
SPACETOURER		•
	CITRONE BMS Function List (Note:For reference or	ly)
Manual Configuratio	n	

CITROEN Diagnostic Function List (Note:For reference only)

NOTES:

NOTES:							
● This functi	on is supported.						
≫ This functi	on may be supported, which depends	s on the actual condition of the vehicle.					
O This functi	on is not supported.						
▲ This functi	on is the new feature in this vers	sion.					
Model	Model Type	System Name	EcuInfo	Read	Erase	LiveData	Act
BERLINGO	BERLINGO (1) (1996 - 2002)	ABS (ABS Electronic Distribution)	•	Codes	Codes	•	•
BERLINGO	BERLINGO (1) (1996 - 2002)	CD (CD Player)	•	•	•	•	•
BERLINGO	BERLINGO (1) (1996 - 2002)	ECM (Engine Control Module)	•	•	•	•	•
BERLINGO	BERLINGO (1) (1996 - 2002)	IP (Instrument Cluster Panel)	•	•	•	•	•
BERLINGO	BERLINGO (1) (1996 - 2002)	RADIO1 (Radio Post-equipment(Autoradio 1))	•	•	•	•	•
BERLINGO	BERLINGO (1) (1996 - 2002)	SRS (Autoliv/(SAC AKF) Airbag)	•	•	•	•	•
BERLINGO	BERLINGO (2) (2002 - 2008)	ABS (Anti-lock brake System)	•	•	•	•	•
BERLINGO	BERLINGO (2) (2002 - 2008)	AH (Additional Heating(Chauff-add))	•	•	•	•	•
BERLINGO	BERLINGO (2) (2002 - 2008)	Alarm(Alarme texton)	•	•	•	•	•
BERLINGO	BERLINGO (2) (2002 - 2008)	BSI (Built-in Systems Interface)	•	•	•	•	•
BERLINGO	BERLINGO (2) (2002 - 2008)	CD (CD Player(Changer-cd))	•	•	•	•	•
BERLINGO	BERLINGO (2) (2002 - 2008)	ECM (Engine Control Module)	•	•	•	•	•
BERLINGO	BERLINGO (2) (2002 - 2008)	IP (Instrument Cluster Panel)	•	•	•	•	•
BERLINGO	BERLINGO (2) (2002 - 2008)	MULD (Multifunction Display SAGEM A)	•	•	•	•	•
BERLINGO	BERLINGO (2) (2002 - 2008)	PAM (Parking Assistance)	•	•	•	•	•
BERLINGO	BERLINGO (2) (2002 - 2008)	RADIO2 (Radio Post-equipment(Autoradio 2))	•	•	•	•	•
BERLINGO	BERLINGO (2) (2002 - 2008)	RBS (Rain And Brightness Sensor(Pluie_luminosite))	•	•	•	•	•
BERLINGO	BERLINGO (2) (2002 - 2008)	SM (Services Module)	•	•	•	•	•
BERLINGO	BERLINGO (2) (2002 - 2008)	SRS (Airbag 5.3)	•	•	•	•	•
BERLINGO	BERLINGO (2) (2002 - 2008)	SRS (Airbag)	•	•	•	•	•
BERLINGO	BERLINGO (2) (2002 - 2008)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	٠	•	•	•
BERLINGO	BERLINGO (2) (M69)	ABS (Anti-lock brake System)	•	•	•	•	•
BERLINGO	BERLINGO (2) (M69)	BSI (Built-in Systems Interface)	•	•	•	•	•
BERLINGO	BERLINGO (2) (M69)	ECM (Engine Control Module)	•	•	•	•	•
BERLINGO	BERLINGO (2) (M69)	IP (Instrument Cluster Panel)	•	•	•	•	•
BERLINGO	BERLINGO (2) (M69)	SRS (Airbag)	•	•	•	•	•
BERLINGO	BERLINGO (2) (M69)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
BERLINGO	BERLINGO (B9)	ABS (Anti-lock brake System)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	AC (AIR Conditioning Compressor)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	Alarm	•	•	•	•	•
BERLINGO	BERLINGO (B9)	BATT (Battery Change Status Unit)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	BATT (Onboard Charger Of The Traction Battery)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	BATT (Traction Battery ECU)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	BATT-01 (Traction Battery Cells Management(Module 01))	•	•	•	•	•
BERLINGO	BERLINGO (B9)	BATT-02 (Traction Battery Cells Management(Module 02))	•	•	•	•	•
BERLINGO	BERLINGO (B9)	BATT-03 (Traction Battery Cells Management(Module 03))	•	•	•	•	•
BERLINGO	BERLINGO (B9)	BATT-04 (Traction Battery Cells Management(Module 04))	•	•	•	•	•
BERLINGO	BERLINGO (B9)	BATT-05 (Traction Battery Cells Management(Module 05))	•	•	•	•	•
BERLINGO	BERLINGO (B9)	BATT-07 (Traction Battery Cells Management(Module 07))	•	•	•	•	•
BERLINGO	BERLINGO (B9)	BATT-08 (Traction Battery Cells Management (Module 08))	•	•	•	•	•
BERLINGO	BERLINGO (B9)	BATT-09 (Traction Battery Cells Management(Module 09))	•	•	•	•	•
BERLINGO	BERLINGO (B9)	BATT-10 (Traction Battery Cells Management(Module 10))	•	•	•	•	•
BERLINGO	BERLINGO (B9) BERLINGO (B9)	BSI (Built-in Systems Interface)	•	•	•	•	•
BERLINGO BERLINGO	BERLINGO (B9)	BWCU (Bodywork Conversion Unit) CD (CD Player)	•	•	•	•	•
			•	•	•	•	•
BERLINGO BERLINGO	BERLINGO (B9) BERLINGO (B9)	ECM (Engine Control Module) EMM (Electric Machine Management ECU)	•		•	•	
BERLINGO	BERLINGO (B9)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	ERU (Engine Relay Unit)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	EVM (Electric Vehicle Management ECU)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	HFC (Hands Free Control Kit)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	HFR (High Frequency Receiver)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	IP (Instrument Cluster Panel)	•	•	•	•	•
		,			-	-	

Sivu 4/60

-			-	5100			
BERLINGO	BERLINGO (B9)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	MULS (Multifunction Screen)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	PAM (Parking Assistance)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	PCAHR (Passenger's Compartment Air Heating Resistor)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	RS (Rain Sensor)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	Radio	•	•	•	•	•
BERLINGO	BERLINGO (B9)	SM (Services Module)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	SRS (Airbag)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
BERLINGO	BERLINGO (B9)	TCM (Automatic Gearbox)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	TEU (Telematics Unit)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	TRU (Trailer Relay Unit)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
BERLINGO	BERLINGO (B9)	VRD (Voltage Retaining Device)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	ABS (Anti-lock brake System)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	AC (AIR Conditioning Compressor)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	Alarm	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT (Battery Change Status Unit)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT (Onboard Charger Of The Traction Battery)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT (Traction Battery ECU)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT-01 (Traction Battery Cells Management(Module 01))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT-02 (Traction Battery Cells Management(Module 01)) BATT-02 (Traction Battery Cells Management(Module 02))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT-02 (Traction Battery Cells Management(Module 02)) BATT-03 (Traction Battery Cells Management(Module 03))	•	•	•	•	•
	BERLINGO Electric (B9E)		•	•	•	•	•
BERLINGO		BATT-04 (Traction Battery Cells Management(Module 04))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT-05 (Traction Battery Cells Management(Module 05))		•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT-07 (Traction Battery Cells Management(Module 07))	•	-	-	-	-
BERLINGO	BERLINGO Electric (B9E)	BATT-08 (Traction Battery Cells Management(Module 08))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT-09 (Traction Battery Cells Management(Module 09))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT-10 (Traction Battery Cells Management(Module 10))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BSI (Built-in Systems Interface)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BWCU (Bodywork Conversion Unit)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	CD (CD Player)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	ECM (Engine Control Module)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	EMM (Electric Machine Management ECU)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	ERU (Engine Relay Unit)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	EVM (Electric Vehicle Management ECU)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	HFC (Hands Free Control Kit)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	HFR (High Frequency Receiver)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	IP (Instrument Cluster Panel)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	MULS (Multifunction Screen)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	PAM (Parking Assistance)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	PCAHR (Passenger's Compartment Air Heating Resistor)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	RS (Rain Sensor)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	Radio	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	SM (Services Module)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	SRS (Airbag)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	TCM (Automatic Gearbox)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	TEU (Telematics Unit)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	TRU (Trailer Relay Unit)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	VRD (Voltage Retaining Device)	•	•	•	•	•
C-CROSSER		ABS (Anti-lock brake System)	•	•	٠	•	•
C-CROSSER		AC (Air Conditioning)	•	•	٠	•	•
C-CROSSER		AFS	•	•	•	•	•
C-CROSSER		BSI (Built-in Systems Interface)	•	•	•	•	•
C-CROSSER		DPCRF (Rear Final Drive Piloted Clutch)	•	•	•	•	•
C-CROSSER		DSPRLH (Rear LH Door Switch Panel)	•	•	•	•	•
C-CROSSER		DSPRRH (Rear RH Door Switch Panel)	•	•	•	•	•
L	P	• · · · · · · · · · · · · · · · · · · ·					

C-CROSSER		ECM (Engine Control Module)	•	•	•	•	•
C-CROSSER		HFC (Hands Free Control Kit)	•	•	•	•	•
C-CROSSER		IMMO (Locking And Immobiliser Control Module)	•	•	•	•	•
C-CROSSER		IP (Instrument Cluster Panel)	•	•	•	•	•
C-CROSSER		KEY (Electrionic Key Reader)	•	•	•	•	•
C-CROSSER		NAVI (Navigation)	•	•	•	•	•
C-CROSSER		PAM (Parking Assistance)	•	•	•	•	•
C-CROSSER		PDPC	•	•	•	•	•
C-CROSSER		PDPP	•	•	•	•	•
C-CROSSER		RBS (Rain And Brightness Sensor)	•	•	•	•	•
C-CROSSER		Radio	•	•	•	٠	•
C-CROSSER		SAS (Steering Wheel Angle Sensor)	•	•	•	•	•
C-CROSSER		SRS (Airbag)	•	•	•	•	•
C-CROSSER		Sunroof	•	•	•	•	•
C-CROSSER		TCM (Automatic Gearbox)	•	•	•	•	•
C-CROSSER		TCM (Gear Lever(Dct))	•	•	•	•	•
C-ELYSEE	C-ELYSEE	ABS (Anti-lock brake System BOSCH 8.1)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	ABS (Anti-lock brake System)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	BSI (Built-in Systems Interface)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	CLC (Central Locking Control Unit)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	ECM (Engine Control Module)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	EPS (Electric Power Steering)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	ESL (Electric Steering Lock)	•	•	٠	•	٠
C-ELYSEE	C-ELYSEE	IP (Instrument Cluster Panel)	•	•	•	•	٠
C-ELYSEE	C-ELYSEE	KEY (Electrionic Key Reader)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	MAP (Multiplexed Addition Pump)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	MULS (Multifunction Screen)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	PAM (Parking Assistance)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	Radio	•	•	•	•	•
C-ELYSEE	C-ELYSEE	SM (Services Module)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	SRS (Airbag)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	SRS (Autoliv Central Airbag)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C-ELYSEE	C-ELYSEE	Siren	•	•	•	•	•
C-ELYSEE	C-ELYSEE	TCM (Automatic Gearbox AL4 TA2000)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	TCM (Automatic Gearbox)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	TRU (Trailer Relay Unit)	•	•	•	•	•
C-ELYSEE	C-ELYSEE	VRD (Voltage Retaining Device)	•	•	•	•	•
C-ELYSEE	C-ELYSEE (R3)	ABS (Anti-lock brake System BOSCH 8.1)	•	•	•	•	•
C-ELYSEE	C-ELYSEE (R3)	CLC (Central Locking Control Unit)	•	•	•	•	•
C-ELYSEE	C-ELYSEE (R3)	ECM (Engine Control Module)	•	•	•	•	•
C-ELYSEE	C-ELYSEE (R3)	KEY (Electrionic Key Reader)	•	•	•	•	•
C-ELYSEE	C-ELYSEE (R3)	SRS (Airbag)	•	•	•	•	•
C-ELYSEE	C-ELYSEE (R3)	SRS (Autoliv Central Airbag)	•	•	•	•	•
C-ELYSEE	C-ELYSEE (R3)	TCM (Automatic Gearbox AL4 TA2000)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	ABS (Anti-lock brake System)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	AC (Air Conditioning)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	ALM (Anti-theft Alarm)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	BSI (Built-in Systems Interface)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	CD (CD Player)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	DDM (Driver's Door Module)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	ECM (Engine Control Module)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	EPS (Electric Power Steering)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	ERU (Engine Relay Unit)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	HFC (Hands Free Control Kit)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	IP (Instrument Cluster Panel)	•	•	•	•	•
C-QUATRE C-QUATRE	C-QUATRE (4)	MULS (Multifunction Screen)	•	•	•		•
	C-QUATRE (4)		•	•	•		
C-QUATRE C-QUATRE	C-QUATRE (4)	PAM (Parking Assistance) PDM (Passenger's Door Module)	•	•	•		
C-QUATRE C-QUATRE	C-QUATRE (4)	Radio	•	•	•	-	
	C-QUAIRE (4)		•	•	•		
C-QUATRE	C-QUATRE (4)	SRS (Airbag)	•	•	•	-	•
C-QUATRE	U-WUNIKE (4)	SWFCC (Steering Wheel With Fixed Central Controls)	-	•	•	•	-

Sivu 6/60

C-QUATRE	C-QUATRE (4)	TCM (Automatic Gearbox AL4)	•	•	•	•	•
C-QUATRE	C-QUATRE (4)	TEU (Telematics Unit RT3)	•	•	•	•	•
C-QUATRE	C-QUATRE (5)	ABS (Anti-lock brake System)	•	•	•	•	•
C-QUATRE	C-QUATRE (5)	AC (Air Conditioning)	•	•	•	•	•
C-QUATRE	C-QUATRE (5)	ALM (Anti-theft Alarm)	•	•	•	•	•
C-QUATRE	C-QUATRE (5)	BSI (Built-in Systems Interface)	•	•	•	•	•
C-QUATRE	C-QUATRE (5)	CD (CD Player)	•	•	•	•	•
C-QUATRE	C-QUATRE (5)	DDM (Driver's Door Module)	•	•	•	•	•
C-QUATRE	C-QUATRE (5)	ECM (Engine Control Module)	•	•	•	•	•
C-QUATRE	C-QUATRE (5)	EPS (Electric Power Steering)	•	•	•	•	•
C-QUATRE	C-QUATRE (5)	ERU (Engine Relay Unit)	•	•	•	•	•
C-QUATRE	C-QUATRE (5)	HFC (Hands Free Control Kit)	•	•	•	•	•
C-QUATRE	C-QUATRE (5)	IP (Instrument Cluster Panel)	•	•	•	•	•
C-QUATRE	C-QUATRE (5)	MULS (Multifunction Screen)	•	•	•	•	•
C-QUATRE	C-QUATRE (5)	PAM (Parking Assistance)	•	•	•	•	•
			•	•	•	•	•
C-QUATRE	C-QUATRE (5)	PDM (Passenger's Door Module)	•	•	•	•	•
C-QUATRE	C-QUATRE (5)	RBS (Rain And Brightness Sensor)		-	-	-	-
C-QUATRE	C-QUATRE (5)	Radio	•	•	•	•	•
C-QUATRE	C-QUATRE (5)	SRS (Airbag)	•	•	•	•	•
C-QUATRE	C-QUATRE (5)	SWFCC (Steering Wheel With Fixed Central Controls)	•	•	•	•	•
C-QUATRE	C-QUATRE (5)	TCM (Automatic Gearbox AL4)	•	•	•	•	•
C-QUATRE	C-QUATRE (5)	TEU (Telematics Unit RT4)	•	•	•	•	•
C-TRIOMPHE		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
C-TRIOMPHE		AC (Air Conditioning)	•	•	•	٠	•
C-TRIOMPHE		Alarm	•	•	•	٠	•
C-TRIOMPHE		BSI (Built-in Systems Interface)	•	•	•	•	•
C-TRIOMPHE		CD (CD Player)	•	•	•	٠	•
C-TRIOMPHE		DDM (Driver's Door Module)	•	•	•	•	•
C-TRIOMPHE		DHL (Directional Headlamps)	•	•	•	•	•
C-TRIOMPHE		ECM (Engine Control Module)	•	٠	٠	•	•
C-TRIOMPHE		EPS (Electric Power Steering)	•	•	•	•	•
C-TRIOMPHE		ERU (Engine Relay Unit)	•	•	•	•	•
C-TRIOMPHE		HFC (Hands Free Control Kit)	•	•	•	•	•
C-TRIOMPHE		IP (Instrument Cluster Panel)	•	•	•	•	•
C-TRIOMPHE		MULD (Multifunction Display C)	•	•	•	•	•
C-TRIOMPHE		PAM (Parking Assistance)	•	•	•	•	•
C-TRIOMPHE		PDM (Passenger's Door Module)	•	•	•	•	•
C-TRIOMPHE		RLS (Rain And Light Sensor)	•	•	•	•	•
C-TRIOMPHE		Radio	•	•	•	•	•
C-TRIOMPHE		SRS (Airbag)	•	•	•	•	•
C-TRIOMPHE		SWFCC (Steering Wheel With Fixed Central Controls)	•	•	•	•	•
C-TRIOMPHE		TCM (Automatic Gearbox)	•	•	•	•	•
			•	•	•		•
C-TRIOMPHE C-TRIOMPHE		TEU (Telematics Unit RT3) TRU (Trailer Relay Unit)	•	•	•		•
		ABS (Anti-lock brake System)	•	•	•		•
C-ZERO			•	_	•		•
C-ZERO		AC (Air Conditioning)	-	•	-	•	-
C-ZERO	l	BATT (Onboard Charger Of The Traction Battery)	•	•	•	•	•
C-ZERO		BATT (Traction Battery ECU)	•	•	•	•	•
C-ZERO		BATT-01 (Traction Battery Cells Management(Module 01))	•	•	•	•	•
C-ZERO		BATT-02 (Traction Battery Cells Management(Module 02))	•	•	•	•	•
C-ZERO		BATT-03 (Traction Battery Cells Management(Module 03))	•	•	•	•	•
C-ZERO		BATT-04 (Traction Battery Cells Management(Module 04))	•	•	•	•	•
C-ZERO		BATT-05 (Traction Battery Cells Management(Module 05))	•	•	•	•	•
C-ZERO		BATT-07 (Traction Battery Cells Management(Module 07))	•	•	•	•	•
C-ZERO		BATT-08 (Traction Battery Cells Management(Module 08))	•	•	•	•	•
C-ZERO		BATT-09 (Traction Battery Cells Management(Module 09))	•	•	•	٠	•
C-ZERO		BATT-10 (Traction Battery Cells Management(Module 10))	•	•	•	•	•
C-ZERO		BATT-11 (Traction Battery Cells Management(Module 11))	•	•	•	•	•
C-ZERO		DVT (Direct Voltage(DC/DC) Transformer)	•	•	•	•	•
C-ZERO		EMM (Electric Machine Management ECU)	•	•	•	•	•
C-ZERO		EPS (Electric Power Steering)	•	•	•	•	•
C-ZERO		EVM (Electric Vehicle Management ECU)	•	•	•	•	•
s							

C-2920 Inc. 19 Sec. 10								
SeameIndexModeModeModeModeModeModeModeModeModeSeameMathematical Mathematical Ma	C-ZERO		GWH (Gateway Wiring Housing)	•	•	•	•	•
SouthSouther years are souther years are	C-ZERO		IP (Instrument Cluster Panel)	•	•	•	•	•
constrspectra stablespectra	C-ZERO		Radio	•	•	•	٠	•
CrownSolution<	C-ZERO		SAS (Steering Wheel Angle Sensor)	•	•	•	•	•
11 11 14 144 14 14 14 14 11 12 12 12 14 14 14 12 12 12 14 14 14 14 13 12 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14 14	C-ZERO		SM (Services Module)	•	•	•	•	•
Ch <td>C-ZERO</td> <td></td> <td>SRS (Airbag)</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>	C-ZERO		SRS (Airbag)	•	•	•	•	•
Ch <td>C1</td> <td>C1 (B0)</td> <td>ABS (Anti-lock brake System)</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>	C1	C1 (B0)	ABS (Anti-lock brake System)	•	•	•	•	•
1100.660.780.560.66 </td <td></td> <td></td> <td></td> <td>•</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>				•	•	•	•	•
11.0. 0400490				•	•	•	•	•
6.0.00010				-	_	-	-	-
SinGenG				-	-	-	-	
B1 B1 B0 D0 Monalis Gardial Macha Startard Image: Start and Startard Macha Startard Image: Start And Start And Startard Macha Image: Start And Sta	C1				-	-		
C1 01 <td< td=""><td></td><td></td><td>-</td><td>-</td><td>-</td><td>-</td><td></td><td></td></td<>			-	-	-	-		
C1 0.00 b7.000 (and control Model) Image: Cont					-	•	•	•
D10.1				•	-	•	•	•
Cl. 691 Cl. 691 <t< td=""><td></td><td></td><td>AC (Air Conditioning)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></t<>			AC (Air Conditioning)	•	•	•	•	•
11 01 040 040 0 </td <td></td> <td>C1 (B4)</td> <td>ECM (Engine Control Module)</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>		C1 (B4)	ECM (Engine Control Module)	•	•	•	•	•
01 <td>C1</td> <td>C1 (B4)</td> <td></td> <td>•</td> <td>•</td> <td>•</td> <td>٠</td> <td>•</td>	C1	C1 (B4)		•	•	•	٠	•
Ch OphoneDiscriminantical Visionaria hal Boots Interctions by and Associationaria and Associationaria and Associationaria and Associationariaand Associat	C1	C1 (B4)		•	•	•	•	•
1 01 000<	C1	C1 (B4)			•	•	•	•
C1 <td></td> <td></td> <td></td> <td></td> <td>-</td> <td>-</td> <td>-</td> <td></td>					-	-	-	
C1 00-0 SIS Athag)		СІ (В4)			•	•	•	
C1 04)0 SC (Step Jad Start Control EQU) •• </td <td>C1</td> <td>C1 (B4)</td> <td>MULS (Multifunction Screen)</td> <td></td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>	C1	C1 (B4)	MULS (Multifunction Screen)		•	•	•	•
C1C1OM <td>C1</td> <td>C1 (B4)</td> <td>SRS (Airbag)</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>	C1	C1 (B4)	SRS (Airbag)	•	•	•	•	•
C1C1OM <td>C1</td> <td>C1 (B4)</td> <td>SSC (Stop And Start Control ECU)</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>	C1	C1 (B4)	SSC (Stop And Start Control ECU)	•	•	•	•	•
C15 C1 (D.M. UPU HUCS DOR) Image: Descent of the set of the	C1	C1 (B4)	TCM (Automatic Gearbox)	•	•	•	٠	•
C2C1 GM3 (2006 -)MIS (Anti-lock brake System)Image: Constraints of the system of the	C15		ECM (1.9L WJY LUCAS DCN2)	•	•	•	•	•
C2C4 (XM 2008 -)NC (Air Conditioning)Image		C2 (CAN) (2006 –)	ABS (Anti-lock brake System)	•	•	•	•	•
C2C4 (XM) (2006 -)AlaraImage (M)<				•	•	•	•	•
C2C2C0NC0OSI(Built-in Systems Interface)SISISISISIC2C2CNNC0OGC1 <td< td=""><td></td><td></td><td></td><td></td><td>•</td><td></td><td></td><td></td></td<>					•			
C2C2C40, 0206 - 1C) <td>C2</td> <td></td> <td></td> <td>-</td> <td>-</td> <td>-</td> <td>-</td> <td>_</td>	C2			-	-	-	-	_
C2C3C4 <td>C2</td> <td></td> <td></td> <td>-</td> <td>-</td> <td>-</td> <td>-</td> <td></td>	C2			-	-	-	-	
C2C3C4 <td>C2</td> <td></td> <td></td> <td>-</td> <td>-</td> <td>-</td> <td>•</td> <td>-</td>	C2			-	-	-	•	-
C2C2C4NN (2006 -)ENU (Engine Relay Unit)Image of the set	C2			-	-	•		
C2CANNC2 (CANNC2 (CANNC2006 -)IP (Instrument Cluster Panel)IPIPIPIPC2C2 (CANN(C2006 -)PAM (Parking Assistance)IPIPIPIPIPC2C2 (CANN(C2006 -)RAIGRAIGIPIPIPIPIPIPC2C2 (CANN(C2006 -)RAIGRAIGIP	C2			•	-	•	•	•
C2CANNC2 (CANNC2 (CANNC2006 -)IP (Instrument Cluster Panel)IPIPIPIPC2C2 (CANN(C2006 -)PAM (Parking Assistance)IPIPIPIPIPC2C2 (CANN(C2006 -)RAIGRAIGIPIPIPIPIPIPC2C2 (CANN(C2006 -)RAIGRAIGIP	C2			•	•	•	•	•
C2CANNC2 (CANNC2 (CANNC2006 -)IP (Instrument Cluster Panel)IPIPIPIPC2C2 (CANN(C2006 -)PAM (Parking Assistance)IPIPIPIPIPC2C2 (CANN(C2006 -)RAIGRAIGIPIPIPIPIPIPC2C2 (CANN(C2006 -)RAIGRAIGIP	C2	C2 (CAN) (2006 –)	HFC (Hands Free Control Kit)	•	•	•	•	•
C2C2 (CHINA)ABS/ESP (Anti-lock brake System 0r Electric Stability Program)Image: Constraint of the system of the		C2 (CAN) (2006 -)	HFR (High Frequency Receiver)	•	•	•	٠	•
C2C2 (CHINA)ABS/ESP (Anti-lock brake System 0r Electric Stability Program)Image: Constraint of the system of the	C2	C2 (CAN) (2006 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
C2C2 (CHINA)ABS/ESP (Anti-lock brake System 0r Electric Stability Program)Image: Constraint of the system of the	C2	C2 (CAN) (2006 -)	MULS (Multifunction Screen C)	•	•	•	•	•
C2C2 (CHINA)ABS/ESP (Anti-lock brake System 0r Electric Stability Program)Image: Constraint of the system of the	C2	C2 (CAN) (2006 -)	PAM (Parking Assistance)	•	•	•	•	٠
C2C2 (CHINA)ABS/ESP (Anti-lock brake System 0r Electric Stability Program)Image: Constraint of the system of the	C2	C2 (CAN) (2006 -)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C2C2 (CHINA)ABS/ESP (Anti-lock brake System 0r Electric Stability Program)Image: Constraint of the system of the	C2	C2 (CAN) (2006 –)	Radio	•	•	•	•	•
C2C2 (CHINA)ABS/ESP (Anti-lock brake System 0r Electric Stability Program)Image: Constraint of the system of the	C2	C2 (CAN) (2006 -)	SRS (Airbag)	•	•	•	•	•
C2C2 (CHINA)ABS/ESP (Anti-lock brake System 0r Electric Stability Program)Image: Constraint of the system of the	C2			•	•	•	•	•
C2C2 (CHINA)ABS/ESP (Anti-lock brake System 0r Electric Stability Program)Image: Constraint of the system of the	C2			-	-	-	-	-
C2C2 (CHINA)ABS/ESP (Anti-lock brake System 0r Electric Stability Program)Image: Constraint of the system of the	C2			-		-	-	-
C2C2 (CHINA)ABS/ESP (Anti-lock brake System 0r Electric Stability Program)Image: Constraint of the system of the	C2						-	
C2C2 (CHINA)ABS/ESP (Anti-lock brake System 0r Electric Stability Program)Image: Constraint of the system of the	C2			_		-	-	
C2C2C4INA)AC (Air Conditioning)Image: Calibre and						-	-	-
C2C2 (CHINA)BSI (Built-in Systems Interface)Image: Comparison of the systems In	02				-	-		-
C2C2 (CHINA)ECM (Engine Control Module)Image: Control Module)Image: Control ModuleC2C2 (CHINA)IP (Instrument Cluster Panel)Image: Control ModuleImage: Control Module	C2				-	-		-
C2C2 (CHINA)IP (Instrument Cluster Panel)Image: Clust	C2	C2 (CHINA)	BSI (Built-in Systems Interface)		•	•	•	•
C2C2 (CHINA)SRS (Airbag)Image: Constraint of the sector o		C2 (CHINA)	ECM (Engine Control Module)	•	•	•	•	•
C2 (VAN) (2003 - 2006) BSI (Built-in Systems Interface) • • • • •	C2	C2 (CHINA)	IP (Instrument Cluster Panel)		•	•	•	•
C2 (VAN) (2003 - 2006) BSI (Built-in Systems Interface) • • • • •	C2	C2 (CHINA)	SRS (Airbag)			•	•	•
C2 (VAN) (2003 - 2006) BSI (Built-in Systems Interface) • • • • •	C2	C2 (CHINA)	SWFCC (Steering Wheel With Fixed Central Controls)	•	•	•	•	•
C2 (VAN) (2003 - 2006) BSI (Built-in Systems Interface) • • • • •	C2	C2 (CHINA)	TCM (Automatic Gearbox AL4 TA2000)	•	•	•	•	•
C2 (VAN) (2003 - 2006) BSI (Built-in Systems Interface) • • • • •	C2	C2 (VAN) (2003 – 2006)	ABS (Anti-lock brake System TEVES MK70)	•	•	•	•	•
C2 (VAN) (2003 - 2006) BSI (Built-in Systems Interface) • • • • •	C2			•	•	•	•	•
C2 (VAN) (2003 - 2006) BSI (Built-in Systems Interface) • • • • •	C2				-	•	•	•
				-		-	•	•
C2C2(VAN) (2003 - 2006)ECM (Engine Control Module)Image: Calification of the calification of t				-		-	-	-
C2C2(VAN) (2003 - 2006)EM (Engline Control Module)Image: Calific Power Steering)Image: Calific Power Steering) <td>C2</td> <td></td> <td></td> <td></td> <td></td> <td>-</td> <td>-</td> <td>-</td>	C2					-	-	-
L2L2(ZUU3 - 2006)EPS (Electric Power Steering)Image: Classical stability Program TEVES MK60)Image: Classical stability Program TEVES MK60)C2(VAN) (2003 - 2006)ESP (Electronic Stability Program TEVES MK60)Image: Classical stability Program TEVES MK60)Image: Classical stability Program TEVES MK60)	C2			-	_		-	-
LZ (VAN) (ZUU3 - ZUU6) ESP (Electronic Stability Program TEVES MK60)	C2			-	-	-	-	
	CΖ	CZ (VAN) (ZUU3 - ZUU6)	ESF (Electronic Stability Program TEVES MK60)	┛	♥	•	•	•

Sivu 8/60

				0110	10/00		
C2	C2 (VAN) (2003 – 2006)	IP (Instrument Cluster Panel)	•	•	•	•	•
C2	C2 (VAN) (2003 – 2006)	MULS (Multifunction Screen A)	•	•	•	•	•
C2	C2 (VAN) (2003 – 2006)	PAM (Parking Assistance)	•	•	•	•	•
C2	C2 (VAN) (2003 – 2006)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C2	C2 (VAN) (2003 – 2006)	Radio	•	•	•	•	•
C2	C2 (VAN) (2003 – 2006)	SRS (Airbag)	•	•	•	•	•
C2	C2 (VAN) (2003 – 2006)	SWSM (Switch Module Under Steering Wheel)	•	•	•	•	•
C2	C2 (VAN) (2003 – 2006)	TCM (Controlled Manual Gearbox ECU)	•	•	•	•	•
C2	C2 (VAN) (2003 – 2006)	TEU (Telematics Unit)	•	•	•	•	•
C3	C3 (2002 – 2006)	ABS (Anti-lock brake System TEVES MK70)	•	٠	•	•	•
C3	C3 (2002 – 2006)	ABS (Anti-lock brake System)	•	•	•	•	•
C3	C3 (2002 – 2006)	AC (Air Conditioning)	•	•	•	•	•
C3	C3 (2002 – 2006)	ADDG02	•	•	•	•	•
C3	C3 (2002 – 2006)	ALM (Anti-theft Alarm)	•	•	•	•	•
C3	C3 (2002 – 2006)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
C3	C3 (2002 – 2006)	Alarm	•	•	•	•	•
C3	C3 (2002 – 2006)	BATT (Battery Change Status Unit)	•	•	•	•	•
C3	C3 (2002 – 2006)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C3	C3 (2002 – 2006)	BSI (Built-in Systems Interface)	•	•	•	•	•
C3	C3 (2002 – 2006)	CD (CD Player)	•	•	•	•	•
C3	C3 (2002 – 2006)	CD (External CD Player)	•	•	•	•	•
C3	C3 (2002 – 2006)	DDM (Driver's Door Module)	•	•	•	•	•
C3	C3 (2002 – 2006)	DSM (Driver's School Module)	•	•	•	•	•
C3	C3 (2002 – 2006)	Display	•	•	•	•	•
C3	C3 (2002 – 2006)	ECM (Engine Control Module)	•	•	•	•	•
C3	C3 (2002 – 2006)	EPS (Electric Power Steering)	•	•	•	•	•
C3	C3 (2002 – 2006)	ERU (Engine Relay Unit)	•	•	•	•	•
C3	C3 (2002 – 2006)	ESL (Electric Steering Lock)	•	•	•	•	•
C3	C3 (2002 – 2006)	HFC (Hands Free Control Kit)	•	•	•	•	•
C3	C3 (2002 – 2006)	HFC (Hands free Control Unit)	•	•	•	•	•
C3	C3 (2002 – 2006)	HFR (High Frequency Receiver)	•	•	•	•	•
C3	C3 (2002 – 2006)	HHV (High Head Vision)	•	•	•	•	•
C3	C3 (2002 – 2006)	IP (Instrument Cluster Panel)	•	•	•	•	•
C3	C3 (2002 – 2006)	KEY (Electrionic Key Reader)	•	•	•	•	•
C3	C3 (2002 - 2006)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C3	C3 (2002 – 2006)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C3	C3 (2002 – 2006)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
C3	C3 (2002 – 2006)	MULD (Multifunction Display SAGEM A)	•	•	•	•	•
C3	C3 (2002 – 2006)	MULD (Multifunction Display)	•	•	•	•	•
C3	C3 (2002 – 2006)	MULS (Multifunction Screen A)	•	•	•	•	•
C3	C3 (2002 – 2006)	MULS (Multifunction Screen C)	•	•	•	•	•
C3	C3 (2002 – 2006)	PAM (Parking Assistance)	•	•	•	•	•
C3	C3 (2002 – 2006)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C3	C3 (2002 - 2006)	RLS (Rain And Light Sensor)	•	•	•	•	•
C3	C3 (2002 - 2006)	Radio	•	•	•	•	•
C3	C3 (2002 - 2006)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
C3	C3 (2002 - 2006)	SB (Seat Belts Reminder LED)	•	•	•	•	•
C3	C3 (2002 - 2006)	SM (Services Module)	•	•	•	•	•
C3	C3 (2002 – 2006)	SRS (Airbag)	•	•	•	•	•
C3	C3 (2002 - 2006)	SRS (SAC TEMIC)	•	•	•	•	•
C3	C3 (2002 – 2006)	SVLCU (Stolen Vehicle Location Control)	•	•	•	•	•
C3	C3 (2002 – 2006)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C3	C3 (2002 – 2006)	SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
C3	C3 (2002 - 2006)	SWSM (Switch Module Under The Steering Wheel (Top Of Column))	•	•	•	•	•
C3	C3 (2002 – 2006)	Siren	•	•	•	•	•
C3	C3 (2002 - 2006)	TCM (Automatic Gearbox)	•	•	•	•	•
C3	C3 (2002 - 2006)	TCM (Controlled Manual Gearbox ECU)	•	•	•	•	
C3	C3 (2002 - 2006)	TEU (Telematics Unit Independent)	•	•	•	•	•
C3	C3 (2002 - 2006)	TEU (Telematics Unit RT3)	•	•	•	•	•
C3	C3 (2002 - 2006)	TEU (Telematics Unit RT5)	•	•	•	•	•
C3	C3 (2002 - 2006)	TEU (Telematics Unit)	•	•	•		•
C3	C3 (2002 - 2006)	TRU (Trailer Relay Unit)	•	•	•	•	•
	00 (2002 2000)	ine (fratter netuy onity	•	•	•	•	•

C3	C3 (2002 – 2006)	VRD (Voltage Retaining Device)	•	•	•	•	•
C3	C3 (A51)	ABS (Anti-lock brake System)	•	•	•	٠	•
C3	C3 (A51)	AC (Air Conditioning)	•	•	•	•	•
C3	C3 (A51)	ALM (Anti-theft Alarm)	•	•	•	٠	•
C3	C3 (A51)	BATT (Battery Change Status Unit)	•	•	•	•	•
C3	C3 (A51)	BSI (Built-in Systems Interface)	•	•	•	•	•
C3	C3 (A51)	DDM (Driver's Door Module)	•	•	•	•	•
C3	C3 (A51)	DSM (Driver's School Module)	•	•	•	•	•
C3	C3 (A51)	ECM (Engine Control Module)	•	•	•	•	•
C3	C3 (A51)	EPS (Electric Power Steering)	•	•	•	•	•
C3	C3 (A51)	ERU (Engine Relay Unit)	•	•	•	•	•
C3 C3	C3 (A51)	HFC (Hands Free Control Kit)	•	•			
C3			•	•	•		
C3	C3 (A51)	HFR (High Frequency Receiver)	•	•	•		•
C3	C3 (A51)	IP (Instrument Cluster Panel)		-	•		•
	C3 (A51)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C3	C3 (A51)	MULD (Multifunction Display)	•	•	•	•	•
C3	C3 (A51)	PAM (Parking Assistance)	•	•	•	•	•
C3	C3 (A51)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C3	C3 (A51)	Radio	•	•	•	•	•
C3	C3 (A51)	SB (Seat Belts Reminder LED)	•	•	•	•	•
C3	C3 (A51)	SM (Services Module)	•	•	•	٠	•
C3	C3 (A51)	SRS (Airbag)	•	•	•	•	•
C3	C3 (A51)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C3	C3 (A51)	TCM (Automatic Gearbox)	•	•	•	•	•
C3	C3 (A51)	TEU (Telematics Unit Independent)	•	•	•	٠	•
C3	C3 (A51)	TEU (Telematics Unit)	•	•	•	•	•
C3	C3 (A51)	TRU (Trailer Relay Unit)	•	•	•	•	•
C3	C3 (A51)	VRD (Voltage Retaining Device)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	ABS (Anti-lock brake System)	•	•	•		•
C3	C3 (AIRCROSS) (A88)	AC (Air Conditioning)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	ASM (Anti-slip Mode Selector)	•	•	•		•
C3	C3 (AIRCROSS) (A88)		•	•	•		•
		BATT (Battery Charge Status Unit)	-	-	-		•
C3	C3 (AIRCROSS) (A88)	BSI (Built-in Systems Interface)	•	•	•	•	•
C3 C3	C3 (AIRCROSS) (A88)	CD (External CD Player)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	DDM (Driver's Door Module)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	Display	•	•	•	•	•
C3 C3	C3 (AIRCROSS) (A88)	ECM (Engine Control Module)	•	•	•	•	•
	C3 (AIRCROSS) (A88)	ESL (Electric Steering Lock)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	HHV (High Head Vision)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	IP (Instrument Cluster Panel)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C3 C3	C3 (AIRCROSS) (A88)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
С3	C3 (AIRCROSS) (A88)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	PAM (Parking Assistance)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	RLS (Rain And Light Sensor)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	SM (Services Module)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C3 C3	C3 (AIRCROSS) (A88)	SWSM (Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	Siren	•	•	-	•	
C3	C3 (AIRCROSS) (A88)	TCM (Automatic Gearbox)	•	•	-		
C3	C3 (AIRCROSS) (A88)		•	•	•	-	
C3 C3		TRU (Trailer Relay Unit)			-	-	
C3	C3 (AIRCROSS) (A88)	VRD (Voltage Retaining Device)	•	•	•	-	
C3	C3 (AIRCROSS) (A:58)	ABS (Anti-lock brake System)	•	•	•	•	•
C3 C3 C3	C3 (AIRCROSS) (Ai58)	AC (Air Conditioning)	•	•	•	•	•
	C3 (AIRCROSS) (Ai58)	Alarm	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	BSI (Built-in Systems Interface)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	ECM (Engine Control Module)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	EPS (Electric Power Steering)	•	•	•	•	•
C3	C3 (AIRCROSS) (A158)	IP (Instrument Cluster Panel)	•	•	•	•	•
C3 C3 C3	C3 (AIRCROSS) (Ai58)	PAM (Parking Assistance)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	RBS (Rain And Brightness Sensor)	•	•	•	•	•

Sivu 10/60

			-	Sivu	10/00		•
C3	C3 (AIRCROSS) (Ai58)	Radio	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	SM (Services Module)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	SRS (Airbag)	•	•	٠	•	•
C3	C3 (AIRCROSS) (Ai58)	SVLCU (Stolen Vehicle Location Control)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	TCM (Automatic Gearbox)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	TEU (Telematics Unit)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	TRU (Trailer Relay Unit)	•	•	•	•	•
C3	C3 (Ai51)	ABS (Anti-lock brake System)	•	•	•	•	•
C3	C3 (Ai51)	AC (Air Conditioning)	•	•	•	•	•
C3	C3 (Ai51)	ALM (Anti-theft Alarm)	•	•	•	•	•
C3	C3 (Ai51)	BSI (Built-in Systems Interface)	•	•	•	•	•
C3	C3 (Ai51)	ECM (Engine Control Module)	•	•	•	•	•
C3	C3 (Ai51)	EPS (Electric Power Steering)	•	•	•	•	•
C3	C3 (Ai51)	IP (Instrument Cluster Panel)	•	•	•	•	•
C3	C3 (Ai51)	PAM (Parking Assistance)	•	•	•	•	•
C3	C3 (Ai51)	RBS (Rain And Brightness Sensor(CDPL))	•	•	•	•	•
C3	C3 (Ai51)	Radio	•	•	•	•	•
C3	C3 (Ai51)	SM (Services Module)	•	•	•	•	•
C3	C3 (Ai51)	SRS (Airbag)	•	•	•	●	•
C3	C3 (Ai51)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C3	C3 (Ai51)	TCM (Automatic Gearbox)	•	•	•	•	•
C3	C3 (Ai51)	TEU (Telematics Unit)	•	•	•	•	•
C3	C3 (Ai51)	TRU (Trailer Relay Unit)	•	•	•	•	•
C3	C3 (B618)	ABS (Anti-lock brake System)	•	•	•	•	•
C3	C3 (B618)	AC (Air Conditioning)	•	•	•	•	•
C3	C3 (B618)	BATT (Battery Charge Status Unit)	•	•	٠	•	•
C3	C3 (B618)	BSI (Built-in Systems Interface)	•	•	٠	•	•
C3	C3 (B618)	CD (External CD Player)	•	•	•	•	•
C3	C3 (B618)	ECM (Engine Control Module)	•	•	•	•	•
C3	C3 (B618)	ESL (Electric Steering Lock)	•	•	٠	•	•
C3	C3 (B618)	IP (Instrument Cluster Panel)	•	•	•	•	•
C3	C3 (B618)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C3	C3 (B618)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C3	C3 (B618)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
C3	C3 (B618)	MULD (Multifunction Display)	•	•	•	•	•
C3	C3 (B618)	PAM (Parking Assistance)	•	•	•	•	•
C3	C3 (B618)	RLS (Rain And Light Sensor)	•	•	•	•	•
C3	C3 (B618)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
C3	C3 (B618)	SM (Services Module)	•	•	•	•	•
C3	C3 (B618)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C3	C3 (B618)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C3	C3 (B618)	Siren	•	•	•	•	•
С3	C3 (B618)	TCM (Automatic Gearbox)	•	•	•	•	•
С3	C3 (B618)	TRU (Trailer Relay Unit)	•	•	•	•	•
С3	C3 (B618)	VRD (Voltage Retaining Device)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	ABS (Anti-lock brake System)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	AC (Air Conditioning)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	ALM (Anti-theft Alarm)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	BATT (Battery Change Status Unit)	•	•	•	•	٠
C3	C3 (PICASSO) (A58)	BSI (Built-in Systems Interface)	•	•	•	•	٠
C3	C3 (PICASSO) (A58)	DDM (Driver's Door Module)	•	•	•	•	٠
C3	C3 (PICASSO) (A58)	ECM (Engine Control Module)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	EPS (Electric Power Steering)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	ERU (Engine Relay Unit)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	HFC (Hands Free Control Kit)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	HFR (High Frequency Receiver)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	IP (Instrument Cluster Panel)	•	•	٠	•	•
C3	C3 (PICASSO) (A58)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	MULS (Multifunction Screen)	•	•	•	•	•
С3	C3 (PICASSO) (A58)	PAM (Parking Assistance)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	RBS (Rain And Brightness Sensor)	•	•	٠	•	٠
							-

Sivu 11/60

9 0 <th></th> <th></th> <th>ww.a10kauppa.fi</th> <th></th> <th></th> <th>Sivu</th> <th>11/00</th> <th></th> <th></th>			ww.a10kauppa.fi			Sivu	11/00		
C 21	C3	C3 (PICASSO) (A	(A58)	Radio	•	•	•	•	•
Col C	C3	C3 (PICASSO) (A	A58)	SB (Seat Belts Reminder LED)	•	•	•	•	•
S1 S1 (21480) 3401 (Manuhi Schult) Image: Status St	C3	C3 (PICASSO) (A	A58)	SM (Services Module)	•	•	•	•	•
21 21913800 30816/2000 1016/2000 0	C3	C3 (PICASSO) (A	A58)	SRS (Airbag)	•	•	•	•	•
S. 1. 2113802 (200) 32. Gaussia Longhal 9	C3			· · · · · · · · · · · · · · · · · · ·	•	•	•	•	•
Co. 0.9 (1980) (28) (10) (27) (27) (27) (27) 0 <td></td> <td></td> <td></td> <td></td> <td>•</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>					•	•	•	•	•
CA OPECASY (064) TRE (074) (074) Image: 1000					-		-		
C1 0.2 (2003) (08) 00 (Dispace Persing Persinal) 0 0 0 0 C3 0.2 (2003) (0.130) 00 (Dist-Instruct Systed) 0					-		_		
C1 C1002500 (d.88) AE (Darl Tark India Strato) Image: Strate Strat					-	-	-	-	-
Chart Origons 0439 42 Art Oshithering) 0					-	-	-	-	-
C1 C1000000 (1980)					-	-	-	-	-
C1 C1 020359 (4350) ESI Bacin Carden Mode) Image: Section					-	-	-	-	-
C1 0.9 (20080) (1019) 0.9 (200810) (2009) 0.9 (0.0000) <	C3	C3 (PICASSO) (A	Ai58)	ALM (Anti-theft Alarm)	•	•	•	•	•
3 0	C3	C3 (PICASSO) (A	Ai58)	BSI (Built-in Systems Interface)	•	•	•	•	•
C1 C3 C3 C4 C4 <td< td=""><td>C3</td><td>C3 (PICASSO) (A</td><td>Ai58)</td><td>ECM (Engine Control Module)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></td<>	C3	C3 (PICASSO) (A	Ai58)	ECM (Engine Control Module)	•	•	•	•	•
Ga 3.2 (PLSS0) 61389 PM Trakine Assistancy •	C3	C3 (PICASSO) (A	Ai58)	EPS (Electric Power Steering)	•	•	•	•	•
C1 C3 C1 C3 C1 C4 C4 <td< td=""><td>C3</td><td>C3 (PICASSO) (A</td><td>Ai58)</td><td>IP (Instrument Cluster Panel)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></td<>	C3	C3 (PICASSO) (A	Ai58)	IP (Instrument Cluster Panel)	•	•	•	•	•
T1 C3 (716380) (118) B4 (Services Nothal) Image: Services Nothal) Image: Services Nothal) C1 C3 (716380) (118) B5 (Gring) Image: Services Nothal) Image: Services Nothal) <td< td=""><td>C3</td><td>C3 (PICASSO) (A</td><td>Ai58)</td><td>PAM (Parking Assistance)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></td<>	C3	C3 (PICASSO) (A	Ai58)	PAM (Parking Assistance)	•	•	•	•	•
C1 C3 01/05/2001 (10) (10) (10) (10) C1 C3 01/05/2001 (14) (14) (14) (14) (14) C1 C3 01/05/2001 (14)	C3	C3 (PICASSO) (A	Ai58)	RBS (Rain And Brightness Sensor(CDPL))	•	•	•	•	•
C1 C3 01/05/2001 (10) (10) (10) (10) C1 C3 01/05/2001 (14) (14) (14) (14) (14) C1 C3 01/05/2001 (14)		C3 (PICASSO) (A			•	•	•	•	•
21 C3 PICKSD USE (1110) •					•		-		
C3 C3 D12XXXX Aligned Science Workshop (Control of Column) •					-		-	-	_
C1 C1 <td< td=""><td></td><td></td><td></td><td></td><td>-</td><td>-</td><td>-</td><td>-</td><td>-</td></td<>					-	-	-	-	-
C1 C1 0100350 (h) (fracture field (h)) (h) (h) (h) C3 C3 (fracture) (h) (h) (h) (h) (h) C3 C3 (fracture) (h) (h) <td></td> <td></td> <td></td> <td></td> <td>-</td> <td>-</td> <td>-</td> <td>-</td> <td>-</td>					-	-	-	-	-
C1 C3 (FiGSS0) (A189) FBU (Trailer Rolay Buil) •						-	-	•	-
21 23 (PLRIEL) (2002 - 2009) MS (Anti-lock brake System) • <t< td=""><td></td><td></td><td></td><td></td><td>•</td><td>-</td><td>-</td><td>-</td><td>-</td></t<>					•	-	-	-	-
C3 C3 PLURIEL 2009 NC (Air Conditioning) •					•	•	-	-	-
C3 C3 (PLREE) (2002 - 2009) (C)		C3 (PLURIEL) (:	2002 - 2009)	ABS (Anti-lock brake System)	•	•	•	•	•
C3 C3 C1 (CD Player) \bullet	C3	C3 (PLURIEL) (2	2002 - 2009)	AC (Air Conditioning)	•	•	•	•	•
C3 C3 (2) (PLRIEL) (2002 - 2009) EX) (Engline Control Module) •	C3	C3 (PLURIEL) (2	2002 - 2009)	BSI (Built-in Systems Interface)	•	•	•	•	•
C3 C3 (FIJRIEL) (2002 - 2009) EPS (Electric Fover Steering) •	C3	C3 (PLURIEL) (2	2002 - 2009)	CD (CD Player)	•	•	•	•	•
C3 (7) URUREL (2002 - 2009) B8 (Engine Relay Unit) • <t< td=""><td>C3</td><td>C3 (PLURIEL) (2</td><td>2002 - 2009)</td><td>ECM (Engine Control Module)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></t<>	C3	C3 (PLURIEL) (2	2002 - 2009)	ECM (Engine Control Module)	•	•	•	•	•
C3 C3 (PLIREL) (2002 - 2009) IFC (liands Free Control Kit) •	C3	C3 (PLURIEL) (2	2002 - 2009)	EPS (Electric Power Steering)	•	•	•	•	•
C3 C3 (PLRIEL) (2002 - 2009) MLS (Multifunction Screen C) Image: Comparison of the com	C3	C3 (PLURIEL) (2	2002 - 2009)	ERU (Engine Relay Unit)	•	•	•	•	•
C3 C3 (C1URIEL) (2002 - 2009) PMI (Parking Assistance) Image: Constraint of the second of t	C3	C3 (PLURIEL) (:	2002 - 2009)	HFC (Hands Free Control Kit)	•	•	•	•	•
C3 C3 (C1URIEL) (2002 - 2009) PMI (Parking Assistance) Image: Constraint of the second of t	C3	C3 (PLURIEL) (:	2002 - 2009)	IP (Instrument Cluster Panel)	•	•	•	•	•
C3 C3 (PLURIEL) (2002 - 2009) PM (Parking Assistance) Image: Constraint of the strength of the streng					•	•	•	•	•
C3 C3 (PLURIEL) (2002 - 2009) Raio Image: Caliform of the control							•		•
C3 C3 (PLURIEL) (2002 - 2009) Radio Image: Case of the case						-	•	-	-
C3 C3 (PLIREL) (2002 - 2009) SRS (SAC TEMIC) •					-	-	•	-	-
C3C3C4C4C4C4C4C4C4C4C4C4C4C3C3(PLUREL) (2002 - 2009)TCM (Controlled Manual Gearbox ECU)C4C4C4C4C4C4C3C3(PLUREL) (2002 - 2009)TEU (Telematics Unit RT5)C4C4C4C4C4C4C3C3(R) (2006 - 2009)ABS (Anti-lock brake System)C4C4C4C4C4C4C3C3(R) (2006 - 2009)AlarmC4C					-		-		-
C3 C3 (PLURIEL) (2002 - 2009) TCM (Controlled Manual Gearbox ECU) •					-	-	-	_	-
C3 C3 (PLURIEL) (2002 - 2009) TEU (Telematics Unit RT5) •					-		-		-
C3 C3 (R) (2006 - 2009) ABS (Anti-lock brake System) •<					•	•	•	•	•
C3 C3 (R) (2006 - 2009) AL (Air Conditioning) • </td <td>C3</td> <td>C3 (PLURIEL) (2</td> <td>2002 - 2009)</td> <td>TEU (Telematics Unit RT5)</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>	C3	C3 (PLURIEL) (2	2002 - 2009)	TEU (Telematics Unit RT5)	•	•	•	•	•
C3 C3 R) (2006 - 2009) Alarm Image: Calibratic control systems Interface) Image: Calibratic control contron control contrecontrol control control co	C3	C3 (R) (2006 -	2009)	ABS (Anti-lock brake System)	•	•	•	•	•
C3 C3 (R) (2006 - 2009) BSI (Built-in Systems Interface) Image: Calibratic Calibratical Calibratic Calibratic C	C3	C3 (R) (2006 -	2009)	AC (Air Conditioning)	•	•	•	•	•
C3 C3 (R) (2006 - 2009) CD (CD Player) ●	C3	C3 (R) (2006 -	2009)	Alarm	•	•	•	•	•
C3 C3 (R) (2006 - 2009) ECM (Engine Control Module) • </td <td>C3</td> <td>C3 (R) (2006 -</td> <td>2009)</td> <td>BSI (Built-in Systems Interface)</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>	C3	C3 (R) (2006 -	2009)	BSI (Built-in Systems Interface)	•	•	•	•	•
C3 C3 (R) (2006 - 2009) EPS (Electric Power Steering) •	C3	C3 (R) (2006 -	2009)	CD (CD Player)	•	•	•	•	•
C3 C3 (R) (2006 - 2009) EPS (Electric Power Steering) •	C3	C3 (R) (2006 -	2009)	ECM (Engine Control Module)	•	•	•	•	•
C3 C3 (R) (2006 - 2009) ERU (Engine Relay Unit) •					•	•	•	•	•
C3 C3 (R) (2006 - 2009) HFC (Hands Free Control Kit) ● <				· •	•		-	-	•
C3C3(2006 - 2009)IP (Instrument Cluster Panel)IPI					-		-		-
C3C3(R)(2006 - 2009)MULS (Multifunction Screen A)Image: C3Image: C3 <thimage: <="" c3<="" td=""><td></td><td></td><td></td><td></td><td>-</td><td>-</td><td>-</td><td>-</td><td>-</td></thimage:>					-	-	-	-	-
C3C3(R)(2006 - 2009)PAM(Parking Assistance)Image: Case of the case o					-	-	-		-
C3 C3 (R) (2006 - 2009) RBS (Rain And Brightness Sensor) ● <t< td=""><td></td><td></td><td></td><td></td><td>-</td><td>-</td><td>-</td><td>_</td><td>-</td></t<>					-	-	-	_	-
C3C3(2006 - 2009)RadioImage: Calibration of the state of					-	-	-	-	-
C3C3(2006 - 2009)SRS (SAC TEMIC)•••<							_		_
C3C3(2006 - 2009)SWSM (Switch Module At The Steering Wheel)•••••••C3C3(R) (2006 - 2009)TCM (Automatic Gearbox)••					-				
C3C3(R)(2006 - 2009)TCM (Automatic Gearbox)•••<	C3			SRS (SAC TEMIC)	•	•	•	•	•
C3C3(R)(2006 - 2009)TEU (Telematics Unit RT3)••	C3	C3 (R) (2006 -	2009)	SWSM(Switch Module At The Steering Wheel)	•	•	•	•	•
C3 (XR) ABS (Anti-lock brake System) • • • • •	C3	C3 (R) (2006 -	2009)	TCM (Automatic Gearbox)	•	•	•	•	•
	C3	C3 (R) (2006 -	2009)	TEU (Telematics Unit RT3)	•	•	•	•	•
C3 C3 (XR) ASM (Anti-slip Mode Selector)	C3	C3 (XR)		ABS (Anti-lock brake System)	•	•	•	•	•
	C3	C3 (XR)		ASM (Anti-slip Mode Selector)	•	•	•	•	•

111112121314 <th>C9</th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th>	C9							
SignedSigned conversionabaSigned conver					-	-	-	
Sol 0.000 PR. (cartin face: Jack) 0 0 0 0 Sol 0.000 PC. (cartine (tart) (tart) 0 0 0 0 Sol 0.000 PC. (cartine (tart) (tart) 0		C3 (XR)	BSI (Built-in Systems Interface)	•	•	•	٠	•
Sa 0.00 00.0000000000000000000000000000000000	C3	C3 (XR)	ECM (Engine Control Module)	•	•	•	•	•
Sa Dot No. (Inserting Look) Image: Same Same Same Same Same Same Same Same	C3	C3 (XR)	EPS (Electric Power Steering)	•	•	•	•	•
Same Bit Summer Control Lab) Image Summer Control Lab) Image Summer Control Lab <		C3 (XR)	ESL (Electric Steering Lock)	•	•	•	•	•
31 0.00 12 (Instruction for model 0 0 0 0 12 0.00 12 (Instruction for model 0 0 0 0 12 0.00 12 (Instruction for model 0 0 0 0 0 12 0.00 100 100 (Instruction for model 0	C3				-	•	•	•
30 001 00				-	-	-	-	•
13 0.001 TE 06.1.j.level (strate) hand) Image: Strate Strat			1P (Instrument Cluster Panel)	•	•	•	•	•
Cl Cl OD PHONE (Sectional) Image: Sectional Phone Pho	C3	C3 (XR)	KEY (Electrionic Key Reader)	•	•	•	٠	•
Ch Ch <td< td=""><td>C3</td><td>C3 (XR)</td><td>MCP (Multiplexed Control Panel)</td><td>•</td><td>•</td><td>•</td><td>٠</td><td>•</td></td<>	C3	C3 (XR)	MCP (Multiplexed Control Panel)	•	•	•	٠	•
Ch Ch <td< td=""><td>C3</td><td>C3 (XR)</td><td>MULS (Multifunction Screen)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></td<>	C3	C3 (XR)	MULS (Multifunction Screen)	•	•	•	•	•
So 3.001 ento ento ento ento ento ento S1 3081 38 (String) 38 (String) ento ento ento S1 3081 397 (String Napl Vich Integral Controls (WT)) ento ento ento S1 3081 397 (String Napl Vich Integral Controls (WT)) ento ento ento S1 3081 TTI Columits for the String The III (String Napl Vich Integral Controls (WT)) ento ento ento S1 3081 TTI Columits Instit ento ento ento ento S1 4084 2000 05 (Strint-loss Instand) ento ento ento ento S1 41 (2004 - 2000 05 (Strint-loss Instand) ento ento ento ento ento S1 41 (2004 - 2000 05 (Strint-loss Instand) ento ento ento ento ento ento S1 41 (2004 - 2000 05 (Strint-loss Instand) ento ento </td <td></td> <td>C3 (XR)</td> <td>PAM (Parking Assistance)</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>		C3 (XR)	PAM (Parking Assistance)	•	•	•	•	•
fin 3 (08) 98 (Orha) 98 (Orha) 9 </td <td></td> <td></td> <td></td> <td></td> <td>•</td> <td>•</td> <td>-</td> <td>•</td>					•	•	-	•
G 1081 NPC (Stering Sec) Trih Targer/Garonbe (OTT) • <t< td=""><td></td><td></td><td></td><td></td><td>_</td><td>-</td><td>-</td><td>-</td></t<>					_	-	-	-
C1 C3 C3 C3 C4 C4 <td< td=""><td></td><td>C3 (XR)</td><td>SM (Services Module)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></td<>		C3 (XR)	SM (Services Module)	•	•	•	•	•
C1 C2 C3 C3 C3 C3 C4 C4 <td< td=""><td>C3</td><td>C3 (XR)</td><td>SRS (Airbag)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></td<>	C3	C3 (XR)	SRS (Airbag)	•	•	•	•	•
G 10.00 10.400000000000000000000000000000000000	C3	C3 (XR)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
G 10.00 10.01 (Indexentic barba) Image: Indexention bit) Image: Indexention bit) <td>C3</td> <td>C3 (XB)</td> <td>SWSM(Switch Module Under The Steering Wheel)</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>	C3	C3 (XB)	SWSM(Switch Module Under The Steering Wheel)	•	•	•	•	•
G. G.G. (1990) B. Calanar, B. B. Calana, C. Baila, David, Dav								
Ga Gab	C0				-	-	-	-
C1 C1 C1001 W16 (Anti-field bask assume) •• <td>L3</td> <td></td> <td></td> <td></td> <td>-</td> <td>-</td> <td>•</td> <td>-</td>	L3				-	-	•	-
61 C1 (2001 - 2010) KMr (soci-ther) Alexa •				•	•	•	•	•
61 C1 62004 - 2010) WH (bati-theft share) Image: Constant of the c		C4 (2004 - 2010)	ABS (Anti-lock brake System)	●	•	•	•	•
64 C4 (2004 - 2010) MP (buils Amplifter) Image: Constraint of the constraint of	C4	C4 (2004 - 2010)	AC (Air Conditioning)	•	•	•	•	•
64 C4 (2004 - 2010) MP (buils Amplifter) Image: Constraint of the constraint of	C4	C4 (2004 - 2010)	ALM (Anti-theft Alarm)	•	•	•	•	•
11 04 04 04 04 0 <td></td> <td></td> <td></td> <td></td> <td>-</td> <td>-</td> <td>-</td> <td>-</td>					-	-	-	-
C1 04 04 2010 NTH (fastery Charge Status Bait) •			-		-	-		-
C4 C4 (2004 - 2010) BATT (Battery Change Status Unit) • • • • C4 C4 (2004 - 2010) BATT (Battery Change Status Unit) •	04					-	-	-
14 C44 C4		C4 (2004 - 2010)	AUTH (Starting Authorisation ECU)	•	•	•	•	•
C1 C1 (2001 - 2010) BX (Body Control Module) • <td>C4</td> <td>C4 (2004 - 2010)</td> <td>BATT (Battery Change Status Unit)</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>	C4	C4 (2004 - 2010)	BATT (Battery Change Status Unit)	•	•	•	•	•
C4 C4 (2004 - 2010) BSI (Built-in Systems Interface) •	C4	C4 (2004 - 2010)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C4 C4 (2004 - 2010) BSI (Built-in Systems Interface) •	C4	C4 (2004 - 2010)	BCM (Body Control Module)	•	•	•	•	•
C4 C4 (2004 - 2010) BSM (Monitoring Of The Blind Spot) •								
C4 C4 (2004 - 2010) CD (CD Player) Image: Constraint of the second					-	-	-	-
C4 C4 (2004 - 2010) Cb (External CD Player) • • • • C4 C4 (2004 - 2010) DM (Driver's Door Module) • <	04					-	•	-
C4 C4 (2004 - 2010) DAF (Dissel Additive Function) • <t< td=""><td></td><td>C4 (2004 - 2010)</td><td>CD (CD Player)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></t<>		C4 (2004 - 2010)	CD (CD Player)	•	•	•	•	•
C4 C4 (2004 - 2010) DBM (Driver's Door Module) •<	C4	C4 (2004 - 2010)	CD (External CD Player)	•	•	•	•	•
C4 C4 (2004 - 2010) DBM (Driver's Door Module) •<	C4	C4 (2004 - 2010)	DAF (Diesel Additive Function)	•	•	•	•	•
C4 C4 (2004 - 2010) DFR. (Directional Headlangs) •		C4 (2004 - 2010)	DDM (Driver's Door Module)	•	•	•	•	•
C4 C4 (2004 - 2010) IPCRF (Rear Final Drive Piloted Clutch) •								
C4 C4 (2004 - 2010) ISM (Driver's School Module) •					-	-	•	•
C4 C4 (2004 - 2010) Display/Telematics •				-		•	•	•
C4 C4 (2004 - 2010) Display/Telematics •	C4	C4 (2004 - 2010)	DSM (Driver's School Module)	•	•	•	۲	•
C4 C4 (2004 - 2010) Display/Telematics •	C4	C4 (2004 - 2010)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C4C4 (2004 - 2010)ECM (Engine Control Module)•• <t< td=""><td>C4</td><td>C4 (2004 - 2010)</td><td>Display/Telematics</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></t<>	C4	C4 (2004 - 2010)	Display/Telematics	•	•	•	•	•
C4C4 (2004 - 2010)EPB (Electric Secondary Brake)•• <td></td> <td>C4 (2004 - 2010)</td> <td>ECM (Engine Control Module)</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>		C4 (2004 - 2010)	ECM (Engine Control Module)	•	•	•	•	•
C4C4 (2004 - 2010)EPS (Electric Power Steering Electric Pump Unit)Image: Calibratic Power Steering)Image: Calibratic Power Steering Power Power Steering Power Steering Power Power Steering Power Steering Power Steering Power Steering Power Steering Power Po								-
C4C4 (2004 - 2010)EPS (Electric Power Steering) \bullet \bullet \bullet \bullet \bullet \bullet C4C4 (2004 - 2010)ERU (Engine Relay Unit) \bullet \bullet \bullet \bullet \bullet \bullet C4C4 (2004 - 2010)ESL (Electric Steering Lock) \bullet \bullet \bullet \bullet \bullet \bullet C4C4 (2004 - 2010)HFC (Hands Free Control Kit) \bullet \bullet \bullet \bullet \bullet \bullet C4C4 (2004 - 2010)HFC (Hands free Control Unit) \bullet \bullet \bullet \bullet \bullet \bullet C4C4 (2004 - 2010)HFC (Hands free Control Unit) \bullet \bullet \bullet \bullet \bullet \bullet C4C4 (2004 - 2010)HFR (High Frequency Receiver) \bullet \bullet \bullet \bullet \bullet \bullet C4C4 (2004 - 2010)IBMO (Locking And Immobiliser Control Module) \bullet \bullet \bullet \bullet \bullet C4C4 (2004 - 2010)IP (Instrument Cluster Panel) \bullet \bullet \bullet \bullet \bullet C4C4 (2004 - 2010)LDWS (Lane Departure Warning System) \bullet \bullet \bullet \bullet \bullet C4C4 (2004 - 2010)LDWS (Lane Departure Warning System) \bullet \bullet \bullet \bullet \bullet C4C4 (2004 - 2010)LDW (Lighting Pack Unit) \bullet \bullet \bullet \bullet \bullet \bullet C4C4 (2004 - 2010)List VEH C (4 SEDAN_ \bullet \bullet \bullet \bullet \bullet \bullet \bullet \bullet C4C4 (2004 - 2010) <td></td> <td></td> <td></td> <td></td> <td></td> <td>-</td> <td>-</td> <td>-</td>						-	-	-
C4C4 (2004 - 2010)ERU (Engine Relay Unit)Image: Calibratic strength of the strugger st	U4		· ·		-	-		-
C4C4 (2004 - 2010)ESL (Electric Steering Lock)Image: C4 (2004 - 2010)Image: C4 (2004 - 2010)Image	C4	C4 (2004 - 2010)	EPS (Electric Power Steering)	●	•	•	•	•
C4 C4 (2004 - 2010) HFC (Hands Free Control Kit) •		C4 (2004 - 2010)	ERU (Engine Relay Unit)	•	•	•	•	•
C4C4 (2004 - 2010)HFC (Hands Free Control Kit)Image: Calibratic Cal	C4	C4 (2004 - 2010)	ESL (Electric Steering Lock)	•	•	•	•	•
C4 C4 (2004 - 2010) HFC (Hands free Control Unit) • <td< td=""><td></td><td>C4 (2004 - 2010)</td><td>HFC (Hands Free Control Kit)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></td<>		C4 (2004 - 2010)	HFC (Hands Free Control Kit)	•	•	•	•	•
C4C4 (2004 - 2010)HFR (High Frequency Receiver)Image: Calification of the state								
C4C4 (2004 - 2010)IMM0 (Locking And Immobiliser Control Module)••					-	-	-	-
C4C4 (2004 - 2010)IP (Instrument Cluster Panel)Image: Case of the state of the						-	-	-
C4C4 (2004 - 2010)KEY (Electrionic Key Reader)Image: Carried constraints and constr	C4	(2004 - 2010)	-	•	•	•	•	•
C4C4 (2004 - 2010)LDWS (Lane Departure Warning System)Image: C4Image: C4 <thimage: c4<="" th="">Image: C4Image:</thimage:>		C4 (2004 - 2010)	IP (Instrument Cluster Panel)	●	•	•	۲	•
C4C4 (2004 - 2010)LDWS (Lane Departure Warning System)Image: C4Image: C4 <thimage: c4<="" th="">Image: C4Image:</thimage:>	C4	C4 (2004 - 2010)	KEY (Electrionic Key Reader)	•	•	•	•	•
C4C4 (2004 - 2010)LPU (Lighting Pack Unit)Image: C4 (2004 - 2010)Image: C4 (2004 - 2010)List_VEH_C_C4_SEDAN_Image: C4 (2004 - 2010)Image: C4 (2004 - 2010) <thimage: (20<="" c4="" td=""><td></td><td>C4 (2004 - 2010)</td><td>LDWS (Lane Departure Warning System)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></thimage:>		C4 (2004 - 2010)	LDWS (Lane Departure Warning System)	•	•	•	•	•
C4C4 (2004 - 2010)List_VEH_C_C4_SEDAN_••• <td></td> <td></td> <td></td> <td></td> <td></td> <td>-</td> <td>_</td> <td>_</td>						-	_	_
C4C4 (2004 - 2010)MAAP (Multiplexed Additive Adding Pump)Image: Calcular and Ca					-	-	-	-
C4C4 (2004 - 2010)MCP (Multiplexed Control Panel)Image: Calibre panelImage: Calibre panelC4C4 (2004 - 2010)MDAP (Multiplexed Diesel Additive Pump)Image: Calibre panelImage: Calibre panelImage	U4					-	-	-
C4C4 (2004 - 2010)MDAP (Multiplexed Diesel Additive Pump)•••••••C4C4 (2004 - 2010)MSI (Matrix Screen Integral To The Instrument Panel)•••••••C4C4 (2004 - 2010)MULC (Multifunction Camera Or Multifunction Video Camera)••••••••C4C4 (2004 - 2010)MULC (Multifunction Video Camera (CMF))•••••••	C4	C4 (2004 - 2010)	MAAP (Multiplexed Additive Adding Pump)	●	•	•	٠	•
C4C4 (2004 - 2010)MSI (Matrix Screen Integral To The Instrument Panel)••••••C4C4 (2004 - 2010)MULC (Multifunction Camera Or Multifunction Video Camera)••••••C4C4 (2004 - 2010)MULC (Multifunction Video Camera (CMF))••••••		C4 (2004 - 2010)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C4C4 (2004 - 2010)MSI (Matrix Screen Integral To The Instrument Panel)••••••C4C4 (2004 - 2010)MULC (Multifunction Camera Or Multifunction Video Camera)••••••C4C4 (2004 - 2010)MULC (Multifunction Video Camera (CMF))••••••	C4	C4 (2004 - 2010)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C4C4 (2004 - 2010)MULC (Multifunction Camera Or Multifunction Video Camera)••••••C4C4 (2004 - 2010)MULC (Multifunction Video Camera (CMF))••••••		C4 (2004 - 2010)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
C4 (2004 - 2010) MULC (Multifunction Video Camera (CMF)) \bullet \bullet \bullet \bullet			-		-	-	•	-
C4 C4 C4 C4 C4 C4 C2004 - 2010) MULD (Multifunction Display) Image: Cal (MP) / Cal (2004 - 2010) Image: Cal (Multifunction Display) Image: Cal (Multifunction Display					-	-	-	-
C4 C4 (2004 - 2010) MULD (Multifunction Display) •	U4				-	-	-	-
C4 (2004 - 2010) MULS (Multifunction Screen) • • • • •	C4		MULD (Multifunction Display)	●	•	•	•	•
	C4	C4 (2004 - 2010)	MULS (Multifunction Screen)	●	•	•	•	•

Sivu 13/60

A10 KA	UPPA OY www.a10kauppa.fi			Sivu	13/60		
C4	C4 (2004 - 2010)	NAVI (Navigation)	•	•	٠	•	•
C4 C4 C4 C4	C4 (2004 - 2010)	PAM (Parking Assistance)	•	•	•	•	•
C4	C4 (2004 - 2010)	PDM (Passenger's Door Module)	•	•	•	•	•
C4	C4 (2004 - 2010)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
C4	C4 (2004 - 2010)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C4	C4 (2004 - 2010)	RCU (Rev Counter Unit)	•	•	•	•	•
C4	C4 (2004 - 2010)	RLS (Rain And Light Sensor)	•	•	•	•	•
C4	C4 (2004 - 2010)	ROR (Radio Or Radiotelephone(Radio Part))	•	•	•	•	•
C4	C4 (2004 - 2010)	Radio	•	•	•	•	•
C4	C4 (2004 - 2010)	SAS (Steering Wheel Angle Sensor)	•	•	•	•	•
C4	C4 (2004 - 2010)	SB (LH Reversible Seat Belt Reel)	•	•	•	•	•
C4 C4		SB (RH Reversible Seat Belt Reel)		•	•	•	•
C4 C4	C4 (2004 - 2010)			-	-		
	C4 (2004 - 2010)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
C4	C4 (2004 - 2010)	SFB (Signalling Fuse Box)	•	•	•	•	•
C4	C4 (2004 - 2010)	SM (Services Module)	•	•	•	•	•
C4	C4 (2004 – 2010)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
C4	C4 (2004 - 2010)	SRS (Airbag)	•	•	•	•	•
C4	C4 (2004 - 2010)	SSC (Calculation Stop And Sart)	•	•	•	•	•
C4	C4 (2004 - 2010)	SSP (Pneumatic Suspension)	•	•	•	•	•
C4	C4 (2004 - 2010)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C4	C4 (2004 - 2010)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C4	C4 (2004 - 2010)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
C4	C4 (2004 - 2010)	Siren	•	•	•	•	•
C4	C4 (2004 - 2010)	TCM (Automatic Gearbox)	•	•	•	•	•
C4	C4 (2004 - 2010)	TEU (Telematics Unit SMEG_PLUS)	•	•	•	•	•
C4	C4 (2004 - 2010)	TEU (Telematics Unit)	•	•	•	•	•
C4	C4 (2004 - 2010)	TRU (Trailer Relay Unit)	•	•	•	•	•
C4	C4 (2004 - 2010)	TS (Touch Screen)	•	•	•	•	•
C4	C4 (2004 - 2010)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C4	C4 (2004 - 2010)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
C4	C4 (2004 - 2010)	VRD (Voltage Retaining Device)	•	•	•	•	•
C4	C4 (2004 - 2010)	Wiper (Windscreen Wiper)	•	•	•	•	•
C4 C4				•	•	•	•
04	C4 (AIRCROSS)	ABS (Anti-lock brake System)		-	-	-	-
C4 C4	C4 (AIRCROSS)	AC (Air Conditioning)	•	•	•	•	•
	C4 (AIRCROSS)	ALM (Anti-theft Alarm)	•	•	•	•	•
C4	C4 (AIRCROSS)	AUTH (Starting Authorisation ECU)	•	•	•	•	•
C4	C4 (AIRCROSS)	BSI (Built-in Systems Interface)	•	•	•	•	•
C4	C4 (AIRCROSS)	DDM (Driver's Door Module)	•	•	•	•	•
C4	C4 (AIRCROSS)	DHL (Directional Headlamps)	•	•	•	•	•
C4 C4	C4 (AIRCROSS)	DPCRF (Rear Final Drive Piloted Clutch)	•	•	•	•	•
C4	C4 (AIRCROSS)	ECM (Engine Control Module)	•	•	•	•	•
C4	C4 (AIRCROSS)	EPS (Electric Power Steering)	•	•	•	•	•
C4	C4 (AIRCROSS)	IMMO (Locking And Immobiliser Control Module)	•	•	•	•	•
C4	C4 (AIRCROSS)	IP (Instrument Cluster Panel)	•	•	•	•	٠
C4	C4 (AIRCROSS)	NAVI (Navigation)	•	•	•	•	•
C4 C4	C4 (AIRCROSS)	PAM (Parking Assistance)	•	•	•	•	•
C4	C4 (AIRCROSS)	RBS (Rain And Brightness Sensor)	•	•	•	•	٠
C4	C4 (AIRCROSS)	ROR (Radio Or Radiotelephone(Radio Part))	•	•	•	•	•
C4	C4 (AIRCROSS)	SAS (Steering Wheel Angle Sensor)	•	•	•	•	•
C4	C4 (AIRCROSS)	SRS (Airbag)	•	•	•	•	•
C4	C4 (AIRCROSS)	SSC (Calculation Stop And Sart)	•	•	•	•	•
C4	C4 (AIRCROSS)	TCM (Automatic Gearbox)	•	•	•	•	•
C4 C4	C4 (B7) (2010 -)	ABS (Anti-lock brake System)	•	•	•	•	•
C4 C4	C4 (B7) (2010 -) C4 (B7) (2010 -)	AC (Air Conditioning)	•	•	•	•	•
C4 C4			•	•	•	•	•
		ALM (Anti-theft Alarm)		•	•	-	-
C4 C4	C4 (B7) (2010 -)	$MD (A_{1}, A_{2}, A_{$	-	_	-	~	
IC /	C4 (B7) (2010 -)	AMP (Audio Amplifier)	•	•	•	•	•
	C4 (B7) (2010 -) C4 (B7) (2010 -)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C4	C4 (B7) (2010 -) C4 (B7) (2010 -) C4 (B7) (2010 -)	BATT (Battery Charge Status Unit) BSI (Built-in Systems Interface)	•	•	•	•	•
C4 C4	C4 (B7) (2010 -) C4 (B7) (2010 -) C4 (B7) (2010 -) C4 (B7) (2010 -) C4 (B7) (2010 -)	BATT (Battery Charge Status Unit) BSI (Built-in Systems Interface) BSM (Monitoring Of The Blind Spot)	•	•	•	•	•
C4 C4 C4	C4 (B7) (2010 -) C4 (B7) (2010 -)	BATT (Battery Charge Status Unit) BSI (Built-in Systems Interface)	•	•	•	•	•
C4 C4	C4 (B7) (2010 -) C4 (B7) (2010 -) C4 (B7) (2010 -) C4 (B7) (2010 -) C4 (B7) (2010 -)	BATT (Battery Charge Status Unit) BSI (Built-in Systems Interface) BSM (Monitoring Of The Blind Spot)	•	•	•	•	•

Sivu 14/60

				Sivu	14/00		
C4	C4 (B7) (2010 -)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C4	C4 (B7) (2010 -)	Display/Telematics	•	•	•	•	•
C4	C4 (B7) (2010 -)	ECM (Engine Control Module)	•	•	•	•	•
C4	C4 (B7) (2010 -)	EPB (Electric Secondary Brake)	•	•	•	•	•
C4	C4 (B7) (2010 -)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
C4	C4 (B7) (2010 -)	ERU (Engine Relay Unit)	•	•	•	•	•
C4	C4 (B7) (2010 -)	ESL (Electric Steering Lock)	•	•	•	•	•
C4	C4 (B7) (2010 -)	IP (Instrument Cluster Panel)	•	•	٠	•	•
C4	C4 (B7) (2010 -)	KEY (Electrionic Key Reader)	•	•	•	•	•
C4	C4 (B7) (2010 -)	LDWS (Lane Departure Warning System)	•	•	٠	•	•
C4	C4 (B7) (2010 -)	MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
C4	C4 (B7) (2010 -)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C4	C4 (B7) (2010 -)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
C4	C4 (B7) (2010 -)	MULD (Multifunction Display)	•	•	٠	•	•
C4	C4 (B7) (2010 -)	PAM (Parking Assistance)	•	•	•	•	•
C4	C4 (B7) (2010 -)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C4	C4 (B7) (2010 -)	Radio	•	•	•	•	•
C4	C4 (B7) (2010 -)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
C4	C4 (B7) (2010 -)	SM (Services Module)	•	•	٠	•	٠
C4	C4 (B7) (2010 -)	SPMU (Supply Protection And Management Unit)	•	•	٠	•	٠
C4	C4 (B7) (2010 -)	SRS (Airbag)	•	•	•	•	٠
C4	C4 (B7) (2010 -)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	٠
C4	C4 (B7) (2010 -)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C4	C4 (B7) (2010 -)	TCM (Automatic Gearbox)	•	•	•	•	•
C4	C4 (B7) (2010 -)	TRU (Trailer Relay Unit)	•	•	•	•	•
C4	C4 (B7) (2010 -)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C4	C4 (B7) (2010 -)	VRD (Voltage Retaining Device)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	ABS (Anti-lock brake System)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	AC (Air Conditioning)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	BSI (Built-in Systems Interface)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	ECM (Engine Control Module)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	EPS (Electric Power Steering)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	ESL (Electric Steering Lock)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	HFC (Hands free Control Unit)			•	•	
C4	C4 (BZ3) (CHINA)	IP (Instrument Cluster Panel)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	KEY (Electrionic Key Reader)	•	•	•	•	•
C4 C4	C4 (BZ3) (CHINA)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C4 C4	C4 (BZ3) (CHINA)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C4 C4			•	•	•	•	•
C4 C4	C4 (BZ3) (CHINA) C4 (BZ3) (CHINA)	MULD (Multifunction Display) PAM (Parking Assistance)	•	•	•	•	•
C4 C4	C4 (BZ3) (CHINA) C4 (BZ3) (CHINA)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C4 C4			•	•	•	•	•
C4 C4	C4 (BZ3) (CHINA) C4 (BZ3) (CHINA)	Radio	•	•	•	•	•
C4 C4		SM (Services Module)	•	•	•	•	•
	C4 (BZ3) (CHINA)	SRS (Airbag)	-				-
C4	C4 (BZ3) (CHINA)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	Siren	•	•	-	-	-
C4	C4 (BZ3) (CHINA)	TCM (Automatic Gearbox)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	TEU (Telematics Unit)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	TRU (Trailer Relay Unit)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	VRD (Voltage Retaining Device)	•	•	•	•	•
C4	C4 (CACTUS)	ABS (Anti-lock brake System)	•	•	•	•	•
C4	C4 (CACTUS)	AC (Air Conditioning)	•	•	•	•	•
C4	C4 (CACTUS)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C4	C4 (CACTUS)	BSI (Built-in Systems Interface)	•	•	•	•	•
C4	C4 (CACTUS)	CD (External CD Player)	•	•	•	•	•
C4	C4 (CACTUS)	ECM (Engine Control Module)	•	•	•	•	•
C4	C4 (CACTUS)	EPS (Electric Power Steering)	•	•	•	•	•
C4	C4 (CACTUS)	IP (Instrument Cluster Panel)	•	•	•	•	•
C4	C4 (CACTUS)	MCP (Multiplexed Control Panel)		•	•	•	•

C4	C4 (CACTUS)	MDAP (Multiplexed Diesel Additive Pump)			•	•	•
C4 C4	C4 (CACTUS)	MULS (Multifunction Screen)	•	•	•	•	•
C4 C4	C4 (CACTUS)		•	•	•	•	•
C4 C4		PAM (Parking Assistance)			•	•	•
	C4 (CACTUS)	RLS (Rain And Light Sensor)	-	•	-	-	-
C4 C4	C4 (CACTUS)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
	C4 (CACTUS)	SM (Services Module)	•	•	•	•	•
C4	C4 (CACTUS)	SRS (Airbag)	•	•	•	•	•
C4	C4 (CACTUS)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C4	C4 (CACTUS)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
C4	C4 (CACTUS)	TCM (Automatic Gearbox)	•	•	•	•	•
C4	C4 (CACTUS)	TRU (Trailer Relay Unit)	•	•	•	•	•
C4	C4 (CACTUS)	TS (Touch Screen)	•	•	•	•	•
C4	C4 (CACTUS)	VRD (Voltage Retaining Device)	•	•	•	•	•
C4	C4 (L) (B7)	ABS (Anti-lock brake System)	•	•	•	•	•
C4	C4 (L) (B7)	AC (Air Conditioning)	•	•	•	•	•
C4	C4 (L) (B7)	ALM (Anti-theft Alarm)	•	•	•	•	•
C4	C4 (L) (B7)	AMP (Audio Amplifier)	•	•	•	•	•
C4	C4 (L) (B7)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C4	C4 (L) (B7)	BSI (Built-in Systems Interface)	•	•	•	•	•
C4	C4 (L) (B7)	BSM (Monitoring Of The Blind Spot)	•	•	•	•	•
C4	C4 (L) (B7)	DDM (Driver's Door Module)	•	•	•	•	•
C4	C4 (L) (B7)	DHL (Directional Headlamps)	•	•	•	•	•
C4	C4 (L) (B7)	DSM (Driver's School Module)	•	•	•	•	•
C4	C4 (L) (B7)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C4	C4 (L) (B7)	Display/Telematics	•	•	•	•	•
C4	C4 (L) (B7)	ECM (Engine Control Module)	•	•	•	•	•
C4	C4 (L) (B7)	EPB (Electric Secondary Brake)	•	•	•	•	•
C4	C4 (L) (B7)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
C4	C4 (L) (B7)	ERU (Enging Relay Unit)	•	•	•	•	•
C4	C4 (L) (B7)	ESL (Electric Steering Lock)	•	•	•	•	•
C4	C4 (L) (B7)	IP (Instrument Cluster Panel)	•	•	•	•	•
C4	C4 (L) (B7)	KEY (Electrionic Key Reader)		•	•	•	•
			•	•	•	•	•
C4	C4 (L) (B7)	LDWS (Lane Departure Warning System)	•	•	•	•	•
C4 C4	C4 (L) (B7)	List_VEH_C_C4_SEDAN_	•		•	•	•
	C4 (L) (B7)	MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
C4	C4 (L) (B7)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C4 C4	C4 (L) (B7)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
C4	C4 (L) (B7)	MULD (Multifunction Display)	•	•	•	•	•
C4	C4 (L) (B7)	PAM (Parking Assistance)	•	•	•	•	•
C4	C4 (L) (B7)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C4	C4 (L) (B7)	Radio	•	•	•	●	•
C4	C4 (L) (B7)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
C4	C4 (L) (B7)	SM (Services Module)	•	•	•	•	•
C4	C4 (L) (B7)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
C4	C4 (L) (B7)	SRS (Airbag)	•	•	•	•	•
C4	C4 (L) (B7)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	●	•
C4	C4 (L) (B7)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C4	C4 (L) (B7)	TCM (Automatic Gearbox)	•	•	•	•	•
C4 C4	C4 (L) (B7)	TRU (Trailer Relay Unit)	•	•	•	•	•
C4	C4 (L) (B7)	UID (Under Inflation Detection(Dsg))	•	•	۲	•	•
C4	C4 (L) (B7)	VRD (Voltage Retaining Device)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	ABS (Anti-lock brake System)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	AC (Air Conditioning)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	ALM (Anti-theft Alarm)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	AMP (Audio Amplifier)	•	•	•	•	•
	C4 (PICASSO) (2006 - 2013)	BATT (Battery Change Status Unit)	•	•	•	•	•
	C4 (PICASSO) (2006 - 2013)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C4 C4	C4 (PICASSO) (2006 - 2013)	BCM (Body Control Module)	•	•	•	•	•
C4 C4	C4 (PICASSO) (2006 - 2013)	BSI (Built-in Systems Interface)	•	•	•	•	•
C4 C4	C4 (PICASSO) (2006 - 2013)	CD (CD Player)	•	•	•	•	•
~1 C4	C4 (PICASSO) (2006 - 2013) C4 (PICASSO) (2006 - 2013)	CD (External CD Player)	•	•	•	•	•
C4 C4	C4 (PICASSO) (2006 - 2013) C4 (PICASSO) (2006 - 2013)	DAF (Diesel Additive Function)		•	•	•	•
UT .	UT (LIUNDOU) (2000 - 2010)	DUL (DIESEI UNITILE LUNCTION)		-	•	•	•

Sivu 16/60

64 05 100 1000000 100000 1000000 1000000 10000000 10000000 10000000 100000000 100000000 1000000000 10000000000 1000000000000000000000000000000000000					Sivu	10/00		
31 31 (2003) 2008 - 2013 90 Origin's Solve News Ini.) 0	C4	C4 (PICASSO) (2006 - 2013)	DDM (Driver's Door Module)	•	•	•	•	•
3. 9.448.05 0.000 - 0.07.01 Prod. P	C4	C4 (PICASSO) (2006 - 2013)	DHL (Directional Headlamps)	•	•	•	•	•
61 61 735000 (2006 - 2010) 50 Galgar Osciol Kalda • <td< td=""><td>C4</td><td>C4 (PICASSO) (2006 - 2013)</td><td>DSM (Driver's School Module)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></td<>	C4	C4 (PICASSO) (2006 - 2013)	DSM (Driver's School Module)	•	•	•	•	•
G4 C4 Protocol 2007 - 0.001 C5 Selectic Screening Fach Image: Calibratic Screening Fach Image: Calibratit Screening Fach	C4	C4 (PICASSO) (2006 - 2013)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	
64 04 1000000 1000000 1000000 10000000 10000000 1000000000 1000000000000000000000000000000000000	C4	C4 (PICASSO) (2006 - 2013)	Display/Telematics	•	•	•	•	●
64 04 <td< td=""><td>C4</td><td>C4 (PICASSO) (2006 - 2013)</td><td>ECM (Engine Control Module)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></td<>	C4	C4 (PICASSO) (2006 - 2013)	ECM (Engine Control Module)	•	•	•	•	•
C4 0.4 9105800 1000 - 2013 800 (figure local fact) 0 <t< td=""><td>C4</td><td>C4 (PICASSO) (2006 - 2013)</td><td>EPB (Electric Secondary Brake)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></t<>	C4	C4 (PICASSO) (2006 - 2013)	EPB (Electric Secondary Brake)	•	•	•	•	•
51 61 61 61 62 64 <td< td=""><td>C4</td><td>C4 (PICASSO) (2006 - 2013)</td><td>EPS (Electric Power Steering)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></td<>	C4	C4 (PICASSO) (2006 - 2013)	EPS (Electric Power Steering)	•	•	•	•	•
C1 01 01 01 01 02 0 </td <td>C4</td> <td>C4 (PICASSO) (2006 - 2013)</td> <td>ERU (Engine Relay Unit)</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>	C4	C4 (PICASSO) (2006 - 2013)	ERU (Engine Relay Unit)	•	•	•	•	•
64 9. 010300 (2009 - 2015) 99. 0105 (2009 (2017) 9 9 9 9 64 8. 010300 (2009 - 2015) 19. 0105 (2009 (2017) 9 9 9 9 9 9 64 8. 010300 (2009 - 2015) 105. 0.001 (2017) 105. 0.001 (2017) 9	C4	C4 (PICASSO) (2006 - 2013)	ESL (Electric Steering Lock)	•	•	٠	•	•
61 64 9178500 (2007 - 2013) PF (darmard Network) •<	C4	C4 (PICASSO) (2006 - 2013)	HFC (Hands Free Control Kit)	•	•	•	•	•
64 64 94 <td< td=""><td>C4</td><td>C4 (PICASSO) (2006 - 2013)</td><td>HFC (Hands free Control Unit)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></td<>	C4	C4 (PICASSO) (2006 - 2013)	HFC (Hands free Control Unit)	•	•	•	•	•
64 64 94 <td< td=""><td>C4</td><td>C4 (PICASSO) (2006 - 2013)</td><td>HFR (High Frequency Receiver)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></td<>	C4	C4 (PICASSO) (2006 - 2013)	HFR (High Frequency Receiver)	•	•	•	•	•
G4 44 47(15380) (2006 - 2013) HPI (Liphing bock limit) • <t< td=""><td>C4</td><td>C4 (PICASSO) (2006 - 2013)</td><td>IP (Instrument Cluster Panel)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></t<>	C4	C4 (PICASSO) (2006 - 2013)	IP (Instrument Cluster Panel)	•	•	•	•	•
G4 44 47(15380) (2006 - 2013) HPI (Liphing bock limit) • <t< td=""><td>C4</td><td>C4 (PICASSO) (2006 - 2013)</td><td>KEY (Electrionic Key Reader)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>٠</td></t<>	C4	C4 (PICASSO) (2006 - 2013)	KEY (Electrionic Key Reader)	•	•	•	•	٠
64 64 <td< td=""><td>C4</td><td>C4 (PICASSO) (2006 - 2013)</td><td>LDWS (Lane Departure Warning System)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></td<>	C4	C4 (PICASSO) (2006 - 2013)	LDWS (Lane Departure Warning System)	•	•	•	•	•
C4 44 47 497 2013 10.1111/arction district Penal) • <td>C4</td> <td></td> <td></td> <td>•</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>	C4			•	•	•	•	•
C4 (24 (25, 00) -0013 BUE Obtilized Divers Or Wolffamenton Video Canera) • <	C4			•	•	•	•	•
C1 01 01 01 01 01 0 </td <td>C4</td> <td></td> <td>· · · ·</td> <td>-</td> <td>-</td> <td>-</td> <td>•</td> <td>•</td>	C4		· · · ·	-	-	-	•	•
G4 (24 (P12585) (2006 - 2013) MLD Multifunction Using (a) •	C4 C4				_	_	-	
G4 07.4 07.0550 (2006 - 2013) PM (Parking Astrono) 0 <t< td=""><td></td><td></td><td></td><td>-</td><td>-</td><td>-</td><td>_</td><td></td></t<>				-	-	-	_	
C4 C4 CFCXSD COM - 2013) PMI (Passange' a box Bohla) •				-	-	-	_	
C4 C4 C1 C4 C1 C4 C4 <td< td=""><td></td><td></td><td></td><td></td><td>-</td><td>_</td><td>-</td><td></td></td<>					-	_	-	
C4 C4 (FILDSS) (2006 - 2013) FA (Functional Assistance ECI) (I) (I) (I) C4 C4 (FILDSS) (2006 - 2013) EX (Kain And Brightness Senor) (I) (I) </td <td></td> <td></td> <td></td> <td>-</td> <td>-</td> <td>-</td> <td>-</td> <td>-</td>				-	-	-	-	-
C4 C4 <td< td=""><td>C4</td><td></td><td></td><td>-</td><td>-</td><td>-</td><td>•</td><td>•</td></td<>	C4			-	-	-	•	•
C4 C4 C1 (PICASSO) (2006 - 2013) Bell (Rev results) Seat Belt Reel) Image: Constant of California Californi Californi Californi California Califori California Califori Cali				-	-	-	•	•
C4 <td></td> <td></td> <td></td> <td>-</td> <td>-</td> <td>-</td> <td>-</td> <td>-</td>				-	-	-	-	-
C4 C4 (PICASS0) (2006 - 2013) SB (LH Reversible Seat Belt Reel) •<				•	-	-	•	•
C4 C4 (FICASSO) (2006 - 2013) SB (0H Reversible Seat Belt Rec)) •<				-	-	-	-	-
C4 C4 (P(LXSS) (2006 - 2013) SPI (Signalling Pase Box) •				_	-	-		-
C4 C4 (PICASSD) (2006 - 2013) SM (Services Module) • <t< td=""><td>C4</td><td></td><td></td><td>-</td><td>-</td><td>-</td><td>•</td><td>•</td></t<>	C4			-	-	-	•	•
C4 C4 (PICASSO (2006 - 2013) SPMI (Supply Protection And Management Unit) •				-	-	-	-	-
C4 C4 (PICASS0 (2006 - 2013) SRS (Airhag) •		C4 (PICASSO) (2006 - 2013)	SM (Services Module)	•	•	•	•	•
C4 C4 (PICASS0 (2006 - 2013) SSP (Pneumatic Suspension) •	C4	C4 (PICASSO) (2006 - 2013)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
C4 (4 (PICASS0) (2006 - 2013) STIC (Steering Wheel With Integral Controls (VCI)) •<	C4	C4 (PICASSO) (2006 - 2013)	SRS (Airbag)	•	•	•	•	•
C4 C4 <td< td=""><td>C4</td><td>C4 (PICASSO) (2006 - 2013)</td><td>SSP (Pneumatic Suspension)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>●</td></td<>	C4	C4 (PICASSO) (2006 - 2013)	SSP (Pneumatic Suspension)	•	•	•	•	●
C4 C4 <td< td=""><td>C4</td><td>C4 (PICASSO) (2006 - 2013)</td><td>SWIC (Steering Wheel With Integral Controls (VCI))</td><td>•</td><td>•</td><td>•</td><td>٠</td><td>●</td></td<>	C4	C4 (PICASSO) (2006 - 2013)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	٠	●
C4 C4 (PICASS0) (2006 - 2013) TCM (Automatic Gearbox) • <td< td=""><td>C4</td><td>C4 (PICASSO) (2006 - 2013)</td><td>SWSM(Switch Module Under The Steering Wheel(Top Of Column))</td><td>•</td><td>•</td><td>•</td><td>•</td><td>●</td></td<>	C4	C4 (PICASSO) (2006 - 2013)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	●
C4 C4 <td< td=""><td></td><td>C4 (PICASSO) (2006 - 2013)</td><td>Siren</td><td>•</td><td>•</td><td>•</td><td>•</td><td>●</td></td<>		C4 (PICASSO) (2006 - 2013)	Siren	•	•	•	•	●
C4 C4 (PICASS0) (2006 - 2013) TRU (Trailer Relay Unit) •	C4	C4 (PICASSO) (2006 - 2013)	TCM (Automatic Gearbox)	•	•	•	•	●
C4 C4 (PICASS0) (2006 - 2013) UID (Under Inflation Detection (Dsg)) • <t< td=""><td>C4</td><td>C4 (PICASSO) (2006 - 2013)</td><td>TEU (Telematics Unit SMEG_PLUS)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></t<>	C4	C4 (PICASSO) (2006 - 2013)	TEU (Telematics Unit SMEG_PLUS)	•	•	•	•	•
C4C4 (PICASSO) (2006 - 2013)VDA (Vehicle Distance Assistance) \bullet <	C4	C4 (PICASSO) (2006 - 2013)	TRU (Trailer Relay Unit)	•	•	•	•	•
C4 C4 (PICASSO) (2006 - 2013) VRD (Voltage Retaining Device) • <td>C4</td> <td>C4 (PICASSO) (2006 - 2013)</td> <td>UID (Under Inflation Detection(Dsg))</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>	C4	C4 (PICASSO) (2006 - 2013)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C4 C4 (PICASSO) (2006 - 2013) VRD (Voltage Retaining Device) • <td>C4</td> <td>C4 (PICASSO) (2006 - 2013)</td> <td>VDA (Vehicle Distance Assistance)</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>	C4	C4 (PICASSO) (2006 - 2013)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
C4 C4 (PICASSO) (2006 - 2013) Wiper (Windscreen Wiper) • <	C4	C4 (PICASSO) (2006 - 2013)	VRD (Voltage Retaining Device)	•	•	•	•	•
C4C4(PICASSO) (B78) (2013 -)ABS (Anti-lock brake System)Image: C4Image: C4Image: C4C4(PICASSO) (B78) (2013 -)AC (Air Conditioning)Image: C4Image: C4 <thimage: c4<="" td=""><td>C4</td><td>C4 (PICASSO) (2006 - 2013)</td><td>Wiper (Windscreen Wiper)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></thimage:>	C4	C4 (PICASSO) (2006 - 2013)	Wiper (Windscreen Wiper)	•	•	•	•	•
C4C4 (PICASSO) (B78) (2013 -)AC (Air Conditioning)Image: C4Image: C4Image: C4C4 (PICASSO) (B78) (2013 -)ALM (Anti-theft Alarm)Image: C4Image: C4 <td>C4</td> <td>C4 (PICASSO) (B78) (2013 -)</td> <td>ABS (Anti-lock brake System)</td> <td>•</td> <td>•</td> <td>٠</td> <td>•</td> <td>٠</td>	C4	C4 (PICASSO) (B78) (2013 -)	ABS (Anti-lock brake System)	•	•	٠	•	٠
C4C4 (PICASSO) (B78) (2013 -)ALM (Anti-theft Alarm)Image: C4Image:	C4	C4 (PICASSO) (B78) (2013 –)	AC (Air Conditioning)	•	•	•	•	•
C4C4C4 (PICASSO) (B78) (2013 -)AMP (Audio Amplifier) \bullet	C4		-	•	•	•	•	•
C4C4(PICASSO) (B78) (2013 -)BATT (Battery Charge Status Unit)Image: C4Image: C4 <thimage:< td=""><td>C4</td><td></td><td></td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></thimage:<>	C4			•	•	•	•	•
C4C4(PICASSO)(B78)(2013 -)BCM(Body Control Module)Image: Case of the systems	C4		-	•	•	•	•	•
C4C4(PICASSO)(B78)(2013 -)BSI(Built-in Systems Interface)Image: C4Image: C4I	C4		· · · · · ·		-	-		-
C4C4(PICASSO) (B78) (2013 -)CD (External CD Player)Image: C4Image: C4 <t< td=""><td>C4</td><td></td><td></td><td></td><td>-</td><td>-</td><td>-</td><td>•</td></t<>	C4				-	-	-	•
C4C4(PICASSO)(B78)(2013 -)DDM(Driver's Door Module)•• <td>C4</td> <td></td> <td></td> <td>-</td> <td>-</td> <td>-</td> <td></td> <td>-</td>	C4			-	-	-		-
C4C4(PICASSO) (B78) (2013 -)DHL (Directional Headlamps)Image: C4Image: C4 <td></td> <td></td> <td></td> <td></td> <td>-</td> <td>-</td> <td>-</td> <td>-</td>					-	-	-	-
C4C4 (PICASSO) (B78) (2013 -)DSMU (Driver's Seat Memory Unit)Image: Case of the seat Memory Unit)Image: Case of the seat Memory Unit)C4C4 (PICASSO) (B78) (2013 -)ECM (Engine Control Module)Image: Case of the seat Memory Unit)Image: Case of the seat Memory Unit)Ima					-	-		-
C4(PICASSO) (B78) (2013 -)ECM (Engine Control Module)Image: Calific Control Module)Image: Calific Control Module)C4C4 (PICASSO) (B78) (2013 -)EPS (Electric Power Steering)Image: Calific Control Module)Image: Calific Control Module)Image: Calific Control Module)C4C4 (PICASSO) (B78) (2013 -)EPS (Electric Power Steering)Image: Calific Control Module)Image: Calific Control Module)Image: Calific Control Module)C4C4 (PICASSO) (B78) (2013 -)ERU (Engine Relay Unit)Image: Calific Control Module)Image: Calific Control Module)C4C4 (PICASSO) (B78) (2013 -)ESL (Electric Steering Lock)Image: Calific Control Module)Image: Calific Control Module)C4C4 (PICASSO) (B78) (2013 -)ESL (Electric Steering Lock)Image: Calific Control Module)Image: Calific Control Module)C4C4 (PICASSO) (B78) (2013 -)ESL (Electric Steering Lock)Image: Calific Control Module)Image: Calific Control Module)	C4 C4		-	-	-	-	-	-
C4C4(PICASSO)(B78)(2013 -)EPS(Electric Power Steering)Image: Calibration of the steering of th						-		-
C4C4(PICASSO)(B78)(2013 -)ERU(Engine Relay Unit)Image: Calific Steering Lock)Image: Calific Ste							_	
C4 (PICASSO) (B78) (2013 -) ESL (Electric Steering Lock) • • • •					_	-	-	
C4C4C4C915 (2013 -)ESE (Electric Steering Lock)Image: Calibration of the				-		-	_	
C4C4(PICASSO)(B78)(2013 -)IP(Hands free Control Unit)IPIPIPIPC4C4(PICASSO)(B78)(2013 -)IP(Instrument Cluster Panel)IPIPIPIP	C4				-	-	•	-
U4 U4 (Y1UASSU) (B/8) (2013 -) IF (Instrument Uluster Panel)	C4				-	-	•	•
	04	ra (literio) (r. (r. (r. 1970)) (r. 1970) (r. 1970) (r. 1970)	ir (instrument liuster Panel)	•	•	•	•	•

Sivu 17/60

,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,					17/00		
C4	C4 (PICASSO) (B78) (2013 -)	KEY (Electrionic Key Reader)	•	•	•	•	•
C4 C4	C4 (PICASSO) (B78) (2013 -)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	MULC (Multifunction Camera Or Multifunction Video Camera)	•	•	٠	•	•
C4	C4 (PICASSO) (B78) (2013 -)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 –)	PAM (Parking Assistance)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 –)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 –)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	SB (LH Reversible Seat Belt Reel)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	SB (RH Reversible Seat Belt Reel)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 –)	SFB (Signalling Fuse Box)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 –)	SM (Services Module)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	SRS (Airbag)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	Siren	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	TCM (Automatic Gearbox)	•	•	•	•	•
C4 C4	C4 (PICASSO) (B78) (2013 -)	TEU (Telematics Unit SMEG PLUS)		•	•	•	•
C4 C4	C4 (PICASSO) (B78) (2013 -)	TRU (Trailer Relay Unit)	•	•	•	•	•
C4 C4	C4 (PICASSO) (B78) (2013 -)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
C4 C4	C4 (PICASSO) (B78) (2013 -) C4 (PICASSO) (B78) (2013 -)	VRD (Voltage Retaining Device)	•	•	•	•	•
C4 C4	C4 (PICASSO) (B78) (2013 -) C4 (PICASSO) (B78) (2013 -)		•	•	•	•	•
C4 C4		Wiper (Windscreen Wiper)	•	•	•	•	•
C4 C4	C4 (SEDAN) (2006 -)	ABS (Anti-lock brake System)	•	•	•	•	•
C4 C4	C4 (SEDAN) (2006 -)	AC (Air Conditioning)	-	-	-	-	-
	C4 (SEDAN) (2006 -)	ALM (Anti-theft Alarm)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	AMP (Audio Amplifier)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	BATT (Battery Change Status Unit)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	BSI (Built-in Systems Interface)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	CD (CD Player)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	DAF (Diesel Additive Function)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	DDM (Driver's Door Module)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	DHL (Directional Headlamps)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	DSM (Driver's School Module)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	Display/Telematics	•	•	•	•	•
C4 C4 C4 C4	C4 (SEDAN) (2006 -)	ECM (Engine Control Module)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	EPB (Electric Secondary Brake)	•	•	•	•	•
C4	C4 (SEDAN) (2006 –)	EPS (Electric Power Steering)	•	•	•	•	•
	C4 (SEDAN) (2006 –)	ERU (Engine Relay Unit)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	HFC (Hands Free Control Kit)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	HFR (High Frequency Receiver)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
C4 C4	C4 (SEDAN) (2006 -)	LDWS (Lane Departure Warning System)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	LPU (Lighting Pack Unit)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	MULD (Multifunction Display)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	PAM (Parking Assistance)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	PDM (Passenger's Door Module)	•	•	•	•	•
C4	C4 (SEDAN) (2006 –)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C4	C4 (SEDAN) (2006 –)	RCU (Rev Counter Unit)	•	•	٠	•	•
C4	C4 (SEDAN) (2006 –)	Radio	•	•	٠	•	•
C4	C4 (SEDAN) (2006 -)	SM (Services Module)	•	•	•	•	•
C4	C4 (SEDAN) (2006 –)	SRS (Airbag)	•	•	٠	•	•
C4	C4 (SEDAN) (2006 –)	SSP (Pneumatic Suspension)	•	•	•	•	•
C4	C4 (SEDAN) (2006 –)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C4	C4 (SEDAN) (2006 –)	TCM (Automatic Gearbox)	•	•	•	•	•
C4	C4 (SEDAN) (2006 –)	TRU (Trailer Relay Unit)	•	•	•	•	•
C4	C4 (SEDAN) (2006 –)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	VRD (Voltage Retaining Device)	•	•	•	•	•
C4	C4 (SEDAN) (2006 –)	Wiper (Windscreen Wiper)	•	•	•	•	•
C5	C5 (2001 - 2004)	ABS (Anti-lock brake System TEVES MK60)	•	•	•	•	•
L	· · · · ·	. ,	!	-	-	-	

Sivu 18/60

					10/00		
C5	C5 (2001 – 2004)	ABS (Anti-lock brake System)	•	•	•	•	•
C5	C5 (2001 – 2004)	AC (Air Conditioning)	•	•	•	•	•
C5	C5 (2001 – 2004)	ADDG02	•	•	•	•	•
C5	C5 (2001 – 2004)	ADDGO3	•	•	•	•	•
C5	C5 (2001 – 2004)	AH (Additional Heating)	•	•	•	•	•
C5	C5 (2001 – 2004)	ALM (Anti-theft Alarm)	•	•	•	•	•
C5	C5 (2001 – 2004)	AMP (Audio Amplifier)	•	•	•	•	•
C5	C5 (2001 – 2004)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
C5	C5 (2001 – 2004)	Alarm	•	•	•	•	•
C5	C5 (2001 – 2004)	BATT (Battery Change Status Unit)	•	•	•	•	•
C5	C5 (2001 – 2004)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C5	C5 (2001 – 2004)	BCM (Body Control Module)	•	•	•	•	•
C5	C5 (2001 – 2004)	BHU (Body Height Unit)	•	•	•	•	•
C5	C5 (2001 – 2004)	BSI (Built-in Systems Interface)	•	•	•	•	•
C5	C5 (2001 – 2004)	CD (CD Player)	•	•	•	•	•
C5	C5 (2001 - 2004)	DDC (Driver's Door Control Panel)	•	•	•	•	•
C5	C5 (2001 - 2004)	DHL (Directional Headlamps)	•	•	•	•	•
C5	C5 (2001 - 2004)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C5	C5 (2001 - 2004)	Display/Telematics	•	•	•	•	•
C5	C5 (2001 - 2004)	ECM (Engine Control Module)	•	•	•	•	•
C5	C5 (2001 - 2004)	EPB (Electric Secondary Brake)	•	•	•	•	•
C5	C5 (2001 - 2004)	EPS (Electric Power Steering)	•	•	•	•	•
C5	C5 (2001 - 2004)	ERU (Engine Relay Unit)	•	•	•	•	•
C5	C5 (2001 - 2004)	ESL (Electric Steering Lock)	•	•	•	•	•
C5	C5 (2001 - 2004)	ESP (Electronic Stability Program)	•	•	•	•	•
C5	C5 (2001 - 2004)	HFC (Hands Free Control Kit)	•	•	•	•	•
C5	C5 (2001 - 2004)	HFR (High Frequency Receiver)	•	•	•	•	•
C5	C5 (2001 - 2004)	IP (Instrument Cluster Panel)	•	•	•	•	•
C5	C5 (2001 - 2004)	LDWS (Lane Departure Warning System)	•	•	•	•	
C5	C5 (2001 - 2004)	MCP (Multiplexed Control Panel)	•	•	•	•	
C5	C5 (2001 - 2004)	MDP CONDUCT	•	•		•	
C5	C5 (2001 - 2004)	MDP PASSAG	•	•		•	•
C5	C5 (2001 - 2004)	MULC (Multifunction Video Camera (CMF))		•		•	
C5	C5 (2001 - 2004)	MULD (Multifunction Display SAGEM A)	•	•	•	•	
C5	C5 (2001 - 2004)	MULD (Multifunction Display SAGEM K)	•	•	-	•	•
			•	•	-	•	•
C5 C5	C5 (2001 - 2004) C5 (2001 - 2004)	MULD (Multifunction Display)	•	•	•	•	•
C5 C5		PAM (Parking Assistance)	•	•	•	•	•
C5 C5	C5 (2001 - 2004) C5 (2001 - 2004)	PVA (Panoramic Visual Assistance ECU) RBS (Rain And Brightness Sensor)	•	•	•	•	•
C5				_		-	-
	C5 (2001 - 2004)	RLS (Rain And Light Sensor)	•	•	•	•	•
C5 C5	C5 (2001 - 2004)	RTTC (Radio Telephone Transceiver Control)	•	•	•	•	•
	C5 (2001 - 2004)	Radio	•	•	•	•	•
C5	C5 (2001 - 2004)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
C5	C5 (2001 - 2004)	SB (Seat Belts Reminder LED)	•	•	•	•	•
C5	C5 (2001 - 2004)	SM (Services Module)	•	•	•	•	•
C5	C5 (2001 - 2004)	SRS (Airbag)	•	•	•	•	•
C5	C5 (2001 - 2004)	SRS (Siemens Central Airbag)	•	•	•	•	•
C5	C5 (2001 - 2004)	SSP (Active Damper Electronic Unit)	•	•	•	•	•
C5	C5 (2001 - 2004)	SSP (Ecotech Suspension)	•	•	•	•	•
C5	C5 (2001 - 2004)	SSP (Suspension Control System)	•	•	•	•	•
C5	C5 (2001 - 2004)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C5	C5 (2001 - 2004)	SWSM(Switch Module At The Steering Wheel)	•	•	•	•	•
C5	C5 (2001 - 2004)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C5	C5 (2001 - 2004)	TCM (Automatic Gearbox AL4)	•	•	•	•	•
C5	C5 (2001 - 2004)	TCM (Automatic Gearbox)	•	•	•	•	•
C5	C5 (2001 – 2004)	TEU (Telematics Unit RT4)	•	•	•	•	•
C5	C5 (2001 – 2004)	TRU (Trailer Relay Unit)	•	•	•	•	•
C5	C5 (2001 – 2004)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C5	C5 (2001 – 2004)	UID (Under Inflation Detection)	•	•	•	•	•
C5	C5 (2001 – 2004)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
C5	C5 (2001 – 2004)	VRD (Voltage Retaining Device)	•	•	•	●	•
C5	C5 (2001 – 2004)	Wiper (Windscreen Wiper)	•	•	•	●	•

Sivu 19/60

A10 KA	UPPA OY www.a10kauppa.fi			Sivu	19/60		
C5	C5 (3rd Generation)	ABS (Anti-lock brake System)		•	•	•	•
C5	C5 (3rd Generation)	AC (Air Conditioning)	•	•	•	•	•
C5	C5 (3rd Generation)	AMP (Audio Amplifier)	•	•	•	•	•
C5	C5 (3rd Generation)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C5	C5 (3rd Generation)	BSI (Built-in Systems Interface)	•	•	•	•	•
C5	C5 (3rd Generation)	DDC (Driver's Door Control Panel)	•	•	•	•	•
C5	C5 (3rd Generation)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C5	C5 (3rd Generation)	ECM (Engine Control Module)	•	•	•	•	•
C5	C5 (3rd Generation)	EPS (Electric Power Steering)	•	•	•	•	•
C5	C5 (3rd Generation)	ESL (Electric Steering Lock)	•	•	•	•	•
C5	C5 (3rd Generation)	IP (Instrument Cluster Panel)	•	•	•	•	•
C5	C5 (3rd Generation)	MCP (Multiplexed Control Panel)			•	•	•
C5	C5 (3rd Generation)	PAM (Parking Assistance)	•	•	•	•	•
C5	C5 (3rd Generation)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
C5	C5 (3rd Generation)			•	•	•	•
C5	C5 (3rd Generation)	RLS (Rain And Light Sensor)	•	•	•	•	•
	,	RTTC (Radio Telephone Transceiver Control)	-		_		-
C5	C5 (3rd Generation)	SM (Services Module)	•	•	•	•	•
C5	C5 (3rd Generation)	SRS (Airbag)	•	•	•	•	•
C5	C5 (3rd Generation)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C5	C5 (3rd Generation)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C5	C5 (3rd Generation)	TCM (Automatic Gearbox)	•	•	•	•	•
C5	C5 (3rd Generation)	UID (Under Inflation Detection)	•	•	•	•	•
C5	C5 (3rd Generation)	VRD (Voltage Retaining Device)	•	•	•	•	•
C5	C5 (3rd Generation)	Wiper (Windscreen Wiper)	•	•	•	•	•
C5	C5 (AIRCROSS)	ABS (Anti-lock brake System)	•	•	•	•	•
C5	C5 (AIRCROSS)	AC (Air Conditioning)	•	•	•	•	•
C5	C5 (AIRCROSS)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
C5	C5 (AIRCROSS)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C5	C5 (AIRCROSS)	BCM (Body Control Module)	•	•	•	•	•
C5	C5 (AIRCROSS)	BSI (Built-in Systems Interface)	•	•	•	•	•
C5	C5 (AIRCROSS)	DDC (Driver's Door Control Panel)	•	•	•	•	•
C5	C5 (AIRCROSS)	DHL (Directional Headlamps)	•	•	•	•	•
C5	C5 (AIRCROSS)	ECM (Engine Control Module)	•	•	•	•	•
C5	C5 (AIRCROSS)	EPS (Electric Power Steering)	•	•	•	•	•
C5	C5 (AIRCROSS)	ESL (Electric Steering Lock)	•	•	•	•	•
C5	C5 (AIRCROSS)	IP (Instrument Cluster Panel)	•	•	•	•	•
C5	C5 (AIRCROSS)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C5	C5 (AIRCROSS)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
C5	C5 (AIRCROSS)	PAM (Parking Assistance)	•	•	•	•	•
C5	C5 (AIRCROSS)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
C5	C5 (AIRCROSS)	RLS (Rain And Light Sensor)	•	•	•	•	•
C5	C5 (AIRCROSS)	RTTC (Radio Telephone Transceiver Control)		•	•	•	•
							-
C5	C5 (AIRCROSS)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
C5	C5 (AIRCROSS)	SM (Services Module)	•	•	•	•	•
C5 C5	C5 (AIRCROSS)	SRS (Airbag)	-	-	_		-
	C5 (AIRCROSS)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C5	C5 (AIRCROSS)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C5	C5 (AIRCROSS)	TCM (Automatic Gearbox)	•	•	•	•	•
C5	C5 (AIRCROSS)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
C5	C5 (AIRCROSS)	VRD (Voltage Retaining Device)	•	•	•	•	
C5	C5 (R) (2004 - 2007)	AC (Air Conditioning)	•	•	•	•	
C5	C5 (R) (2004 - 2007)	ADDG03	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	Alarm	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	BSI (Built-in Systems Interface)	•	•	•	•	•
C5	C5 (R) (2004 – 2007)	CD (CD Player)	•	•	•	•	•
C5	C5 (R) (2004 – 2007)	DHL (Directional Headlamps)	•	•	•	•	•
C5	C5 (R) (2004 – 2007)	ECM (Engine Control Module)	•	•	•	•	•
C5			•	•	•	•	•
C0	C5 (R) (2004 – 2007)	EPS (Electric Power Steering)					
C5	C5 (R) (2004 - 2007) C5 (R) (2004 - 2007)	EFS (Electric Fower Steering) ERU (Engine Relay Unit)	•	•	•	•	•
			-		-		-
C5	C5 (R) (2004 – 2007)	ERU (Engine Relay Unit)	•	•	•	•	•

Sivu 20/60

	UPPA OY www.a10kauppa.fi			Sivu	20/60		
C5	C5 (R) (2004 – 2007)	MDP CONDUCT		•	•	•	•
C5	C5 (R) (2004 - 2007)	MDP PASSAG	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	MULD (Multifunction Display SAGEM C)	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	PAM (Parking Assistance)	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	Radio	•	•	٠	•	•
	C5 (R) (2004 - 2007)	SRS (Siemens Central Airbag)	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	SSP (Ecotech Suspension)	•	•	٠	•	•
C5	C5 (R) (2004 - 2007)	SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	TCM (Automatic Gearbox)	•	•	٠	•	•
C5	C5 (R) (2004 - 2007)	TEU (Telematics Unit RT4)	•	•	•	•	•
C5	C5 (R) (2004 – 2007)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C5	C5 (X7) (2007 –)	ABS (Anti-lock brake System)	•	•	•	•	•
C5	C5 (X7) (2007 –)	AC (Air Conditioning)	•	•	•	•	•
C5	C5 (X7) (2007 –)	AH (Additional Heating)	•	•	•	•	•
C5	C5 (X7) (2007 –)	ALM (Anti-theft Alarm)	•	•	•	•	•
C5	C5 (X7) (2007 –)	AMP (Audio Amplifier)	•	•	•	•	•
	C5 (X7) (2007 –)	BATT (Battery Change Status Unit)	•	•	•	•	•
	C5 (X7) (2007 -)	BCM (Body Control Module)	•	•	•	•	•
C5	C5 (X7) (2007 -)	BHU (Body Height Unit)	•	•	•	•	•
	C5 (X7) (2007 -)	BSI (Built-in Systems Interface)	•	•	•	•	•
C5	C5 (X7) (2007 -)	CD (CD Player)	•	•	•	•	•
C5	C5 (X7) (2007 -)	DDM (Driver's Door Module)	•	•	•	•	•
C5	C5 (X7) (2007 -)	DHL (Directional Headlamps)	•	•	•	•	•
C5	C5 (X7) (2007 -)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C5	C5 (X7) (2007 -)	Display/Telematics	•	•	•	•	•
	C5 (X7) (2007 -)	ECM (Engine Control Module)	•	•	•	•	•
C5	C5 (X7) (2007 -)	EPB (Electric Secondary Brake)	•	•	•	•	•
C5	C5 (X7) (2007 -)	EPS (Electric Power Steering)	•	•	•	•	•
	C5 (X7) (2007 -)	ERU (Engine Relay Unit)	•	•	•	•	•
	C5 (X7) (2007 -)	HFC (Hands Free Control Kit)	•	•	•	•	•
	C5 (X7) (2007 -)	HFR (High Frequency Receiver)	•	•	•	•	•
	C5 (X7) (2007 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
C5	C5 (X7) (2007 -)	LDWS (Lane Departure Warning System)	•	•	•	•	•
	C5 (X7) (2007 -)	MULD (Multifunction Display)	•	•	•	•	•
C5	C5 (X7) (2007 -)	PAM (Parking Assistance)	•	•	•	•	•
C5	C5 (X7) (2007 -)	RBS (Rain And Brightness Sensor)			•	•	•
C5	C5 (X7) (2007 -)	Radio	•	•	•	•	•
C5	C5 (X7) (2007 -)	SB (Seat Belts Reminder LED)	•	•	•	•	•
C5	C5 (X7) (2007 -)	SM (Services Module)	•	•	•	•	•
C5	C5 (X7) (2007 -)	SRS (Airbag)	•	•	•	•	•
C5	C5 (X7) (2007 -)	SSP (Active Damper Electronic Unit)	•	•	•	•	•
	C5 (X7) (2007 -)	SSP (Suspension Control System)	•	•	•	•	•
	C5 (X7) (2007 -)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
	C5 (X7) (2007 -)	TCM (Automatic Gearbox)	•	•	•	•	•
C5	C5 (X7) (2007 -)	TRU (Trailer Relay Unit)	•	•	•	•	•
C5	C5 (X7) (2007 -)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C5	C5 (X7) (2007 -)	VRD (Voltage Retaining Device)	•	•	•	•	•
C5	C5 (X7) (2007 -)	Wiper (Windscreen Wiper)	•	•	•	•	•
C6	C6	ABS (Anti-lock brake System)	•	•	•	•	•
C6	C6	AC (Air Conditioning)			•	•	
C6	C6	AC (Rear Air Conditioning Panel)	•	•	•	•	•
C6	C6	AH (Additional Heating)		•	•	•	•
C6	C6	ALM (Anti-theft Alarm)	•	•	•	•	•
C6	C6	ALM (Anti-theit Alarm) AMP (Audio Amplifier)	•	•	•	•	•
C6	C6	BATT (Battery Change Status Unit)	•	•	•	•	•
C6 C6			•	•	•	•	•
C6 C6	C6	BATT (Battery Charge Status Unit)	•	•	•	•	•
	C6	BRU (Boot Relay Unit)	-	•	•	•	•
C6 C6	C6	BSI (Built-in Systems Interface)	•	•	•	•	•
C6 C6	C6	CD (CD Player)	•		•	-	
C6 C6	C6	DDC (Driver's Door Control Panel)		•	•	•	•
u n	C6	DDM (Driver's Door Module)	I	•	-	•	•

C6	C6	DHL (Directional Headlamps)	•	•	•	•	•
C6	C6	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C6	C6	Display/Telematics	•	•	•	•	•
C6	C6	ECM (Engine Control Module)	•	•	•	•	•
C6	C6	EPB (Electric Secondary Brake)	•	•	•	•	•
C6	C6	EPS (Electric Power Steering)	•	•	•	•	•
C6	C6	ERU (Engine Relay Unit)	•	•	•	•	•
C6	C6	ESL (Electric Steering Lock)	•	•	•	•	•
C6	C6	HFC (Hands Free Control Kit)	•	•	•	•	•
C6	C6	HFR (High Frequency Receiver)	•	•	•	•	•
C6	C6	HHV (High Head Vision)	•	•	٠	•	٠
C6	C6	HLL (Left Hand Headlamp)	•	•	•	•	•
C6	C6	HLR (Right Hand Headlamp)	•	•	•	•	•
C6	C6	IP (Instrument Cluster Panel)	•	•	•	•	•
C6	C6	LDWS (Lane Departure Warning System)	•	•	•	•	•
C6	C6	MCP (Multiplexed Control Panel)	•	•	•	•	•
C6	C6	MPD (Moving Panel Deflector)	•	•	•	•	•
C6	C6	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
C6	C6	MULD (Multifunction Display)	•	•	•	•	•
C6	C6	PAM (Parking Assistance)	•	•	•	•	•
C6	C6	PDM (Passenger's Door Module)	•	•	•	•	•
C6	C6	PID (Pedestrian Impact Detection)	•	•	•	•	•
C6	C6	PSM (Passenger's Seat Memorisation Unit)	•	•	•	•	•
C6	C6	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
C6	C6	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C6	C6	RLS (Rain And Light Sensor)	•	•	•	•	•
C6	C6	RSM (Rear Seat Memorising Unit)	•	•	•	•	•
C6	C6	RTTC (Radio Telephone Transceiver Control)	•	•	•	•	•
C6	C6	Radio	•	•	•	•	•
C6	C6	SM (Services Module)	•	•	•	•	•
C6	C6	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
C6	C6	SRS (Airbag)	•	•	•	•	•
C6	C6	SSLH (LH Seat Switch Panel)	•	•	•	•	•
C6	C6	SSP (Suspension Control System)	•	•	•	•	•
C6	C6	SSRH (RH Seat Switch Panel)	•	•	•	•	•
C6	C6	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C6	C6	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C6	C6	TCM (Automatic Gearbox)	•	•	•	•	•
C6	C6	TRU (Trailer Relay Unit)	•	•	•	•	•
C6	C6	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C6	C6	VDA (Vehicle Distance Assistance)	•	•	•	•	•
C6	C6	VRD (Voltage Retaining Device)	•	•	•	•	•
C6	C6	Wiper (Windscreen Wiper)	•	•	•	•	•
C6	C6 (CHINA)	ABS (Anti-lock brake System)	•	•	•	•	•
C6	C6 (CHINA)	AC (Air Conditioning)	•	•	•	•	•
C6	C6 (CHINA)	AMP (Audio Amplifier)	•	•	•	•	•
C6	C6 (CHINA)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C6	C6 (CHINA)	BSI (Built-in Systems Interface)	•	•	•	•	•
C6	C6 (CHINA)	DDC (Driver's Door Control Panel)	•	•	•	•	•
C6	C6 (CHINA)	ECM (Engine Control Module)	•	•	•	•	•
C6	C6 (CHINA)	EPS (Electric Power Steering)	•	•	•	•	•
C6	C6 (CHINA)	ERU (Engine Relay Unit)	•	•	•	•	•
C6	C6 (CHINA)	ESL (Electric Steering Lock)	•	•	•	•	•
C6	C6 (CHINA)	IP (Instrument Cluster Panel)	•	•	•	•	•
C6	C6 (CHINA)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C6	C6 (CHINA)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
C6	C6 (CHINA)	PAM (Parking Assistance)	•	•	•	-	
C6	C6 (CHINA)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	
C6	C6 (CHINA)	RLS (Rain And Light Sensor)	•	•	•	•	
C6	C6 (CHINA)	RTTC (Radio Telephone Transceiver Control)	•	•	•	•	•
C6	C6 (CHINA)	SM (Services Module)	•	•	•	•	•
C6	C6 (CHINA)	SPMU (Supply Protection And Management Unit)	•	•	•	-	•
~~	oo (ontini)	ormo (ouppi) irotoction and management onit)	-	•	•	•	-

Sivu 22/60

	UPPA OY www.a10kauppa.fi			Sivu	22/00		
C6	C6 (CHINA)	SRS (Airbag)	•	•	•	•	•
C6	C6 (CHINA)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C6	C6 (CHINA)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C6	C6 (CHINA)	TCM (Automatic Gearbox)	•	•	•	•	•
C6	C6 (CHINA)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
C6	C6 (CHINA)	VRD (Voltage Retaining Device)	•	•	٠	•	•
C6	C6 (CHINA)	Wiper (Windscreen Wiper)	•	•	•	•	•
C8	C8 (CAN) (2005 –)	ABS (Anti-lock brake System)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	AC (Air Conditioning)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	AH (Additional Heating)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	ALM (Anti-theft Alarm)	•	•	•	•	•
C8	C8 (CAN) (2005 –)	BSI (Built-in Systems Interface)	•	•	•	•	•
C8	C8 (CAN) (2005 –)	CD (CD Player)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	DAF (Diesel Additive Function)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	DDM (Driver's Door Module)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	
C8	C8 (CAN) (2005 -)	Display/Telematics	•	•	•		•
	C8 (CAN) (2005 -)		•	•	•	•	•
C8		ECM (Engine Control Module)	-	•	-	•	•
C8	C8 (CAN) (2005 -)	EPS (Electric Power Steering)	•	_	•	•	-
C8	C8 (CAN) (2005 -)	ERU (Engine Relay Unit)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	HFC (Hands Free Control Kit)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	HLL (Left Hand Headlamp)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	HLR (Right Hand Headlamp)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	IP (Leds And Odometer ECU)	•	•	•	•	•
C8	C8 (CAN) (2005 –)	MULD (Colour Multifunction Display)	•	•	•	•	•
C8	C8 (CAN) (2005 –)	MULD (Multifunction Display)	•	•	•	•	•
C8	C8 (CAN) (2005 –)	PAM (Parking Assistance)	•	•	•	•	•
C8	C8 (CAN) (2005 –)	PDM (Passenger's Door Module)	•	•	•	•	•
C8	C8 (CAN) (2005 –)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C8	C8 (CAN) (2005 –)	Radio	•	•	•	•	•
C8	C8 (CAN) (2005 –)	SR-F (Front Sunroof)	•	•	•	•	•
C8	C8 (CAN) (2005 –)	SR-M (Middle Sunroof)	•	•	•	•	•
C8	C8 (CAN) (2005 –)	SR-R (Rear Sunroof)	•	•	•	•	•
C8	C8 (CAN) (2005 –)	SRS (Airbag)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	SSDM (Sliding Side Doors Module)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C8	C8 (CAN) (2005 -)	TCM (Automatic Gearbox)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	TEU (Telematics Receiver Command)	•	•	•	•	•
C8	C8 (CAN) (2005 –)	TRU (Trailer Relay Unit)	•	•	•	•	•
C8	C8 (CAN) (2005 –)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C8	C8 (VAN) (2002 - 2005)	AC (Air Conditioning)	•	•	•	•	•
C8	C8 (VAN) (2002 - 2005)	ADDG02	•	•	•		•
C8	C8 (VAN) (2002 - 2005) C8 (VAN) (2002 - 2005)	AB (Additional Heating)	•	•	•	•	•
C8	C8 (VAN) (2002 - 2005) C8 (VAN) (2002 - 2005)	BSI (Built-in Systems Interface)	•	•	•	•	•
C8 C8			•	•	•	•	•
	$\begin{array}{cccccccccccccccccccccccccccccccccccc$	CD (CD Player)	_			-	-
C8	C8 (VAN) (2002 - 2005)	ECM (Engine Control Module)	•	•	•	•	•
C8	C8 (VAN) (2002 - 2005)	ESP (Electronic Stability Program BOSCH 5.7)	•	•	•	•	•
C8	C8 (VAN) (2002 - 2005)	IP (Instrument Cluster Panel)	•	•	•	•	•
C8	C8 (VAN) (2002 - 2005)	MDP CONDUCT	•	•	•	•	•
C8	C8 (VAN) (2002 - 2005)	MDP PASSAG	•	•	•	•	•
C8	C8 (VAN) (2002 - 2005)	MULD (Multifunction Display SAGEM B)	•	•	•	•	•
C8	C8 (VAN) (2002 - 2005)	PAM (Parking Assistance)	•	•	•	•	•
C8	C8 (VAN) (2002 - 2005)	RPE (Radio Post-equipment)	•	•	•	•	•
C8	C8 (VAN) (2002 - 2005)	SRS (Airbag 5.7)	•	•	•	•	•
C8	C8 (VAN) (2002 - 2005)	SRS (Airbag)	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	TCM (Automatic Gearbox)	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	TEU (Telematics Receiver Command)	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	TEU (Telematics Unit)	•	•	•	•	•
FUKANG	FUKANG	ABS (Anti-lock brake System BOSCH 8.1)	•	•	•	•	•
FUKANG	FUKANG	ECM (1.4L KFX BOSCH MP5.2)	•	•	•	•	٠
-	-	•					-

Sivu 23/60

AIUNA				Sivu	23/00		
FUKANG	FUKANG	ECM (1.6L KFA/HFX/N6A/NFS/NFU - ME744)	•	•	•	٠	•
FUKANG	FUKANG	ECM (1.6L NFZ BOSCH MP5.2)	•	•	•	•	•
FUKANG	FUKANG	KEY (Electrionic Key Reader)	•	•	•	•	•
FUKANG	FUKANG	SRS (Airbag 5.3)	•	•	•	•	•
FUKANG	FUKANG	TCM (Automatic Gearbox AL4 TA2000)	•	•	•	•	•
FUKANG	FUKANG	TCM (Automatic Gearbox AL4 TA96)	•	•	•	•	•
FUKANG	FUKANG (988)	ABS (Anti-lock brake System BOSCH 8.1)	•	•	•	•	•
FUKANG	FUKANG (988)	ECM (1.4L KFX BOSCH MP5.2)	•	•	•	•	•
FUKANG	FUKANG (988)	ECM (1.6L KFA/HFX/N6A/NFS/NFU - ME744)	•	•	•	•	•
FUKANG	FUKANG (988)	ECM (1.6L NFZ BOSCH MP5.2)	•	•	•	•	•
FUKANG	FUKANG (988)	KEY (Electrionic Key Reader)	•	•	•	•	•
FUKANG	FUKANG (988)	SRS (Airbag 5.3)	•	•	•	•	•
FUKANG	FUKANG (988)	TCM (Automatic Gearbox AL4 TA2000)	•	•	•	•	•
FUKANG	FUKANG (988)	TCM (Automatic Gearbox AL4 TA96)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	ABS (Anti-lock brake System)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	AC (Air Conditioning)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	AH (Additional Heating)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	BSI (Built-in Systems Interface)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	ECM (Engine Control Module)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	EPS (Electric Power Steering)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	IP (Instrument Cluster Panel)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	LDWS (Lane Departure Warning System)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	PAM (Parking Assistance)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	SRS (Airbag)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	SSP (Pneumatic Suspension)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	TEU/NAVI (Telematics Unit(Rtx) Or Audio-navigation)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	TG (Tachograph)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	ABS (Anti-lock brake System)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	AC (Air Conditioning)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	AH (Additional Heating)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	BSI (Built-in Systems Interface)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	ECM (Engine Control Module)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	EPS (Electric Power Steering)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	LDWS (Lane Departure Warning System)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	PAM (Parking Assistance)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	SRS (Airbag)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	ABS (Anti-lock brake System)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	AC (Air Conditioning)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	AH (Additional Heating)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	BSI (Built-in Systems Interface)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	ECM (Engine Control Module)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	EPS (Electric Power Steering)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	PAM (Parking Assistance)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	SRS (Airbag)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	SSP (Pneumatic Suspension)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	TEU/NAVI (Telematics Unit(Rtx) Or Audio-navigation)	•	•	•	•	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	TG (Tachograph)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	AH (Additional Heating)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	CPH_TEXTON	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	ECM (1.9L DHX BOSCH AS3-VP20)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	ECM (1.9L WJY LUCAS DCN2)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	ECM (2. OL RHW BOSCH EDC15C2)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	ECM (2. OL RHX BOSCH EDC15C2)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	ECM (2. OL RHZ BOSCH EDC15C2)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	SRS (Airbag 5.3)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	SRS (Airbag)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (1) (1995 - 2004)	TCM (Automatic Gearbox AL4)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	AH (Additional Heating)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	CPH_TEXTON	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	ECM (1.9L WJY LUCAS DCN2)	•	•	•	•	•
		· · · · ·	ļ į	1			,

Sivu 24/60

				Olvu			
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	ECM (2. OL RFN MM48P)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	ECM (2. OL RHW BOSCH EDC15C2)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	ECM (2. OL RHX BOSCH EDC15C2)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	ECM (2. OL RHZ BOSCH EDC15C2)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	SRS (Airbag 5.3)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	SRS (Airbag)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	TCM (Automatic Gearbox AL4)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	ABS (Anti-lock brake System)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	AC (Air Conditioning)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	AC (Rear Air Conditioning Panel)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	AH (Additional Heating)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	ALM (Anti-theft Alarm)	•	•	•	•	•
			•	•	•	•	•
JUMPY/DISPATCH		ASM (Anti-slip Mode Selector)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	BATT (Battery Change Status Unit)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	BSI (Built-in Systems Interface)	-		_	-	-
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	BWCU (Bodywork Conversion Unit)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	CD (CD Player)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	Display/Telematics	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	ECM (Engine Control Module)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	EPS (Electric Power Steering)		•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	ERU (Engine Relay Unit)	•	•	•	●	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	HFC (Hands Free Control Kit)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	HFR (High Frequency Receiver)	•	•	•	•	٠
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	IP (Instrument Cluster Panel)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	MULD (Multifunction Display)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	PAM (Parking Assistance)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	Radio	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	SRS (Airbag)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	SSP (Pneumatic Suspension)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	TCM (Automatic Gearbox)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	TRU (Trailer Relay Unit)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	ABS (Anti-lock brake System)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 –)	AC (Air Conditioning)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	AH (Additional Heating)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	ALM (Anti-theft Alarm)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (K0) (2016 -)	BATT (Battery Change Status Unit)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (K0) (2016 -)	BAIT (battery change status onit) BSI (Built-in Systems Interface)	•	•	•	•	•
JUMPY/DISPATCH JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -) JUMPY/DISPATCH (KO) (2016 -)	ECM (Engine Control Module)	•	•	•	•	•
			•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (K0) (2016 -)	ERU (Engine Relay Unit)	-	-	•	-	-
JUMPY/DISPATCH	JUMPY/DISPATCH (K0) (2016 -)	ESL (Electric Steering Lock)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (K0) (2016 -)	HHV (High Head Vision)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (K0) (2016 -)	MCP (Multiplexed Control Panel)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	MULD (Multifunction Display)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	PAM (Parking Assistance)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	RLS (Rain And Light Sensor)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	RTTC (Radio Telephone Transceiver Control)	•	•	•	●	٠
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	SM (Services Module)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	SRS (Airbag)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	Siren	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	TCM (Automatic Gearbox)	•	•	•	•	٠
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	TRU (Trailer Relay Unit)	•	•	•	•	٠
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	VDA (Vehicle Distance Assistance)	•	•	•	•	٠
	-	•		-			

JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	VRD (Voltage Retaining Device)	•	•	•	•	•
NEMO	Jom 1/ DIGINICH (RU) (2010 -)	ABS (Anti-lock brake System)	•	•	•	-	
NEMO		ABS (Anti-lock brake System) BSI (Built-in Systems Interface)	•	•	•	-	
			•	•	•		
NEMO		ECM (Engine Control Module)		-	•	•	•
NEMO		IP (Instrument Cluster Panel)	•	•	•	•	•
NEMO		PAM (Parking Assistance)	•	•	•	•	•
NEMO		SRS (Airbag)	•	•	•	•	•
NEMO		TCM (Automatic Gearbox)	•	•	•	•	•
SAXO		ABS (Anti-lock brake System BOSCH 5.3)	•	•	•	•	•
SAXO		ABS (Anti-lock brake System BOSCH 8.1)	•	•	•	•	•
SAXO		ECM (1. OL CDY/CDZ BOSCH MA3.1)	•	•	•	•	•
SAXO		ECM (1.4L KFW SAGEM S2000)	•	•	•	٠	•
SAXO		ECM (1.4L KFX BOSCH MP7.3)	•	•	•	•	•
SAXO		ECM (1.4L KFX MM1AP)	•	•	•	•	•
SAXO		ECM (1.6L NFX MM1AP)	•	•	•	•	•
SAXO		ECM (1.6L NFX MM48P)	•	•	•	•	•
SAXO		ECM (1.6L NFZ BOSCH MP5.1)	•	•	•	•	•
SAXO		ECM (1.6L NFZ BOSCH MP5.2)	•	•	•	•	•
SAXO		ECM (1.6L NFZ BOSCH MP7.2)	•	•	•	•	•
SAXO		ECM (HFX/NFT/NFV - M744)	•	•	•	•	•
SAXO		KEY (Electrionic Key Reader)	•	•	•	•	•
SAXO		SRS (Central Airbag)	•	•	•	•	•
SAXO		TCM (Automatic Gearbox)	•	•	•		•
SAAO			•	•	•	•	•
		ABS (Anti-lock brake System)	•	•	•	•	•
SPACETOURER		AC (Air Conditioning)		-	-	-	-
SPACETOURER		AH (Additional Heating)	•	•	•	•	•
SPACETOURER		ALM (Anti-theft Alarm)	•	•	•	•	•
SPACETOURER		ASM (Anti-slip Mode Selector)	•	•	•	•	•
SPACETOURER		BATT (Battery Change Status Unit)	•	•	•	•	•
SPACETOURER		BSI (Built-in Systems Interface)	•	•	•	•	•
SPACETOURER		ECM (Engine Control Module)	•	•	•	•	•
SPACETOURER		ERU (Engine Relay Unit)	•	•	•	٠	•
SPACETOURER		ESL (Electric Steering Lock)	•	•	•	•	•
SPACETOURER		HHV (High Head Vision)	•	•	•	•	•
SPACETOURER		IP (Instrument Cluster Panel)	•	•	•	•	•
SPACETOURER		MCP (Multiplexed Control Panel)	•	•	•	•	•
SPACETOURER		MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
SPACETOURER		MULD (Multifunction Display)	•	•	•	•	•
SPACETOURER		PAM (Parking Assistance)	•	•	•	•	•
SPACETOURER		RLS (Rain And Light Sensor)	•	•	•	•	•
SPACETOURER		RTTC (Radio Telephone Transceiver Control)	•	•	•	•	•
SPACETOURER		SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
SPACETOURER		SM (Services Module)	•	•	•		
SPACETOURER		SPMU (Supply Protection And Management Unit)	•	•	•	•	•
		SPMU (Supply Protection And Management Unit) SRS (Airbag)	•	•	•	•	•
SPACETOURER			•	•	-	•	•
SPACETOURER		SWIC (Steering Wheel With Integral Controls (VCI))		-	•	-	-
SPACETOURER		SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
SPACETOURER	l	Siren	•	•	•	•	•
SPACETOURER		TCM (Automatic Gearbox)	•	•	•	•	•
SPACETOURER		TRU (Trailer Relay Unit)	•	•	•	•	•
SPACETOURER		VDA (Vehicle Distance Assistance)	•	•	•	•	•
SPACETOURER		VRD (Voltage Retaining Device)	•	•	•	•	•
SYNERGIE		ECM (1.9L DHX BOSCH AS3-VP20)	•	•	•	•	•
SYNERGIE		ECM (2. OL RFN MM48P)	•	•	•	•	•
SYNERGIE		ECM (2. OL RFV BOSCH MP7. 3)	•	•	•	•	•
SYNERGIE		ECM (2. OL RGX BOSCH MP3. 2)	•	•	•	•	•
SYNERGIE		ECM (2.0L RHW BOSCH EDC15C2)	•	•	•	•	•
SYNERGIE		ECM (2. OL RHZ BOSCH EDC15C2)	•	•	•	•	•
SYNERGIE		SRS (Airbag 5.3)	•	•	•	•	•
SYNERGIE		SRS (SAC CENT AUTOLIV)	•	•	•	•	•
SYNERGIE		TCM (Automatic Gearbox AL4)	•	•	•	•	•
XANTIA	XANTIA (1)	ECM (1. 8L LFX MM1AP)	•	•	•	•	•
	······ 411 (1/	Som (2. OD DIA BRATH)		-	•	-	

				-	1		
XANTIA	XANTIA (1)	ECM (1.8L LFY BOSCH MP5.1.1)	•	•	•	•	•
XANTIA	XANTIA (1)	ECM (1.8L LFY SAGEM SL96)	•	•	•	•	•
XANTIA	XANTIA (1)	ECM (1.9L DHX BOSCH AS3-VP20)	•	•	•	•	•
XANTIA	XANTIA (1)	ECM (2. OL R6E BOSCH MP5.2)	•	•	•	•	•
XANTIA	XANTIA (1)	ECM (2. OL RFT BOSCH MP3. 2)	•	•	•	•	•
XANTIA	XANTIA (1)	ECM (2. OL RFV BOSCH MP5. 1. 1)	•	•	•	•	•
XANTIA	XANTIA (1)	ECM (2. 0L RFV BOSCH M10. 1.17)	•	•		•	
				-	•		•
XANTIA	XANTIA (1)	ECM (2. OL RFY BOSCH MP3. 2)	•	•	•	•	•
XANTIA	XANTIA (1)	ECM (2. OL RGX BOSCH MP3. 2)	•	•	•	•	•
XANTIA	XANTIA (1)	ECM (2.1L P8C LUCAS EPIC)	•	•	•	•	•
XANTIA	XANTIA (1)	ECM (3. OL XFZ BOSCH MP7. 0)	•	•	•	•	•
XANTIA	XANTIA (2)	CPH_TEXTON	•	•	•	•	•
XANTIA	XANTIA (2)	ECM (1.6L BFZ MM4.8P)	•	•	•	•	•
XANTIA	XANTIA (2)	ECM (1.8L LFX MM1AP)	•	•	•	•	•
XANTIA	XANTIA (2)	ECM (1.8L LFY BOSCH MP7.3)	•	•	•	•	•
XANTIA	XANTIA (2)	ECM (1.8L LFY SAGEM SL96)	•	•	•	•	•
			•	•	•		•
XANTIA	XANTIA (2)	ECM (1.9L DHX BOSCH AS3-VP20)	-	-	•	•	-
XANTIA	XANTIA (2)	ECM (2. OL R6E BOSCH MP5. 2)	•	•	•	•	•
XANTIA	XANTIA (2)	ECM (2. OL RFV BOSCH MP5. 2)	•	•	•	•	•
XANTIA	XANTIA (2)	ECM (2. OL RGX BOSCH MP3. 2)	•	•	•	•	•
XANTIA	XANTIA (2)	ECM (2. OL RHY BOSCH EDC15C2)	•	•	•	•	•
XANTIA	XANTIA (2)	ECM (2. OL RHZ BOSCH EDC15C2)	•	•	•	•	•
XANTIA	XANTIA (2)	ECM (2.1L P8C LUCAS EPIC)	•	•	•	•	•
XANTIA	XANTIA (2)	ECM (3. OL XFZ BOSCH MP7. 0)	•	•	•	•	•
	XANTIA (2)		•	•	•	•	•
XANTIA		SRS (Airbag)	_	-	-	-	_
XANTIA	XANTIA (2)	SRS (Left Airbag)	•	•	•	•	•
XANTIA	XANTIA (2)	SRS (Right Airbag)	•	•	•	•	•
XANTIA	XANTIA (2)	SRS (TEVES_MK20E)	•	•	•	•	•
XM	XM	ABS (Anti-lock brake System TEVES MK20E)	•	•	•	•	•
XM	XM	ECM (2. OL R6E BOSCH MP5. 2)	•	•	•	•	•
XM	XM	ECM (2. OL RFV BOSCH MP5. 1. 1)	•	•	•	•	•
XM	XM	ECM (2. OL RFV BOSCH MP5. 2)	•	•	•	•	•
XM	XM	ECM (2. OL RFZ BOSCH MP5. 1)	•	•	•	•	•
XM		ECM (2. OL RGX BOSCH MI 3. 1) ECM (2. OL RGX BOSCH MP3. 2)	•	•	•	•	•
-	XM			-	-	-	-
XM	XM	ECM (2. OL RGY BOSCH MP3. 2)	•	•	•	•	•
XM	XM	ECM (2.5L THY BOSCH MSA11 7.6 VP36)	•	•	•	•	•
XM	XM	ECM (2.5L THY BOSCH MSA11 VP36)	•	•	•	•	•
XM	XM	ECM (3. OL XFZ BOSCH MP7. 0)	•	•	•	•	•
XM	XM (Mux)	ABS (Anti-lock brake System TEVES MK20E)	•	•	•	•	•
XM	XM (Mux)	ECM (2.5L THY BOSCH MSA11 7.6 VP36)	•	•	•	•	•
XSARA	XSARA (1) (1997 – 2000)	ABS (ABS Electronic Distribution)	•	•	•	•	•
XSARA	XSARA (1) (1997 – 2000)	ABS (ABS Mechanical Distribution)	•	•	•	•	•
XSARA	XSARA (1) (1997 - 2000)	AC (Air Conditioning)	•	•	•	•	•
				-	-	-	-
XSARA	XSARA (1) (1997 - 2000)	Alarm	•	•	•	•	•
XSARA	XSARA (1) (1997 - 2000)	BSI (Built-in Systems Interface)	•	•	•	•	•
XSARA	XSARA (1) (1997 – 2000)	CD (CD Player)	•	•	•	•	•
XSARA	XSARA (1) (1997 – 2000)	ECM (1.4L KFX BOSCH MP7.3)	•	•	•	•	•
XSARA	XSARA (1) (1997 – 2000)	ECM (1.4L KFX SAGEM SL96)	•	•	•	•	•
XSARA	XSARA (1) (1997 – 2000)	ECM (1.6L KFA/HFX/N6A/NFS/NFU - ME744)	•	•	•	•	•
XSARA	XSARA (1) (1997 – 2000)	ECM (1.6L NFZ BOSCH MP5.2)	•	•	•	•	•
XSARA	XSARA (1) (1997 – 2000)	ECM (1.6L NFZ BOSCH MP7.2)	•	•	•	•	•
XSARA	XSARA (1) (1997 - 2000)	ECM (1. 8L LFX MM1AP)	•	•	•	•	•
XSARA	XSARA (1) (1997 - 2000)	ECM (1. 8L LFY ANNIAL) ECM (1. 8L LFY SAGEM SL96)	•	•	•	•	•
			_	-	-	-	-
XSARA	XSARA (1) (1997 - 2000)	ECM (1.9L DHV BOSCH AS3-VP20)	•	•	•	•	•
XSARA	XSARA (1) (1997 – 2000)	ECM (2. OL RFS MM1AP)	•	•	•	•	•
XSARA	XSARA (1) (1997 – 2000)	ECM (2. OL RFV BOSCH MP5. 2)	•	•	•	•	•
XSARA	XSARA (1) (1997 – 2000)	ECM (2. OL RHY BOSCH EDC15C2)	•	•	•	•	•
XSARA	XSARA (1) (1997 – 2000)	IP (Instrument Cluster Panel)	•	•	•	•	•
XSARA	XSARA (1) (1997 – 2000)	MULD (Multifunction Display SAGEM B)	•	•	•	•	•
XSARA	XSARA (1) (1997 – 2000)	Radio	•	•	•	•	•
XSARA	XSARA (1) (1997 - 2000)	SRS (Airbag)	•	•	•	•	•
XSARA	XSARA (1) (1997 - 2000)	TCM (Automatic Gearbox AL4 TA96)	•	•	•	•	•
ΛΟΛΙΛΛ	ASAMA (1) (1337 - 2000)	TOM (AUTOMATIC GEALDOX AL4 1A90)	-	•	•	•	-

Sivu 27/60

A10 KA	UPPA OY www.a10kauppa.fi			Sivu	27/60		
XSARA	XSARA (2) (2000 – 2006)	ABS (Anti-lock brake System BOSCH 5.3)	•	•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	AC (Air Conditioning)	•	•	•	•	•
XSARA	XSARA (2) (2000 - 2006)	BSI (BSI VAR C)	•	•	•	•	•
XSARA	XSARA (2) (2000 - 2006)	CD (CD Player)	•	•	•	•	•
XSARA	XSARA (2) (2000 - 2006)	ECM (Engine Control Module)	•	•	•	•	•
XSARA			•	•	•	•	•
	XSARA (2) (2000 - 2006)	ESP (Electronic Stability Program BOSCH 5.7)		_	-	-	
XSARA	XSARA (2) (2000 - 2006)	IP (Instrument Cluster Panel)	•	•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	MULD (Multifunction Display A)	•	•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	PAM (Parking Assistance)	•	•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	Radio	•	•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	SRS (Central Airbag)	•	•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	TCM (Automatic Gearbox)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	ABS (Anti-lock brake System BOSCH 5.3)	•	•	•	٠	•
XSARA	XSARA (PICASSO) (1999 - 2002)	ABS (Anti-lock brake System)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	AC (Air Conditioning)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	ADDG02	•	•	•	•	•
XSARA		Alarm	•	•	•	•	•
			•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	BSI (Built-in Systems Interface)	-	_	-	-	
XSARA	XSARA (PICASSO) (1999 - 2002)	CD (CD Player)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	ECM (Engine Control Module)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 – 2002)	IP (Instrument Cluster Panel)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	MULD (Multifunction Display VDO B)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	PAM (Parking Assistance)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	Radio	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	SRS (Central Airbag)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	TCM (Automatic Gearbox)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	ABS (Anti-lock brake System BOSCH 5.3)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 – 2006)	ABS (Anti-lock brake System)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	AC (Air Conditioning)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	ADDG02	•	•	•	•	•
XSARA			•	•	•	•	•
	XSARA (PICASSO) (2002 - 2006)	Alarm		-	-	-	
XSARA	XSARA (PICASSO) (2002 – 2006)	BSI (Built-in Systems Interface)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 – 2006)	CD (CD Player)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	ECM (Engine Control Module)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	IP (Instrument Cluster Panel)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	MULD (Multifunction Display VDO B)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	PAM (Parking Assistance)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	Radio	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	SRS (Central Airbag)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 – 2006)	SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 – 2006)	TCM (Automatic Gearbox)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	ABS (Anti-lock brake System)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	AC (Air Conditioning)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	ADDG02	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA) XSARA (PICASSO) (CHINA)		•	•	•	•	•
		CD (CD Player)	•	-	-		
XSARA	XSARA (PICASSO) (CHINA)	ECM (Engine Control Module)	-	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	IP (Instrument Cluster Panel)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	MULD (Multifunction Display SAGEM B)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	PAM (Parking Assistance)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	Radio	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	SRS (Airbag 5.3)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	SRS (Airbag)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	TCM (Automatic Gearbox AL4)	•	•	•	•	•
ZX	ZX (16)	ABS (Anti-lock brake System)	•	•	•	•	•
ZX	ZX (16)	ECM (1. 4L KFX BOSCH MP5. 2)	•	•	•	•	•
		· -/	-	-	-	-	

Sivu 28/60

ZX	ZX (16)	ECM (1.4L KFX MM1AP)	•	•	•	•	•
ZX	ZX (16)	ECM (1.6L N6A BOSCH ME7.4.4)	•	•	٠	•	•
ZX	ZX (16)	ECM (1.6L NFV BOSCH M7.4.4)	•	•	•	•	•
ZX	ZX (16)	ECM (1.6L NFZ BOSCH MP5.2)	•	•	•	•	•
ZX	ZX (16)	ECM (2. OL RFS MM1AP)	•	•	•	•	•
ZX	ZX (16)	TCM (AL4 TA2000 AT)	•	•	•	•	•
ZX	ZX (16)	TCM (AL4 TA96 AT)	•	•	•	•	•
ZX	ZX (2)	ECM (1.4L KFX BOSCH MP5.2)	•	•	•	•	•
ZX	ZX (2)	ECM (1.4L KFX MM1AP)	•	•	•	•	•
ZX	ZX (2)	ECM (1.6L N6A BOSCH ME7.4.4)	•	•	•	•	•
ZX	ZX (2)	ECM (1.6L NFV BOSCH M7.4.4)	•	•	•	•	•
ZX	ZX (2)	ECM (1.6L NFZ BOSCH MP5.2)	•	•	•	•	•
ZX	ZX (2)	ECM (2. OL RFS MM1AP)	•	•	•	•	•

	CITROEN DPF Function List (Note:For reference only)	
NOTES:		
 This function is supp 	orted.	
* This function may be	e supported, which depends on the actual condition of the vehicle).
\odot This function is not s	supported.	
▲ This function is the r	new feature in this version.	
Model	Model Type	DPF
BERLINGO	BERLINGO (2) (M69)	•
BERLINGO	BERLINGO (B9)	
C-CROSSER		
C-ELYSEE	C-ELYSEE	
C2	C2 (CAN) (2006 -)	
C3	C3 (A51)	
C3	C3 (AIRCROSS) (A88)	
C3	C3 (B618)	
C3 C3 C3 C4 C4	C3 (PICASSO) (A58)	
C4	C4 (2004 - 2010)	
C4	C4 (B7) (2010 -)	
C4	C4 (CACTUS)	
C4 C4	C4 (L) (B7)	
C4	C4 (PICASSO) (2006 - 2013)	
C4	C4 (PICASSO) (B78) (2013 -)	
C4	C4 (SEDAN) (2006 -)	
C5	C5 (2001 - 2004)	
C5	C5 (R) (2004 - 2007)	
C5	C5 (X7) (2007 -)	
C6	C6	
C8	C8 (CAN) (2005 -)	
C8	C8 (VAN) (2002 - 2005)	
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	
JUMPY/DISPATCH	JUMPY/DISPATCH (K0) (2016 -)	
SPACETOURER		
XSARA	XSARA (2) (2000 - 2006)	
XSARA	XSARA (PICASSO) (2002 - 2006)	
XSARA	XSARA (PICASSO) (CHINA)	
	CITRONE DPF Function List (Note:For reference only)	
Filling Of The Diese	el Additive Adding Reservoir	
Forced Regeneration	Of The Particle Emission Filter	
Forced Regeneration	Of The Particle Filter, Vehicle Stationary	
Forced Regeneration	Of The Particulate Filter While Driving	
Forced Regeneration	Vehicle Moving	
Forced Regeneration		
Pariticle Filter Reg	eneration	
Particulate Filter F		
Replacement Of The D	Diesel Additive Reservoir, Of The Pump Or Of The Pipes	
	ifferential Pressure Sensor	
	Particle Emission Filter	
	Particle Emission Filter Differential Pressure Sensor	

	CITROEN EPB Function List (Note:For reference only)	
NOTES:		
This function is su		
	y be supported, which depends on the actual condition of the vehicle	2.
\odot This function is no		
	ne new feature in this version.	
Model	Model Type	EPB
C-ELYSEE	C-ELYSEE	•
C3	C3 (AIRCROSS) (A88)	•
C3	C3 (B618)	•
C3	C3 (XR)	•
C4	C4 (2004 - 2010)	•
C4	C4 (B7) (2010 -)	•
C4	C4 (BZ3) (CHINA)	•
C4	C4 (L) (B7)	•
C4	C4 (PICASSO) (2006 - 2013)	•
C4	C4 (PICASSO) (B78) (2013 -)	•
C4	C4 (SEDAN) (2006 -)	•
C5	C5 (3rd Generation)	•
C5	C5 (AIRCROSS)	•
C5	C5 (X7) (2007 -)	•
C6	C6	•
C6	C6 (CHINA)	•
JUMPY/DISPATCH	JUMPY/DISPATCH (K0) (2016 -)	•
SPACETOURER		•
	CITRONE EPB Function List (Note:For reference only)	
	CITACINE EI D'I difetion Eist (Note i of reference only)	
Cable Tensioning		
	he Automatic Application Of The Electric Parking Brake Fun	ction
Electric Parking		
	Of The Electric Parking Brake	
Put In Fitting/Ren		
	utomatic Application Of The Electric Parking Brake	
	torised Brake Calipers	
Replacement Of The		
	e Electric Parking Brake (FSE) Left-hand Actuator	
Replacement Of The	e Electric Parking Brake (FSE) Right-hand Actuator	
<u> </u>	e Proportional Brake Switch	
Replacement Of The	e Rear Left Motorised Brake Caliper	
Replacement Of The	e Rear Right Motorised Brake Caliper	

	CITROEN ETC Function List (Note:For reference o	nly)
NOTES:		
• This function is su	upported	
	y be supported, which depends on the actual condition of the	ne vehicle
\odot This function is n		
	he new feature in this version.	
Mode1		ETC
BERLINGO	<u>Model Type</u> BERLINGO (1) (1996 - 2002)	EIC
BERLINGO	BERLINGO (1) (1996 - 2002) BERLINGO (2) (2002 - 2008)	
BERLINGO	BERLINGO (2) (2002 - 2006) BERLINGO (B9)	
C-ELYSEE	C-ELYSEE	
C-ELYSEE	C-ELYSEE (R3)	
C-QUATRE	C-QUATRE (4)	
C-QUATRE	C-QUATRE (5)	•
C-TRIOMPHE		•
C2	C2 (CAN) (2006 -)	•
C2 C2	C2 (CHINA)	•
C2	C2 (VAN) (2003 - 2006)	•
C3	C3 (2002 - 2006)	•
C3 C3	C3 (A51)	•
C3	C3 (Ai51)	•
C3	C3 (AIRCROSS) (Ai58)	•
C3	C3 (PICASSO) (A58)	•
C3	C3 (PICASSO) (Ai58)	•
C3	C3 (PLURIEL) (2002 - 2009)	•
C3	C3 (R) (2006 - 2009)	•
C3 C3 C3 C3 C3 C3 C3 C3	C3 (XR)	•
C4	C4 (2004 - 2010)	•
C4	C4 (B7) (2010 -)	•
C4	C4 (BZ3) (CHINA)	•
C4	C4 (L) (B7)	•
C4	C4 (PICASSO) (2006 - 2013)	•
C4	C4 (PICASSO) (B78) (2013 -)	
C4	C4 (SEDAN) (2006 -)	
C5	C5 (2001 - 2004)	
C5	C5 (R) (2004 - 2007)	
C5	C5 (X7) (2007 -)	
C6		
C8 C8	C8 (CAN) (2005 -)	
	C8 (VAN) (2002 - 2005)	
XSARA	XSARA (2) (2000 - 2006)	_
XSARA	XSARA (PICASSO) (1999 - 2002)	U
XSARA	XSARA (PICASSO) (2002 - 2006)	•
XSARA	XSARA (PICASSO) (CHINA)	
	CITRONE ETC Function List (Note:For reference o	nly)
Initialisation Of	The EGR Throttle	
Initialising The		
Motorised Throttl		
	haust Gas Recycling Electric Throttle	
Throttle Learning		

CITROEN Diagnostic Function List (Note:For reference only)

NOTES: • This function is supported.

X This function may be supported, which depends on the actual condition of the vehicle.

O This funct	ion is not supported.						
▲ This funct	ion is the new feature in this ve	ersion.					
Model	Model Type	System Name	EcuInfo	Read Codes	Erase Codes	LiveData	Act
BERLINGO	BERLINGO (1) (1996 - 2002)	ABS (ABS Electronic Distribution)	•	•	•	•	•
BERLINGO	BERLINGO (1) (1996 - 2002)	CD (CD Player)	•	•	•	•	•
BERLINGO	BERLINGO (1) (1996 - 2002)	ECM (Engine Control Module)	•	•	•	•	•
BERLINGO	BERLINGO (1) (1996 - 2002)	IP (Instrument Cluster Panel)	•	•	•	•	•
BERLINGO	BERLINGO (1) (1996 - 2002)	RADI01 (Radio Post-equipment(Autoradio 1))	•	•	•	•	•
BERLINGO	BERLINGO (1) (1996 - 2002)	SRS (Autoliv/(SAC_AKF) Airbag)	•	•	•	•	•
BERLINGO	BERLINGO (2) (2002 - 2008)	ABS (Anti-lock brake System)	•	•	•	•	•
BERLINGO	BERLINGO (2) (2002 - 2008)	AH (Additional Heating(Chauff-add))	•	•	•	•	•
BERLINGO	BERLINGO (2) (2002 - 2008)	Alarm(Alarme_texton)	•	•	•	•	•
BERLINGO	BERLINGO (2) (2002 - 2008)	BSI (Built-in Systems Interface)	•	•	•	•	•
BERLINGO	BERLINGO (2) (2002 - 2008)	CD (CD Player(Changer-cd))	•	•	•	•	•
BERLINGO	BERLINGO (2) (2002 - 2008)	ECM (Engine Control Module)	•	•	•	•	•
BERLINGO	BERLINGO (2) (2002 - 2008)	IP (Instrument Cluster Panel)	•	•	•	•	٠
BERLINGO	BERLINGO (2) (2002 - 2008)	MULD (Multifunction Display SAGEM A)	•	•	•	•	•
BERLINGO	BERLINGO (2) (2002 - 2008)	PAM (Parking Assistance)	•	•	•	•	٠
BERLINGO	BERLINGO (2) (2002 - 2008)	RADIO2 (Radio Post-equipment(Autoradio 2))	•	•	•	•	•
BERLINGO	BERLINGO (2) (2002 - 2008)	RBS (Rain And Brightness Sensor(Pluie_luminosite))	•	•	•	•	•
BERLINGO	BERLINGO (2) (2002 - 2008)	SM (Services Module)	•	•	•	•	•
BERLINGO	BERLINGO (2) (2002 - 2008)	SRS (Airbag 5.3)	•	•	•	•	•
BERLINGO	BERLINGO (2) (2002 - 2008)	SRS (Airbag)	•	•	•	•	٠
BERLINGO	BERLINGO (2) (2002 - 2008)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
BERLINGO	BERLINGO (2) (M69)	ABS (Anti-lock brake System)	•	•	•	•	•
BERLINGO	BERLINGO (2) (M69)	BSI (Built-in Systems Interface)	•	•	•	•	•
BERLINGO	BERLINGO (2) (M69)	ECM (Engine Control Module)	•	•	•	•	•
BERLINGO	BERLINGO (2) (M69)	IP (Instrument Cluster Panel)	•	•	•	•	•
BERLINGO	BERLINGO (2) (M69)	SRS (Airbag)	•	•	•	•	•
BERLINGO	BERLINGO (2) (M69)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
BERLINGO	BERLINGO (B9)	ABS (Anti-lock brake System)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	AC (AIR Conditioning Compressor)	•	•	•	•	٠
BERLINGO	BERLINGO (B9)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	Alarm	•	•	•	•	•
BERLINGO	BERLINGO (B9)	BATT (Battery Change Status Unit)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	BATT (Onboard Charger Of The Traction Battery)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	BATT (Traction Battery ECU)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	BATT-01 (Traction Battery Cells Management(Module 01))	•	•	•	•	•
BERLINGO	BERLINGO (B9)	BATT-02 (Traction Battery Cells Management(Module 02))	•	•	•	•	•
BERLINGO	BERLINGO (B9)	BATT-03 (Traction Battery Cells Management(Module 03))	•	•	•	•	•
BERLINGO	BERLINGO (B9)	BATT-04 (Traction Battery Cells Management(Module 04))	•	•	•	•	•
BERLINGO	BERLINGO (B9)	BATT-05 (Traction Battery Cells Management(Module 05))	•	•	•	•	•
BERLINGO	BERLINGO (B9)	BATT-07 (Traction Battery Cells Management(Module 07))	•	•	•	•	•
BERLINGO	BERLINGO (B9)	BATT-08 (Traction Battery Cells Management(Module 08))	•	•	•	•	•
BERLINGO	BERLINGO (B9)	BATT-09 (Traction Battery Cells Management(Module 09))	•	•	•	•	•
BERLINGO	BERLINGO (B9)	BATT-10 (Traction Battery Cells Management(Module 10))	•	•	•	•	•
BERLINGO	BERLINGO (B9)	BSI (Built-in Systems Interface)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	BWCU (Bodywork Conversion Unit)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	CD (CD Player)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	ECM (Engine Control Module)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	EMM (Electric Machine Management ECU)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	ERU (Engine Relay Unit)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	EVM (Electric Vehicle Management ECU)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	HFC (Hands Free Control Kit)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	HFR (High Frequency Receiver)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	IP (Instrument Cluster Panel)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•

Sivu 33/60

	UPPA OY www.a10kauppa.fi			Sivu	33/60		
BERLINGO	BERLINGO (B9)	MULS (Multifunction Screen)	•	•	٠	•	•
BERLINGO	BERLINGO (B9)	PAM (Parking Assistance)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	PCAHR (Passenger's Compartment Air Heating Resistor)	•	•	٠	•	•
BERLINGO	BERLINGO (B9)	RS (Rain Sensor)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	Radio	•	•	•	•	•
BERLINGO	BERLINGO (B9)	SM (Services Module)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	SRS (Airbag)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
BERLINGO	BERLINGO (B9)	TCM (Automatic Gearbox)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	TEU (Telematics Unit)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	TRU (Trailer Relay Unit)	•	•	•	•	•
BERLINGO	BERLINGO (B9)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
BERLINGO	BERLINGO (B9)	VRD (Voltage Retaining Device)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	ABS (Anti-lock brake System)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	AC (AIR Conditioning Compressor)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	Alarm	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT (Battery Change Status Unit)	•	•	•	•	•
			•		•	•	
BERLINGO	BERLINGO Electric (B9E)	BATT (Onboard Charger Of The Traction Battery)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT (Traction Battery ECU)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT-01 (Traction Battery Cells Management(Module 01))	-		-	-	-
BERLINGO	BERLINGO Electric (B9E)	BATT-02 (Traction Battery Cells Management(Module 02))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT-03 (Traction Battery Cells Management(Module 03))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT-04 (Traction Battery Cells Management(Module 04))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT-05 (Traction Battery Cells Management(Module 05))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT-07 (Traction Battery Cells Management(Module 07))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT-08 (Traction Battery Cells Management(Module 08))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT-09 (Traction Battery Cells Management(Module 09))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BATT-10 (Traction Battery Cells Management(Module 10))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BSI (Built-in Systems Interface)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	BWCU (Bodywork Conversion Unit)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	CD (CD Player)	•	•	٠	•	•
BERLINGO	BERLINGO Electric (B9E)	ECM (Engine Control Module)	•	•	٠	•	•
BERLINGO	BERLINGO Electric (B9E)	EMM (Electric Machine Management ECU)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	EPS (Electric Power Steering Electric Pump Unit)	•	•	٠	•	•
BERLINGO	BERLINGO Electric (B9E)	ERU (Engine Relay Unit)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	EVM (Electric Vehicle Management ECU)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	HFC (Hands Free Control Kit)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	HFR (High Frequency Receiver)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	IP (Instrument Cluster Panel)	•	•	٠	•	•
BERLINGO	BERLINGO Electric (B9E)	MDAP (Multiplexed Diesel Additive Pump)	•	•	٠	•	•
BERLINGO	BERLINGO Electric (B9E)	MULS (Multifunction Screen)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	PAM (Parking Assistance)	•	•	٠	•	•
BERLINGO	BERLINGO Electric (B9E)	PCAHR (Passenger's Compartment Air Heating Resistor)	•	•	٠	•	•
BERLINGO	BERLINGO Electric (B9E)	RS (Rain Sensor)	•	•	٠	•	•
BERLINGO	BERLINGO Electric (B9E)	Radio	•	•	٠	•	•
BERLINGO	BERLINGO Electric (B9E)	SM (Services Module)	•	•	٠	•	•
BERLINGO	BERLINGO Electric (B9E)	SRS (Airbag)	•	•	٠	•	•
BERLINGO	BERLINGO Electric (B9E)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	TCM (Automatic Gearbox)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	TEU (Telematics Unit)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	TRU (Trailer Relay Unit)	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
BERLINGO	BERLINGO Electric (B9E)	VRD (Voltage Retaining Device)	•	•	•	•	•
C-CROSSER		ABS (Anti-lock brake System)	•	•	•	•	•
C-CROSSER		AC (Air Conditioning)	•	•	•	•	•
C-CROSSER		AFS	•	•	•	•	•
C-CROSSER		BSI (Built-in Systems Interface)	•	•	•	•	•
C-CROSSER		DPCRF (Rear Final Drive Piloted Clutch)	•	•	•	•	•
C-CROSSER		DSPRLH (Rear LH Door Switch Panel)	•	•	•	•	•
C-CROSSER		DSPRLH (Rear LH Door Switch Panel) DSPRRH (Rear RH Door Switch Panel)		•	•	•	•
C-CROSSER C-CROSSER		ECM (Engine Control Module)				•	•
C CRUSSER	1	row (rufine contrat wounds)	-	•	•	•	

C.19832 Image: Application of the applic			1					
C100000 PC PC PC PC PC PC C100000 PC	C-CROSSER		HFC (Hands Free Control Kit)	•	•	•	•	•
CAUSSON Del Solarization Q	C-CROSSER		IMMO (Locking And Immobiliser Control Module)	•	•	•	•	•
C-200500 Part of American	C-CROSSER		IP (Instrument Cluster Panel)	•	•	•	•	•
Contrast PM (Envirg Solitance) PM (E) PM (E) PM (E) Contrast PM (E) PM (E) PM (E) PM (E) PM (E) Contrast PM (E) PM (E) PM (E) PM (E) PM (E) Contrast PM (E) PM (E) PM (E) PM (E) PM (E) Contrast PM (E) PM (E) PM (E) PM (E) PM (E) Contrast PM (E) PM (E) PM (E) PM (E) PM (E) Contrast PM (E) PM (E) PM (E) PM (E) PM (E) Contrast PM (E) PM (E) PM (E) PM (E) PM (E) Contrast PM (E) PM (E) PM (E) PM (E) PM (E) Contrast PM (E) PM (E) PM (E) PM (E) PM (E) PM (E) Contrast PM (E)	C-CROSSER		KEY (Electrionic Key Reader)	•	•	•	•	•
C-200931 PM <	C-CROSSER		NAVI (Navigation)	•	•	•	•	•
CARSONImage: constraint of the second se	C-CROSSER			•	•	•	•	•
CAUSSING				•	•	•		
ExtENSION Ext. Sec. 2				-		-	•	
C100502 Image: Solice transmission of the second of the				-	-	-	•	
Distant Part of the State Part Math Sate State 1 Part Part Part Part Part Part Part Part				-		-		
Constrain Sec. (string) Sec. (string) Sec. (string) Sec. (string) CONSTRIN Constrain Diff Generation (string) C				-	-	-	•	
CHURSE Immod Immod <t< td=""><td></td><td></td><td></td><td>-</td><td>-</td><td>-</td><td>•</td><td>•</td></t<>				-	-	-	•	•
C 2000011 C 2000011 C 200001 <				-		-	-	-
C-100522				-	-	-	-	-
24.87.92 -FLX382 AD Addri-Jack trade System (BNS1 9.1) - <t< td=""><td>C-CROSSER</td><td></td><td>TCM (Automatic Gearbox)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></t<>	C-CROSSER		TCM (Automatic Gearbox)	•	•	•	•	•
C-223202 C-13322 DS (Dati-lock back System) Image: C-22320 Image: C-223200 Image: C-223200 Image:	C-CROSSER		TCM (Gear Lever(Dct))	•	•	•	•	•
C-2138E C-2138E Dif (Du[1+in System Interface) Image: Constraint Co	C-ELYSEE	C-ELYSEE	ABS (Anti-lock brake System BOSCH 8.1)	•	•	•	•	•
C-HINSE	C-ELYSEE	C-ELYSEE	ABS (Anti-lock brake System)	•	•	•	•	•
C-HINSE C-HINSE EX (Datine Control Mode) Image: Control Mode) C-HINSE C-HINSE EX (Datine Steering Lock) Image: Control Mode) C-HINSE C-HINSE EX (Datine Steering Lock) Image: Control Mode) C-HINSE C-HINSE EX (Datine Steering Lock) Image: Control Hold Steering Lock) C-HINSE C-HINSE Image: Control Hold Steering Image: Control Hold Steering Lock) C-HINSE C-HINSE Image: Control Hold Steering Image: Control Hold Steering C-HINSE C-HINSE Image: Control Hold Steering Image: Control Hold Steering Image: Control Hold Steering C-HINSE C-HINSE Image: Control Hold Steering Image: Control Hold Steering Image: Control Hold Steering C-HINSE C-HINSE C-HINSE Mile Steering Hold Steering Image: Control Hold Steering Image: Control Hold Steering C-HINSE C-HINSE Steering Hold Steering Hold Steering Image: Control Hold Steering Image: Control Hold Steering C-HINSE C-HINSE Steering Hold Steering Hold Steering Image: Control Hold Steering Image: Control Hold Steering C-HINSE C-HINSE Steerins Steerins Steer	C-ELYSEE	C-ELYSEE	BSI (Built-in Systems Interface)	•	•	•	•	•
C-EXSEL	C-ELYSEE	C-ELYSEE	CLC (Central Locking Control Unit)	•	•	•	•	•
C-HINSE	C-ELYSEE	C-ELYSEE	ECM (Engine Control Module)	•	•	•	•	•
CHINE ES. (Blectric Stering Lock) Image: Chinage of the state	C-ELYSEE	C-ELYSEE	EPS (Electric Power Steering)	•	•	•	•	•
C-HINSE		C-ELYSEE		•	•	•	•	•
C-HINSE				•	•	•	•	•
C-ELSSE C-ELSSE WLS Oultifuction Strend) Image: Constraint of the strend of the				-	-	-	•	•
C-ELSSE C-ELSSE UBS (Mallifunction Screen) Image: Construction of the second science of the second s				_	_	-	-	•
C-ELISEE C-ELISE PM (Darking Assistance) Image: C-ELISE Zadio C-ELISEE C-ELISE Zadio Image: C-ELISE Zadio C-ELISEE C-ELISE SK (Autolic Cartal Airhag) Image: C-ELISE Image: C-ELISE C-ELISEE C-ELISEE SK (Autolic Cartal Airhag) Image: C-ELISE Image: C-ELISE C-ELISEE C-ELISEE SK (Autolic Cartal Airhag) Image: C-ELISE Image: C-ELISE C-ELISEE C-ELISEE SK (Autolic Cartal Airhag) Image: C-ELISE Image: C-ELISE C-ELISEE C-ELISEE TIM (Automic Carbox ALI T28000) Image: C-ELISEE Image: C-ELISEE C-ELISEE C-ELISEE TIM (Automic Carbox ALI T28000) Image: C-ELISEE Image: Carbox Carbox ALI T28000) Image: C-ELISEE Image: Carbox Carbox ALI T28000) Image: Carbox Carbox Carbox Carbox ALI T28000) Image: Carbox Ca				-	-	-	-	-
C-HINSE Padia Image: Constraint of the second				-	-	_	-	•
C-BIXSE C-BIXSE St (Services Module) Image: C-BIXSE St (Services Module) C-BIXSE C-BIXSE SS (Atrhag) Image: C-BIXSE Image				-	_	_	-	-
C-FLYSEE C-FLYSEE SRS (Atribag) Image: Constraint of the second of					_	_	-	-
C-ELYSE C-ELYSE SRS (Antoliv Central Airbag) Image: Control of Column) C-ELYSE C-ELYSE SRS(Martick Module Under The Steering Wheel(Top Of Column)) Image: Column Column Column Column) Image: Column Column Column Column Column) C-ELYSE C-ELYSE Sirem Image: Column Co	C-ELYSEE	C-ELYSEE	SM (Services Module)	•	•	•	•	•
C-ELYSEE C-ELYSEE SFSM(Switch Module Under The Steering Wheel(Top Of Column)) C-ELYSEE <l< td=""><td>C-ELYSEE</td><td>C-ELYSEE</td><td>SRS (Airbag)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></l<>	C-ELYSEE	C-ELYSEE	SRS (Airbag)	•	•	•	•	•
C-ELYSEE C-ELYSEE <td< td=""><td>C-ELYSEE</td><td>C-ELYSEE</td><td>SRS (Autoliv Central Airbag)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></td<>	C-ELYSEE	C-ELYSEE	SRS (Autoliv Central Airbag)	•	•	•	•	•
C-ELYSEE C-ELYSEE TCM (Automatic Gearbox Al.4 TA2000) C-ELYSEE C-ELYSEE TCM (Automatic Gearbox) C-ELYSEE C-ELYSEE TRU (Trailer Relay linit) C-ELYSEE C-ELYSEE WB (Voltage Retaining Pevice) C-ELYSEE C-ELYSEE WB (Voltage Retaining Pevice) C-ELYSEE C-ELYSEE WB (Voltage Retaining Pevice) C-ELYSEE C-ELYSEE C-ELYSEE	C-ELYSEE	C-ELYSEE	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C-ELYSEE C-ELYSEE TEN (Automatic Gearbox) Image: Comparison of the second	C-ELYSEE	C-ELYSEE	Siren	•	•	•	•	•
C-ELYSEE C-ELYSEE TRU (Trailer Relay Unit) Image: Comparison of the comparison o	C-ELYSEE	C-ELYSEE	TCM (Automatic Gearbox AL4 TA2000)	•	•	•	•	•
C-ELYSEE VRD (Voltage Retaining Device) •	C-ELYSEE	C-ELYSEE	TCM (Automatic Gearbox)	•	•	•	•	•
C-ELYSEE VRD (Voltage Retaining Device) •	C-ELYSEE	C-ELYSEE	TRU (Trailer Relay Unit)	•	•	•	•	•
C-ELYSEE C-ELYSEE <td< td=""><td>C-ELYSEE</td><td>C-ELYSEE</td><td></td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></td<>	C-ELYSEE	C-ELYSEE		•	•	•	•	•
C-ELYSEE C-ELYSEE (C-ELYSEE C-ELYSEE (C-ELYSEE					•	•		
C-ELYSEE C-ELYEE C-ELYSEE C-ELYSEE				_	_		_	•
C-ELYSEE C-ELYSEE (R3) KEY (Electrionic Key Reader) • <td< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td>-</td><td>-</td></td<>							-	-
C-EUXEE <t< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td>-</td><td>-</td></t<>							-	-
C-ELYSEE C-ELYSEE (Ra) SRS (Autoliv Central Airbag) Image: Control of the system C-ELYSEE C-ELYSEE (Ra) TCM (Automatic Gearbox ALA TA2000) Image: Control of the system Image:						_	-	-
C-ELYSEEC-ELYSEE (R3)TCM (Automatic Gearbox AL TA2000)Image: Comparison of the comparison of th					_			-
C-QUATREC-QUATRE (4)ABS (Anti-lock brake System)Image: Comparison of the system of th						_	-	-
C-QUATREC-QUATRE (4)AC (Air Conditioning)Image: Conditional				-	-	-	-	•
C-QUATREC-QUATREALM (Anti-theft Alarm)Image: C-QUATREImage: C-QUATRE<	C-QUATRE	C-QUATRE (4)	ABS (Anti-lock brake System)	•	•	۲	•	•
C-QUATREC-QUATRE (4)BSI (Built-in Systems Interface)Image: Constraint of the systems Interface)Image: Constraint of the systems Interface)C-QUATREC-QUATRE (4)CD (CD Player)Image: Constraint of the systems Interface)Image: Constraint of the systems Interface)C-QUATREC-QUATRE (4)DDM (Driver's Door Module)Image: Constraint of the systems Interface)Image: Constraint of the systems Interface)Image: Constraint of the systems Interface)C-QUATREC-QUATRE (4)ECM (Engine Control Module)Image: Constraint of the systems Interface)Image: Constraint of the systems Interface)Image: Constraint of the systems Interface)C-QUATREC-QUATRE (4)ECM (Engine Control Module)Image: Constraint of the systems Interface)Image: Constraint of the systems Interface)Image: Constraint of the systems Interface)C-QUATREC-QUATRE (4)ERU (Engine Relay Unit)Image: Constraint of the systems Interface)Image: Constraint of the systems Interface)Image: Constraint of the systems Interface)C-QUATREC-QUATRE (4)Image: Constraint of the systems Interface)Image: Constraint of the systems Interface)Image: Constraint of the systems Interface)C-QUATREC-QUATRE (4)PM (Parking Assistance)Image: Constraint of the systems Interface)Image: Constraint of the systems Interface)Image: Constraint of the systems Interface)C-QUATREC-QUATRE (4)PM (Parking Assistance)Image: Constraint of the systems Interface)<	C-QUATRE	C-QUATRE (4)	AC (Air Conditioning)	•	•	●	•	•
C-QUATREC-QUATRE (4)CD (CD Player)Image: CD Player) <td>C-QUATRE</td> <td>C-QUATRE (4)</td> <td>ALM (Anti-theft Alarm)</td> <td>•</td> <td>•</td> <td>•</td> <td>●</td> <td>•</td>	C-QUATRE	C-QUATRE (4)	ALM (Anti-theft Alarm)	•	•	•	●	•
C-QUATREC-QUATRE (4)DDM (Driver's Door Module)Image: Constraint of the state of	C-QUATRE	C-QUATRE (4)	BSI (Built-in Systems Interface)	•		•	•	•
C-QUATREC-QUATRE (4)ECM (Engine Control Module)Image: Control Module in the control Modul	C-QUATRE	C-QUATRE (4)	CD (CD Player)	•	•	•	•	•
C-QUATREC-QUATRE (4)EPS (Electric Power Steering)Image: Comparison of the steering	C-QUATRE	C-QUATRE (4)	DDM (Driver's Door Module)	•	•	٠	•	•
C-QUATREC-QUATRE (4)EPS (Electric Power Steering)Image: Comparison of the steering				•	•	•	•	•
C-QUATREC-QUATRE (4)ERU (Engine Relay Unit)Image: Constraint of the second sec				•	•	•	•	•
C-QUATREC-QUATRE (4)HFC (Hands Free Control Kit)•• <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>-</td> <td>-</td>							-	-
C-QUATREC-QUATRE (4)IP (Instrument Cluster Panel)IP (Instrument Cluster Panel)IP (Instrument Cluster Panel)IP (Instrument Cluster Panel)C-QUATREC-QUATRE (4)MULS (Multifunction Screen)IP (Instrument Cluster Panel)IP (Instr					_		-	-
C-QUATREC-QUATRE (4)MULS (Multifunction Screen)••					_			-
C-QUATREC-QUATRE (4)PAM (Parking Assistance)•• <th< td=""><td></td><td></td><td></td><td></td><td>_</td><td></td><td></td><td></td></th<>					_			
C-QUATREC-QUATRE (4)PDM (Passenger's Door Module)Image and the second s				-	-	_	-	
C-QUATREC-QUATRE (4)RadioImage: Strange of the strang				-	-	_	-	
C-QUATREC-QUATRE (4)SRS (Airbag)••••••C-QUATREC-QUATRE (4)SWFCC (Steering Wheel With Fixed Central Controls)••••••				-	_	-	•	•
C-QUATRE (4) SWFCC (Steering Wheel With Fixed Central Controls) • • • • •			Radio	•		•	•	•
	C-QUATRE	C-QUATRE (4)	SRS (Airbag)	•	•	●	•	•
C-QUATRE (4) TCM (Automatic Gearbox AL4)	C-QUATRE	C-QUATRE (4)	SWFCC (Steering Wheel With Fixed Central Controls)	•	•	•	•	•
	C-QUATRE	C-QUATRE (4)	TCM (Automatic Gearbox AL4)	•	•	●	•	•

Sivu 35/60

C-QUATREC-QUATRE (4)TEU (Telematics Unit RT3)••••C-QUATREC-QUATRE (5)ABS (Anti-lock brake System)•••••C-QUATREC-QUATRE (5)AC (Air Conditioning)•••••••C-QUATREC-QUATRE (5)ALM (Anti-theft Alarm)•• <td< th=""><th>• • • • • •</th><th>• • • •</th></td<>	• • • • • •	• • • •
C-QUATREC-QUATRE (5)AC (Air Conditioning)Image: Conditional	• • • • • • • • • • • • • • • • • • • •	•
C-QUATREC-QUATRE (5)ALM (Anti-theft Alarm)••••C-QUATREC-QUATRE (5)BSI (Built-in Systems Interface)•••••C-QUATREC-QUATRE (5)CD (CD Player)•• </td <td>• • • • • • • • • • • • • • • • • • • •</td> <td>•</td>	• • • • • • • • • • • • • • • • • • • •	•
C-QUATREC-QUATRE (5)BSI (Built-in Systems Interface)Image: Constraint of the systems Interface)C-QUATREC-QUATRE (5)CD (CD Player)Image: Constraint of the systems Interface)Image: Constraint of the systems Interface)C-QUATREC-QUATRE (5)DDM (Driver's Door Module)Image: Constraint of the systems Interface)Image: Constraint of the systems Interface)C-QUATREC-QUATRE (5)DDM (Driver's Door Module)Image: Constraint of the systems Interface)Image: Constraint of the systems Interface)C-QUATREC-QUATRE (5)ECM (Engine Control Module)Image: Constraint of the systems Interface)Image: Constraint of the systems Interface)C-QUATREC-QUATRE (5)ERU (Engine Relay Unit)Image: Constraint of the systems Interface)Image: Constraint of the systems Interface)C-QUATREC-QUATRE (5)HFC (Hands Free Control Kit)Image: Constraint of the systems Interface)Image: Constraint of the systems Interface)C-QUATREC-QUATRE (5)IP (Instrument Cluster Panel)Image: Constraint of the systems Interface)Image: Constraint of the systems Interface)C-QUATREC-QUATRE (5)MULS (Multifunction Screen)Image: Constraint of the systems Interface)Image: Constraint of the systems Interface)	•	•
C-QUATREC-QUATRE (5)CD (CD Player)Image: C-QUATRE (5)Image: C-	•	-
C-QUATREC-QUATRE (5)DDM (Driver's Door Module)••••C-QUATREC-QUATRE (5)ECM (Engine Control Module)•••••C-QUATREC-QUATRE (5)EPS (Electric Power Steering)•••••C-QUATREC-QUATRE (5)ERU (Engine Relay Unit)••••••C-QUATREC-QUATRE (5)HFC (Hands Free Control Kit)••••••C-QUATREC-QUATRE (5)IP (Instrument Cluster Panel)••••••C-QUATREC-QUATRE (5)MULS (Multifunction Screen)••••••	•	•
C-QUATREC-QUATRE (5)ECM (Engine Control Module)Image: Control ModuleC-QUATREC-QUATRE (5)EPS (Electric Power Steering)Image: Control ModuleC-QUATREC-QUATRE (5)ERU (Engine Relay Unit)Image: Control ModuleC-QUATREC-QUATRE (5)HFC (Hands Free Control Kit)Image: Control Kit)C-QUATREC-QUATRE (5)IP (Instrument Cluster Panel)Image: Control Kit)C-QUATREC-QUATRE (5)MULS (Multifunction Screen)Image: Control Kit)	•	
C-QUATREC-QUATRE (5)EPS (Electric Power Steering)Image: Comparison of the steering	-	•
C-QUATREC-QUATRE (5)EPS (Electric Power Steering)Image: Comparison of the steering	•	•
C-QUATREC-QUATRE (5)ERU (Engine Relay Unit)Image: Comparison of the compariso	_	•
C-QUATREC-QUATRE (5)HFC (Hands Free Control Kit)Image: Control Kit)C-QUATREC-QUATRE (5)IP (Instrument Cluster Panel)Image: Control Kit)C-QUATREC-QUATRE (5)MULS (Multifunction Screen)Image: Control Kit)	•	•
C-QUATRE C-QUATRE (5) IP (Instrument Cluster Panel) • <	•	•
C-QUATRE (5) MULS (Multifunction Screen) • •	•	•
	•	•
	•	•
C-QUATRE C-QUATRE (5) PAM (Parking Assistance) • • •		-
C-QUATRE C-QUATRE (5) PDM (Passenger's Door Module) • •	•	•
C-QUATRE (5) RBS (Rain And Brightness Sensor) • •	•	•
C-QUATRE C-QUATRE (5) Radio	•	•
C-QUATRE (5) SRS (Airbag)	•	•
C-QUATRE C-QUATRE (5) SWFCC (Steering Wheel With Fixed Central Controls)	•	•
C-QUATRE (5) TCM (Automatic Gearbox AL4)	•	•
C-QUATRE (5) TEU (Telematics Unit RT4) • •	•	•
C-TRIOMPHE ABS/ESP (Anti-lock brake System Or Electric Stability Program) • •	•	•
C-TRIOMPHE AC (Air Conditioning) • •	•	•
C-TRIOMPHE Alarm • • •	•	•
C-TRIOMPHE BSI (Built-in Systems Interface) • •	•	•
C-TRIOMPHE CD (CD Player) • •	•	•
C-TRIOMPHE DDM (Driver's Door Module) • •	•	•
C-TRIOMPHE DHL (Directional Headlamps)	•	•
C-TRIOMPHE ECM (Engine Control Module)	•	•
C-TRIOMPHE EPS (Electric Power Steering)	•	•
C-TRIOMPHE ERU (Engine Relay Unit)	•	•
C-TRIOMPHE HFC (Hands Free Control Kit)	•	•
C-TRIOMPHE IP (Instrument Cluster Panel)	•	•
C-TRIOMPHE MULD (Multifunction Display C)	•	•
C-TRIOMPHE PAM (Parking Assistance)	•	•
	•	•
	•	•
	•	•
C-TRIOMPHE Radio • •		•
C-TRIOMPHE SRS (Airbag)	•	•
C-TRIOMPHE SWFCC (Steering Wheel With Fixed Central Controls)	•	•
C-TRIOMPHE TCM (Automatic Gearbox)	•	•
C-TRIOMPHE TEU (Telematics Unit RT3)	•	•
C-TRIOMPHE TRU (Trailer Relay Unit)	•	•
C-ZERO ABS (Anti-lock brake System) • •	•	•
C-ZERO AC (Air Conditioning) • •	•	•
C-ZERO BATT (Onboard Charger Of The Traction Battery) • • •	•	•
C-ZERO BATT (Traction Battery ECU) • • •	•	•
C-ZERO BATT-01 (Traction Battery Cells Management(Module 01)) • • •	•	•
C-ZERO BATT-02 (Traction Battery Cells Management(Module 02)) • • •	•	•
C-ZERO BATT-03 (Traction Battery Cells Management(Module 03)) • •	•	•
C-ZERO BATT-04 (Traction Battery Cells Management(Module 04)) • • •	•	•
C-ZERO BATT-05 (Traction Battery Cells Management(Module 05)) • • •	•	•
C-ZERO BATT-07 (Traction Battery Cells Management(Module 07)) • • •	•	•
C-ZERO BATT-08 (Traction Battery Cells Management(Module 08)) • • •	•	•
C-ZERO BATT-09 (Traction Battery Cells Management(Module 09)) • •	•	•
C-ZERO BATT-10 (Traction Battery Cells Management (Module 10)) • •	•	•
C-ZERO BATT-11 (Traction Battery Cells Management (Module 10))	•	•
C-ZERO DVT (Direct Voltage(DC/DC) Transformer)	•	•
C-ZERO EMM (Electric Machine Management ECU)	•	•
C-ZERO EPS (Electric Power Steering)	•	•
C-ZERO EVS (Electric Power Steering) C-ZERO EVM (Electric Vehicle Management ECU)	•	•
	•	•
C-ZERO GWH (Gateway Wiring Housing) ● ● ●	•	•

							rr
C-ZERO		IP (Instrument Cluster Panel)	•	•	•	•	•
C-ZERO		Radio	•	•	•	•	•
C-ZERO		SAS (Steering Wheel Angle Sensor)	•	•	•	•	•
C-ZERO		SM (Services Module)	•	•	•	•	•
C-ZERO		SRS (Airbag)	•	•	•	•	•
C1	C1 (B0)	ABS (Anti-lock brake System)	•	•	•	•	•
C1	C1 (B0)	ECM (Engine Control Module)	•	•	•	•	•
C1	C1 (B0)	EPS (Electric Power Steering)	•	•	•	•	•
	C1 (B0)	IMMO (Locking And Immobiliser Control Module)	•	•	•	•	•
	C1 (B0)	Radio	•	•	•	•	•
<u> </u>	C1 (B0)	SRS (Airbag)	•	•	•	•	•
	C1 (B0)	TCM (Automatic Gearbox)	•	•	•	•	•
			•	•	•	•	•
	C1 (B4)	ABS (Anti-lock brake System)	•	•	•	•	•
	C1 (B4)	AC (Air Conditioning)		-	-	-	_
C1	C1 (B4)	ECM (Engine Control Module)	•	•	•	•	•
C1	C1 (B4)	EPS (Electric Power Steering) IMMO/HFSM (Engine Immobiliser\Hands Free Starting Access	•	•	•	•	•
C1	C1 (B4)	Electric Module)	•	•	•	•	•
C1	C1 (B4)	IP (Instrument Cluster Panel)	•	•	•	•	•
C1	C1 (B4)	MULC/RD (Multifunction Video Camera And Remote Detection By	•	•	•	•	•
		Laser Assembly)			-	-	
	C1 (B4)	MULS (Multifunction Screen)	•	•	•	•	•
	C1 (B4)	SRS (Airbag)	•	•	•	•	•
	C1 (B4)	SSC (Stop And Start Control ECU)	•	•	•	•	•
C1	C1 (B4)	TCM (Automatic Gearbox)	•	•	•	•	•
C15		ECM (1.9L WJY LUCAS DCN2)	•	•	•	•	•
C2	C2 (CAN) (2006 –)	ABS (Anti-lock brake System)	•	•	•	•	•
C2	C2 (CAN) (2006 –)	AC (Air Conditioning)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	Alarm	•	•	•	•	•
C2	C2 (CAN) (2006 -)	BSI (Built-in Systems Interface)	•	•	•	•	•
C2	C2 (CAN) (2006 –)	CD (CD Player)	•	•	•	•	•
C2	C2 (CAN) (2006 –)	ECM (Engine Control Module)	•	•	•	•	•
	C2 (CAN) (2006 -)	EPS (Electric Power Steering)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	ERU (Engine Relay Unit)	•	•	•	•	•
	C2 (CAN) (2006 -)	HFC (Hands Free Control Kit)	•	•	•	•	•
C2 C2				_	-	-	
1	C2 (CAN) (2006 -)	HFR (High Frequency Receiver)	•	•	•	•	•
	C2 (CAN) (2006 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	MULS (Multifunction Screen C)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	PAM (Parking Assistance)	•	•	•	•	•
C2	C2 (CAN) (2006 –)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C2	C2 (CAN) (2006 –)	Radio	•	•	•	•	•
C2	C2 (CAN) (2006 –)	SRS (Airbag)	•	•	•	•	•
C2	C2 (CAN) (2006 –)	SSC (ECU Reversible Stopstart Alternator)	•	•	•	•	•
C2	C2 (CAN) (2006 -)	SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
	C2 (CAN) (2006 –)	TCM (Controlled Manual Gearbox ECU)	•	•	•	•	•
	C2 (CAN) (2006 –)	TEU (Telematics Unit RT4)	•	•	•	•	•
	C2 (CAN) (2006 –)	TRU (Trailer Relay Unit)	•	•	•	•	•
C2	C2 (CHINA)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
C2	C2 (CHINA)	AC (Air Conditioning)	•	•	•	•	•
C2	C2 (CHINA)	BSI (Built-in Systems Interface)	•	•	•	•	•
C2 C2			•		-	-	_
	C2 (CHINA)	ECM (Engine Control Module)	-	•	•	•	•
C2	C2 (CHINA)	IP (Instrument Cluster Panel)	•	•	•	•	•
	C2 (CHINA)	SRS (Airbag)		•	•	•	•
C2	C2 (CHINA)	SWFCC (Steering Wheel With Fixed Central Controls)	•	•	•	•	•
C2	C2 (CHINA)	TCM (Automatic Gearbox AL4 TA2000)	•	•	•	•	•
	C2 (VAN) (2003 - 2006)	ABS (Anti-lock brake System TEVES MK70)	•	•	•	•	•
C2	C2 (VAN) (2003 - 2006)	AC (Air Conditioning)	•	•	•	•	•
C2	C2 (VAN) (2003 – 2006)	Alarm	•	•	•	•	•
C2	C2 (VAN) (2003 - 2006)	BSI (Built-in Systems Interface)	•	•	•	•	•
				-			•
C2	C2 (VAN) (2003 - 2006)	CD (CD Player)	•	•	•	•	•
		CD (CD Player) ECM (Engine Control Module)	•	•	•	•	•
C2	C2 (VAN) (2003 - 2006) C2 (VAN) (2003 - 2006)	ECM (Engine Control Module)	-	_	-	-	-
C2 C2	C2 (VAN) (2003 - 2006) C2 (VAN) (2003 - 2006) C2 (VAN) (2003 - 2006)	ECM (Engine Control Module) EPS (Electric Power Steering)	•	•	•	•	•
C2 C2 C2	C2 (VAN) (2003 - 2006) C2 (VAN) (2003 - 2006)	ECM (Engine Control Module)	•	•	•	•	•

Sivu 37/60

A10 KA	UPPA OY www.a10kauppa.fi			Sivu	37/60		
C2	C2 (VAN) (2003 – 2006)	MULS (Multifunction Screen A)	•	•	٠	•	•
C2	C2 (VAN) (2003 – 2006)	PAM (Parking Assistance)	•	•	•	•	•
C2	C2 (VAN) (2003 – 2006)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C2	C2 (VAN) (2003 – 2006)	Radio	•	•	•	•	•
C2	C2 (VAN) (2003 - 2006)	SRS (Airbag)	•	•	•	•	•
C2	C2 (VAN) (2003 - 2006)	SWSM (Switch Module Under Steering Wheel)	•	•	•	•	•
C2	C2 (VAN) (2003 - 2006)	TCM (Controlled Manual Gearbox ECU)	•	•	•	•	•
C2	C2 (VAN) (2003 - 2006)	TEU (Telematics Unit)	•	•	•	•	•
C3	C3 (2002 – 2006)	ABS (Anti-lock brake System TEVES MK70)	•	•	•	•	•
C3	C3 (2002 – 2006)	ABS (Anti-lock brake System)	•	•	•	•	•
C3	C3 (2002 – 2006)	AC (Air Conditioning)	•	•	•	•	•
C3	C3 (2002 – 2006)	ADDG02	•	•	•	•	•
C3	C3 (2002 - 2006)	ALM (Anti-theft Alarm)	•	•	•	•	•
C3	C3 (2002 – 2006)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
C3	C3 (2002 - 2006)	Alarm	•	•	•	•	•
C3	C3 (2002 - 2006)	BATT (Battery Change Status Unit)	•	•	•	•	•
C3	C3 (2002 - 2006)	BATT (Battery Change Status Unit) BATT (Battery Change Status Unit)	•	•	•	•	•
			•	•	•	•	•
C3 C3	C3 (2002 - 2006)	BSI (Built-in Systems Interface)		•	•	•	
C3 C3	C3 (2002 - 2006)	CD (CD Player)	•	-	-	-	•
	C3 (2002 - 2006)	CD (External CD Player)	•	•	•	•	•
C3	C3 (2002 – 2006)	DDM (Driver's Door Module)	•	•	•	•	•
C3	C3 (2002 - 2006)	DSM (Driver's School Module)	•	•	•	•	•
C3	C3 (2002 – 2006)	Display	•	•	•	•	•
C3	C3 (2002 - 2006)	ECM (Engine Control Module)	•	•	•	•	•
C3	C3 (2002 – 2006)	EPS (Electric Power Steering)	•	•	•	•	•
C3	C3 (2002 – 2006)	ERU (Engine Relay Unit)	•	•	•	•	•
C3	C3 (2002 – 2006)	ESL (Electric Steering Lock)	•	•	•	•	•
C3	C3 (2002 – 2006)	HFC (Hands Free Control Kit)	•	•	•	•	•
C3	C3 (2002 – 2006)	HFC (Hands free Control Unit)	•	•	•	•	•
C3	C3 (2002 – 2006)	HFR (High Frequency Receiver)	•	•	•	•	•
C3	C3 (2002 – 2006)	HHV (High Head Vision)	•	•	•	•	•
C3	C3 (2002 – 2006)	IP (Instrument Cluster Panel)	•	•	•	•	•
C3	C3 (2002 – 2006)	KEY (Electrionic Key Reader)	•	•	•	•	•
C3	C3 (2002 – 2006)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C3	C3 (2002 – 2006)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C3	C3 (2002 – 2006)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
C3	C3 (2002 – 2006)	MULD (Multifunction Display SAGEM A)	•	•	•	•	•
C3	C3 (2002 – 2006)	MULD (Multifunction Display)	•	•	•	•	•
C3	C3 (2002 – 2006)	MULS (Multifunction Screen A)	•	•	•	•	•
C3	C3 (2002 - 2006)	MULS (Multifunction Screen C)	•	•	•	•	•
C3	C3 (2002 - 2006)	PAM (Parking Assistance)	•	•	•	•	•
C3	C3 (2002 - 2006)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C3	C3 (2002 – 2006)	RLS (Rain And Light Sensor)	•	•	•	•	•
C3	C3 (2002 - 2006)	Radio	•	•	•	•	•
C3	C3 (2002 - 2006)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
C3	C3 (2002 – 2006)	SB (Seat Belts Reminder LED)	•	•	•	•	•
C3	C3 (2002 – 2006)	SM (Services Module)	•	•	•	•	•
C3	C3 (2002 – 2006)	SRS (Airbag)	•	•	•	•	•
C3	C3 (2002 - 2006)	SRS (SAC TEMIC)	•	•	•	•	•
C3	C3 (2002 - 2006)	SVLCU (Stolen Vehicle Location Control)	•	•	•	•	•
C3	C3 (2002 - 2006)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C3	C3 (2002 - 2006) C3 (2002 - 2006)	SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
C3			•	•	•	•	•
C3 C3	$\begin{array}{cccccccccccccccccccccccccccccccccccc$	SWSM(Switch Module Under The Steering Wheel(Top Of Column)) Siren	•	•	•	•	•
C3 C3	$\begin{array}{cccccccccccccccccccccccccccccccccccc$		•	•	•	•	•
C3 C3	C3 (2002 - 2006)	TCM (Automatic Gearbox)	-			_	-
C3 C3	C3 (2002 - 2006)	TCM (Controlled Manual Gearbox ECU)	•	•	•	•	•
	C3 (2002 – 2006)	TEU (Telematics Unit Independent)	•	•	•	•	•
C3	C3 (2002 - 2006)	TEU (Telematics Unit RT3)	•	•	•	•	•
C3	C3 (2002 – 2006)	TEU (Telematics Unit RT5)	•	•	•	•	•
C3	• (1) (1)000 000()	TEU (Telematics Unit)	•	•	•	•	•
	C3 (2002 – 2006)		-		-	-	-
C3 C3	C3 (2002 - 2006) C3 (2002 - 2006) C3 (2002 - 2006)	TRU (Trailer Relay Unit) VRD (Voltage Retaining Device)	•	•	•	•	•

C3	C3 (A51)	ABS (Anti-lock brake System)	•	•	•	•	•
C3	C3 (A51)	AC (Air Conditioning)	•	•	•	•	•
C3	C3 (A51)	ALM (Anti-theft Alarm)	•	•	•	•	•
C3	C3 (A51)	BATT (Battery Change Status Unit)	•	•	•	•	•
C3	C3 (A51)	BSI (Built-in Systems Interface)	•	•	•	•	•
C3	C3 (A51)	DDM (Driver's Door Module)	•	•	•	•	•
C3	C3 (A51)	DSM (Driver's School Module)	•	•	•	•	•
C3	C3 (A51)	ECM (Engine Control Module)	•	•	•	•	•
C3	C3 (A51)	EPS (Electric Power Steering)	•	•	•	•	•
C3	C3 (A51)	ERU (Engine Relay Unit)	•	•	•	•	•
C3	C3 (A51)	HFC (Hands Free Control Kit)	•	•	•	•	•
C3	C3 (A51)	HFR (High Frequency Receiver)	•	•	•	•	•
C3	C3 (A51)	IP (Instrument Cluster Panel)	•	•	•	•	•
C3	C3 (A51)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C3	C3 (A51)	MULD (Multifunction Display)	•	•	•	•	•
C3	C3 (A51)	PAM (Parking Assistance)	•	•	•	•	•
C3	C3 (A51)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C3	C3 (A51)	Radio	•	•	•		•
C3			•	•	•	-	
C3	C3 (A51)	SB (Seat Belts Reminder LED) SM (Services Module)	•	•	-	-	
C3 C3	C3 (A51)		•	•	-	•	-
	C3 (A51)	SRS (Airbag)	-	-	-	•	
C3	C3 (A51)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	
C3	C3 (A51)	TCM (Automatic Gearbox)	•	•	•	•	•
C3	C3 (A51)	TEU (Telematics Unit Independent)	•	•	•	•	•
C3	C3 (A51)	TEU (Telematics Unit)	•	•	•	•	•
C3	C3 (A51)	TRU (Trailer Relay Unit)	•	•	•	•	•
C3	C3 (A51)	VRD (Voltage Retaining Device)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	ABS (Anti-lock brake System)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	AC (Air Conditioning)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	BSI (Built-in Systems Interface)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	CD (External CD Player)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	DDM (Driver's Door Module)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	Display	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	ECM (Engine Control Module)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	ESL (Electric Steering Lock)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	HHV (High Head Vision)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	IP (Instrument Cluster Panel)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	PAM (Parking Assistance)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	RLS (Rain And Light Sensor)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	SM (Services Module)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	Siren	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	TCM (Automatic Gearbox)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	TRU (Trailer Relay Unit)	•	•	•	•	•
C3	C3 (AIRCROSS) (A88)	VRD (Voltage Retaining Device)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	ABS (Anti-lock brake System)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	AC (Air Conditioning)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	Alarm	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	BSI (Built-in Systems Interface)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	ECM (Engine Control Module)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	EPS (Electric Power Steering)	•	•	•	•	٠
C3	C3 (AIRCROSS) (Ai58)	IP (Instrument Cluster Panel)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	PAM (Parking Assistance)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	Radio	•	•	•	•	•
l	. , ,,	L	-	-	-	-	

Sivu 39/60

710101				onvu	39/00		
C3	C3 (AIRCROSS) (Ai58)	SM (Services Module)	•	•	•	•	•
C3 C3 C3 C3	C3 (AIRCROSS) (Ai58)	SRS (Airbag)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	SVLCU (Stolen Vehicle Location Control)	•	•	•	•	•
	C3 (AIRCROSS) (Ai58)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	TCM (Automatic Gearbox)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	TEU (Telematics Unit)	•	•	•	•	•
C3	C3 (AIRCROSS) (Ai58)	TRU (Trailer Relay Unit)	•	•	•	•	•
C3	C3 (Ai51)	ABS (Anti-lock brake System)	•	•	•	•	•
C3	C3 (Ai51)	AC (Air Conditioning)	•	•	•	•	•
C3	C3 (Ai51)	ALM (Anti-theft Alarm)	•	•	•	•	•
C3	C3 (Ai51)	BSI (Built-in Systems Interface)	•	•	•	•	•
C3	C3 (Ai51)	ECM (Engine Control Module)	•	•	•	•	•
C3	C3 (Ai51)	EPS (Electric Power Steering)	•	•	•	•	•
C3	C3 (Ai51)	IP (Instrument Cluster Panel)	•	•	•	•	•
C3	C3 (Ai51)	PAM (Parking Assistance)	•	•	•	•	•
C3	C3 (Ai51)	RBS (Rain And Brightness Sensor(CDPL))	•	•	•	•	
C3	C3 (Ai51)	Radio	•	•	•	•	•
			-	-	-	-	
C3	C3 (Ai51)	SM (Services Module)	•	•	•	•	
C3	C3 (A151)	SRS (Airbag)	•	•	•	•	•
C3	C3 (Ai51)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C3	C3 (Ai51)	TCM (Automatic Gearbox)	•	•	•	•	•
C3	C3 (Ai51)	TEU (Telematics Unit)	•	•	•	•	•
C3	C3 (Ai51)	TRU (Trailer Relay Unit)	•	•	•	•	•
C3	C3 (B618)	ABS (Anti-lock brake System)	•	•	•	•	•
C3	C3 (B618)	AC (Air Conditioning)	•	•	•	•	•
C3	C3 (B618)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C3	C3 (B618)	BSI (Built-in Systems Interface)	•	•	•	•	•
C3	C3 (B618)	CD (External CD Player)	•	•	•	•	•
C3	C3 (B618)	ECM (Engine Control Module)	•	•	•	•	•
C3	C3 (B618)	ESL (Electric Steering Lock)	•	•	•	•	•
C3	C3 (B618)	IP (Instrument Cluster Panel)	•	•	•	•	•
C3	C3 (B618)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C3	C3 (B618)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C3	C3 (B618)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
C3 C3	C3 (B618)	MULD (Multifunction Display)	•	•	•		
	C3 (B618)	PAM (Parking Assistance)		•	•	•	
C3	C3 (B618)	RLS (Rain And Light Sensor)	•	•	•	•	
C3 C3	C3 (B618)		•	•	•	•	•
C3		SB (Seat Belts Not Fastened LED Unit)	-			_	
C3	C3 (B618)	SM (Services Module)	•	•	•	•	•
C3 C3	C3 (B618)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C3	C3 (B618)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C3	C3 (B618)	Siren	•	•	•	•	•
C3	C3 (B618)	TCM (Automatic Gearbox)	•	•	•	•	•
C3	C3 (B618)	TRU (Trailer Relay Unit)	•	•	•	•	•
C3	C3 (B618)	VRD (Voltage Retaining Device)	•	•	٠	•	•
C3	C3 (PICASSO) (A58)	ABS (Anti-lock brake System)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	AC (Air Conditioning)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	ALM (Anti-theft Alarm)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	BATT (Battery Change Status Unit)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	BSI (Built-in Systems Interface)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	DDM (Driver's Door Module)	•	•	•	•	٠
C3	C3 (PICASSO) (A58)	ECM (Engine Control Module)	•	•	٠	•	•
C3	C3 (PICASSO) (A58)	EPS (Electric Power Steering)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	ERU (Engine Relay Unit)	•	•	•	•	•
C3			•	•	•	•	•
C3	C3 (PICASSO) (A58)	HFC (Hands Free Control Kit)					
			•	•	•	•	•
C3	C3 (PICASSO) (A58)	HFR (High Frequency Receiver)	-	-	-	•	•
C3 C3	C3 (PICASSO) (A58) C3 (PICASSO) (A58)	HFR (High Frequency Receiver) IP (Instrument Cluster Panel)	•	•	•	•	•
C3	C3 (PICASSO) (A58) C3 (PICASSO) (A58) C3 (PICASSO) (A58)	HFR (High Frequency Receiver) IP (Instrument Cluster Panel) MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C3 C3	C3 (PICASSO) (A58) C3 (PICASSO) (A58) C3 (PICASSO) (A58) C3 (PICASSO) (A58)	HFR (High Frequency Receiver) IP (Instrument Cluster Panel) MDAP (Multiplexed Diesel Additive Pump) MULS (Multifunction Screen)	•	•	•	•	•
C3 C3 C3	C3 (PICASSO) (A58) C3 (PICASSO) (A58)	HFR (High Frequency Receiver) IP (Instrument Cluster Panel) MDAP (Multiplexed Diesel Additive Pump) MULS (Multifunction Screen) PAM (Parking Assistance)	• • • •	•	•	•	• • • •
C3 C3	C3 (PICASSO) (A58) C3 (PICASSO) (A58) C3 (PICASSO) (A58) C3 (PICASSO) (A58)	HFR (High Frequency Receiver) IP (Instrument Cluster Panel) MDAP (Multiplexed Diesel Additive Pump) MULS (Multifunction Screen)	•	•	•	•	•

Sivu 40/60

710101							I
C3	C3 (PICASSO) (A58)	SB (Seat Belts Reminder LED)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	SM (Services Module)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	SRS (Airbag)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C3	C3 (PICASSO) (A58)	TCM (Automatic Gearbox)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	TEU (Telematics Unit)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	TRU (Trailer Relay Unit)	•	•	•	•	•
C3	C3 (PICASSO) (A58)	VRD (Voltage Retaining Device)	•	•	•	•	•
C3	C3 (PICASSO) (A158)	ABS (Anti-lock brake System)	•	•	•	•	•
C3	C3 (PICASSO) (Ai58)	AC (Air Conditioning)	•	•	•	•	•
C3	C3 (PICASSO) (Ai58)	ALM (Anti-theft Alarm)	•	٠	•	•	•
C3	C3 (PICASSO) (Ai58)	BSI (Built-in Systems Interface)	•	•	•	•	•
C3	C3 (PICASSO) (Ai58)	ECM (Engine Control Module)	•	•	•	•	•
C3	C3 (PICASSO) (Ai58)	EPS (Electric Power Steering)	•	•	•	•	•
C3	C3 (PICASSO) (Ai58)	IP (Instrument Cluster Panel)	•	•	•	•	•
C3	C3 (PICASSO) (Ai58)	PAM (Parking Assistance)	•	•	•	•	•
C3	C3 (PICASSO) (Ai58)	RBS (Rain And Brightness Sensor(CDPL))	•	•	•	•	•
C3	C3 (PICASSO) (A158)	Radio	•	•	•	•	•
C3	C3 (PICASSO) (A158)	SM (Services Module)	•	•	•	•	
C3	C3 (PICASSO) (A158) C3 (PICASSO) (A158)	SRS (Airbag)		•	•	•	
C3	C3 (PICASSO) (A158) C3 (PICASSO) (A158)		•	•	•	•	•
C3 C3		SWSM(Switch Module Under The Steering Wheel(Top Of Column))		-	-	-	•
	C3 (PICASSO) (A:58)	TCM (Automatic Gearbox)	•	•	•	•	-
C3	C3 (PICASSO) (A:58)	TEU (Telematics Unit)	•	•	•	•	•
C3	C3 (PICASSO) (Ai58)	TRU (Trailer Relay Unit)	•	•	•	•	•
C3	C3 (PLURIEL) (2002 - 2009)	ABS (Anti-lock brake System)	•	•	•	•	•
C3	C3 (PLURIEL) (2002 - 2009)	AC (Air Conditioning)	•	•	•	•	•
C3	C3 (PLURIEL) (2002 – 2009)	BSI (Built-in Systems Interface)	•	•	•	•	•
C3	C3 (PLURIEL) (2002 – 2009)	CD (CD Player)	•	•	•	•	•
C3	C3 (PLURIEL) (2002 – 2009)	ECM (Engine Control Module)	•	•	•	•	•
C3	C3 (PLURIEL) (2002 - 2009)	EPS (Electric Power Steering)	•	•	•	•	•
C3	C3 (PLURIEL) (2002 - 2009)	ERU (Engine Relay Unit)	•	•	•	٠	•
C3	C3 (PLURIEL) (2002 - 2009)	HFC (Hands Free Control Kit)	•	•	•	•	•
C3	C3 (PLURIEL) (2002 - 2009)	IP (Instrument Cluster Panel)	•	•	•	•	•
C3	C3 (PLURIEL) (2002 - 2009)	MULS (Multifunction Screen C)	•	•	•	•	•
C3	C3 (PLURIEL) (2002 - 2009)	PAM (Parking Assistance)	•	•	•	•	•
C3	C3 (PLURIEL) (2002 - 2009)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C3	C3 (PLURIEL) (2002 - 2009)	Radio	•	•	•	•	•
C3	C3 (PLURIEL) (2002 - 2009)	SRS (SAC TEMIC)	•	•	•	•	•
C3	C3 (PLURIEL) (2002 – 2009)	SWSM(Switch Module At The Steering Wheel)	•	•	•	•	•
C3	C3 (PLURIEL) (2002 – 2009)	TCM (Controlled Manual Gearbox ECU)	•	•	•	•	•
C3	C3 (PLURIEL) (2002 – 2009)	TEU (Telematics Unit RT5)	•	•	•	•	•
C3	C3 (R) (2006 – 2009)	ABS (Anti-lock brake System)	•	•	•	•	•
C3	C3 (R) (2006 - 2009)	AC (Air Conditioning)	•	•	•	•	•
C3	C3 (R) (2006 - 2009)	Alarm	•	•	•	•	•
C3	C3 (R) (2006 - 2009)	BSI (Built-in Systems Interface)	•	•	•	•	•
C3	C3 (R) (2006 - 2009)	CD (CD Player)	•	•	•	•	•
C3	C3 (R) (2006 - 2009)	ECM (Engine Control Module)	•	•	•	•	•
C3	C3 (R) (2006 - 2009)	EPS (Electric Power Steering)	•	•	•	•	•
C3	C3 (R) (2006 - 2009)	ERU (Engine Relay Unit)	•	•	•	•	•
C3	$\begin{array}{cccccccccccccccccccccccccccccccccccc$	HFC (Hands Free Control Kit)	•	•	•	•	•
C3	$\begin{array}{cccc} C3 & (R) & (2006 - 2009) \\ \hline C3 & (R) & (2006 - 2009) \end{array}$	IP (Instrument Cluster Panel)	•	•	•	•	•
C3	C3 (R) (2006 - 2009) C3 (R) (2006 - 2009)	MULS (Multifunction Screen A)	•	•	•	•	•
C3			•	•	•		•
	C3 (R) (2006 - 2009)	PAM (Parking Assistance)	-		-	•	•
C3 C3	$\begin{array}{cccc} C3 & (R) & (2006 - 2009) \\ \hline C3 & (R) & (2006 - 2009) \\ \hline \end{array}$	RBS (Rain And Brightness Sensor)	•	•	•	•	
	C3 (R) (2006 - 2009)	Radio	•	•	•	•	•
C3	C3 (R) (2006 - 2009)	SRS (SAC TEMIC)	•	•	•	•	•
C3	C3 (R) (2006 – 2009)	SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
C3	C3 (R) (2006 - 2009)	TCM (Automatic Gearbox)	•	•	•	•	•
C3	C3 (R) (2006 - 2009)	TEU (Telematics Unit RT3)	•	•	•	•	•
C3	C3 (XR)	ABS (Anti-lock brake System)	•	•	•	•	•
C3	C3 (XR)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
C3	C3 (XR)	BATT (Battery Charge Status Unit)	•	•	•	•	•

-							
C3	C3 (XR)	BSI (Built-in Systems Interface)	•	•	•	•	•
C3	C3 (XR)	ECM (Engine Control Module)	•	•	•	•	•
C3	C3 (XR)	EPS (Electric Power Steering)	•	•	•	•	•
C3	C3 (XR)	ESL (Electric Steering Lock)	•	•	•	•	•
C3	C3 (XR)	HFC (Hands free Control Unit)	•	•	•	•	•
C3	C3 (XR)	IP (Instrument Cluster Panel)	•	•	•	•	•
C3	C3 (XR)	KEY (Electrionic Key Reader)	•	•	•	•	•
C3	C3 (XR)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C3	C3 (XR)	MULS (Multifunction Screen)	•	•	•	•	•
C3	C3 (XR)	PAM (Parking Assistance)	•	•	•	•	•
C3	C3 (XR)	Radio	•	•	•	•	•
C3	C3 (XR)	SM (Services Module)	•	•	•	•	•
C3	C3 (XR)	SRS (Airbag)	•	•	•	•	•
C3	C3 (XR)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C3	C3 (XR)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
	C3 (XR)		•	•	•	•	•
C3		TCM (Automatic Gearbox)	•	•	•	•	•
C3	C3 (XR)	TEU (Telematics Unit)	•	•	•	•	-
C3	C3 (XR)	VRD (Voltage Retaining Device)	-	-	-	-	•
C4	C4 (2004 - 2010)	ABS (Anti-lock brake System)	•	•	•	•	•
C4	C4 (2004 - 2010)	AC (Air Conditioning)	•	•	•	•	•
C4	C4 (2004 - 2010)	ALM (Anti-theft Alarm)	•	•	•	•	•
C4	C4 (2004 - 2010)	AMP (Audio Amplifier)	•	•	•	•	•
C4	C4 (2004 - 2010)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
C4	C4 (2004 – 2010)	AUTH (Starting Authorisation ECU)	•	•	•	•	•
C4	C4 (2004 – 2010)	BATT (Battery Change Status Unit)	•	•	•	•	•
C4	C4 (2004 – 2010)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C4	C4 (2004 - 2010)	BCM (Body Control Module)	•	•	•	•	•
C4	C4 (2004 - 2010)	BSI (Built-in Systems Interface)	•	•	•	•	•
C4	C4 (2004 - 2010)	BSM (Monitoring Of The Blind Spot)	•	•	•	•	•
C4	C4 (2004 - 2010)	CD (CD Player)	•	•	•	•	•
C4	C4 (2004 - 2010)	CD (External CD Player)	•	•	•	•	•
C4	C4 (2004 - 2010)	DAF (Diesel Additive Function)	•	•	•	•	•
C4	C4 (2004 - 2010)	DDM (Driver's Door Module)	•	•	•	•	•
C4	C4 (2004 - 2010)	DHL (Directional Headlamps)	•	•	•	•	•
C4	C4 (2004 - 2010)	DPCRF (Rear Final Drive Piloted Clutch)	•	•	•	•	•
C4	C4 (2004 - 2010)	DSM (Driver's School Module)	•	•	•	•	•
C4	C4 (2004 - 2010)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C4	C4 (2004 - 2010)	Display/Telematics	•	•	•	•	•
C4	C4 (2004 - 2010)	ECM (Engine Control Module)	•	•	•	•	•
C4	C4 (2004 - 2010) C4 (2004 - 2010)	EPB (Electric Secondary Brake)	•	•	•	•	•
C4 C4	C4 (2004 - 2010) C4 (2004 - 2010)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
C4 C4			•	•	•	•	•
C4 C4	C4 (2004 - 2010)	EPS (Electric Power Steering)	•	•	•	•	•
-	C4 (2004 - 2010)	ERU (Engine Relay Unit)	-	-	-	-	-
C4	C4 (2004 - 2010)	ESL (Electric Steering Lock)	•	•	•	•	•
C4	C4 (2004 - 2010)	HFC (Hands Free Control Kit)	•	•	•	•	•
C4	C4 (2004 - 2010)	HFC (Hands free Control Unit)	•	•	•	•	•
C4	C4 (2004 - 2010)	HFR (High Frequency Receiver)	•	•	•	•	•
C4	C4 (2004 - 2010)	IMMO (Locking And Immobiliser Control Module)	•	•	•	•	•
C4	C4 (2004 - 2010)	IP (Instrument Cluster Panel)	•	•	•	•	•
C4	C4 (2004 - 2010)	KEY (Electrionic Key Reader)	•	•	•	•	•
C4	C4 (2004 - 2010)	LDWS (Lane Departure Warning System)	•	•	•	•	•
C4	C4 (2004 – 2010)	LPU (Lighting Pack Unit)	•	•	•	•	•
C4	C4 (2004 – 2010)	List_VEH_C_C4_SEDAN_	•	•	•	•	•
C4	C4 (2004 – 2010)	MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
C4	C4 (2004 – 2010)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C4	C4 (2004 - 2010)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C4	C4 (2004 – 2010)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
C4	C4 (2004 – 2010)	MULC (Multifunction Camera Or Multifunction Video Camera)	•	•	•	•	•
C4	C4 (2004 - 2010)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
C4	C4 (2004 - 2010)	MULD (Multifunction Display)	•	•	•	•	•
C4	C4 (2004 - 2010)	MULS (Multifunction Screen)	•	•	•	•	•
C4	C4 (2004 - 2010)	NAVI (Navigation)	•	•	•	•	•
L			-	-	-	-	-

Sivu 42/60

AIUKA	UPPA OY www.a10kauppa.fi			Sivu	42/60		
C4	C4 (2004 - 2010)	PAM (Parking Assistance)	•	•	•	•	•
C4	C4 (2004 - 2010)	PDM (Passenger's Door Module)	•	•	•	•	•
C4 C4 C4	C4 (2004 - 2010)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
C4	C4 (2004 - 2010)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C4	C4 (2004 - 2010)	RCU (Rev Counter Unit)	•	•	•	•	•
C4	C4 (2004 - 2010)	RLS (Rain And Light Sensor)	•	•	•	•	•
C4	C4 (2004 - 2010)	ROR (Radio Or Radiotelephone(Radio Part))	•	•	•	•	•
C4	C4 (2004 - 2010)	Radio	•	•	•	•	•
C4	C4 (2004 - 2010)	SAS (Steering Wheel Angle Sensor)	•	•	•	•	•
C4	C4 (2004 - 2010)	SB (LH Reversible Seat Belt Reel)	•	•	•	•	•
C4	C4 (2004 - 2010)	SB (RH Reversible Seat Belt Reel)	•	•	•	•	•
C4	C4 (2004 - 2010)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
C4	C4 (2004 - 2010)	SFB (Signalling Fuse Box)	•	•	•	•	•
C4	C4 (2004 - 2010)	SM (Services Module)	•	•	•	•	•
C4	C4 (2004 - 2010)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
C4	C4 (2004 - 2010)	SRS (Airbag)	•	•	•	•	•
C4	C4 (2004 - 2010)	SSC (Calculation Stop And Sart)	•	•	•	•	•
C4	C4 (2004 - 2010)	SSP (Pneumatic Suspension)	•	•	•	•	•
C4	C4 (2004 - 2010)		•	•	•	•	•
C4 C4	C4 (2004 - 2010) C4 (2004 - 2010)	SWIC (Steering Wheel With Integral Controls (VCI)) SWSM(Switch Module Under The Steering Wheel(Top Of Column))		•	•	•	•
C4 C4	C4 (2004 - 2010) C4 (2004 - 2010)	SWSM (Switch Module Under The Steering Wheel(Top Of Column)) SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
C4 C4			•	•	•	•	•
C4 C4	C4 (2004 - 2010) C4 (2004 - 2010)	Siren TCM (Automatic Gearbox)		•	•	•	•
C4 C4				-	•	-	-
	C4 (2004 - 2010)	TEU (Telematics Unit SMEG_PLUS)	•	•	-	•	•
C4	C4 (2004 - 2010)	TEU (Telematics Unit)	•	•	•	•	•
C4	C4 (2004 - 2010)	TRU (Trailer Relay Unit)	•	•	•	•	•
C4	C4 (2004 - 2010)	TS (Touch Screen)	•	•	•	•	•
C4	C4 (2004 - 2010)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C4	C4 (2004 - 2010)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
C4	C4 (2004 - 2010)	VRD (Voltage Retaining Device)	•	•	•	•	•
C4	C4 (2004 - 2010)	Wiper (Windscreen Wiper)	•	•	•	•	•
C4	C4 (AIRCROSS)	ABS (Anti-lock brake System)	•	•	•	•	•
C4	C4 (AIRCROSS)	AC (Air Conditioning)	•	•	•	•	•
C4	C4 (AIRCROSS)	ALM (Anti-theft Alarm)	•	•	•	•	•
C4	C4 (AIRCROSS)	AUTH (Starting Authorisation ECU)	•	•	•	•	•
C4	C4 (AIRCROSS)	BSI (Built-in Systems Interface)	•	•	•	•	•
C4	C4 (AIRCROSS)	DDM (Driver's Door Module)	•	•	•	•	•
C4	C4 (AIRCROSS)	DHL (Directional Headlamps)	•	•	•	•	•
C4	C4 (AIRCROSS)	DPCRF (Rear Final Drive Piloted Clutch)	•	•	•	•	•
C4	C4 (AIRCROSS)	ECM (Engine Control Module)	•	•	•	•	•
C4	C4 (AIRCROSS)	EPS (Electric Power Steering)	•	•	•	•	•
C4	C4 (AIRCROSS)	IMMO (Locking And Immobiliser Control Module)	•	•	•	•	•
C4	C4 (AIRCROSS)	IP (Instrument Cluster Panel)	•	•	•	•	•
C4	C4 (AIRCROSS)	NAVI (Navigation)	•	•	•	•	•
C4	C4 (AIRCROSS)	PAM (Parking Assistance)	•	•	•	•	•
C4	C4 (AIRCROSS)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C4	C4 (AIRCROSS)	ROR (Radio Or Radiotelephone(Radio Part))	•	•	•	•	•
C4	C4 (AIRCROSS)	SAS (Steering Wheel Angle Sensor)	•	•	•	•	•
C4	C4 (AIRCROSS)	SRS (Airbag)	•	•	•	•	•
C4	C4 (AIRCROSS)	SSC (Calculation Stop And Sart)	•	•	•	•	•
C4	C4 (AIRCROSS)	TCM (Automatic Gearbox)	•	•	•	•	•
C4	C4 (B7) (2010 -)	ABS (Anti-lock brake System)	•	•	•	•	•
C4	C4 (B7) (2010 -)	AC (Air Conditioning)	•	•	•	•	•
C4	C4 (B7) (2010 -)	ALM (Anti-theft Alarm)	•	•	•	•	•
C4	C4 (B7) (2010 -)	AMP (Audio Amplifier)	•	•	•	•	•
C4	C4 (B7) (2010 -)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C4	C4 (B7) (2010 -)	BSI (Built-in Systems Interface)	•	•	•	•	•
C4	C4 (B7) (2010 -)	BSM (Monitoring Of The Blind Spot)	•	•	•	•	•
C4	C4 (B7) (2010 -)	DDM (Driver's Door Module)	•	•	•	•	•
C4	C4 (B7) (2010 -)	DHL (Directional Headlamps)	•	•	•	•	•
C4	C4 (B7) (2010 -)	DSM (Driver's School Module)	•	•	•	•	•
C4	C4 (B7) (2010 -)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
L	,		1		1		L

Sivu 43/60

A 10 KA	COPPA OY www.aTokauppa.ii			Sivu	43/60		
C4 C4	C4 (B7) (2010 -)	Display/Telematics	•	•	•	•	•
C4	C4 (B7) (2010 -)	ECM (Engine Control Module)	•	•	•	•	•
C4	C4 (B7) (2010 -)	EPB (Electric Secondary Brake)	•	•	•	•	•
C4	C4 (B7) (2010 –)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
C4	C4 (B7) (2010 -)	ERU (Engine Relay Unit)	•	•	•	•	•
C4	C4 (B7) (2010 -)	ESL (Electric Steering Lock)	•	•	•	•	•
C4	C4 (B7) (2010 -)	IP (Instrument Cluster Panel)	•	•	•	٠	•
C4	C4 (B7) (2010 -)	KEY (Electrionic Key Reader)	•	•	•	•	•
C4	C4 (B7) (2010 -)	LDWS (Lane Departure Warning System)	•	•	•	•	•
C4	C4 (B7) (2010 -)	MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
C4	C4 (B7) (2010 -)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C4	C4 (B7) (2010 –)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
C4	C4 (B7) (2010 -)	MULD (Multifunction Display)	•	•	•	•	•
C4	C4 (B7) (2010 -)	PAM (Parking Assistance)	•	•	•	•	•
C4	C4 (B7) (2010 -)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C4 C4	C4 (B7) (2010 -)	Radio	•	•	•	•	•
C4 C4	C4 (B7) (2010 -) C4 (B7) (2010 -)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
			-	-	-		-
C4 C4	C4 (B7) (2010 -)	SM (Services Module)	•	•	•	•	•
	C4 (B7) (2010 -)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
C4	C4 (B7) (2010 -)	SRS (Airbag)	•	•	•	•	•
C4	C4 (B7) (2010 -)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C4	C4 (B7) (2010 -)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C4	C4 (B7) (2010 -)	TCM (Automatic Gearbox)	•	•	•	•	•
C4	C4 (B7) (2010 -)	TRU (Trailer Relay Unit)	•	•	•	•	•
C4	C4 (B7) (2010 -)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C4	C4 (B7) (2010 -)	VRD (Voltage Retaining Device)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	ABS (Anti-lock brake System)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	AC (Air Conditioning)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	BSI (Built-in Systems Interface)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	ECM (Engine Control Module)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	EPS (Electric Power Steering)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	ESL (Electric Steering Lock)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	HFC (Hands free Control Unit)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	IP (Instrument Cluster Panel)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	KEY (Electrionic Key Reader)	•	•	•	•	•
C4 C4	C4 (BZ3) (CHINA)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	MULD (Multifunction Display)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	PAM (Parking Assistance)	•	•	•	•	
C4 C4			_	•	•	•	
		RBS (Rain And Brightness Sensor)	•	-	-	-	
C4 C4	C4 (BZ3) (CHINA)	Radio	•	•	•	•	•
C4 C4	C4 (BZ3) (CHINA)	SM (Services Module)	•	•	•	•	•
	C4 (BZ3) (CHINA)	SRS (Airbag)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	Siren	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	TCM (Automatic Gearbox)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	TEU (Telematics Unit)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	TRU (Trailer Relay Unit)	•	•	•	•	•
C4	C4 (BZ3) (CHINA)	VRD (Voltage Retaining Device)	•	•	•	•	•
C4	C4 (CACTUS)	ABS (Anti-lock brake System)	•	•	•	•	•
C4	C4 (CACTUS)	AC (Air Conditioning)	•	•	•	•	•
C4	C4 (CACTUS)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C4	C4 (CACTUS)	BSI (Built-in Systems Interface)	•	•	•	•	•
C4	C4 (CACTUS)	CD (External CD Player)	•	•	•	•	•
64		ECM (Engine Control Module)	•	•	•	•	•
C4	C4 (CACTUS)	Low (Engine control module)		-	-		
C4 C4	C4 (CACTUS) C4 (CACTUS)	EPS (Electric Power Steering)	•	•	•	•	•
C4 C4			•	•			•
C4	C4 (CACTUS)	EPS (Electric Power Steering)	-		•	•	-

Sivu 44/60

S1S1 08.1.6.30.1.5.0.1101000000000000000000000000000	AIUKA	UPPA OY www.a10kauppa.fi			Sivu	44/60		
11 01 04 <td< th=""><th>C4</th><th>C4 (CACTUS)</th><th>MULS (Multifunction Screen)</th><th>•</th><th>•</th><th>•</th><th>•</th><th>•</th></td<>	C4	C4 (CACTUS)	MULS (Multifunction Screen)	•	•	•	•	•
1.1 1.5 3.5.00000 90.000000 90.000000 90.000000 90.000000 90.000000 90.000000 90.000000 90.000000 90.000000 90.000000 90.000000 90.000000 90.000000 90.000000 90.000000 90.000000 90.000000 90.0000000 90.0000000 90.0000000 90.0000000 90.0000000 90.0000000 90.0000000 90.0000000 90.0000000 90.0000000 90.0000000000000000000000000000	C4	C4 (CACTUS)	PAM (Parking Assistance)	•	•	•	•	•
11 b1 SAURS Services Maind 0 <td>C4</td> <td>C4 (CACTUS)</td> <td>RLS (Rain And Light Sensor)</td> <td>•</td> <td>•</td> <td>•</td> <td>٠</td> <td>•</td>	C4	C4 (CACTUS)	RLS (Rain And Light Sensor)	•	•	•	٠	•
91 91 <td< td=""><td>C4</td><td>C4 (CACTUS)</td><td>SB (Seat Belts Not Fastened LED Unit)</td><td>•</td><td>•</td><td>•</td><td>٠</td><td>٠</td></td<>	C4	C4 (CACTUS)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	٠	٠
14 54 C Strate 540 C Statute Mark Mark Intergent Controls (101) 0	C4	C4 (CACTUS)	SM (Services Module)	•	•	•	•	•
1 0 0.00000000000000000000000000000000000	C4	C4 (CACTUS)	SRS (Airbag)	•	•	•	•	•
94 0.00000 UR (Assault, Ganzhao) 0 <td< td=""><td></td><td>C4 (CACTUS)</td><td>SWIC (Steering Wheel With Integral Controls (VCI))</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></td<>		C4 (CACTUS)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
94 0.00000 UR (Assault, Ganzhao) 0 <td< td=""><td>C4</td><td>C4 (CACTUS)</td><td>SWSM (Switch Module Under The Steering Wheel)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></td<>	C4	C4 (CACTUS)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
61 61 60 <td< td=""><td></td><td>C4 (CACTUS)</td><td>TCM (Automatic Gearbox)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></td<>		C4 (CACTUS)	TCM (Automatic Gearbox)	•	•	•	•	•
100		C4 (CACTUS)		•	•	•	•	•
61 61 61 62 61 62 61 64 <td< td=""><td></td><td></td><td></td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></td<>				•	•	•	•	•
94 04 01 015 05 01 <t< td=""><td></td><td></td><td>VRD (Voltage Retaining Device)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></t<>			VRD (Voltage Retaining Device)	•	•	•	•	•
9.4 0.1017				•	-	-	-	-
C1 0.1070 0.9 (Mois parties) 0.9 0.9 0.9 0.9 C1 0.1070 0.91 (Mois parties) 0.9 0.9 0.9 0.9 C1 0.1070 0.91 (Mois parties) 0.9 0.9 0.9 0.9 C1 0.1070 0.91 (Mois parties) 0.9 0.9 0.9 0.9 C1 0.1070 0.91 (Mois parties) 0.9 <td></td> <td></td> <td></td> <td>•</td> <td>•</td> <td>-</td> <td>-</td> <td>-</td>				•	•	-	-	-
c1 0.010 DPT (Batter Approximation) •						-	-	-
C1 C1 C1 D1 D1 <tdd1< td=""> D1 D1 <tdd< td=""><td></td><td></td><td></td><td>-</td><td>-</td><td>-</td><td></td><td>-</td></tdd<></tdd1<>				-	-	-		-
C1 C1 <td< td=""><td></td><td></td><td></td><td></td><td>-</td><td>-</td><td>-</td><td>-</td></td<>					-	-	-	-
14 0.0171 B91 (Barlayer's Dora Hodia) •					-	-	-	-
C4 D (07) 100 (Driver's how Mohe) • <t< td=""><td></td><td></td><td></td><td>-</td><td>_</td><td>_</td><td></td><td></td></t<>				-	_	_		
c1 0.077 D1. Girner (and leadurg) • <t< td=""><td></td><td></td><td></td><td></td><td>-</td><td></td><td></td><td></td></t<>					-			
C4 C4 <td< td=""><td></td><td></td><td></td><td></td><td>-</td><td>-</td><td>-</td><td></td></td<>					-	-	-	
C1 C4 0.0 (f) Display/Telemattes Image: Comparison of the comparison			х х У	-		_	-	
G4 G4 <td< td=""><td></td><td></td><td></td><td></td><td>-</td><td>-</td><td>-</td><td>-</td></td<>					-	-	-	-
C1 C4 (1) (07) EN (Engine Control Module) •					-	-	-	-
C4 C4 <td< td=""><td></td><td></td><td>Display/Telematics</td><td>•</td><td>•</td><td>-</td><td>-</td><td>•</td></td<>			Display/Telematics	•	•	-	-	•
C4 C4 <td< td=""><td></td><td></td><td>ECM (Engine Control Module)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></td<>			ECM (Engine Control Module)	•	•	•	•	•
C4 C4 <td< td=""><td></td><td></td><td></td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></td<>				•	•	•	•	•
C4 <td></td> <td>C4 (L) (B7)</td> <td>EPS (Electric Power Steering Electric Pump Unit)</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>		C4 (L) (B7)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
C4 C4 <td< td=""><td></td><td>C4 (L) (B7)</td><td>ERU (Enging Relay Unit)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></td<>		C4 (L) (B7)	ERU (Enging Relay Unit)	•	•	•	•	•
C4 C4 <td< td=""><td></td><td>C4 (L) (B7)</td><td>ESL (Electric Steering Lock)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></td<>		C4 (L) (B7)	ESL (Electric Steering Lock)	•	•	•	•	•
C4 C4 (L) (67) LDRS (Lano Daparture Warning System) • <	C4	C4 (L) (B7)	IP (Instrument Cluster Panel)	•	•	•	•	•
C4 C4 (1) (07) List VELC_C4 SEDM_ Image: C4 (2007)	C4	C4 (L) (B7)	KEY (Electrionic Key Reader)	•	•	•	•	•
C4 (1) (67) MAP (Multiplexed Additive Adding Pump) •	C4	C4 (L) (B7)	LDWS (Lane Departure Warning System)	•	•	•	•	•
C4 U, (B7) MCP (Multiplexed Control Panel) Image: Calibratic Calibrate Calibrate Calibratic Calibratic Calibratic Calibrat	C4	C4 (L) (B7)	List_VEH_C_C4_SEDAN_	•	•	•	•	•
C4 C4 (L) (B7) NEI (Matrix Screen Integral To The Instrument Panel) • <td>C4</td> <td>C4 (L) (B7)</td> <td>MAAP (Multiplexed Additive Adding Pump)</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>	C4	C4 (L) (B7)	MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
C4 C4 (L) (B7) MULD (Multifunction Display) •	C4	C4 (L) (B7)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C4 C4 (L) (B7) PM (Parking Assistance) Image: C4 (L) (B7) RBS (Rain And Brightness Sensor) Image: C4 (L) (B7) RBS (Rain And Brightness Sensor) Image: C4 (L) (B7) RBS (Rain And Brightness Sensor) Image: C4 (L) (B7) RBS (Rain And Brightness Sensor) Image: C4 (L) (B7) RBS (Rain And Brightness Sensor) Image: C4 (L) (B7) RES (Rain And Brightness Sensor) Image: C4 (L) (B7) RES (Rain And Brightness Sensor) Image: C4 (L) (B7) RES (Rain And Brightness Sensor) Image: C4 (L) (B7) RES (Rain And Brightness Sensor) Image: C4 (L) (B7) RES (Rain And Brightness Sensor) Image: C4 (L) (B7) RES (Rain And Brightness Sensor) Image: C4 (L) (B7) RES (Rain And Brightness Sensor) Image: C4 (L) (B7) RES (Rain And Brightness Sensor) Image: C4 (L) (B7) RES (Rain And Brightness Sensor) Image: C4 (L) (B7) RES (Rain And Brightness Sensor) Image: C4 (L) (B7) RES (Rain And Brightness Sensor) Image: C4 (L) (B7) RES (Rain And Brightness Sensor) Image: C4 (L) (B7) RES (Rain And Brightness Sensor) Image: C4 (L) (B7) Image: C4 (L)	C4	C4 (L) (B7)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	٠	•
C4 C4 (L) (B7) Rdio Image: C4 (L) (B7) Radio Image: C4 (L) (B7) Radio Image: C4 (L) (B7) SB (Seat Belts Not Fastened LED Unit) Image: C4 (L) (B7) SB (Seat Belts Not Fastened LED Unit) Image: C4 (L) (B7) SB (Seat Belts Not Fastened LED Unit) Image: C4 (L) (B7) Image: C4 (L) (B7) Image: C4 (L) (B7) SB (Seat Belts Not Fastened LED Unit) Image: C4 (L) (B7)	C4	C4 (L) (B7)	MULD (Multifunction Display)	•	•	•	•	•
C4C4(L)(B7)RadioImage: C4Image: C4C4C4(L)(B7)SB(Seat Belts Not Fastened LED Unit)Image: C4Image: C4	C4	C4 (L) (B7)	PAM (Parking Assistance)	•	•	•	•	•
C4C4(L)(B7)RadioImage: C4Image: C4C4C4(L)(B7)SB(Seat Belts Not Fastened LED Unit)Image: C4Image: C4	C4	C4 (L) (B7)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C4 <td></td> <td>C4 (L) (B7)</td> <td>Radio</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>		C4 (L) (B7)	Radio	•	•	•	•	•
C4 C4 (L) (B7) SM (Services Module) • <t< td=""><td></td><td>C4 (L) (B7)</td><td>SB (Seat Belts Not Fastened LED Unit)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></t<>		C4 (L) (B7)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
C4C4 (L) (B7)SPMU (Supply Protection And Management Unit)Image and the second				•	•	•	•	•
C4 C4 (L) (B7) SRS (Airbag) •					-	-	-	-
C4 <td></td> <td></td> <td></td> <td>-</td> <td></td> <td></td> <td></td> <td>-</td>				-				-
C4 C4 (L) (B7) SWSM(Switch Module Under The Steering Wheel(Top Of Column)) •				-				
C4 C4 (L) (B7) TCM (Automatic Gearbox) •				-		_	-	_
C4C4 (L) (B7)TRU (Trailer Relay Unit)Image: C4Image: C4 <td></td> <td></td> <td></td> <td>-</td> <td></td> <td>-</td> <td>-</td> <td>-</td>				-		-	-	-
C4C4 (L) (B7)UID (Under Inflation Detection (Dsg))Image: C4Image: C4C4C4C4(D (ST)VRD (Voltage Retaining Device)Image: C4Image: C4 </td <td></td> <td></td> <td></td> <td></td> <td>-</td> <td>-</td> <td>-</td> <td>-</td>					-	-	-	-
C4 C4 (L) (B7) VRD (Voltage Retaining Device) • </td <td></td> <td></td> <td></td> <td></td> <td>-</td> <td>-</td> <td>-</td> <td>-</td>					-	-	-	-
C4 C4 (PICASSO) (2006 - 2013) ABS (Anti-lock brake System) ●						-	-	-
C4 C4 (PICASSO) (2006 - 2013) AC (Air Conditioning) • <						-		-
C4C4(PICASSO)(2006 - 2013)ALM (Anti-theft Alarm)Image: C4Image: C4 </td <td></td> <td></td> <td></td> <td></td> <td></td> <td>-</td> <td>-</td> <td></td>						-	-	
C4C4 (PICASSO) (2006 - 2013)AMP (Audio Amplifier)Image: C4Image: C4 <thimage: c4<="" th="">Image: C4<!--</td--><td></td><td></td><td></td><td>-</td><td>-</td><td>-</td><td></td><td>-</td></thimage:>				-	-	-		-
C4C4(PICASSO)(2006 - 2013)BATT(Battery Charge Status Unit)•• <t< td=""><td></td><td></td><td></td><td>-</td><td>-</td><td>-</td><td>-</td><td></td></t<>				-	-	-	-	
C4C4 (PICASSO) (2006 - 2013)BATT (Battery Charge Status Unit)Image: Carried Constraints of the constraint of the constraints of the constraint of the constraints of the constraint of th					-	-	-	-
C4 C4 (PICASSO) (2006 - 2013) BCM (Body Control Module) ●				-		_		_
C4C4 (PICASSO) (2006 - 2013)BSI (Built-in Systems Interface)Image: Calify and the systems Interface)Image: Calify and the systems Interface)C4C4 (PICASSO) (2006 - 2013)CD (CD Player)Image: Calify and the systems Interface)Image: Calify and the systems Interface)Image: Calify and the systems Interface)C4C4 (PICASSO) (2006 - 2013)CD (External CD Player)Image: Calify and the systems Interface)Image: Calify and the systems Interface)C4C4 (PICASSO) (2006 - 2013)DAF (Diesel Additive Function)Image: Calify and the systems Interface)Image: Calify and the systems Interface)C4C4 (PICASSO) (2006 - 2013)DAF (Diesel Additive Function)Image: Calify and the systems Interface)Image: Calify and the systems Interface)				-				
C4 C4 (PICASSO) (2006 - 2013) CD (CD Player) ● <td></td> <td></td> <td></td> <td></td> <td>-</td> <td>-</td> <td>-</td> <td>-</td>					-	-	-	-
C4 C4 (PICASSO) (2006 - 2013) CD (External CD Player) Image: CD (External CD Player) <t< td=""><td></td><td></td><td></td><td>-</td><td></td><td>-</td><td>-</td><td>-</td></t<>				-		-	-	-
C4 (PICASSO) (2006 - 2013) DAF (Diesel Additive Function) • • • • • •			CD (CD Player)	•	-	•	-	•
			CD (External CD Player)	•	•	●	•	•
C4 (PICASSO) (2006 - 2013) DDM (Driver's Door Module) • • • • •			DAF (Diesel Additive Function)	•	•	•	•	•
	C4	C4 (PICASSO) (2006 - 2013)	DDM (Driver's Door Module)	•	•	•	●	•

Sivu 45/60

	UPPA OF www.a10kauppa.ll			Sivu	45/00		
C4	C4 (PICASSO) (2006 - 2013)	DHL (Directional Headlamps)	•	•	•	•	•
C4 C4 C4	C4 (PICASSO) (2006 - 2013)	DSM (Driver's School Module)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	Display/Telematics	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	ECM (Engine Control Module)	•	•	•	•	٠
C4	C4 (PICASSO) (2006 - 2013)	EPB (Electric Secondary Brake)	•	•	•	•	٠
C4	C4 (PICASSO) (2006 - 2013)	EPS (Electric Power Steering)	•	•	•	•	٠
C4	C4 (PICASSO) (2006 - 2013)	ERU (Engine Relay Unit)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	ESL (Electric Steering Lock)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	HFC (Hands Free Control Kit)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	HFC (Hands free Control Unit)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	HFR (High Frequency Receiver)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	IP (Instrument Cluster Panel)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	KEY (Electrionic Key Reader)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	LDWS (Lane Departure Warning System)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	LPU (Lighting Pack Unit)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	MULC (Multifunction Camera Or Multifunction Video Camera)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	MULD (Multifunction Display)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	PAM (Parking Assistance)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	PDM (Passenger's Door Module)	•	•	•	•	•
C4 C4	C4 (PICASSO) (2006 - 2013)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
C4	C4 (PICASSO) (2006 - 2013)	RBS (Rain And Brightness Sensor)	•	•	•	•	
C4 C4	C4 (PICASSO) (2006 - 2013)	RCU (Rev Counter Unit)	•	•	•	•	
C4 C4	C4 (PICASSO) (2006 - 2013)	Radio	•	•	•	•	
C4 C4	C4 (PICASSO) (2006 - 2013)	SB (LH Reversible Seat Belt Reel)	•	•	•	•	
C4 C4	C4 (PICASSO) (2006 - 2013)	SB (RH Reversible Seat Belt Reel)	•	•	•	•	
C4 C4	C4 (PICASSO) (2006 - 2013)	SFB (Signalling Fuse Box)	•	•		•	
C4 C4	C4 (PICASSO) (2006 - 2013)	SPD (Signalling Fuse Dox) SM (Services Module)	•	•	•	•	
C4 C4	C4 (PICASSO) (2006 - 2013)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
C4 C4	C4 (PICASSO) ($2006 - 2013$) C4 (PICASSO) ($2006 - 2013$)	SPM0 (Supply Frotection And Management Onit) SRS (Airbag)	•	•	•	•	•
C4 C4	C4 (PICASSO) (2006 - 2013)	SSP (Pneumatic Suspension)	•	•	•	•	•
C4 C4	C4 (PICASSO) (2006 - 2013)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•		•	
	C4 (PICASSO) (2006 - 2013)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	
C4 C4	C4 (PICASSO) ($2006 - 2013$) C4 (PICASSO) ($2006 - 2013$)	Siren	•	•	•	•	•
C4 C4	C4 (PICASSO) ($2006 - 2013$) C4 (PICASSO) ($2006 - 2013$)		•	•	•	•	
C4 C4		TCM (Automatic Gearbox)	•	•	•	•	
C4 C4		TEU (Telematics Unit SMEG_PLUS)	-	•	•	•	•
C4 C4	C4 (PICASSO) (2006 - 2013)	TRU (Trailer Relay Unit)	•	-	-	•	•
	C4 (PICASSO) (2006 - 2013)	UID (Under Inflation Detection(Dsg))	•	•	•	•	
C4	C4 (PICASSO) (2006 - 2013)	VDA (Vehicle Distance Assistance)	-	•	•	•	
C4 C4	C4 (PICASSO) (2006 - 2013)	VRD (Voltage Retaining Device)	•	•	•	•	•
C4 C4	C4 (PICASSO) (2006 - 2013) C4 (PICASSO) (B78) (2013 -)	Wiper (Windscreen Wiper)	•	•	•	•	•
C4 C4		ABS (Anti-lock brake System)	_		-	•	•
C4 C4	C4 (PICASSO) (B78) (2013 -)	AC (Air Conditioning)	•	•	•	•	-
	C4 (PICASSO) (B78) (2013 -)	ALM (Anti-theft Alarm)	•	•	-	•	•
C4 C4	C4 (PICASSO) (B78) (2013 -)	AMP (Audio Amplifier)	•	•	•	•	-
	C4 (PICASSO) (B78) (2013 -)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	BCM (Body Control Module)	•	•	•	•	•
C4 C4	C4 (PICASSO) (B78) (2013 -)	BSI (Built-in Systems Interface)	•	•	•	•	•
	C4 (PICASSO) (B78) (2013 -)	CD (External CD Player)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	DDM (Driver's Door Module)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	DHL (Directional Headlamps)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	ECM (Engine Control Module)	•	•	•	•	•
C4 C4	C4 (PICASSO) (B78) (2013 -)	EPS (Electric Power Steering)	•	•	•	•	•
	C4 (PICASSO) (B78) (2013 -)	ERU (Engine Relay Unit)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	ESL (Electric Steering Lock)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	HFC (Hands free Control Unit)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	KEY (Electrionic Key Reader)	•	•	•	•	•

Sivu 46/60

A10 KA	UPPA OY www.a10kauppa.fi			Sivu 4	16/60		
C4	C4 (PICASSO) (B78) (2013 -)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	MULC (Multifunction Camera Or Multifunction Video Camera)	•	•	•	٠	•
C4	C4 (PICASSO) (B78) (2013 -)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	PAM (Parking Assistance)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	SB (LH Reversible Seat Belt Reel)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	SB (RH Reversible Seat Belt Reel)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	SFB (Signalling Fuse Box)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	SM (Services Module)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	SRS (Airbag)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	Siren	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	TCM (Automatic Gearbox)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	TEU (Telematics Unit SMEG_PLUS)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	TRU (Trailer Relay Unit)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	VRD (Voltage Retaining Device)	•	•	•	•	•
C4	C4 (PICASSO) (B78) (2013 -)	Wiper (Windscreen Wiper)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	ABS (Anti-lock brake System)	•	•	•	•	•
C4	C4 (SEDAN) (2006 –)	AC (Air Conditioning)	•	•	•	•	•
C4	C4 (SEDAN) (2006 –)	ALM (Anti-theft Alarm)	•	•	•	•	•
C4	C4 (SEDAN) (2006 –)	AMP (Audio Amplifier)	•	•	•	•	•
C4	C4 (SEDAN) (2006 –)	BATT (Battery Change Status Unit)	•	•	•	•	•
C4	C4 (SEDAN) (2006 –)	BSI (Built-in Systems Interface)	•	•	•	•	•
C4	C4 (SEDAN) (2006 –)	CD (CD Player)	•	•	•	•	•
C4	C4 (SEDAN) (2006 –)	DAF (Diesel Additive Function)	•	•	•	•	•
C4	C4 (SEDAN) (2006 –)	DDM (Driver's Door Module)	•	•	•	•	•
C4	C4 (SEDAN) (2006 –)	DHL (Directional Headlamps)	•	•	•	•	•
C4	C4 (SEDAN) (2006 –)	DSM (Driver's School Module)	•	•	•	•	•
C4	C4 (SEDAN) (2006 –)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C4	C4 (SEDAN) (2006 –)	Display/Telematics	•	•	•	•	•
C4	C4 (SEDAN) (2006 –)	ECM (Engine Control Module)	•	•	•	•	•
C4	C4 (SEDAN) (2006 –)	EPB (Electric Secondary Brake)	•	•	•	•	•
C4	C4 (SEDAN) (2006 –)	EPS (Electric Power Steering)	•	•	•	•	•
C4	C4 (SEDAN) (2006 –)	ERU (Engine Relay Unit)	•	•	•	•	•
C4	C4 (SEDAN) (2006 –)	HFC (Hands Free Control Kit)	•	•	•	•	•
C4	C4 (SEDAN) (2006 –)	HFR (High Frequency Receiver)	•	•	•	•	•
C4	C4 (SEDAN) (2006 –)	IP (Instrument Cluster Panel)	•	•	•	•	•
C4	C4 (SEDAN) (2006 –)	LDWS (Lane Departure Warning System)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	LPU (Lighting Pack Unit)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	MDAP (Multiplexed Diesel Additive Pump)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	MULD (Multifunction Display)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	PAM (Parking Assistance)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	PDM (Passenger's Door Module)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	RCU (Rev Counter Unit)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	Radio	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	SM (Services Module)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	SRS (Airbag)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	SSP (Pneumatic Suspension)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	TCM (Automatic Gearbox)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	TRU (Trailer Relay Unit)	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C4	C4 (SEDAN) (2006 -)	VRD (Voltage Retaining Device)	•	•	•	•	•
C4	C4 (SEDAN) (2006 –)	Wiper (Windscreen Wiper)	•	•	•	•	•
C5	C5 (2001 – 2004)	ABS (Anti-lock brake System TEVES MK60)	•	•	•	•	•
C5	C5 (2001 – 2004)	ABS (Anti-lock brake System)	•	•	•	•	•
•	·	·					

Sivu 47/60

				Olvu			
C5	C5 (2001 – 2004)	AC (Air Conditioning)	•	•	٠	•	•
C5	C5 (2001 – 2004)	ADDG02	•	•	٠	•	•
C5	C5 (2001 – 2004)	ADDG03	•	•	•	•	•
C5	C5 (2001 – 2004)	AH (Additional Heating)	•	•	•	•	•
C5	C5 (2001 – 2004)	ALM (Anti-theft Alarm)	•	•	•	•	•
C5	C5 (2001 – 2004)	AMP (Audio Amplifier)	•	•	•	•	•
C5	C5 (2001 – 2004)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
C5	C5 (2001 – 2004)	Alarm	•	•	•	•	•
C5	C5 (2001 – 2004)	BATT (Battery Change Status Unit)	•	•	•	•	•
C5	C5 (2001 – 2004)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C5	C5 (2001 – 2004)	BCM (Body Control Module)	•	•	•	•	•
C5	C5 (2001 – 2004)	BHU (Body Height Unit)	•	•	•	•	•
C5	C5 (2001 – 2004)	BSI (Built-in Systems Interface)	•	•	٠	•	•
C5	C5 (2001 – 2004)	CD (CD Player)	•	•	•	•	•
C5	C5 (2001 – 2004)	DDC (Driver's Door Control Panel)	•	•	•	•	•
C5	C5 (2001 – 2004)	DHL (Directional Headlamps)	•	•	•	•	•
C5	C5 (2001 – 2004)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C5	C5 (2001 – 2004)	Display/Telematics	•	•	•	•	•
C5	C5 (2001 – 2004)	ECM (Engine Control Module)	•	•	٠	•	•
C5	C5 (2001 – 2004)	EPB (Electric Secondary Brake)	•	•	٠	•	•
C5	C5 (2001 – 2004)	EPS (Electric Power Steering)	•	٠	٠	•	•
C5	C5 (2001 – 2004)	ERU (Engine Relay Unit)	•	•	٠	•	•
C5	C5 (2001 – 2004)	ESL (Electric Steering Lock)	•	•	٠	•	•
C5	C5 (2001 – 2004)	ESP (Electronic Stability Program)	•	•	٠	•	•
C5	C5 (2001 – 2004)	HFC (Hands Free Control Kit)	•	•	٠	•	•
C5	C5 (2001 – 2004)	HFR (High Frequency Receiver)	•	•	•	•	•
C5	C5 (2001 – 2004)	IP (Instrument Cluster Panel)	•	•	•	•	•
C5	C5 (2001 – 2004)	LDWS (Lane Departure Warning System)	•	•	•	•	•
C5	C5 (2001 - 2004)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C5	C5 (2001 - 2004)	MDP CONDUCT	•	•	•	•	•
C5	C5 (2001 – 2004)	MDP PASSAG	•	•	٠	•	•
C5	C5 (2001 – 2004)	MULC (Multifunction Video Camera (CMF))	•	•	٠	•	•
C5	C5 (2001 – 2004)	MULD (Multifunction Display SAGEM A)	•	•	٠	•	•
C5	C5 (2001 – 2004)	MULD (Multifunction Display SAGEM C)	•	•	۲	•	•
C5	C5 (2001 – 2004)	MULD (Multifunction Display)	•	•	٠	•	•
C5	C5 (2001 - 2004)	PAM (Parking Assistance)	•	•	•	•	•
C5	C5 (2001 - 2004)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
C5	C5 (2001 – 2004)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C5	C5 (2001 - 2004)	RLS (Rain And Light Sensor)	•	•	•	•	•
C5	C5 (2001 - 2004)	RTTC (Radio Telephone Transceiver Control)	•	•	•	•	•
C5	C5 (2001 - 2004)	Radio	•	•	•	•	•
C5	C5 (2001 - 2004)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
C5	C5 (2001 - 2004)	SB (Seat Belts Reminder LED)	•	•	•	•	•
C5	C5 (2001 - 2004)	SM (Services Module)	•	•	•	•	•
C5	C5 (2001 - 2004)	SRS (Airbag)	•	•	•	•	•
C5	C5 (2001 - 2004)	SRS (Siemens Central Airbag)	•	•	•	•	•
C5	C5 (2001 - 2004)	SSP (Active Damper Electronic Unit)	•	•	•	•	•
C5	C5 (2001 - 2004)	SSP (Ecotech Suspension)	•	•	•	•	•
C5	C5 (2001 - 2004)	SSP (Suspension Control System)	•	•	•	•	•
C5	C5 (2001 - 2004)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C5	C5 (2001 - 2004)	SWSM(Switch Module At The Steering Wheel)	•	•	•	•	•
C5	C5 (2001 - 2004)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C5	C5 (2001 - 2004)	TCM (Automatic Gearbox AL4)	•	•	•	•	•
C5	C5 (2001 - 2004)	TCM (Automatic Gearbox)	•	•	•	•	•
C5	C5 (2001 - 2004)	TEU (Telematics Unit RT4)	•	•	•	•	•
C5	C5 (2001 - 2004)	TRU (Trailer Relay Unit)	•	•	•	•	•
C5	C5 (2001 - 2004)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C5	C5 (2001 - 2004)	UID (Under Inflation Detection(55g))	•	•	•	•	•
C5	C5 (2001 - 2004)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
C5	C5 (2001 - 2004)	VRD (Voltage Retaining Device)	•	•	•	•	•
C5	C5 (2001 - 2004)	Wiper (Windscreen Wiper)	•	•	•	•	•
C5	C5 (3rd Generation)	ABS (Anti-lock brake System)	•	•	•	•	•
~~	co (sta constation)	ino (mui ion biuno bjättin)		•	•	-	<u> </u>

Sivu 48/60

AIUKA	UPPA OY www.a10kauppa.fi			Sivu	48/60		
C5	C5 (3rd Generation)	AC (Air Conditioning)	•	•	•	•	•
C5	C5 (3rd Generation)	AMP (Audio Amplifier)	•	•	•	•	•
C5	C5 (3rd Generation)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C5	C5 (3rd Generation)	BSI (Built-in Systems Interface)	•	•	•	•	•
C5	C5 (3rd Generation)	DDC (Driver's Door Control Panel)	•	•	•	•	•
C5	C5 (3rd Generation)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C5	C5 (3rd Generation)	ECM (Engine Control Module)	•	•	•	•	•
C5	C5 (3rd Generation)	EPS (Electric Power Steering)	•	•	•	•	•
C5	C5 (3rd Generation)	ESL (Electric Steering Lock)	•	•	•	•	•
C5	C5 (3rd Generation)	IP (Instrument Cluster Panel)	•	•	•	•	•
C5	C5 (3rd Generation)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C5	C5 (3rd Generation)		•	•	•	•	•
C5		PAM (Parking Assistance)	•		•	•	
C5	C5 (3rd Generation)	PVA (Panoramic Visual Assistance ECU)	•		-	-	
	C5 (3rd Generation)	RLS (Rain And Light Sensor)	•	•	•	•	•
C5	C5 (3rd Generation)	RTTC (Radio Telephone Transceiver Control)	•	•	•	•	•
C5	C5 (3rd Generation)	SM (Services Module)	•	•	•	•	•
C5	C5 (3rd Generation)	SRS (Airbag)	•	•	•	•	•
C5	C5 (3rd Generation)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C5	C5 (3rd Generation)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C5	C5 (3rd Generation)	TCM (Automatic Gearbox)	•	•	•	•	•
C5	C5 (3rd Generation)	UID (Under Inflation Detection)	•	•	•	•	•
C5	C5 (3rd Generation)	VRD (Voltage Retaining Device)	•	•	•	•	٠
C5	C5 (3rd Generation)	Wiper (Windscreen Wiper)	•	•	•	•	•
C5	C5 (AIRCROSS)	ABS (Anti-lock brake System)	•	•	•	•	٠
C5	C5 (AIRCROSS)	AC (Air Conditioning)	•	•	•	•	•
C5	C5 (AIRCROSS)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
C5	C5 (AIRCROSS)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C5	C5 (AIRCROSS)	BCM (Body Control Module)	•	•	•	•	•
C5	C5 (AIRCROSS)	BSI (Built-in Systems Interface)	•	•	•	•	•
	C5 (AIRCROSS)	DDC (Driver's Door Control Panel)	•	•	•	•	•
C5	C5 (AIRCROSS)	DHL (Directional Headlamps)	•	•	•	•	•
C5	C5 (AIRCROSS)	ECM (Engine Control Module)	•	•	•	•	•
C5	C5 (AIRCROSS)	EPS (Electric Power Steering)	•	•	•	•	•
C5	C5 (AIRCROSS)	ESL (Electric Steering Lock)	•	•	•	•	•
C5	C5 (AIRCROSS)	IP (Instrument Cluster Panel)	•	•	•		
	C5 (AIRCROSS)		•		•	•	•
C5 C5		MCP (Multiplexed Control Panel)	•		-	-	
C5	C5 (AIRCROSS)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
	C5 (AIRCROSS)	PAM (Parking Assistance)	•	•	•	•	•
C5	C5 (AIRCROSS)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
C5	C5 (AIRCROSS)	RLS (Rain And Light Sensor)	•	•	•	•	•
C5	C5 (AIRCROSS)	RTTC (Radio Telephone Transceiver Control)	•	•	•	•	•
C5	C5 (AIRCROSS)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
C5	C5 (AIRCROSS)	SM (Services Module)	•	•	•	•	•
C5	C5 (AIRCROSS)	SRS (Airbag)	•	•	•	•	•
C5	C5 (AIRCROSS)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C5	C5 (AIRCROSS)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C5	C5 (AIRCROSS)	TCM (Automatic Gearbox)	•	•	•	•	•
C5	C5 (AIRCROSS)	VDA (Vehicle Distance Assistance)	•	•	•	•	٠
C5	C5 (AIRCROSS)	VRD (Voltage Retaining Device)	•	•	•	•	•
C5	C5 (R) (2004 – 2007)	AC (Air Conditioning)	•	•	•	•	•
C5	C5 (R) (2004 – 2007)	ADDG03	•	•	•	•	٠
C5	C5 (R) (2004 – 2007)	Alarm	•	•	•	•	٠
C5	C5 (R) (2004 - 2007)	BSI (Built-in Systems Interface)	•	•	•	•	٠
C5	C5 (R) (2004 - 2007)	CD (CD Player)	•	•	•	•	٠
C5	C5 (R) (2004 - 2007)	DHL (Directional Headlamps)	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	ECM (Engine Control Module)	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	EPS (Electric Power Steering)	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	ERU (Engine Relay Unit)	•	•	•	•	•
C5	C5 (R) (2004 - 2007)	ESP (Electronic Stability Program)	•	•	•	•	
C5	C5 (R) (2004 - 2007) C5 (R) (2004 - 2007)	HFC (Hands Free Control Kit)	•	•	•	•	•
C5	$\begin{array}{cccccccccccccccccccccccccccccccccccc$	IP (Instrument Cluster Panel)	•	•	•	•	•
C5 C5	$\begin{array}{cccccccccccccccccccccccccccccccccccc$	MDP CONDUCT			•	•	
00	UU (11) (2004 2001)			•	•	•	-

Sivu 49/60

710101				onta	49/00		
	C5 (R) (2004 – 2007)	MDP PASSAG	•	•	•	•	•
C5	C5 (R) (2004 – 2007)	MULD (Multifunction Display SAGEM C)	•	•	•	•	•
C5	C5 (R) (2004 – 2007)	PAM (Parking Assistance)	•	•	•	•	•
C5	C5 (R) (2004 – 2007)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C5	C5 (R) (2004 – 2007)	Radio	•	•	•	•	•
C5	C5 (R) (2004 – 2007)	SRS (Siemens Central Airbag)	•	•	•	•	•
C5	C5 (R) (2004 – 2007)	SSP (Ecotech Suspension)	•	•	•	•	•
C5	C5 (R) (2004 – 2007)	SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
C5	C5 (R) (2004 – 2007)	TCM (Automatic Gearbox)	•	•	•	•	•
C5	C5 (R) (2004 – 2007)	TEU (Telematics Unit RT4)	•	•	•	•	•
C5	C5 (R) (2004 – 2007)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C5	C5 (X7) (2007 –)	ABS (Anti-lock brake System)	•	•	•	•	•
C5	C5 (X7) (2007 –)	AC (Air Conditioning)	•	•	•	•	•
C5	C5 (X7) (2007 –)	AH (Additional Heating)	•	•	•	•	•
C5	C5 (X7) (2007 –)	ALM (Anti-theft Alarm)	•	•	•	•	•
C5	C5 (X7) (2007 –)	AMP (Audio Amplifier)	•	•	•	•	•
C5	C5 (X7) (2007 –)	BATT (Battery Change Status Unit)	•	•	•	•	•
C5	C5 (X7) (2007 –)	BCM (Body Control Module)	•	•	•	•	•
C5	C5 (X7) (2007 –)	BHU (Body Height Unit)	•	•	•	•	•
C5	C5 (X7) (2007 -)	BSI (Built-in Systems Interface)	•	•	•	•	•
C5	C5 (X7) (2007 -)	CD (CD Player)	•	•	•	•	•
C5	C5 (X7) (2007 -)	DDM (Driver's Door Module)	•	•	•	•	•
C5	C5 (X7) (2007 –)	DHL (Directional Headlamps)	•	•	•	•	•
C5	C5 (X7) (2007 –)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C5	C5 (X7) (2007 –)	Display/Telematics	•	•	•	•	•
C5	C5 (X7) (2007 –)	ECM (Engine Control Module)	•	•	•	•	•
C5	C5 (X7) (2007 –)	EPB (Electric Secondary Brake)	•	•	•	•	•
C5	C5 (X7) (2007 –)	EPS (Electric Power Steering)	•	•	•	•	•
C5	C5 (X7) (2007 –)	ERU (Engine Relay Unit)	•	•	•	•	•
C5	C5 (X7) (2007 –)	HFC (Hands Free Control Kit)	•	•	•	•	•
C5	C5 (X7) (2007 –)	HFR (High Frequency Receiver)	•	•	•	•	•
C5	C5 (X7) (2007 –)	IP (Instrument Cluster Panel)	•	•	•	•	•
C5	C5 (X7) (2007 –)	LDWS (Lane Departure Warning System)	•	•	•	•	•
C5	C5 (X7) (2007 –)	MULD (Multifunction Display)	•	•	•	•	•
C5	C5 (X7) (2007 –)	PAM (Parking Assistance)	•	•	•	•	•
C5	C5 (X7) (2007 –)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C5	C5 (X7) (2007 –)	Radio	•	•	•	•	•
C5	C5 (X7) (2007 –)	SB (Seat Belts Reminder LED)	•	•	•	•	•
C5	C5 (X7) (2007 –)	SM (Services Module)	•	•	•	•	•
C5	C5 (X7) (2007 –)	SRS (Airbag)	•	•	•	•	•
C5	C5 (X7) (2007 –)	SSP (Active Damper Electronic Unit)	•	•	•	•	•
C5	C5 (X7) (2007 -)	SSP (Suspension Control System)	•	•	•	•	•
	C5 (X7) (2007 -)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C5	C5 (X7) (2007 -)	TCM (Automatic Gearbox)	•	٠	•	•	•
C5	C5 (X7) (2007 -)	TRU (Trailer Relay Unit)	•	٠	•	•	•
	C5 (X7) (2007 -)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
	C5 (X7) (2007 -)	VRD (Voltage Retaining Device)	•	•	•	•	•
	C5 (X7) (2007 -)	Wiper (Windscreen Wiper)	•	•	•	•	•
C6	C6	ABS (Anti-lock brake System)	•	•	•	•	٠
C6	C6	AC (Air Conditioning)	•	•	•	•	•
C6	C6	AC (Rear Air Conditioning Panel)	•	•	•	•	•
C6	C6	AH (Additional Heating)	•	•	•	•	•
	C6	ALM (Anti-theft Alarm)	•	•	•	•	•
C6	C6	AMP (Audio Amplifier)	•	•	•	•	•
C6	C6	BATT (Battery Change Status Unit)	•	•	•	•	•
C6	C6	BATT (Battery Charge Status Unit) BATT (Battery Charge Status Unit)	•	•	•	•	•
C6	C6	BRU (Boot Relay Unit)	•	•	•	•	•
C6	C6	BSI (Built-in Systems Interface)	•	•	•	•	•
C6	C6	CD (CD Player)	•	•	•	•	•
C6	C6	DDC (Driver's Door Control Panel)	•	•	•	•	•
C6	C6	DDM (Driver's Door Module)	•	•	•	•	•
C6	C6	DHL (Directional Headlamps)	•	•	•	•	•
-	L	1 ,	-	-	-	-	-

C6	C6	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C6	C6	Display/Telematics	•	•	•	•	•
C6	C6	ECM (Engine Control Module)	•	•	•	•	•
C6	C6	EPB (Electric Secondary Brake)	•	•	•	•	•
C6	C6	EPS (Electric Power Steering)	•	•	•	•	•
C6	C6	ERU (Engine Relay Unit)	•	•	•	•	•
C6	C6	ESL (Electric Steering Lock)	•	•	•	•	•
C6	C6	HFC (Hands Free Control Kit)	•	•	•	•	•
C6	C6	HFR (High Frequency Receiver)	•	•	•	•	•
C6	C6	HHV (High Head Vision)	•	•	•	•	•
C6	C6	HLL (Left Hand Headlamp)	•	•	•		•
C6	C6	HLR (Right Hand Headlamp)	•	•	•		•
			•	•	•	•	•
C6	C6	IP (Instrument Cluster Panel)	-	-	-		•
C6	C6	LDWS (Lane Departure Warning System)	•	•	•	•	•
C6	C6	MCP (Multiplexed Control Panel)	•	•	•	•	•
C6	C6	MPD (Moving Panel Deflector)	•	•	•	•	•
C6	C6	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
C6	C6	MULD (Multifunction Display)	•	•	•	•	•
C6	C6	PAM (Parking Assistance)	•	•	•	•	•
C6	C6	PDM (Passenger's Door Module)	•	•	•	•	●
C6	C6	PID (Pedestrian Impact Detection)	•	•	•	•	•
C6	C6	PSM (Passenger's Seat Memorisation Unit)	•	•	•	•	•
C6	C6	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
C6	C6	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C6	C6	RLS (Rain And Light Sensor)	•	•	•	•	•
C6	C6	RSM (Rear Seat Memorising Unit)	•	•	•	•	•
C6	C6	RTTC (Radio Telephone Transceiver Control)	•	•	•	•	•
C6	C6	Radio	•	•	•	•	•
C6	C6	SM (Services Module)	•	•	•		•
			•	•	•		•
C6	C6	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
C6	C6	SRS (Airbag)	•	•	•	•	•
C6	C6	SSLH (LH Seat Switch Panel)	•	•	•	•	•
C6	C6	SSP (Suspension Control System)	•	•	•	•	•
C6	C6	SSRH (RH Seat Switch Panel)	•	•	•	•	•
C6	C6	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C6	C6	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C6	C6	TCM (Automatic Gearbox)	•	•	•	•	•
C6	C6	TRU (Trailer Relay Unit)	•	•	•	•	•
C6	C6	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C6	C6	VDA (Vehicle Distance Assistance)	•	•	•	•	•
C6	C6	VRD (Voltage Retaining Device)	•	•	•	•	•
C6	C6	Wiper (Windscreen Wiper)	•	•	•	•	•
C6	C6 (CHINA)	ABS (Anti-lock brake System)	•	•	•	•	•
C6	C6 (CHINA)	AC (Air Conditioning)	•	•	•	•	•
C6	C6 (CHINA)	AMP (Audio Amplifier)	•	•	•	•	•
C6	C6 (CHINA)	BATT (Battery Charge Status Unit)	•	•	•	•	•
C6	C6 (CHINA)	BSI (Built-in Systems Interface)	•	•	•	•	•
C6	C6 (CHINA)	DDC (Driver's Door Control Panel)	•	•	•	•	•
			•	•	•		
C6	C6 (CHINA)	ECM (Engine Control Module)			-	-	•
C6	C6 (CHINA)	EPS (Electric Power Steering)	•	•	•	•	-
C6	C6 (CHINA)	ERU (Engine Relay Unit)	•	•	•	•	•
C6	C6 (CHINA)	ESL (Electric Steering Lock)	•	•	•	•	•
C6	C6 (CHINA)	IP (Instrument Cluster Panel)	•	•	•	•	•
C6	C6 (CHINA)	MCP (Multiplexed Control Panel)	•	•	•	•	•
C6	C6 (CHINA)	MULC (Multifunction Video Camera (CMF))	•	•	•	٠	•
C6	C6 (CHINA)	PAM (Parking Assistance)	•	•	•	•	•
C6	C6 (CHINA)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
C6	C6 (CHINA)	RLS (Rain And Light Sensor)	•	•	•	•	•
C6	C6 (CHINA)	RTTC (Radio Telephone Transceiver Control)	٠	•	•	•	•
C6	C6 (CHINA)	SM (Services Module)	•	•	•	•	•
C6	C6 (CHINA)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
C6	C6 (CHINA)	SRS (Airbag)	•	•	•	•	•
	•	w.					L

Sivu 51/60

A10 KA	UPPA OY www.a10kauppa.fi			Sivu	51/60		
C6	C6 (CHINA)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
C6	C6 (CHINA)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C6	C6 (CHINA)	TCM (Automatic Gearbox)	•	•	•	•	•
C6	C6 (CHINA)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
C6	C6 (CHINA)	VRD (Voltage Retaining Device)	•	•	•	•	•
C6	C6 (CHINA)	Wiper (Windscreen Wiper)	•	•	•	•	•
C8	C8 (CAN) (2005 –)	ABS (Anti-lock brake System)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	AC (Air Conditioning)	•	•	•	•	•
C8	C8 (CAN) (2005 –)	AH (Additional Heating)	•	•	•	•	•
C8	C8 (CAN) (2005 –)	ALM (Anti-theft Alarm)	•	•	•	•	•
C8	C8 (CAN) (2005 –)	BSI (Built-in Systems Interface)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	CD (CD Player)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	DAF (Diesel Additive Function)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	DDM (Driver's Door Module)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	Display/Telematics	•	•	•	•	•
C8	C8 (CAN) (2005 -)	ECM (Engine Control Module)	•	•	•		•
C8	C8 (CAN) (2005 -)	ECM (Engline Control module) EPS (Electric Power Steering)	•	•	•		•
C8 C8	C8 (CAN) (2005 -) C8 (CAN) (2005 -)		•	•	•		
C8	C8 (CAN) (2005 -) C8 (CAN) (2005 -)	ERU (Engine Relay Unit)	-	•	-	-	
C8 C8	C8 (CAN) (2005 –) C8 (CAN) (2005 –)	HFC (Hands Free Control Kit)	-	•	-		
		HLL (Left Hand Headlamp)	-		-	-	
C8	C8 (CAN) (2005 -)	HLR (Right Hand Headlamp)	•	•	•	-	
C8	C8 (CAN) (2005 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	IP (Leds And Odometer ECU)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	MULD (Colour Multifunction Display)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	MULD (Multifunction Display)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	PAM (Parking Assistance)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	PDM (Passenger's Door Module)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
C8	C8 (CAN) (2005 -)	Radio	•	•	•	•	•
C8	C8 (CAN) (2005 -)	SR-F (Front Sunroof)	•	•	•	•	•
C8	C8 (CAN) (2005 –)	SR-M (Middle Sunroof)	•	•	•	•	•
C8	C8 (CAN) (2005 –)	SR-R (Rear Sunroof)	•	•	•	•	•
C8	C8 (CAN) (2005 –)	SRS (Airbag)	•	•	•	•	•
C8	C8 (CAN) (2005 –)	SSDM (Sliding Side Doors Module)	•	•	•	•	•
C8	C8 (CAN) (2005 –)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
C8	C8 (CAN) (2005 –)	TCM (Automatic Gearbox)	•	•	•	•	•
C8	C8 (CAN) (2005 –)	TEU (Telematics Receiver Command)	•	•	•	•	•
C8	C8 (CAN) (2005 –)	TRU (Trailer Relay Unit)	•	•	•	•	•
C8	C8 (CAN) (2005 –)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
C8	C8 (VAN) (2002 - 2005)	AC (Air Conditioning)	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	ADDG02	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	AH (Additional Heating)	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	BSI (Built-in Systems Interface)	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	CD (CD Player)	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	ECM (Engine Control Module)	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	ESP (Electronic Stability Program BOSCH 5.7)	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	IP (Instrument Cluster Panel)	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	MDP CONDUCT	•	•	•	•	•
C8	C8 (VAN) (2002 - 2005)	MDP PASSAG	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	MULD (Multifunction Display SAGEM B)	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	PAM (Parking Assistance)	•	•	•	•	٠
C8	C8 (VAN) (2002 – 2005)	RPE (Radio Post-equipment)	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	SRS (Airbag 5.7)	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	SRS (Airbag)	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
C8	C8 (VAN) (2002 – 2005)	TCM (Automatic Gearbox)	•	•	•	•	٠
C8	C8 (VAN) (2002 – 2005)	TEU (Telematics Receiver Command)	•	•	•	•	٠
C8	C8 (VAN) (2002 - 2005)	TEU (Telematics Unit)	•	•	•	•	٠
FUKANG	FUKANG	ABS (Anti-lock brake System BOSCH 8.1)	•	•	•	•	•
FUKANG	FUKANG	ECM (1.4L KFX BOSCH MP5.2)	•	•	•	•	•
FUKANG	FUKANG	ECM (1.6L KFA/HFX/N6A/NFS/NFU - ME744)	•	•	•	•	•
Ļ							1

Sivu 52/60

NextNextNotNotNotNotNotNotNotNotNotALXXNOXN	710101				onta	52/00		
FLAND FLAND <th< th=""><th>FUKANG</th><th>FUKANG</th><th>ECM (1.6L NFZ BOSCH MP5.2)</th><th>•</th><th>•</th><th>•</th><th>•</th><th>•</th></th<>	FUKANG	FUKANG	ECM (1.6L NFZ BOSCH MP5.2)	•	•	•	•	•
PANM. 44W PG Generatio control 41 2000 6 6 6 6 <t< td=""><td>FUKANG</td><td>FUKANG</td><td>KEY (Electrionic Key Reader)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></t<>	FUKANG	FUKANG	KEY (Electrionic Key Reader)	•	•	•	•	•
PROM PROM <th< td=""><td>FUKANG</td><td>FUKANG</td><td>SRS (Airbag 5.3)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></th<>	FUKANG	FUKANG	SRS (Airbag 5.3)	•	•	•	•	•
PNNM PNNM <th< td=""><td>FUKANG</td><td>FUKANG</td><td>TCM (Automatic Gearbox AL4 TA2000)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></th<>	FUKANG	FUKANG	TCM (Automatic Gearbox AL4 TA2000)	•	•	•	•	•
PARKO PARKO <th< td=""><td>FUKANG</td><td>FUKANG</td><td>TCM (Automatic Gearbox AL4 TA96)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></th<>	FUKANG	FUKANG	TCM (Automatic Gearbox AL4 TA96)	•	•	•	•	•
PAACE PAACE <th< td=""><td>FUKANG</td><td>FUKANG (988)</td><td>ABS (Anti-lock brake System BOSCH 8.1)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></th<>	FUKANG	FUKANG (988)	ABS (Anti-lock brake System BOSCH 8.1)	•	•	•	•	•
PIAME PIAME <th< td=""><td>FUKANG</td><td>FUKANG (988)</td><td>ECM (1.4L KFX BOSCH MP5.2)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></th<>	FUKANG	FUKANG (988)	ECM (1.4L KFX BOSCH MP5.2)	•	•	•	•	•
PENME PENME <th< td=""><td>FUKANG</td><td>FUKANG (988)</td><td>ECM (1.6L KFA/HFX/N6A/NFS/NFU - ME744)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></th<>	FUKANG	FUKANG (988)	ECM (1.6L KFA/HFX/N6A/NFS/NFU - ME744)	•	•	•	•	•
PINON PINON <th< td=""><td>FUKANG</td><td>FUKANG (988)</td><td>ECM (1.6L NFZ BOSCH MP5.2)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></th<>	FUKANG	FUKANG (988)	ECM (1.6L NFZ BOSCH MP5.2)	•	•	•	•	•
PAND: PAND: PER Deconstric loaders 1.64 (1900) Image: Construction of the consthe construction of the construction of the consthe co	FUKANG	FUKANG (988)	KEY (Electrionic Key Reader)	•	•	•	•	•
PIXME PIXME PIXME (2) (2000 - 2011) PIX (antice for the Synthese Synthes	FUKANG	FUKANG (988)	SRS (Airbag 5.3)	•	•	•	•	•
IMPER/TELS IMPER/T	FUKANG	FUKANG (988)	TCM (Automatic Gearbox AL4 TA2000)	•	•	•	•	•
IMPEGRANC (J) EC (J) EC (d) Conditioning) Impediate Impediate IMPEGRANC (J) <	FUKANG	FUKANG (988)	TCM (Automatic Gearbox AL4 TA96)	•	•	•	•	•
INTERCONAL DESCRIPTION Bit Multi-low Stream Interface) Image and the stream interface INTERPORTAT INTERCONAL Image and the stream interface Image and the stream interface INTERPORTAT INTERCONAL Image and the stream interface Image and the stream interface INTERPORTAT INTERCONAL Image and the stream interface Image and the stream interface INTERPORTAT INTERCONAL Image and the stream interface Image and the stream interface INTERPORTAT INTERCONAL Image and the stream interface Image and the stream interface INTERPORTAT INTERCONAL Image and the stream interface Image and the stream interface INTERPORTAT INTERCONAL Image and the stream interface Image and the stream interface INTERPORTAT INTERCONAL Image and the stream interface Image and the stream interface INTERPORTAT INTERCONAL Image and the stream interface Image and the stream interface INTERPORTAT INTERCONAL Image and the stream interface Image and the stream interface INTERPORTAT INTERCONAL Image and the stream interface Image and the stream inte	JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	ABS (Anti-lock brake System)	•	•	•	•	•
INTERCONAL DESCRIPTION Bit Multi-low Stream Interface) Image and the stream interface INTERPORTAT INTERCONAL Image and the stream interface Image and the stream interface INTERPORTAT INTERCONAL Image and the stream interface Image and the stream interface INTERPORTAT INTERCONAL Image and the stream interface Image and the stream interface INTERPORTAT INTERCONAL Image and the stream interface Image and the stream interface INTERPORTAT INTERCONAL Image and the stream interface Image and the stream interface INTERPORTAT INTERCONAL Image and the stream interface Image and the stream interface INTERPORTAT INTERCONAL Image and the stream interface Image and the stream interface INTERPORTAT INTERCONAL Image and the stream interface Image and the stream interface INTERPORTAT INTERCONAL Image and the stream interface Image and the stream interface INTERPORTAT INTERCONAL Image and the stream interface Image and the stream interface INTERPORTAT INTERCONAL Image and the stream interface Image and the stream inte				•	•	•	•	•
IMPROVEMENT IMPREZENT OF CONF - 2011 ENT (Engine Guren) Modula Implementation Implementation <thimplementation< th=""> <thimplementation< th=""></thimplementation<></thimplementation<>	TUMPER/RELAY			•	•	•	•	•
IMPERZIMAN IMPERZI	- ·		BSI (Built-in Systems Interface)	•	•	•	•	•
NUMPERALM SUMPERALM (S) (2006 - 2011) PS (Instruct Four Surja) •	- ·			•	•	•	•	•
INTERCORLAT DIMPERZALAT (2) (2005 - 2011) IP (Instrument Cluster Famil) Image: Cluster Family INTERCORLAT DIMPERZALAT (2) (2005 - 2011) EMP (Surver Cluster Family System) Image: Cluster Family System)				•	•	•		•
JUNY DURY DURY (J) (2001 - 2011) DBS (June Repairing Assistance) Image (Marking Ample)	- ·	, , , , , , ,		-		-	-	-
IMPERATION IMPERATION IMPERATION Imperation Imperation IMPERATION IMPERATION IMPERATION Imperation				-		-	-	-
INFERNELAY INFERNE				•	•	•	•	•
IMPER/INDAT IMPER/INDAT GL 2006 - 2011) SN: Ornomatic Scopersion) Imperiation Impe	- ·			-	-	_	-	-
INFERNELAT INFERNELAT S006 - 2011 TEU/AVI (Tolenatics Mit(Nt) Or Audio-navigation) •				-		_		-
JUPEZ/RELAY JUPEZ/RELAY (3) (2005 - 2011) To (Tachograph) JUPEZ/RELAY JUPEZ/RELAY (3) (2005 - 2011) KS (dart-lock brake System) •				-		_		-
IMPER/RELAY INVERZ/RELAY (3) (Burn 5 / 5) (2011 -) MSS (Anti-lock Irake System) Imperiation Imperi				-		_	-	
IMPER/ELAY JUSPEZ/ELAY (3) (Euro 5 / 6) (2011 -) AC (Air Conditioning) Imperfection IMPER/ELAY IMPER/ELAY IMPER/ELAY Imperfection Imperfection IMPER/ELAY IMPER/ELAY (3) (Euro 5 / 6) (2011 -) EDM (Engline Control Model) Imperfection Imperfection IMPER/ELAY IMPER/ELAY (3) (Euro 5 / 6) (2011 -) EDM (Engline Control Model) Imperfection Imperfection IMPER/ELAY IMPER/ELAY (3) (Euro 5 / 6) (2011 -) EDM (Engline Control Model) Imperfection Imperfection IMPER/ELAY IMPER/ELAY (3) (Euro 5 / 6) (2011 -) FEX (Elastrike Poser Steering) Imperfection Imperfection IMPER/ELAY IMPER/ELAY (3) (Euro 5 / 6) (2011 -) FAX (Lartment Cluster Fanel) Imperfection Imperfection IMPER/ELAY IMPER/ELAY (3) (Euro 5 / 6) (2011 -) FAX (Lartment Cluster Fanel) Imperfection Imperfection IMPER/ELAY IMPER/ELAY (3) (Minibas) (2008 -) AE (Air Conditional) (2008 -) AE (Air Conditional) (2008 -) Imperfection IMPER/ELAY IMPER/ELAY (3) (Minibas) (2006 -) AE (Air Conditional) (2008 -) Imperfection Imperfection IMPER/ELAY IMPER/ELAY (3) (Minibas) (2006 -) EX (Bartiric Air Systen				-	-	-	-	-
INPER/RELAY INPER/RELAY INPER/RELAY INPER/RELAY INPER/RELAY INPER/RELAY INPER/RELAY INPER/RELAY INPER/RELAY INPER/RELAY Garo 5 / 6 (2011 -) BSI (Gault - in Systems Interface) INPER/RELAY INPER/RELAY Garo 5 / 6 (2011 -) BSI (Gault - in Systems Interface) INPER/RELAY INPER/RELAY Garo 5 / 6 (2011 -) IFS (Electric Four Stearing) INPER/RELAY INPER/RELAY Garo 5 / 6 (2011 -) IFS (Electric Four Stearing) INPER/RELAY INPER/RELAY Garo 5 / 6 (2011 -) IFS (Electric Four Stearing) INPER/RELAY INPER/RELAY Garo 5 / 6 (2011 -) ISS (Airbog) INPER/RELAY INPER/RELAY Garo 5 / 6 (2011 -) ISS (Airbog) INPER/RELAY INPER/RELAY Garo 5 / 6 (2011 -) ISS (Airbog) INPER/RELAY INPER/RELAY Garo 5 / 6 (2011 -) ISS (Airbog) INPER/RELAY INPER/RELAY Garo 5 / 6 (2011 -) ISS (Airbog) INPER/RELAY INPER/RELAY Garo 6 / 6 (201 -) AS (Airbog) INPER/RELAY INPER/RELAY Garo 6 / 6 (201 -) AS (Airbog) INPER/RELAY IN				-	-	-	-	-
JUMFEX/RELAY JUMFEN/RELAY (3) (Euro 5 / 6) (2011 -) ESI (Beilt-in Systems Interface) • <	-			-	•	•	-	•
JUMPEZ/RELAY JUMPES/RELAY (3) (Buro 5 / 6) (2011 -) EX (Engine Control Module) • <td>- ·</td> <td></td> <td></td> <td>•</td> <td></td> <td>-</td> <td>-</td> <td>-</td>	- ·			•		-	-	-
JIMPER/RELAY JIMPER/RELAY (3) (Euro 5 / 6) (2011 -) IPS (Electric Power Steering) IPS IPS JIMPER/RELAY JIMPER/RELAY (3) (Euro 5 / 6) (2011 -) IPS (Lone Departure Variang System) IPS IPS JIMPER/RELAY JIMPER/RELAY (3) (Euro 5 / 6) (2011 -) IPS (Lone Departure Variang System) IPS IPS IPS JIMPER/RELAY JIMPER/RELAY (3) (Euro 5 / 6) (2011 -) SIS (Airbac) IPS IPS <td></td> <td></td> <td></td> <td>•</td> <td></td> <td>-</td> <td>-</td> <td>•</td>				•		-	-	•
JMPER/RELAY JMPER/RELAY JMPER/RELAY () Guros 5 / 6) (2011 -) JMPE (Database) ()				•	•	•	•	•
JUMPER/RELAY JUMPER/RELAY (Buro 5 / 6) (2011 -) LDFS (Lane Departure Warning System) Image: Constraint of the system Image: Constraint of t				•	•	-	-	-
JUMPER/RELAY JUMPER/RELAY Geuro 5 / 6) (2011 -) PAM (Parking Assistance) Image: Constraint of the second s				-		-	-	•
JMPER/RELAY JUMPER/RELAY (3) (Euro 5 / 6) (2011 -) SRS (Airbag) ABS (Anti-Lock brake System) AC (Air Conditioning) AC (Air Conditionin				-	•	-	•	•
JUMPER/RELAY JUMPER/RELAY (3) (MiniBus) (2006 -) ABS (Anti-lock brake System) •				-	-	-	•	
DIMPER/RELAY JUMPER/RELAY (3) (MiniBas) (2006 -) AC (Air Conditioning) Image JUMPER/RELAY JUMPER/RELAY (3) (MiniBas) (2006 -) BEI (Built-in Systems Interface) Image Image <td< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></td<>								
IMPER/RELAY IUMPER/RELAY (3) (MiniBus) (2006 -) AH (Aditional Heating) Image: Constraint of the state of the st	-			-		-	-	-
JUMPER/RELAY JUMPER/RELAY (MiniBus) (2006 -) BSI (Built-in Systems Interface) •							_	_
JUMPER/RELAY JUMPER/RELAY (3) (MiniBus) (2006 -) ECM (Engine Control Module) ECM (Engine Control Module) E				-	-	-	-	-
JUMPER/RELAY JUMPER/RELAY (3) (MiniBus) (2006 -) EPS (Electric Power Steering) Imperiation (2006 -) IP (Instrument Cluster Panel) Imperiation (2006 -) IP (Instrument Cluster Panel) Imperiation (2006 -) PAM (Parking Assistance) Imperiation (2006 -) SSR (Airbag) Imperiation (2006 -) SSR (Airbag) Imperiation (2006 -) SSR (Airbag) Imperiation (2006 -) SSR (Preumatic Suspension) Imperiation (2006 -) TEU/AVI (Telematics Unit(Rtx) Or Audio-navigation) Imperiation (2006 -) TEU/AVI (Telematics Unit(Rtx) Or Audio-navigation) Imperiation (2006 -) TEU/AVI (1000 - navigation) Imperiation (2006 -) Imperistration (2006 -) Imperiation (200				-	-	-	•	-
JUMPER/RELAYJUMPER/RELAY (3) (MiniBus) (2006 -)IP (Instrument Cluster Panel)IP (Instrument Cluster Panel)JUMPER/RELAYJUMPER/RELAY (3) (MiniBus) (2006 -)PAM (Parking Assistance)IP (Instrument Cluster Panel)JUMPER/RELAYJUMPER/RELAY (3) (MiniBus) (2006 -)SRS (Airbag)IP (Instrument Cluster Panel)JUMPER/RELAYJUMPER/RELAY (3) (MiniBus) (2006 -)SRS (Pneumatic Suspension)IP (Instrument Cluster Panel)JUMPER/RELAYJUMPER/RELAY (3) (MiniBus) (2006 -)TEU/NV1 (Telematics Unit (Rtx) Or Audio-navigation)IP (Instrument Cluster Panel)JUMPER/RELAYJUMPER/RELAY (3) (MiniBus) (2006 -)TEU/NV1 (Telematics Unit (Rtx) Or Audio-navigation)IP (Instrument Cluster Panel)JUMPER/RELAYJUMPER/RELAY (3) (MiniBus) (2006 -)TEU/NV1 (Telematics Unit (Rtx) Or Audio-navigation)IP (Instrument Cluster Panel)JUMPY/DISPATCHJUMPY/DISPATCH (1) (1995 - 2004)AH (Additional Heating)IP (Instrument Cluster Panel)JUMPY/DISPATCHJUMPY/DISPATCH (1) (1995 - 2004)ECM (1.9L MJY LUCAS DCN2)IP (Instrument Cluster Panel)JUMPY/DISPATCHJUMPY/DISPATCH (1) (1995 - 2004)ECM (2.0L RHW BOSCH EDCI5C2)IP (Instrument Cluster Panel)JUMPY/DISPATCHJUMPY/DISPATCH (1) (1995 - 2004)ECM (2.0L RHW BOSCH EDCI5C2)IP (Instrument Cluster Panel)JUMPY/DISPATCHJUMPY/DISPATCH (1) (1995 - 2004)ECM (2.0L RHW BOSCH EDCI5C2)IP (Instrument Cluster Panel)JUMPY/DISPATCHJUMPY/DISPATCH (1) (1995 - 2004)ECM (2.0L RHW BOSCH EDCI5C2)IP (Instrument Cluster Panel)JUMPY/DISPATCHJUMPY/DISPATCH (1) (1995 - 2004) <td></td> <td></td> <td></td> <td>_</td> <td></td> <td>-</td> <td>-</td> <td>•</td>				_		-	-	•
JUMPER/RELAY JUMPER/RELAY (3) (MiniBus) (2006 -) PAM (Parking Assistance) Methods JUMPER/RELAY JUMPER/RELAY (3) (MiniBus) (2006 -) SSP (Pneumatic Suspension) Methods Methods				-		-	-	
JUMPER/RELAY JUMPER/RELAY (3) (MiniBus) (2006 -) SRS (Airbag) • <td>-</td> <td></td> <td></td> <td>-</td> <td></td> <td>-</td> <td>-</td> <td></td>	-			-		-	-	
JUMPER/RELAYJUMPER/RELAY (3) (MiniBus) (2006 -)SSP (Pneumatic Suspension)Image: SSP (Pneumatic Suspension)JUMPER/RELAYJUMPER/RELAY (3) (MiniBus) (2006 -)TEU/NAVI (Telematics Unit(Rtx) Or Audio-navigation)Image: SSP (Pneumatic Suspension)JUMPER/RELAYJUMPER/RELAY (3) (MiniBus) (2006 -)TG (Tachograph)Image: SSP (Pneumatic Suspension)Image: SSP (Pneumatic Suspension)JUMPER/RELAYJUMPER/RELAY (3) (MiniBus) (2006 -)TG (Tachograph)Image: SSP (Pneumatic Suspension)Image: SSP (Pneumatic Suspension)JUMPY/DISPATCHJUMPY/DISPATCH (1) (1995 - 2004)AH (Additional Heating)Image: SSP (Pneumatic Suspension)Image: SSP (Pneumatic Suspension)JUMPY/DISPATCHJUMPY/DISPATCH (1) (1995 - 2004)CPH_TEXTONImage: SSP (Pneumatic Suspension)Image: SSP (Pneumatic Suspension)JUMPY/DISPATCHJUMPY/DISPATCH (1) (1995 - 2004)ECM (1.9L WJY LUCAS DCN2)Image: SSP (Pneumatic Suspension)Image: SSP (Pneumatic Suspension)JUMPY/DISPATCHJUMPY/DISPATCH (1) (1995 - 2004)ECM (2.0L RHW BOSCH EDC15C2)Image: SSP (Pneumatic Suspension)Image: SSP (Pneumatic Suspension)JUMPY/DISPATCHJUMPY/DISPATCH (1) (1995 - 2004)ECM (2.0L RHZ BOSCH EDC15C2)Image: SSP (Pneumatic Suspension)Image: SSP (Pneumatic Suspension)JUMPY/DISPATCHJUMPY/DISPATCH (1) (1995 - 2004)SRS (Airbag)Image: SSP (Airbag)Image: SSP (Airbag)JUMPY/DISPATCHJUMPY/DISPATCH (1) (1995 - 2004)SRS (Airbag)Image: SSP (Airbag)Image: SSP (Airbag)JUMPY/DISPATCHJUMPY/DISPATCH (1) (1995 - 2004)SRS (Airbag)Image:	-			-		-	-	-
JUMPER/RELAY JUMPER/RELAY (3) (MiniBus) (2006 -) TEU/NAVI (Telematics Unit(Rtx) Or Audio-navigation) Image: Constraint of the state of the sta				-		-	-	-
JUMPER/RELAY JUMPEK/RELAY (3) (MiniBus) (2006 -) TG (Tachograph) •				-		-	-	-
JUMPY/DISPATCHJUMPY/DISPATCH (1) (1995 - 2004)AH (Additional Heating)Image: Constraint of the c				-		_	-	-
JUMPY/DISPATCH JUMPY/DISPATCH (1) (1995 - 2004) CPH_TEXTON •							-	-
JUMPY/DISPATCH JUMPY/DISPATCH (1) (1995 - 2004) ECM (1. 9L DHX BOSCH AS3-VP20) • <td></td> <td></td> <td></td> <td>-</td> <td></td> <td></td> <td>-</td> <td></td>				-			-	
JUMPY/DISPATCHJUMPY/DISPATCH (1) (1995 - 2004)ECM (1. 9L WJY LUCAS DCN2)Image: Constraint of the transformed of transformed of the transformed of transformed of transformed of the transformed of tr			-	-			-	
JUMPY/DISPATCHJUMPY/DISPATCH (1) (1995 - 2004)ECM (2. 0L RHW BOSCH EDC15C2)Image: Comparison of the comparison of				-		_	-	-
JUMPY/DISPATCHJUMPY/DISPATCH (1) (1995 - 2004)ECM (2. 0L RHX BOSCH EDC15C2)Image: Comparison of the comparison of				-	-	-	-	
JUMPY/DISPATCHJUMPY/DISPATCH (1) (1995 - 2004)ECM (2. OL RHZ BOSCH EDC15C2)••• <t< td=""><td></td><td></td><td></td><td>-</td><td></td><td>-</td><td>-</td><td>-</td></t<>				-		-	-	-
JUMPY/DISPATCHJUMPY/DISPATCH (1) (1995 - 2004)SRS (Airbag 5.3)•••				-		-	-	-
JUMPY/DISPATCHJUMPY/DISPATCH (1) (1995 - 2004)SRS (Airbag)••• <td></td> <td></td> <td></td> <td>_</td> <td></td> <td>-</td> <td></td> <td>-</td>				_		-		-
JUMPY/DISPATCHJUMPY/DISPATCH (1) (1995 - 2004)TCM (Automatic Gearbox AL4)•••				-		-	-	-
JUMPY/DISPATCHJUMPY/DISPATCH (2) (2004 - 2007)AH (Additional Heating)Image: Constraint of the state of th						-	-	-
JUMPY/DISPATCHJUMPY/DISPATCH (2) (2004 - 2007)CPH_TEXTON••••••••JUMPY/DISPATCHJUMPY/DISPATCH (2) (2004 - 2007)ECM (1.9L WJY LUCAS DCN2)••••••••				-		-	-	-
JUMPY/DISPATCH (2) (2004 - 2007) ECM (1.9L WJY LUCAS DCN2) • • • • •				-		_	-	-
			-	-			-	-
$JUMPY/DISPATCH (2) (2004 - 2007) = ECM (2. OL RFN MM48P) = \mathbf{O} \mathbf{O} \mathbf{O}$				-		_		-
	JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	ECM (Z. OL REN MM48P)		●	●	•	

Sivu 53/60

-							
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	ECM (2. OL RHW BOSCH EDC15C2)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	ECM (2. OL RHX BOSCH EDC15C2)	•	٠	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	ECM (2. OL RHZ BOSCH EDC15C2)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	SRS (Airbag 5.3)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	SRS (Airbag)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (2) (2004 - 2007)	TCM (Automatic Gearbox AL4)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	ABS (Anti-lock brake System)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	AC (Air Conditioning)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	AC (Rear Air Conditioning Panel)	•	•	•		•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	AH (Additional Heating)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	ALM (Anti-theft Alarm)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	ASM (Anti-slip Mode Selector)	•	•	•		•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	BATT (Battery Change Status Unit)	•	•	•	•	•
			•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	BSI (Built-in Systems Interface)	•	•	-	-	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	BWCU (Bodywork Conversion Unit)	-	-	•	•	
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	CD (CD Player)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	Display/Telematics	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	ECM (Engine Control Module)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	EPS (Electric Power Steering)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	ERU (Engine Relay Unit)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	HFC (Hands Free Control Kit)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	HFR (High Frequency Receiver)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	IP (Instrument Cluster Panel)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	MULD (Multifunction Display)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	PAM (Parking Assistance)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	Radio	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	SRS (Airbag)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	SSP (Pneumatic Suspension)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	TCM (Automatic Gearbox)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	TRU (Trailer Relay Unit)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	UID (Under Inflation Detection(Dsg))	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 –)	ABS (Anti-lock brake System)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 –)	AC (Air Conditioning)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 –)	AH (Additional Heating)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	ALM (Anti-theft Alarm)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 –)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	BATT (Battery Change Status Unit)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	BSI (Built-in Systems Interface)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (K0) (2016 -)	ECM (Engine Control Module)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (K0) (2016 -)	ECW (Engine Control Woddle) ERU (Engine Relay Unit)	•	•	•		
			•	•	•	-	
JUMPY/DISPATCH		ESL (Electric Steering Lock) HHV (High Head Vision)	•	•	•	-	
JUMPY/DISPATCH			•	•	•	-	
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	IP (Instrument Cluster Panel)	_		•	•	
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	MCP (Multiplexed Control Panel)	•	•	•	•	
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	MULD (Multifunction Display)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	PAM (Parking Assistance)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	RLS (Rain And Light Sensor)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (K0) (2016 -)	RTTC (Radio Telephone Transceiver Control)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	SM (Services Module)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	SRS (Airbag)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	SWSM(Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	●	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	Siren	•	•	•	●	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	TCM (Automatic Gearbox)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	TRU (Trailer Relay Unit)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
JUMPY/DISPATCH	JUMPY/DISPATCH (KO) (2016 -)	VRD (Voltage Retaining Device)	•	•	•	•	•
•	·	·	-				

-				-			1
NEMO		ABS (Anti-lock brake System)	•	•	•	•	•
NEMO		BSI (Built-in Systems Interface)	•	•	•	•	•
NEMO		ECM (Engine Control Module)	•	•	•	•	•
NEMO		IP (Instrument Cluster Panel)	•	•	•	•	•
NEMO		PAM (Parking Assistance)	•	•	•	•	•
NEMO		SRS (Airbag)	•	•	•	•	•
NEMO		TCM (Automatic Gearbox)	•	•	•	•	•
SAXO		ABS (Anti-lock brake System BOSCH 5.3)	•	•	•		•
SAXO			•	•	•		•
SAXO		ABS (Anti-lock brake System BOSCH 8.1)	•	•	•	•	•
-		ECM (1. OL CDY/CDZ BOSCH MA3. 1)	_	-	-	-	-
SAXO		ECM (1.4L KFW SAGEM S2000)	•	•	•	•	•
SAXO		ECM (1.4L KFX BOSCH MP7.3)	•	•	•	•	•
SAXO		ECM (1.4L KFX MM1AP)	•	•	•	•	•
SAXO		ECM (1.6L NFX MM1AP)	•	•	•	•	•
SAXO		ECM (1.6L NFX MM48P)	•	•	•	•	•
SAXO		ECM (1.6L NFZ BOSCH MP5.1)	•	•	•	•	•
SAXO		ECM (1.6L NFZ BOSCH MP5.2)	•	•	•	•	•
SAXO		ECM (1.6L NFZ BOSCH MP7.2)	•	•	•	•	•
SAXO		ECM (HFX/NFT/NFV - M744)	•	•	•	•	•
SAXO	1	KEY (Electrionic Key Reader)	•	•	•	•	•
SAXO		SRS (Central Airbag)	•	•	•		•
SAXO			•	•	•		•
		TCM (Automatic Gearbox)	_	-	-	-	-
SPACETOURER		ABS (Anti-lock brake System)	•	•	•	•	•
SPACETOURER		AC (Air Conditioning)	•	•	•	•	•
SPACETOURER		AH (Additional Heating)	•	•	•	•	•
SPACETOURER		ALM (Anti-theft Alarm)	•	•	•	•	•
SPACETOURER		ASM (Anti-slip Mode Selector)	•	•	•	•	•
SPACETOURER		BATT (Battery Change Status Unit)	•	•	•	•	•
SPACETOURER		BSI (Built-in Systems Interface)	•	•	•	•	•
SPACETOURER		ECM (Engine Control Module)	•	•	•	•	•
SPACETOURER		ERU (Engine Relay Unit)	•	•	•	•	•
SPACETOURER		ESL (Electric Steering Lock)	•	•	•	•	•
SPACETOURER		HHV (High Head Vision)	•	•	•	•	•
SPACETOURER		IP (Instrument Cluster Panel)	•	•	•		•
				-	-	-	•
SPACETOURER		MCP (Multiplexed Control Panel)	•	•	•	•	•
SPACETOURER		MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
SPACETOURER		MULD (Multifunction Display)	•	•	•	•	•
SPACETOURER		PAM (Parking Assistance)	•	•	•	•	•
SPACETOURER		RLS (Rain And Light Sensor)	•	•	•	•	•
SPACETOURER		RTTC (Radio Telephone Transceiver Control)	•	•	•	•	•
SPACETOURER		SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
SPACETOURER		SM (Services Module)	•	•	•	•	•
SPACETOURER		SPMU (Supply Protection And Management Unit)	•	•	•	•	•
SPACETOURER	1	SRS (Airbag)	•	•	•	•	•
SPACETOURER		SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
SPACETOURER			•	•	•	•	•
		SWSM(Switch Module Under The Steering Wheel(Top Of Column))		-		•	•
SPACETOURER			•	•	•	-	-
SPACETOURER		TCM (Automatic Gearbox)	•	•	•	•	•
SPACETOURER		TRU (Trailer Relay Unit)	•	•	•	•	•
SPACETOURER		VDA (Vehicle Distance Assistance)	•	•	•	•	•
SPACETOURER		VRD (Voltage Retaining Device)	•	•	•	•	•
SYNERGIE		ECM (1.9L DHX BOSCH AS3-VP20)	•	•	•	•	•
SYNERGIE		ECM (2.0L RFN MM48P)	•	•	•	•	٠
SYNERGIE		ECM (2. OL RFV BOSCH MP7.3)	•	•	•	•	•
SYNERGIE		ECM (2. OL RGX BOSCH MP3.2)	•	•	•	•	•
SYNERGIE		ECM (2.0L RHW BOSCH EDC15C2)	•	•	•	•	•
SYNERGIE		ECM (2. OL RHZ BOSCH EDC15C2)	•	•	•	•	•
SYNERGIE		SRS (Airbag 5.3)	•	•	•	•	•
				•	•		•
SYNERGIE		SRS (SAC CENT AUTOLIV)	•	-	-	-	-
SYNERGIE		TCM (Automatic Gearbox AL4)	•	•	•	•	•
XANTIA	XANTIA (1)	ECM (1.8L LFX MM1AP)	•	•	•	•	•
XANTIA	XANTIA (1)	ECM (1.8L LFY BOSCH MP5.1.1)	•	•	•	•	•

Sivu 55/60

,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,				Olvu	00/00		
XANTIA	XANTIA (1)	ECM (1.8L LFY SAGEM SL96)	•	•	•	•	•
XANTIA	XANTIA (1)	ECM (1.9L DHX BOSCH AS3-VP20)	•	•	•	•	•
XANTIA	XANTIA (1)	ECM (2. OL R6E BOSCH MP5.2)	•	•	•	•	•
XANTIA	XANTIA (1)	ECM (2. OL RFT BOSCH MP3.2)	•	•	•	٠	•
XANTIA	XANTIA (1)	ECM (2. OL RFV BOSCH MP5. 1. 1)	•	•	•	•	•
XANTIA	XANTIA (1)	ECM (2. OL RFV BOSCH MP5.2)	•	•	•	•	•
XANTIA	XANTIA (1)	ECM (2. OL RFY BOSCH MP3.2)	•	•	•	•	
XANTIA	XANTIA (1)	ECM (2. OL RGX BOSCH MP3. 2)	•	•	•	•	•
XANTIA	XANTIA (1)	ECM (2.1L P8C LUCAS EPIC)	•	•	•	•	•
XANTIA	XANTIA (1)	ECM (3. OL XFZ BOSCH MP7. 0)	•	•	•	•	•
XANTIA	XANTIA (2)	CPH_TEXTON	•	•	•	•	•
XANTIA	XANTIA (2)	ECM (1.6L BFZ MM4.8P)	•	•	•	•	•
XANTIA	XANTIA (2)	ECM (1.8L LFX MM1AP)	•	•	•	•	•
XANTIA	XANTIA (2)	ECM (1.8L LFY BOSCH MP7.3)	•	•	•	•	•
XANTIA	XANTIA (2)	ECM (1.8L LFY SAGEM SL96)	•	•	•	•	•
XANTIA	XANTIA (2)	ECM (1.9L DHX BOSCH AS3-VP20)	•	•	•	•	•
XANTIA	XANTIA (2)	ECM (2. OL R6E BOSCH MP5.2)	•	•	•	•	•
XANTIA	XANTIA (2)	ECM (2. OL RFV BOSCH MP5.2)	•	•	•	٠	•
XANTIA	XANTIA (2)	ECM (2. OL RGX BOSCH MP3. 2)	•	•	•	•	•
XANTIA	XANTIA (2)	ECM (2. OL RHY BOSCH EDC15C2)	•	•	•	•	•
XANTIA	XANTIA (2)	ECM (2. OL RHZ BOSCH EDC15C2)	•	•	•	•	•
XANTIA	XANTIA (2)	ECM (2.1L P8C LUCAS EPIC)	•	•	•	•	•
XANTIA	XANTIA (2)	ECM (3. OL XFZ BOSCH MP7. 0)	•	•	•	•	•
XANTIA	XANTIA (2)	SRS (Airbag)	•	•	•	•	•
XANTIA	XANTIA (2)	SRS (Left Airbag)	•	•	•	•	•
XANTIA	XANTIA (2)	SRS (Right Airbag)	•	•	•	•	•
XANTIA	XANTIA (2)	SRS (TEVES_MK20E)	•	٠	•	•	•
XM	ХМ	ABS (Anti-lock brake System TEVES MK20E)	•	•	•	•	•
XM	ХМ	ECM (2. OL R6E BOSCH MP5.2)	•	•	•	•	•
XM	XM	ECM (2. OL RFV BOSCH MP5.1.1)	•	•	•	•	•
XM	XM	ECM (2. OL RFV BOSCH MP5.2)	•	•	•	•	•
XM	ХМ	ECM (2.0L RFZ BOSCH MP5.1)	•	•	•	•	•
XM	ХМ	ECM (2. OL RGX BOSCH MP3.2)	•	•	•	•	•
XM	ХМ	ECM (2. OL RGY BOSCH MP3.2)	•	•	•	•	•
XM	ХМ	ECM (2.5L THY BOSCH MSA11 7.6 VP36)	•	•	•	•	•
XM	ХМ	ECM (2.5L THY BOSCH MSA11 VP36)	•	•	•	•	•
XM	ХМ	ECM (3.0L XFZ BOSCH MP7.0)	•	•	•	•	•
XM	XM (Mux)	ABS (Anti-lock brake System TEVES MK20E)	•	•	•	•	•
XM	XM (Mux)	ECM (2.5L THY BOSCH MSA11 7.6 VP36)	•	•	•	•	•
XSARA	XSARA (1) (1997 - 2000)	ABS (ABS Electronic Distribution)	•	•	•	•	•
XSARA	XSARA (1) (1997 - 2000)	ABS (ABS Mechanical Distribution)	•	•	•	•	•
XSARA	XSARA (1) (1997 – 2000)	AC (Air Conditioning)	•	•	•	•	•
XSARA	XSARA (1) (1997 - 2000)	Alarm	•	•	•	•	•
XSARA	XSARA (1) (1997 - 2000)	BSI (Built-in Systems Interface)	•	•	•	•	
XSARA	XSARA (1) (1997 - 2000)	CD (CD Player)	•	•	•	•	•
XSARA	XSARA (1) (1997 - 2000)	ECM (1.4L KFX BOSCH MP7.3)	•	•	•	•	•
XSARA	XSARA (1) (1997 - 2000)	ECM (1.4L KFX SAGEM SL96)	•	•	•	•	•
XSARA	XSARA (1) (1997 - 2000)	ECM (1.6L KFA/HFX/N6A/NFS/NFU - ME744)	•	•	•	•	•
XSARA	XSARA (1) (1997 - 2000)	ECM (1.6L NFZ BOSCH MP5.2)	•	•	•	•	•
XSARA	XSARA (1) (1997 - 2000)	ECM (1.6L NFZ BOSCH MP7.2)	•	•	•	•	•
XSARA	XSARA (1) (1997 - 2000)	ECM (1.8L LFX MM1AP)	•	•	•	•	•
XSARA	XSARA (1) (1997 - 2000)	ECM (1.8L LFY SAGEM SL96)	•	•	•	•	•
XSARA	XSARA (1) (1997 - 2000)	ECM (1.9L DHV BOSCH AS3-VP20)	•	•	•	•	•
XSARA	XSARA (1) (1997 - 2000)	ECM (1. 01 DH DOOTH NO (120) ECM (2. 0L RFS MMIAP)	•	•	•	•	•
XSARA	XSARA (1) (1997 - 2000)	ECM (2. OL RFV BOSCH MP5. 2)	•	•	•	•	•
XSARA	XSARA (1) (1997 - 2000)	ECM (2. 0L RHY BOSCH EDC15C2)	•	•	•	•	•
XSARA	XSARA (1) (1997 - 2000)	IP (Instrument Cluster Panel)	•	•	•	•	
XSARA	XSARA (1) (1997 - 2000)	MULD (Multifunction Display SAGEM B)	•	•	•	•	•
XSARA	XSARA (1) (1997 - 2000)	Radio	•	•	•	•	•
XSARA	XSARA (1) (1997 - 2000) XSARA (1) (1997 - 2000)	SRS (Airbag)	•	•	•		•
		she hiribug/	-	-	-	-	↓
	XSARA (1) (1997 - 2000)	TCM (Automatic Gearbox AL4 TA96)	•	•	•	•	•
XSARA XSARA XSARA	XSARA (1) (1997 – 2000) XSARA (2) (2000 – 2006)	TCM (Automatic Gearbox AL4 TA96) ABS (Anti-lock brake System BOSCH 5.3)	•	•	•	•	•

Sivu 56/60

XSARA	XSARA (2) (2000 – 2006)	AC (Air Conditioning)	•	•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	BSI (BSI_VAR_C)	•	•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	CD (CD Player)	•	•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	ECM (Engine Control Module)	•	•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	ESP (Electronic Stability Program BOSCH 5.7)	•	•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	IP (Instrument Cluster Panel)	•	•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	MULD (Multifunction Display A)	•	•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	PAM (Parking Assistance)	•	•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	Radio	•	•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	SRS (Central Airbag)	•	•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
XSARA	XSARA (2) (2000 – 2006)	TCM (Automatic Gearbox)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 – 2002)	ABS (Anti-lock brake System BOSCH 5.3)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	ABS (Anti-lock brake System)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	AC (Air Conditioning)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	ADDG02	•	•	٠	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	Alarm	•	•	٠	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	BSI (Built-in Systems Interface)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	CD (CD Player)	٠	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	ECM (Engine Control Module)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	IP (Instrument Cluster Panel)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	MULD (Multifunction Display VDO B)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	PAM (Parking Assistance)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	Radio	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	SRS (Central Airbag)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
XSARA	XSARA (PICASSO) (1999 - 2002)	TCM (Automatic Gearbox)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	ABS (Anti-lock brake System BOSCH 5.3)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006) XSARA (PICASSO) (2002 - 2006)	ABS (Anti-lock brake System)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	AC (Air Conditioning)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006) XSARA (PICASSO) (2002 - 2006)	ADDG02	-	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006) XSARA (PICASSO) (2002 - 2006)	Alarm	-		•	•	
XSARA	XSARA (PICASSO) (2002 - 2006) XSARA (PICASSO) (2002 - 2006)	BSI (Built-in Systems Interface)	•	•	•	•	•
			-	-	•	•	-
XSARA	XSARA (PICASSO) (2002 – 2006) XSARA (PICASSO) (2002 – 2006)	CD (CD Player)	•	•	•	•	•
XSARA		ECM (Engine Control Module)	•		•	•	•
XSARA		IP (Instrument Cluster Panel)	_	•			
XSARA	XSARA (PICASSO) (2002 - 2006)	MULD (Multifunction Display VDO B)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	PAM (Parking Assistance)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	Radio	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	SRS (Central Airbag)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
XSARA	XSARA (PICASSO) (2002 - 2006)	TCM (Automatic Gearbox)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	ABS (Anti-lock brake System)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	AC (Air Conditioning)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	ADDG02	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	CD (CD Player)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	ECM (Engine Control Module)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	IP (Instrument Cluster Panel)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	MULD (Multifunction Display SAGEM B)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	PAM (Parking Assistance)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	Radio	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	SRS (Airbag 5.3)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	SRS (Airbag)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
XSARA	XSARA (PICASSO) (CHINA)	TCM (Automatic Gearbox AL4)	•	•	•	•	•
ZX	ZX (16)	ABS (Anti-lock brake System)	•	•	•	•	•
ZX	ZX (16)	ECM (1.4L KFX BOSCH MP5.2)	•	•	•	•	•
ZX	ZX (16)	ECM (1.4L KFX MM1AP)	•	•	•	•	•

Sivu 57/60

ZX	ZX (16)	ECM (1.6L N6A BOSCH ME7.4.4)	•	•	•	•	•
ZX	ZX (16)	ECM (1.6L NFV BOSCH M7.4.4)	•	•	•	•	•
ZX	ZX (16)	ECM (1.6L NFZ BOSCH MP5.2)	•	•	•	•	•
ZX	ZX (16)	ECM (2. OL RFS MM1AP)	•	•	•	•	•
ZX	ZX (16)	TCM (AL4 TA2000 AT)	•	•	•	•	•
ZX	ZX (16)	TCM (AL4 TA96 AT)	•	•	•	•	•
ZX	ZX (2)	ECM (1.4L KFX BOSCH MP5.2)	•	•	•	•	•
ZX	ZX (2)	ECM (1.4L KFX MM1AP)	•	•	•	•	•
ZX	ZX (2)	ECM (1.6L N6A BOSCH ME7.4.4)	•	•	•	•	•
ZX	ZX (2)	ECM (1.6L NFV BOSCH M7.4.4)	•	•	•	•	•
ZX	ZX (2)	ECM (1.6L NFZ BOSCH MP5.2)	•	•	•	•	•
ZX	ZX (2)	ECM (2. OL RFS MM1AP)	•	•	•	٠	•

	CITROEN INJ Function List (Note:For reference only)				
NOTES:					
 This function is supp 	oorted				
	e supported, which depends on the actual condition of the veh	nicle.			
• This function is not s					
▲ This function is the r	new feature in this version.				
Model	Model Type	INJ			
BERLINGO	BERLINGO (2) (M69)	•			
BERLINGO	BERLINGO (B9)	•			
C-ELYSEE	C-ELYSEE	•			
C-QUATRE	C-QUATRE (4)	•			
C-QUATRE	C-QUATRE (5)	•			
C3	C3 (A51)	•			
C3	C3 (Ai51)	•			
C3	C3 (AIRCROSS) (A88)	•			
C3	C3 (AIRCROSS) (Ai58)	•			
C3	C3 (B618)				
C3	C3 (PICASSO) (A58)				
C3	C3 (PICASSO) (Ai58)	•			
C3	C3 (XR)	•			
C4	C4 (2004 - 2010)	•			
C4	C4 (B7) (2010 -)	•			
C4	C4 (BZ3) (CHINA)	•			
C4	C4 (CACTUS)	•			
C4	C4 (L) (B7)	•			
C4	C4 (PICASSO) (2006 - 2013)	•			
C4	C4 (PICASSO) (B78) (2013 -)	•			
C4	C4 (SEDAN) (2006 -)	•			
C5	C5 (3rd Generation)	•			
C5	C5 (AIRCROSS)	•			
C5	C5 (X7) (2007 -)	•			
C6		•			
C6		•			
	C8 (CAN) (2005 -)	•			
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	•			
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	•			
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	•			
JUMPY/DISPATCH JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	•			
	JUMPY/DISPATCH (K0) (2016 -)				
SPACETOURER					
	CITRONE INJ Function List (Note:For reference only)				
Classification Of Ir	niector				
	e Characterisation Of Diesel Injector				
Diesel Injectors Pro					
Initialisation Of Di					
Injector Replacement	*				
Injectors					
	lowing Replacement Of The Urea Injector				
Replacement Of Injec					
Replacement of One Or More Petrol Injectors					
Replacement Of One (
	Cyliner Head Or Programming Of The Injectors				
1 01 1110 0	,				

	CITROEN OIL Function List (Note:For reference only)	
NOTES:		
 This function is supported. 	ported	
	e supported, which depends on the actual condition of the vel	hicle
○ This function is not		
	new feature in this version.	
Model	Model Type	OIL
BERLINGO	BERLINGO (2) (2002 - 2008)	•
BERLINGO	BERLINGO (2) (M69)	•
BERLINGO	BERLINGO (B9)	•
BERLINGO	BERLINGO Electric (B9E)	
C-CROSSER		•
C-ELYSEE	C-ELYSEE	•
C3	C3 (A51)	•
C3	C3 (Ai51)	•
C3	C3 (AIRCROSS) (A88)	•
C3	C3 (AIRCROSS) (Ai58)	•
C3	C3 (B618)	
C3	C3 (PICASSO) (A58)	•
C3	C3 (PICASSO) (Ai58)	
C3	C3 (XR)	
C4	C4 (2004 - 2010)	•
C4	C4 (AIRCROSS)	•
C4	C4 (B7) (2010 -)	•
C4	C4 (BZ3) (CHINA)	•
C4	C4 (CACTUS)	•
C4	C4 (L) (B7)	•
C4	C4 (PICASSO) (2006 - 2013)	•
C4	C4 (PICASSO) (B78) (2013 -)	•
C4	C4 (SEDAN) (2006 -)	•
C5	C5 (3rd Generation)	•
C5	C5 (AIRCROSS)	•
C5	C5 (X7) (2007 -)	•
C6	C6	•
C6	C6 (CHINA)	•
C8	C8 (CAN) (2005 -)	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	•
JUMPER/RELAY	JUMPER/RELAY (3) (Euro 5 / 6) (2011 -)	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	•
JUMPY/DISPATCH	JUMPY/DISPATCH (K0) (2016 -)	•
NEMO		
SPACETOURER		•
	CITROENI OIL Eurotion List (Noto:Ear reference and a)	
	CITROEN OIL Function List (Note:For reference only)	
Choice Of Maintenand	ce Schedule	
Configuration Of A M	New Maintenance Plan	
Maintenance Indicate		
Maintenance Indicate	pr Reset	
Maintenance Limit		
Maintenance Mileage	Zero Reset + Maintenance Number	
Maintenance Number 2		
Maintenance Number 2	Zero Reset Carried Out	
0il Parameter Reini		
Replacement Of The I		
Reset Service		
Zeroing Of The Serva	ice Indicator	

	CITROEN SAS Function List (Note:For reference on	ly)
NOTES:		
 This function is sup 	norted	
	be supported, which depends on the actual condition of the	vehicle
○ This function is not		veniele.
	new feature in this version.	
Model	Model Type	SAS
BERLINGO	BERLINGO (2) (2002 - 2008)	
BERLINGO	BERLINGO (B9)	•
BERLINGO	BERLINGO Electric (B9E)	
C-CROSSER		
C-ELYSEE	C-ELYSEE	
C-TRIOMPHE	C-ELIJEE	
C-ZERO		
C1	C1 (B4)	
C2	C2 (CAN) (2006 -)	•
C3	C3 (A51)	•
C3	C3 (Ai51)	•
C3	C3 (AIRCROSS) (A88)	•
C3	C3 (AIRCROSS) (Ai58)	•
C3	C3 (B618)	•
C3	C3 (PICASSO) (A58)	•
C3	C3 (PICASSO) (Ai58)	
C3	C3 (PLURIEL) (2002 - 2009)	•
C3 C3	C3 (R) (2006 - 2009)	
C3	C3 (XR)	•
C4	C4 (2004 - 2010)	•
C4	C4 (AIRCROSS)	•
C4	C4 (B7) (2010 -)	•
C4	C4 (BZ3) (CHINA)	•
C4	C4 (L) (B7)	•
C4 C4	C4 (PICASSO) (2006 - 2013)	
C4 C4	C4 (PICASSO) (2000 - 2013)	
C4 C4	C4 (SEDAN) (2006 -)	
C4 C5		
	C5 (3rd Generation)	
C5	C5 (AIRCROSS)	
C5	C5 (X7) (2007 -)	•
C6	C6	•
C6	C6 (CHINA)	•
C8	C8 (CAN) (2005 -)	•
JUMPER/RELAY	JUMPER/RELAY (3) (2006 - 2011)	•
JUMPER/RELAY	JUMPER/RELAY (3) (MiniBus) (2006 -)	•
JUMPY/DISPATCH	JUMPY/DISPATCH (3) (2007 - 2016)	•
JUMPY/DISPATCH	JUMPY/DISPATCH (K0) (2016 -)	•
NEMO		
SPACETOURER		•
XSARA	XSARA (PICASSO) (1999 - 2002)	
XSARA	XSARA (PICASSO) (2002 - 2006)	
XSARA	XSARA (PICASSO) (CHINA)	
	CITROEN SAS Function List (Note:For reference on	ly)
Calibration Of The	Steering Wheel Angle Sensor	
Calibration Of The		
	ration Of The Steering Wheel Angle Sensor	
	pration Sensor Calibration	
	e Sensor Programming	
	0	