	PEUGEOT BLD Function List (Note:For reference o	nlv)
NOTES:		
• This function is s		a sea blada
	y be supported, which depends on the actual condition of th	e venicie.
 This function is r 		
	he new feature in this version.	
Model	Model Type	BLD
1007	1007 (CAN)	•
1007	1007 (VAN)	•
2008		•
206	206 (+)	•
206	206 (Mux)	•
207	207 (+)	•
207	207 (CAN)	•
207	207 (i)	
207	207 (VAN)	•
208	208	•
3008	3008	
3008	3008 (CHINA)	•
3008	3008 (Hybrid4)	•
3008	3008 (P84)	•
301		•
307	307 (CAN) (2006.01 -)	•
307	307 (VAN) (- 2005.12)	•
308	308 (2010.01 - 2014.09)	•
308	308 (4 Doors)	•
308	308 (S)	•
308	308 (T9) (2014.10 -)	
308	308 (TX9)	•
4008	4008 (CHINA)	•
407		•
408	408 (2010.01 - 2014.09)	•
408	408 (T93) (2014.10 -)	•
5008	5008	•
5008	5008 (P84)	•
508	508	•
508	508 (Hybrid4)	•
508	508 (RXH Hybrid4)	•
508	508 (RXH)	•
607	607 (CAN)	•
807	807 (CAN) (2005 -)	•
BOXER	BOXER (3)	
BOXER	BOXER (3) (MiniBus)	
EXPERT	EXPERT (2)	
EXPERT	EXPERT (3)	
EXPERT	EXPERT (S)	
HOGGAR		
PARTNER	PARTNER (2)	
PARTNER	PARINER (2) PARTNER (2) (M69)	
PARTNER	PARTNER (2) (M09) PARTNER (B9)	
PARTNER	PARTNER Electric (B9E)	U
RCZ		_
TRAVELLER		♥
	PEUGEOT BLD Function List (Note:For reference o	nly)
Bleeding		
Bleeding Of The Hy	/draulic Block	

Bleeding Of The Hydraulic Block ASR8.0

Bleeding Of The Hydraulic Block ESP MK100

Bleeding Of The Hydraulic Circuit

NOTES:		
 This function is s 	unnorted	
	y be supported, which depends on the actual condition of th	o vohiclo
\supset This function is n		le verlicie.
	he new feature in this version.	
		DNAC
<u>Model</u> 2008	Model Type	BMS
207	207 (+)	
207	207 (CAN)	
208	208	
8008	3008	
3008		
	3008 (CHINA)	
8008	3008 (Hybrid4)	•
8008	3008 (P84)	
801		•
808	308 (2010.01 - 2014.09)	•
808	308 (4 Doors)	•
808	308 (S)	•
308	308 (T9) (2014.10 -)	•
308	308 (TX9)	
1008	4008 (CHINA)	
07		•
108	408 (2010.01 - 2014.09)	
108	408 (T93) (2014.10 -)	•
5008	5008	•
5008	5008 (P84)	•
508	508	•
508	508 (Hybrid4)	•
508	508 (RXH Hybrid4)	•
508	508 (RXH)	
XPERT	EXPERT (3)	
XPERT	EXPERT (KO)	
PARTNER	PARTNER (B9)	
PARTNER	PARTNER Electric (B9E)	
RCZ		
RAVELLER		
		~
	PEUGEOT BMS Function List (Note:For reference of	only)
anual Configurat	ion	

	PI	EUGEOT Diagnostic Function List (Note:For ref	erence	on1v)			
NOTES:		о С		57			
	······						
	function is supported.	ted which depends on the actual condition of the uphials					
		ted, which depends on the actual condition of the vehicle.					
	function is not suppor						
	function is the new fe	ature in this version.		Read	Erase		
Model	Model Type	System Name	EcuInfo.	Codes	Codes	LiveData	Act
1007	1007 (CAN)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
1007	1007 (CAN)	AC (Air Conditioning)	•	•	•	•	•
1007	1007 (CAN)	Alarm	•	•	•	•	•
1007	1007 (CAN)	BSI (Built-in Systems Interface)	•	•	•	•	٠
1007	1007 (CAN)	CD (CD Player)	•	•	•	•	٠
1007	1007 (CAN)	ECM (Engine Control Module)	•	•	•	•	٠
1007	1007 (CAN)	EPS (Electric Power Steering)	•	•	•	•	٠
1007	1007 (CAN)	HFC (Hands Free Control Kit)	•	•	•	•	٠
1007	1007 (CAN)	IP (Instrument Cluster Panel)	•	•	•	•	•
1007	1007 (CAN)	MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
1007	1007 (CAN)	MULD (Multifunction Display)	•	•	•	•	•
1007	1007 (CAN)	PAM (Parking Assistance)	•	•	•	•	•
1007	1007 (CAN)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
1007	1007 (CAN)	Radio	•	•	•	•	•
1007	1007 (CAN)	SRS (Airbag)	•	•	•	•	•
1007	1007 (CAN)	SSDM (Sliding Side Doors Module)	•	•	•	•	•
1007	1007 (CAN)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
1007	1007 (CAN)	TCM (Automatic Gearbox)	•	•	•	•	•
1007	1007 (CAN)	TEU (Telematics Unit)	•	•	•	•	•
1007	1007 (CAN)	UID (Under Inflation Detection)	•	•	•	•	•
1007	1007 (VAN)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
1007	1007 (VAN)	AC (Air Conditioning)	•	•	•	•	•
1007	1007 (VAN)	BSI (Built-in Systems Interface)	•	•	•	•	•
1007	1007 (VAN)	CD (CD Player)	•	•	•	•	•
1007	1007 (VAN)	ECM (Engine Control Module)	•	•	•	•	•
1007	1007 (VAN)	EPS (Electric Power Steering GEP)	•	•	•	•	•
1007	1007 (VAN)	IP (Instrument Cluster Panel)	•	•	•	•	•
1007	1007 (VAN)	MULD (Multifunction Display)	•	•	•	•	•
1007	1007 (VAN)	MULS (Multifunction Screen)	•	•	•	•	•
1007	1007 (VAN)	PAM (Parking Assistance)	•	•	•	•	•
1007	1007 (VAN)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
1007	1007 (VAN)	Radio	•	•	•	•	•
1007	1007 (VAN)	SRS (Airbag)	•	•	•	•	•
1007	1007 (VAN)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
1007	1007 (VAN)	TCM (Automatic Gearbox)	•	•	•	•	•
107		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
107		CAS (Coded Anti-start)	•	•	•	•	•
107		ECM (Engine Control Module)	•	•	•	•	•
107		EPS (Electric Power Steering GEP)	•	•	•	•	٠
107		Radio	•	•	•	•	•
107		SRS (Airbag)	•	•	•	•	•
107		TCM (Automatic Gearbox)	•	•	•	•	•
108		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	٠
108		AC (Air Conditioning)	•	•	•	•	•
108		ECM (Engine Control Module)	•	•	•	•	٠
108		EPS (Electric Power Steering)	•	•	•	•	•
108		IMMO/HFSM (Engine Immobiliser\Hands Free Starting Access Electric Module)	•	•	•	•	•
108		IP (Instrument Cluster Panel)	•	•	•	•	•
108		MULC/RD (Multifunction Video Camera And Remote Detection By Laser	•	•	•	•	•
		Assembly)					-
108		MULS (Multifunction Screen)	•		•	•	•
108		SRS (Airbag)	•	•	-	•	•
108	1	SSC (Stop And Start Control ECU)	•	•	•	•	•

108 2008		TCM (Automatic Gearbox) ABS/ESP (Anti-lock brake System Or Electric Stability Program) AC (Air Conditioning) AMP (Audio Amplifier) Alarm BATT (Battery Charge Status Unit) BSI (Built-in Systems Interface) CD (External CD Player) ECM (Engine Control Module) EPS (Electric Power Steering) ESL (Electric Steering Lock) IP (Instrument Cluster Panel) MAAP (Multiplexed Additive Adding Pump) MCP (Multiplexed Control Panel) MSI (Matrix Screen Integral To The Instrument Panel) NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio System) PAM (Parking Assistance)		• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •	
2008 2008		AC (Air Conditioning) AMP (Audio Amplifier) Alarm BATT (Battery Charge Status Unit) BSI (Built-in Systems Interface) CD (External CD Player) ECM (Engine Control Module) EPS (Electric Power Steering) ESL (Electric Steering Lock) IP (Instrument Cluster Panel) MAAP (Multiplexed Additive Adding Pump) MCP (Multiplexed Control Panel) MSI (Matrix Screen Integral To The Instrument Panel) NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio System)		• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •		-
2008 2008		AMP (Audio Amplifier)AlarmBATT (Battery Charge Status Unit)BSI (Built-in Systems Interface)CD (External CD Player)ECM (Engine Control Module)EPS (Electric Power Steering)ESL (Electric Steering Lock)IP (Instrument Cluster Panel)MAAP (Multiplexed Additive Adding Pump)MCP (Multiplexed Control Panel)MSI (Matrix Screen Integral To The Instrument Panel)NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected AudioSystem)		• • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •	• • • • • • • •	-
2008 2008		AlarmBATT (Battery Charge Status Unit)BSI (Built-in Systems Interface)CD (External CD Player)ECM (Engine Control Module)EPS (Electric Power Steering)ESL (Electric Steering Lock)IP (Instrument Cluster Panel)MAAP (Multiplexed Additive Adding Pump)MCP (Multiplexed Control Panel)MSI (Matrix Screen Integral To The Instrument Panel)NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected AudioSystem)	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • •	• • • • • • • • •	• • • • • •	-
2008 2008 2008 2008 2008 2008 2008 2008		BATT (Battery Charge Status Unit) BSI (Built-in Systems Interface) CD (External CD Player) ECM (Engine Control Module) EPS (Electric Power Steering) ESL (Electric Steering Lock) IP (Instrument Cluster Panel) MAAP (Multiplexed Additive Adding Pump) MCP (Multiplexed Control Panel) MSI (Matrix Screen Integral To The Instrument Panel) NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio System)	• • • • • • • • • • • • • • •	• • • • • • • • •	• • • • • • •	• • • • •	-
2008 2008		BSI (Built-in Systems Interface)CD (External CD Player)ECM (Engine Control Module)EPS (Electric Power Steering)ESL (Electric Steering Lock)IP (Instrument Cluster Panel)MAAP (Multiplexed Additive Adding Pump)MCP (Multiplexed Control Panel)MSI (Matrix Screen Integral To The Instrument Panel)NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected AudioSystem)	• • • • • • • •	• • • • • •	• • • • • •	• • • • • • • • • • • • • • • • • • • •	-
2008 2008 2008 2008 2008 2008 2008 2008		CD (External CD Player) ECM (Engine Control Module) EPS (Electric Power Steering) ESL (Electric Steering Lock) IP (Instrument Cluster Panel) MAAP (Multiplexed Additive Adding Pump) MCP (Multiplexed Control Panel) MSI (Matrix Screen Integral To The Instrument Panel) NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio System)	• • • • • • • • •	• • • • • •	• • • • •	• • • • • • • • • • • • • • • • • • • •	-
2008 2008 2008 2008 2008 2008 2008 2008		ECM (Engine Control Module)EPS (Electric Power Steering)ESL (Electric Steering Lock)IP (Instrument Cluster Panel)MAAP (Multiplexed Additive Adding Pump)MCP (Multiplexed Control Panel)MSI (Matrix Screen Integral To The Instrument Panel)NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected AudioSystem)	• • • • •	• • • • •	• • • • •	•	-
2008 2008 2008 2008 2008 2008 2008 2008		EPS (Electric Power Steering) ESL (Electric Steering Lock) IP (Instrument Cluster Panel) MAAP (Multiplexed Additive Adding Pump) MCP (Multiplexed Control Panel) MSI (Matrix Screen Integral To The Instrument Panel) NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio System)	• • • •	• • • •	• • • • •	•	-
2008 2008 2008 2008 2008 2008 2008 2008		ESL (Electric Steering Lock) IP (Instrument Cluster Panel) MAAP (Multiplexed Additive Adding Pump) MCP (Multiplexed Control Panel) MSI (Matrix Screen Integral To The Instrument Panel) NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio System)	• • • •	• • • • •	•	•	-
2008 2008 2008 2008 2008 2008 2008 2008		IP (Instrument Cluster Panel) MAAP (Multiplexed Additive Adding Pump) MCP (Multiplexed Control Panel) MSI (Matrix Screen Integral To The Instrument Panel) NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio System)	•	•	•	•	-
2008 2008 2008 2008 2008 2008 2008		MAAP (Multiplexed Additive Adding Pump) MCP (Multiplexed Control Panel) MSI (Matrix Screen Integral To The Instrument Panel) NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio System)	•	•	•	_	•
2008 2008 2008 2008 2008 2008		MCP (Multiplexed Control Panel) MSI (Matrix Screen Integral To The Instrument Panel) NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio System)	•	•	-	•	•
2008 2008 2008 2008 2008		MSI (Matrix Screen Integral To The Instrument Panel) NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio System)	-	-	-		
2008 2008 2008 2008		NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio System)	•		-	•	•
2008 2008 2008		System)	-	•	•	•	•
2008 2008		PAM (Parking Assistance)	•	•	•	•	•
2008		The (running hostoranoe)	•	•	•	•	•
		RBS (Rain And Brightness Sensor)	•	•	•	•	•
2008		Radio	•	•	•	•	٠
2000		SM (Services Module)	•	•	•	•	•
2008		SRS (Airbag)	•	•	•	•	•
2008		SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
2008		SWSM (Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
2008		Siren	•	•	•	•	•
2008		TCM (Automatic Gearbox)	•	•	•	•	•
2008		TRU (Trailer Relay Unit)	•	•	•	•	•
2008		VRD (Voltage Retaining Device)	•	•	•	•	•
206	206	ABS (Anti-lock brake System TEVES)	•	•	•	•	•
	206	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
	206	AC (Air Conditioning)	•	•	•	•	•
	206	Alarm	•	•	•	•	•
	206	BSI (Built-in Systems Interface)	•	•	•	•	•
	206	CD (CD Player)	•	•	•	•	•
	206	DAF (Diesel Additive Control Unit)	•	•	•	•	•
	206	DSM (Driver's School Module)		•		•	•
	206	Display/Telematics	•	•	•	•	•
	206	ECM (Engine Control Module)	•	•	•	•	
	206	EPS (Electric Power Steering GEP)	•	•	•	•	
	206	EPS (Electric Power Steering)	•		•	•	•
	206	EFF (Electric Retractable Roof)	•	•	•	•	•
			•	•	•	•	•
	206	IP (Instrument Cluster Panel)	-				•
	206	MULD (Multifunction Display)	•	•	•	•	
	206	MULS (Multifunction Screen)	•	•	•	•	•
	206	NAVI (On-board Navigation System)	•	•	•	•	•
	206	RBS (Rain And Brightness Sensor)	•	•	•	•	•
	206	Radio	•	•	•	•	•
	206	SM (Services Module)	•	•	•	•	•
	206	SRS (Airbag)	•	•	•	•	•
	206	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
	206	TCM (Automatic Gearbox)	•	•	•	•	•
	206 (+)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
	206 (+)	AC (Air Conditioning)	•	•	•	•	•
	206 (+)	Alarm	•	•	•	•	•
	206 (+)	BSI (Built-in Systems Interface)	•	•	•	•	•
	206 (+)	CD (CD Player)	•	•	•	•	•
206	206 (+)	Display/Telematics	•	•	•	•	●
206	206 (+)	ECM (Engine Control Module)	•	•	•	•	●
206	206 (+)	EPS (Electric Power Steering)	•	•	•	•	●
206	206 (+)	IP (Instrument Cluster Panel)	•	•	•	•	•
206	206 (+)	RBS (Rain And Brightness Sensor)	•	•		•	
206	206 (+)	Radio			•	•	•

206	206 (+)	SM (Services Module)	•	•	•	•	•
206	206 (+)	SRS (Airbag)	•	•	•	•	•
206	206 (+)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
206	206 (+)	TCM (Automatic Gearbox)	•	•	•	•	•
206	206 (Mux)	ABS (Anti-lock brake System TEVES)	•	•	•	•	•
206	206 (Mux)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	٠
206	206 (Mux)	AC (Air Conditioning)	•	•	•	•	٠
206	206 (Mux)	Alarm	•	•	•	•	٠
206	206 (Mux)	BSI (Built-in Systems Interface)	•	•	•	•	•
206	206 (Mux)	CD (CD Player)	•	•	•	•	•
206	206 (Mux)	DAF (Diesel Additive Control Unit)	•	•	•	•	•
206	206 (Mux)	DSM (Driver's School Module)	•	•	•	•	•
206	206 (Mux)	ECM (Engine Control Module)	•	•	•	•	•
206	206 (Mux)	EPS (Electric Power Steering GEP)	•	•	•	•	•
206	206 (Mux)	ERF (Electric Retractable Roof)	•	•	•	•	•
206	206 (Mux)	IP (Instrument Cluster Panel)	•	•	•	•	•
206	206 (Mux)	MULD (Multifunction Display)	•	•	•	•	•
206	206 (Mux)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
206	206 (Mux)	Radio	•	•	•	•	
200	206 (Mux)	SRS (Airbag)	•	•	•	•	
200	206 (Mux)	TCM (Automatic Gearbox)			•	•	•
200	200 (mux) 207 (+)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)			•	•	•
			•	•	-		•
207	207 (+)	AC (Air Conditioning)	-	-	•	•	
207	207 (+)	ALM (Anti-theft Alarm)	•	•	•	•	•
207	207 (+)	BATT (Battery Charge Status Unit)	•	•	•	•	•
207	207 (+)	BSI (Built-in Systems Interface)	•	•	•	•	•
207	207 (+)	CD (CD Player)	•	•	•	•	•
207	207 (+)	DAF (Diesel Additive Control Unit)	•	•	•	•	•
207	207 (+)	DHL (Directional Headlamps)	•	•	•	•	•
207	207 (+)	DSM (Driver's School Module)	•	•	•	•	•
207	207 (+)	ECM (Engine Control Module)	•	•	•	•	•
207	207 (+)	EPS (Electric Power Steering)	•	•	•	•	•
207	207 (+)	FR (Folding Roof)	•	•	•	•	•
207	207 (+)	HFC (Hands Free Control Kit)	•	•	•	•	•
207	207 (+)	HFR (High Frequency Receiver)	•	•	•	•	•
207	207 (+)	IP (Instrument Cluster Panel)	•	•	•	•	•
207	207 (+)	MULD (Multifunction Display)	•	•	•	•	•
207	207 (+)	PAM (Parking Assistance)	•	•	•	•	•
207	207 (+)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
207	207 (+)	ROR (Radio Or Radiotelephone(Radio Part))	•	•	•	•	•
207	207 (+)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
207	207 (+)	SM (Services Module)	•	•	•	•	•
207	207 (+)	SRS (Airbag)	•	•	•	•	•
207	207 (+)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
207	207 (+)	TCM (Automatic Gearbox)	•	•	•	•	•
207	207 (+)	TEU (Telematics Unit)	•	•	•	•	•
207	207 (+)	UID (Under Inflation Detection)	•	•	•	•	•
207	207 (CAN)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
207	207 (CAN)	AC (Air Conditioning)	•	•	•	•	•
207	207 (CAN)	Alarm	•	•	•	•	•
207	207 (CAN)	BATT (Battery Charge Status Unit)	•	•	•	•	•
207	207 (CAN)	BSI (Built-in Systems Interface)	•	•	•	•	•
207	207 (CAN)	CD (CD Player)	•	•	•	•	•
207	207 (CAN)	DHL (Directional Headlamps)	•	•	•	•	•
207	207 (CAN)	DSM (Driver's School Module)	•	•	•	•	•
207	207 (CAN)	ECM (Engine Control Module)	•	•	•	•	•
207	207 (CAN)	EPS (Electric Power Steering)	•	•	•	•	•
207	207 (CAN)	FR (Folding Roof)	•	•	•	•	•
207	207 (CAN) 207 (CAN)	HFC (Hands Free Control Kit)	•	•	•	•	•
	201 (0111)	m o (hando rice control Kit)		<u> </u>	<u> </u>		
207	207 (CAN)	HFR (High Frequency Receiver)	•	•	•	•	•

0.05	2027 (2011)						
207	207 (CAN)	MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
207	207 (CAN)	MULS (Multifunction Screen)	•	•	•	•	•
207	207 (CAN)	N-TNB (Not Fastened Warning Light(Tnb))	•	•	•	•	•
207	207 (CAN)	PAM (Parking Assistance)	•	•	•	•	•
207	207 (CAN)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
207	207 (CAN)	Radio	•	•	•	•	•
207	207 (CAN)	SM (Services Module)	•	•	•	•	•
207	207 (CAN)	SRS (Airbag)	•	•	•	•	•
207	207 (CAN)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
207	207 (CAN)	TCM (Automatic Gearbox)	•	•	•	•	•
207	207 (CAN)	TEU (Telematics Unit)	•	•	•	•	•
207	207 (CAN)	UID (Under Inflation Detection)	٠	•	•	•	•
207	207 (VAN)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	٠	•	•	•	•
207	207 (VAN)	AC (Air Conditioning)	٠	•	•	•	•
207	207 (VAN)	Alarm	•	•	•	•	•
207	207 (VAN)	BSI (Built-in Systems Interface)	•	•	•	•	•
207	207 (VAN)	CD (CD Player)	•	•	•	•	•
207	207 (VAN)	ECM (Engine Control Module)	•	•	•	•	•
207	207 (VAN)	IP (Instrument Cluster Panel)	•	•	•	•	•
207	207 (VAN)	MULD (Multifunction Display)	•	•	•	•	•
207	207 (VAN)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
207	207 (VAN)	Radio	•	•	•	•	•
207	207 (VAN)	SM (Services Module)	•	•	•	•	•
207	207 (VAN)	SRS (Airbag)	•	•	•	•	•
207	207 (VAN)	SVLCU (Stolen Vehicle Location Control)	•	•	•	•	•
			•	•	-	•	•
207	207 (VAN)	SWSM (Steering Wheel Switching Module)	-	-	•		-
207	207 (VAN)	TCM (Automatic Gearbox)	•	•	•	•	•
207	207 (VAN)	Wiper-L (Windscreen Wiper (Left-hand Side))	•	•	•	•	•
207	207 (i)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
207	207 (i)	AC (Air Conditioning)	•	•	•	•	•
207	207 (i)	Alarm	٠	•	•	•	•
207	207 (i)	BSI (Built-in Systems Interface)	٠	•	•	•	•
207	207 (i)	CD (CD Player)	•	•	•	•	•
207	207 (i)	Display/Telematics	•	•	•	•	•
207	207 (i)	ECM (Engine Control Module)	٠	•	•	•	•
207	207 (i)	IP (Instrument Cluster Panel)	٠	•	•	•	•
207	207 (i)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
207	207 (i)	Radio	•	•	•	•	•
207	207 (i)	SM (Services Module)	•	•	•	•	•
207	207 (i)	SRS (Airbag)	•	•	•	•	•
207	207 (i)	SVLCU (Stolen Vehicle Location Control)	•	•	•	•	•
207	207 (i)	SWSM (Steering Wheel Switching Module)	٠	•	•	•	•
207	207 (i)	TCM (Automatic Gearbox)	•	•	•	•	•
207	207 (i)	Wiper-L (Windscreen Wiper (Left-hand Side))	•	•	•	•	•
208	208	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
208	208	AC (Air Conditioning)	•	•	•	•	•
208	208	ALM (Anti-theft Alarm)	•	•	•	•	
208	208	AMP (Audio Amplifier)	•	•	•	•	•
208	208	BATT (Battery Charge Status Unit)	•	•	•	•	
208	208			•	•	•	•
		BSI (Built-in Systems Interface)	-	-	-	-	•
208	208	CD (CD Player)	•	•	•	•	•
208	208	DSM (Driver's School Module)	•	•	•	•	•
208	208	ECM (Engine Control Module)	•	•	•	•	•
208	208	EPS (Electric Power Steering)	•	•	•	•	•
208	208	IP (Instrument Cluster Panel)	•	•	•	•	•
208	208	LRU (Lighting Relay Unit)	•	•	•	•	•
208	208	MAAP (Multiplexed Additive Adding Pump)	٠	•	•	•	•
208	208	MCP (Multiplexed Control Panel)	•	•	•	•	•
208	208	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
208	208	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio	•	•	•	•	•
		System) PAM (Parking Assistance)	•				
208	208	PAM (Parking Assistance)	•	•	•	•	

208	208	RBS (Rain And Brightness Sensor)	•	•	•	•	•
208	208	Radio	•	•	•	•	•
208	208	SM (Services Module)	•	•	•	•	•
208	208	SRS (Airbag)	•	•	•	•	•
208	208	SWIC (Steering Wheel With Integral Controls)	•	•	•	•	•
208	208	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
208	208	Siren	•	•	•	•	•
208	208	TCM (Automatic Gearbox)	•	•	•	•	•
208	208	TRU (Trailer Relay Unit)	•	•	•	•	•
208	208	VRD (Voltage Retaining Device)	•	•	•	•	•
208	208 (Ai91)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
208	208 (Ai91)	AC (Air Conditioning)	•	•	•	•	•
208	208 (Ai91)	ALM (Anti-theft Alarm)	•	•	•	•	•
208	208 (Ai91)	BSI (Built-in Systems Interface)	•	•	•	•	•
208	208 (Ai91)	CD (External CD Player)	•	•	•	•	•
208	208 (Ai91)	ECM (Engine Control Module)	•	•	•	•	•
208	208 (Ai91)	EPS (Electric Power Steering)	•	•	•	•	•
208	208 (Ai91)	IP (Instrument Cluster Panel)	٠	•	•	•	•
208	208 (Ai91)	MCP (Multiplexed Control Panel)	•	•	•	•	•
208	208 (Ai91)	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio	•	•	•	•	•
		System)		-			
208	208 (Ai91)	PAM (Parking Assistance)	•	•	•	•	
208	208 (Ai91)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
208	208 (Ai91)	Radio	•	•	•	•	•
208	208 (Ai91)	SM (Services Module)	•	•	•	•	•
208	208 (Ai91)	SRS (Airbag)	•	•	•	•	•
208	208 (Ai91)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
208	208 (Ai91)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
208	208 (Ai91)	Siren	•	•	•	•	•
208	208 (Ai91)	TCM (Automatic Gearbox)	•	•	•	•	•
208	208 (Ai91)	VRD (Voltage Retaining Device)	•	•	•	•	•
3008	3008	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
3008	3008	AC (Air Conditioning)	•	•	•	•	•
3008	3008	AC (Rear Air Conditioning)	•	•	•	•	•
3008	3008	ALM (Anti-theft Alarm)	•	•	•	•	•
3008	3008	AMP (Audio Amplifier)	•	•	•	•	•
3008	3008	ASM (Anti-slip Mode Selector)	•	•	•	•	•
3008	3008	Alarm	•	•	•	•	•
3008	3008	BATT (Battery Charge Status Unit)	•	•	•	•	•
3008	3008	BATT (Traction Battery ECU)	•	•	•	•	•
3008	3008	BCM (Body Control Module)	•	•	•	•	•
3008	3008	BSI (Built-in Systems Interface)	•	•	•	•	•
3008	3008	CD (CD Player)	•	•	•	•	•
3008	3008	CD (External CD Player)	•	•	•	•	•
3008	3008	CPDMD (Control Panel Dot Matrix Display)	•	•	•	•	•
3008	3008	DAF (Diesel Additive Pump)	٠	•	•	•	•
3008	3008	DDC (Driver's Door Control Panel)	•	•	•	•	•
3008	3008	DSC (Driver's Seat Comfort ECU)	•	•	•	•	•
3008	3008	DSP (Driver's Seat Pneumatic Functions ECU)	•	•	•	•	•
3008	3008	Display	•	•	•	•	•
3008	3008	ECM (Engine Control Module)	•	•	•	•	•
3008	3008	EPB (Electric Secondary Brake)	•	•	•	•	•
3008	3008	EPS (Electric Power Steering GEP)	•	•	•	•	•
3008	3008	EPS (Electric Power Steering)	•	•	•	•	•
3008	3008	ERU (Engine Relay Unit)	•	•	•	•	•
3008	3008	ESL (Electric Steering Lock)	•	•	•	•	•
3008	3008	HFA (Hands Full Access ECU(Right-hand Side Or Rear))	•	•	•	•	•
3008	3008	HFC (Hands Free Control Kit)	•	•	•	•	•
3008	3008	HFR (High Frequency Receiver)	•	•	•	•	•
3008	3008	HHV (High Head Vision)	•	•	•	•	•
			_	-		-	
3008	3008	HLH (Headlamp Height Corrector)	•	•	•	•	•

3008	3008	HYC-1 (Hybrid Control ECU 1)	٠	•	•	•	•
3008	3008	HYC-2 (Hybrid Control ECU 2)	•	•	•	•	•
3008	3008	IP (Instrument Cluster Panel)	•	•	•	•	•
3008	3008	MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
3008	3008	MCP (Multiplexed Control Panel)	•	•	•	•	•
3008	3008	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
3008	3008	MULS (Multifunction Screen)	•	•	•	•	•
3008	3008	N-TNB (Not Fastened Warning Light(Tnb))	•	•	•	•	•
3008	3008	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio	•	•	•	•	•
3008	3008	System) NIU (Network Isolation Unit)	•	•	•	•	•
3008	3008	PAM (Parking Assistance)	•	•	•	•	•
3008	3008	PSP (Passenger's Seat Pneumatic Functions ECU)	•	•	•	•	•
3008	3008	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
3008	3008	RBS (Rain And Brightness Sensor)	•	•	•	•	•
3008	3008	RSS (Rain-sunlight Sensor)	•	•	•	•	•
3008	3008	Radio	•	•	•	•	•
3008	3008	SB (Seat Belts Not Fastened LED Unit(TNB))	•	•	•	•	•
						•	
3008	3008	SHP/VR (Front Left Seat Heated Pads And Ventilation Regulation ECU)	•	•	•	•	•
3008	3008	SHP/VR (Front Right Seat Heated Pads And Ventilation Regulation ECU)	٠	•	•	•	•
3008	3008	SM (Services Module)	•	•	•	•	•
3008	3008	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
3008	3008	SRS (Airbag)	•	•	•	•	٠
3008	3008	SWC (Controls On The Steering Wheel)	•	•	•	•	•
3008	3008	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
3008	3008	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
3008	3008	Siren	•	•	•	•	•
3008	3008	TCM (Automatic Gearbox)	•	•	•	•	•
3008	3008	TCM (Sequential Gear Lever)	•	•	•	•	•
3008	3008	TEU (Telematics Unit)	•	•	•	•	•
3008	3008	TRU (Trailer Relay Unit)	•	•	•	•	•
3008	3008	TS (Touch Screen)	•	•	•	•	•
3008	3008	UID (Under Inflation Detection)	•	•	•	•	•
3008	3008	VDA (Vehicle Distance Assistance)	•	•	•	•	•
3008	3008	VRD (Voltage Retaining Device)	•	•	•	•	•
3008	3008	Wiper (Windscreen Wiper)	•	•	•	•	•
3008	3008 (CHINA)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
3008	3008 (CHINA)	AC (Air Conditioning)	•	•	•	•	•
3008	3008 (CHINA)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
3008	3008 (CHINA)	Alarm	•	•	•	•	•
3008	3008 (CHINA)	BATT (Battery Charge Status Unit)	•	•	•	•	•
3008	3008 (CHINA)	BSI (Built-in Systems Interface)	•	•	•	•	•
3008	3008 (CHINA)	DCP (Door Control Pad)	•	•	•	•	•
3008	3008 (CHINA)	ECM (Engine Control Module)	•	•	•	•	•
3008	3008 (CHINA)	EPB (Electric Secondary Brake)	•	•	•	•	•
3008	3008 (CHINA)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
3008	3008 (CHINA)	ERU (Engine Relay Unit)	•	•	•	•	•
3008	3008 (CHINA)	HHV (High Head Vision)	•	•	•	•	•
3008	3008 (CHINA)	IP (Instrument Cluster Panel)	•	•	•	•	•
3008	3008 (CHINA)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
3008	3008 (CHINA)	MULD (Multifunction Display)	•	•	•	•	●
3008	3008 (CHINA)	PAM (Parking Assistance)	•	•	•	•	•
3008	3008 (CHINA)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
3008	3008 (CHINA)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
3008	3008 (CHINA)	Radio	٠	•	•	•	•
3008	3008 (CHINA)	SM (Services Module)	•	•	•	•	•
3008	3008 (CHINA)	SRS (Airbag)	•	•	•	•	•
3008	3008 (CHINA)	SWSM (Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
3008	3008 (CHINA)	TCM (Automatic Gearbox)	•	•	•	•	•
0000							
3008	3008 (CHINA)	TEU (Telematics Unit)	•	•	•	•	•

2008	2000 (CHINA)	VDD (V-1+ D-t-ining D-vi)	•	•	•	•	•
3008	3008 (CHINA)	VRD (Voltage Retaining Device)	•	<u> </u>	-	•	•
3008	3008 (CHINA)	Wiper (Windscreen Wiper)		•	•	-	•
3008	3008 (Hybrid4)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
3008	3008 (Hybrid4)	AC (Air Conditioning)	•	•	•	•	•
3008	3008 (Hybrid4)	ALM (Anti-theft Alarm)	-		•	•	•
3008	3008 (Hybrid4)	AMP (Audio Amplifier)	•	•	•	•	•
3008	3008 (Hybrid4)	BATT (Battery Charge Status Unit)	•	•	•	•	•
3008	3008 (Hybrid4)	BATT (Traction Battery ECU)	•	•	•	•	•
3008	3008 (Hybrid4)	BSI (Built-in Systems Interface)	•	•	•	•	•
3008	3008 (Hybrid4)	CD (CD Player)	•	•	•	•	•
3008	3008 (Hybrid4)	DCP (Door Control Pad)	•	•	•	•	•
3008	3008 (Hybrid4)	ECM (Engine Control Module)	•	•	•	•	•
3008	3008 (Hybrid4)	EPB (Electric Secondary Brake)	•	•	•	•	•
3008	3008 (Hybrid4)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
3008	3008 (Hybrid4)	HFC (Hands Free Control Kit)	•	•	•	•	•
3008	3008 (Hybrid4)	HHV (High Head Vision)	•	•	•	•	•
3008	3008 (Hybrid4)	HMS (Hybrid Mode Selector)	•	•	•	•	•
3008	3008 (Hybrid4)	HYC-1 (Hybrid Control ECU 1)	•	•	•	•	•
3008	3008 (Hybrid4)	HYC-2 (Hybrid Control ECU 2)	•	•	•	•	•
3008	3008 (Hybrid4)	IP (Instrument Cluster Panel)	•	•	•	•	•
3008	3008 (Hybrid4)	MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
3008	3008 (Hybrid4)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
3008	3008 (Hybrid4)	MULD (Multifunction Display)	•	•	•	•	•
3008	3008 (Hybrid4)	PAM (Parking Assistance)	•	•	•	•	•
3008	3008 (Hybrid4)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
3008	3008 (Hybrid4)	RS (Rain Sensor)	•	•	•	•	•
3008	3008 (Hybrid4)	Radio	•	•	•	•	•
3008	3008 (Hybrid4)	SM (Services Module)	•	•	•	•	•
3008	3008 (Hybrid4)	SRS (Airbag)	•	•	•	•	•
3008	3008 (Hybrid4)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
3008	3008 (Hybrid4)	TCM (Automatic Gearbox)	•	•	•	•	•
3008	3008 (Hybrid4)	TEU (Telematics Unit)	•	•	•	•	•
3008	3008 (Hybrid4)	UID (Under Inflation Detection)	•	•	•	•	•
3008	3008 (Hybrid4)	VRD (Voltage Retaining Device)	•	•	•	•	•
3008	3008 (Hybrid4)	Wiper (Windscreen Wiper)	•	•	•	•	•
3008	3008 (P84)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
3008	3008 (P84)	AC (Air Conditioning)	•	•	•	•	•
3008	3008 (P84)	AC (Rear Air Conditioning)	•	•	•	•	•
3008	3008 (P84)	ALM (Anti-theft Alarm)	•	•	•	•	•
3008	3008 (P84)	AMP (Audio Amplifier)	•	•	•	•	•
3008	3008 (P84)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
3008	3008 (P84)	BATT (Battery Charge Status Unit)	•	•	•	•	•
3008	3008 (P84)	BCM (Body Control Module)	•	•	•	•	•
3008	3008 (P84)	BSI (Built-in Systems Interface)	•	•	•	•	•
3008	3008 (P84)	CD (External CD Player)	•	•	•	•	•
3008	3008 (P84)	DAF (Diesel Additive Pump)	•	•	•	•	•
3008	3008 (P84)	DDC (Driver's Door Control Panel)	•	•	•	•	•
3008	3008 (P84)	DHL (Headlamp Height Adjuster/Directional Headlamp)	•	•	•	•	•
3008	3008 (P84)	DSC (Driver's Seat Comfort ECU)	•	•	•	•	•
3008	3008 (P84)	DSP (Driver's Seat Pneumatic Functions ECU)	•	•	•	•	•
3008	3008 (P84)	Display	•	•	•	•	•
3008	3008 (P84)	ECM (Engine Control Module)	•	•	•	•	•
3008	3008 (P84)	EPS (Electric Power Steering)	•	•	•	•	•
3008	3008 (P84)	ERU (Engine Relay Unit)	•	•	•	•	
3008	3008 (P84)	ESL (Electric Steering Lock)	•	•	•	•	•
3008	3008 (P84)	HFA (Hands Full Access ECU(Right-hand Side Or Rear))	•	•	•	•	•
3008	3008 (P84)	IP (Instrument Cluster Panel)	•	•	•	•	•
3008	3008 (P84)	MCP (Multiplexed Control Panel)	•	•	•	•	•
3008	3008 (P84)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
3008	3008 (P84)	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio	· •	•	•	•	•
3008	3008 (P84)	System) PAM (Parking Assistance)	•	•	•	•	•
5000	0000 (104)	PAM (Parking Assistance)			-	•	•

				1			r
3008	3008 (P84)	PSP (Passenger's Seat Pneumatic Functions ECU)	•	•	•	•	•
3008	3008 (P84)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
3008	3008 (P84)	RSS (Rain-sunlight Sensor)	•	•	•	•	•
3008	3008 (P84)	Radio	•	•	•	•	•
3008	3008 (P84)	SB (Seat Belts Not Fastened LED Unit(TNB))	•	•	•	•	•
3008	3008 (P84)	SHP/VR (Front Left Seat Heated Pads And Ventilation Regulation ECU)	•	•	•	•	•
3008	3008 (P84)	SHP/VR (Front Right Seat Heated Pads And Ventilation Regulation	•	•	•	•	•
3008	3008 (P84)	ECU)	•	•	•	•	•
		SM (Services Module)	•	•	•	•	•
3008	3008 (P84)	SPMU (Supply Protection And Management Unit)	-		-		-
3008	3008 (P84)	SRS (Airbag)	•	•	•	•	•
3008	3008 (P84)	SWC (Controls On The Steering Wheel)	•	•	•	•	•
3008	3008 (P84)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
3008	3008 (P84)	Siren	•	•	•	•	•
3008	3008 (P84)	TCM (Automatic Gearbox)	•	•	•	•	•
3008	3008 (P84)	TCM (Sequential Gear Lever)	•	•	•	•	•
3008	3008 (P84)	TRU (Trailer Relay Unit)	•	•	•	•	•
3008	3008 (P84)	TS (Touch Screen)	•	•	•	•	•
3008	3008 (P84)	VDA (Vehicle Distance Assistance)	٠	•	•	•	•
3008	3008 (P84)	VRD (Voltage Retaining Device)	•	•	•	•	•
3008	3008 (P84)	Wiper (Windscreen Wiper)	•	•	•	•	•
301		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
301		BATT (Battery Charge Status Unit)	•	•	•	•	•
301		BSI (Built-in Systems Interface)	•	•	•	•	•
301	1	ECM (Engine Control Module)	•	•	•	•	-
301		EPS (Electric Power Steering)	•	•	•	•	•
301		ESL (Electric Steering Lock)	•	•	•	•	•
			•	•	•	•	•
301		IP (Instrument Cluster Panel)	-		-		
301		MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
301		MULS (Multifunction Screen)	•	•	•	•	•
301		NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio System)	•	•	•	•	•
301		PAM (Parking Assistance)	•	•	•	•	•
301		Radio	•	•	•	•	•
301		SM (Services Module)	•	•	•	•	•
301		SRS (Airbag)	•		•	•	•
301		SWSM (Switch Module At The Steering Wheel)	•		•	•	
301		Siren	•	•	•	•	•
301			•	•	•	•	•
		TCM (Automatic Gearbox)	-	-	-	-	-
301		TRU (Trailer Relay Unit)	•	•	•	•	•
301		VRD (Voltage Retaining Device)	•	•	•	•	•
306	306	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
306	306	ECM (Engine Control Module)	•	•	•	•	•
306	306	SRS (Airbag)	•	•	•	•	•
306	306	TCM (Automatic Gearbox)	•	•	•	•	•
306	306 (R)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
306	306 (R)	ECM (Engine Control Module)	•	•	•	•	•
306	306 (R)	SRS (Airbag)	•	•	•	•	•
306	306 (R)	TCM (Automatic Gearbox)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	AC (Air Conditioning)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	Alarm	•	•	•	•	•
307	307 (CAN) (2006.01 -)	BSI (Built-in Systems Interface)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	CD (CD Player)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	DAF (Diesel Additive Control Unit)	•	•	•	•	•
307	307 (CAN) (2006.01 -) 307 (CAN) (2006.01 -)	DDM (Driver's Door Module)	•	•	•	•	•
			-	-	•	-	•
307	307 (CAN) (2006.01 -)	DSM (Driver's School Module)	•	•	-	•	-
307	307 (CAN) (2006.01 -)	ECM (Engine Control Module)	•	•	•	•	-
307	307 (CAN) (2006.01 -)	EPS (Electric Power Steering)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	FR (Folding Roof)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	HFC (Hands Free Control Kit)	•	•	•	•	•

				<u>г</u>		r	
307	307 (CAN) (2006.01 -)	HLLC (Left Headlamp Beam Level Corrector)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	HLRC (Right Headlamp Beam Corrector)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	MULS (Multifunction Screen)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	PAM (Parking Assistance)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	PDM (Passenger's Door Module)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	Radio	•	•	•	•	•
307	307 (CAN) (2006.01 -)	SM (Services Module)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	SRS (Airbag)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	SunRoof	•	•	•	•	
307	307 (CAN) (2006.01 -)	TCM (Automatic Gearbox)	•	•	•	•	
					-	-	•
307	307 (CAN) (2006.01 -)	TEU (Telematics Unit)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	UID (Under Inflation Detection)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	AC (Air Conditioning)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	Alarm	•	•	•	•	•
307	307 (VAN) (- 2005.12)	BSI (Built-in Systems Interface)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	CD (CD Player)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	DAF (Diesel Additive Control Unit)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	DDM (Driver's Door Module)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	DSM (Driver's School Module)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	ECM (Engine Control Module)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	EPS (Electric Power Steering GEP)	•	•	•	•	
307	307 (VAN) (2005.12)	IP (Instrument Cluster Panel)		•	•	•	•
307	307 (VAN) (2005.12) 307 (VAN) (- 2005.12)	MULD (Multifunction Display)			•	•	•
		· · · · · · · · · · · · · · · · · · ·	-		-	-	•
307	307 (VAN) (- 2005.12)	PAM (Parking Assistance)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	PDM (Passenger's Door Module)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	Radio	•	•	•	•	•
307	307 (VAN) (- 2005.12)	SM (Services Module)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	SRS (Airbag)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	TCM (Automatic Gearbox)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	AC (Air Conditioning)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	AH (Additional Heating)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	ALM (Anti-theft Alarm)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	AMP (Audio Amplifier)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	Alarm	•	•	•	•	•
308	308 (2010.01 - 2014.09)	Alarm Lin	•	•	•	•	•
			•	•	•	•	•
308	$308 (2010. \ 01 - \ 2014. \ 09)$	BATT (Battery Charge Status Unit)	-	-			-
308	308 (2010.01 - 2014.09)	BSI (Built-in Systems Interface)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	CD (CD Player)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	CD (External CD Player)	•	•	•	•	
308	308 (2010.01 - 2014.09)	CPDMD (Control Panel Dot Matrix Display)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	DDC (Driver's Door Control Panel)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	DDM (Driver's Door Module)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	DHL (Discharge Bulb With Directional Dipped Headlamp)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	DSM (Driver's School Module)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	ECM (Engine Control Module)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	EPS (Electric Power Steering GEP)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	ERU (Engine Relay Unit)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	ESL (Electric Steering Lock)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	FR (Folding Roof)	•	•	•	•	•
308	308 (2010. 01 - 2014. 09) 308 (2010. 01 - 2014. 09)	HFC (Hands Free Control Kit)	•	•	•	•	•
		HFC (Hands Free Control Kit) HFR (High Frequency Receiver)	•	•	•	•	
308		THE ALL ALL ALL ALL ALL ALL ALL ALL ALL AL		I ■		· ·	-
200	308 (2010.01 - 2014.09)			-	-	-	-
308 308	308 (2010, 01 - 2014, 09) 308 (2010, 01 - 2014, 09) 308 (2010, 01 - 2014, 09)	IP (Instrument Cluster Panel) KEY (Electrionic Key Reader)	•	•	•	•	•

	1				1	1	1
308	308 (2010.01 - 2014.09)	LDWS (Lane Departure Warning System)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	MCP (Multiplexed Control Panel)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	MPD (Moving Panel Deflector)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
308	308 (2010.01 - 2014.09)	MULD (Multifunction Display)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	MULS (Multifunction Screen)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	N-TNB (Not Fastened Warning Light(Tnb))	•	•	•	•	•
308	308 (2010, 01 - 2014, 09)	NAVI (Telematic Navigator)	•	•	•	•	
	, , ,	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio	•		-	-	
308	308 (2010.01 - 2014.09)	System)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	PAM (Parking Assistance)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	PSM (Passenger's Seat Memorizing Unit)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	Radio	•	•	•	•	•
308	308 (2010.01 - 2014.09)	SB (Seat Belts Not Fastened LED Unit(TNB))	٠	•	•	•	•
308	308 (2010.01 - 2014.09)	SM (Services Module)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	SRS (Airbag)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
308	308 (2010.01 - 2014.09)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
			•	•	•	•	•
308	308 (2010.01 - 2014.09)	SWSM (Switch Module Under The Steering Wheel)			-	-	-
308	308 (2010.01 - 2014.09)	Siren	•	•	•	•	•
308	308 (2010.01 - 2014.09)	SunRoof	•	•	•	•	•
308	308 (2010.01 - 2014.09)	TCM (Automatic Gearbox)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	TCM (Sequential Gear Lever)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	TEU (Telematics Unit)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	TRU (Trailer Relay Unit)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	UID (Under Inflation Detection)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	VRD (Voltage Retaining Device)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	Wiper (Windscreen Wiper)	•	•	•	•	•
308	308 (4 Doors)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
308	308 (4 Doors)	AC (Air Conditioning)	•	•	•	•	•
308	308 (4 Doors)	AMP (Audio Amplifier)	•	•	•	•	•
			•				
308	308 (4 Doors)	Alarm	•			•	•
308	308 (4 Doors)	Alarm Lin	•	•	•	-	•
308	308 (4 Doors)	BATT (Battery Charge Status Unit)	•	•	•	•	•
308	308 (4 Doors)	BSI (Built-in Systems Interface)	•	•	•	•	•
308	308 (4 Doors)	CD (CD Player)	•	•	•	•	•
308	308 (4 Doors)	DCP (Door Control Pad)	•	•	•	•	•
308	308 (4 Doors)	DHL (Directional Headlamps)	•	•	•	•	•
308	308 (4 Doors)	DSM (Driver's School Module)	•	•	•	•	•
308	308 (4 Doors)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
308	308 (4 Doors)	ECM (Engine Control Module)	•	•	•	•	•
308	308 (4 Doors)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
308	308 (4 Doors)	ERU (Engine Relay Unit)	•	•	•	•	•
308	308 (4 Doors)	FR (Folding Roof)	•	•	•	•	•
308	308 (4 Doors)	HFC (Hands Free Control Kit)	•	•	•	•	•
308	308 (4 Doors)	IP (Instrument Cluster Panel)	•		•	•	
			•	•	•	•	
308	308 (4 Doors)	LDWS (Lane Departure Warning System)	-		-	-	
308	308 (4 Doors)	MPD (Moving Panel Deflector)	•		•	•	-
308	308 (4 Doors)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	-
308	308 (4 Doors)	MULD (Multifunction Display)	•	•	•	•	•
308	308 (4 Doors)	PAM (Parking Assistance)	•	•	•	•	•
308	308 (4 Doors)	PSM (Passenger's Seat Memorisation Unit)	•	•	•	•	•
500	200 (4 D)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
308	308 (4 Doors)	(
	308 (4 Doors) 308 (4 Doors)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
308			•	•	•	•	•
308 308	308 (4 Doors)	SB (Seat Belts Not Fastened LED Unit)	-	-		-	-

			-				
308	308 (4 Doors)	SunRoof	•	•	•	•	•
308	308 (4 Doors)	TCM (Automatic Gearbox)	•	•	•	•	•
308	308 (4 Doors)	TEU (Telematics Unit)	•	•	•	•	•
308	308 (4 Doors)	UID (Under Inflation Detection)	•	•	•	•	•
308	308 (4 Doors)	VRD (Voltage Retaining Device)	•	•	•	•	•
308	308 (4 Doors)	Wiper (Windscreen Wiper)	•	•	•	•	•
308	308 (S)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
308	308 (S)	AC (Air Conditioning)	•	•	•	•	•
308	308 (S)	Alarm	•	•	•	•	•
308	308 (S)	BATT (Battery Charge Status Unit)	•	•	•	•	•
308	308 (S)	BSI (Built-in Systems Interface)	•	•	•	•	•
308	308 (S)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
308	308 (S)	ECM (Engine Control Module)	•	•	•	•	•
308	308 (S)	EPS (Electric Power Steering GEP)	•	•	•	•	•
308	308 (S)	ERU (Engine Relay Unit)	•	•	•	•	•
308	308 (S)	ESL (Electric Steering Lock)	•	•	•	•	•
308	308 (S)	HFC (Hands Free Control Kit)	•	•	•	•	•
308	308 (S)	HLH (Headlamp Height Corrector)	•	•	•	•	
			•		•	•	
308	308 (S)	IP (Instrument Cluster Panel)			-	-	
308	308 (S)	KEY (Electrionic Key Reader)	•	•	•	•	-
308	308 (S)	MCP (Multiplexed Control Panel)	•	-	•	•	•
308	308 (S)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	-	•	-
308	308 (S)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
308	308 (S)	MULD (Multifunction Display)	•	•	•	•	•
308	308 (S)	MULS (Multifunction Screen)	•	•	•	•	•
308	308 (S)	NAVI (Telematic Navigator)	•	•	•	•	•
308	308 (S)	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio	•	•	•	•	•
308	308 (S)	System) PAM (Parking Assistance)	•	•	•	•	
308	308 (S)		•	•	•	•	•
		RBS (Rain And Brightness Sensor)	•	•	•	•	•
308	308 (S)	Radio				-	
308	308 (S)	SM (Services Module)	•	•	•	•	•
308	308 (S)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
308	308 (S)	SRS (Airbag)	•	•	•	•	•
308	308 (S)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
308	308 (S)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
308	308 (S)	TCM (Automatic Gearbox)	•	•	•	•	•
308	308 (S)	TCM (Sequential Gear Lever)	•	•	•	•	•
308	308 (S)	VRD (Voltage Retaining Device)	•	•	•	•	•
308	308 (T9) (2014.10 -)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
308	308 (T9) (2014.10 -)	AC (Air Conditioning)	٠	•	•	•	•
308	308 (T9) (2014.10 -)	AH (Additional Heating)	٠	•	•	•	•
308	308 (T9) (2014.10 -)	ALM (Anti-theft Alarm)	•	•	•	•	•
308	308 (T9) (2014.10 -)	AMP (Audio Amplifier)	•	•	•	•	•
308	308 (T9) (2014.10 -)	BATT (Battery Charge Status Unit)	•	•	•	•	•
308	308 (T9) (2014.10 -)	BSI (Built-in Systems Interface)	•	•	•	•	•
308	308 (T9) (2014.10 -)	CD (External CD Player)	•	•	•	•	•
308	308 (T9) (2014.10 -)	DDC (Driver's Door Control Panel)	•	•	•	•	-
308	308 (T9) (2014.10 -)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	
			•	•	•	•	
308	308 (T9) (2014.10 -)	ECM (Engine Control Module)		<u> </u>	_	_	
308	308 (T9) (2014.10 -)	EPS (Electric Power Steering GEP)	•	•	•	•	-
308	308 (T9) (2014.10 -)	ERU (Engine Relay Unit)	•	•	•	•	•
308	308 (T9) (2014.10 -)	ESL (Electric Steering Lock)	•	•	•	•	•
308	308 (T9) (2014.10 -)	HFC (Hands Free Control Kit)	•	•	•	•	•
308	308 (T9) (2014.10 -)	HLH (Headlamp Height Corrector)	•	•	•	•	•
308	308 (T9) (2014.10 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
308	308 (T9) (2014.10 -)	KEY (Electrionic Key Reader)	•	•	•	•	•
308	308 (T9) (2014.10 -)	MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	
308	308 (T9) (2014.10 -)	MCP (Multiplexed Control Panel)	•	•	•	•	•
			•	•	•	•	
308	308 (T9) (2014.10 -)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	-	-	-
308 308	308 (T9) (2014.10 -) 308 (T9) (2014.10 -)	MS1 (Matrix Screen Integral 10 Ine Instrument Fanel) MULC (Multifunction Video Camera (CMF))	•	•	•	•	•

				-	-		-
308	308 (T9) (2014.10 -)	MULS (Multifunction Screen)	•	•	•	•	•
308	308 (T9) (2014.10 -)	NAVI (Telematic Navigator)	•	•	•	•	•
308	308 (T9) (2014.10 -)	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio System)	•	•	•	•	•
308	308 (T9) (2014.10 -)	PAM (Parking Assistance)	•	•	•	•	•
308	308 (T9) (2014.10 -)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
308	308 (T9) (2014.10 -)	Radio	•	•	•	•	•
308	308 (T9) (2014.10 -)	SB (Seat Belts Not Fastened LED Unit(TNB))	•	•	•	•	•
308	308 (T9) (2014.10 -)	SM (Services Module)	•	•	•	•	•
308	308 (T9) (2014.10 -)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
308	308 (T9) (2014.10 -)	SRS (Airbag)	•	•	•	•	•
308	308 (T9) (2014.10 -)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
308	308 (T9) (2014.10 -)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
308	308 (T9) (2014.10 -)	Siren	•	•	•	•	•
308	308 (T9) (2014.10 -)	TCM (Automatic Gearbox)	•	•	•	•	•
308	308 (T9) (2014.10 -)	TCM (Sequential Gear Lever)	•	•	•	•	•
308	308 (T9) (2014.10 -)	TRU (Trailer Relay Unit)	•	•	•	•	•
308	308 (T9) (2014.10 -)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
308	308 (T9) (2014.10 -)	VRD (Voltage Retaining Device)	•	•	•	•	•
308	308 (TX9)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
308	308 (TX9)	AC (Air Conditioning)	•	•	•	•	•
308	308 (TX9)	BATT (Battery Charge Status Unit)	•	•	•	•	•
308	308 (TX9)	BSI (Built-in Systems Interface)	•	•	•	•	•
	308 (TX9) 308 (TX9)		•	•	•	•	
308		ECM (Engine Control Module)	•		-	•	•
308	308 (TX9)	EPS (Electric Power Steering)	-	•	•		•
308	308 (TX9)	ESL (Electric Steering Lock)	•	•	•	•	•
308	308 (TX9)	IP (Instrument Cluster Panel)	•	•	•	•	•
308	308 (TX9)	MCP (Multiplexed Control Panel)	•	•	•	•	•
308	308 (TX9)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
308	308 (TX9)	MULS (Multifunction Screen)	•	•	•	•	•
308	308 (TX9)	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio System)	•	•	•	•	•
308	308 (TX9)	PAM (Parking Assistance)	•	•	•	•	•
308	308 (TX9)	RSS (Rain-sunlight Sensor)	•	•	•	•	•
308	308 (TX9)	Radio	•	•	•	•	•
308	308 (TX9)	SM (Services Module)	•	•	•	•	•
308	308 (TX9)	SRS (Airbag)	•	•	•	•	•
308	308 (TX9)	SWC (Controls On The Steering Wheel)	•	•	•	•	•
308	308 (TX9)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
308	308 (TX9)	TCM (Automatic Gearbox)	•	•	•	•	•
308	308 (TX9)	VRD (Voltage Retaining Device)	•	•	•	•	•
4007	4007	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
4007	4007	AC (Air Conditioning)	•	•	•	•	•
4007	4007	BSI (Built-in Systems Interface)	•	•	•	•	•
4007	4007	CAS (Coded Anti-start)	•	•	•	•	
4007	4007	DDM (Driver's Door Module)	•	•	•	•	•
4007	4007	DHL (Headlamp Height Adjuster/Directional Headlamp)	•	•	•	•	•
4007	4007	DPCRF (Rear Final Drive Piloted Clutch)	•	•	•	•	
4007	4007	DSPRLH (Rear LH Door Switch Panel)	•	•	•	•	•
			•	•	•	•	•
4007	4007	DSPRRH (Rear RH Door Switch Panel)		•	•	•	
4007	4007	ECM (Engine Control Module)	-	-	-	-	
4007	4007	HFC (Hands Free Control Kit)	•	•	•	•	-
4007	4007	IP (Instrument Cluster Panel)	•	•	•	•	-
4007	4007	NAVI (Navigation)	•	-	•	•	•
4007	4007	PAM (Parking Assistance)	•	-	-	•	•
4007	4007	PDM (Passenger's Door Module)	•	•	•	•	•
4007	4007	Radio	•	•	•	•	•
4007	4007	SAS (Flywheel Angle Sensor)	•	•	•	•	•
4007	4007	SRS (Airbag)	•	•	•	•	•
4007	4007	SunRoof	•	•	•	•	•
4007	4007	TCM (Automatic Gearbox)	•	•	•	•	•
4007	4007	TCM (Gear Lever(Dct))	•	•	•	•	•
4008	4008	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•

4008 4008 4008	/ / /	AC (Air Conditioning) AC (Rear Air Conditioning) ALM (Anti-theft Alarm) ALM (Anti-slip Mode Selector) AVTH (Starting Authorisation ECU) BATT (Battery Charge Status Unit) BCM (Body Control Module) BSI (Built-in Systems Interface) CAS/HFCU (Coded Anti-start/Hands-free Control Unit) CD (External CD Player) DAF (Diesel Additive Pump) DDC (Driver's Door Control Panel) DHL (Headlamp Height Adjuster/Directional Headlamp) DPCRF (Rear Final Drive Piloted Clutch) DSC (Driver's Seat Comfort ECU) DSP (Driver's Seat Pneumatic Functions ECU) Display ECM (Engine Control Module) EFS (Electric Power Steering) ERU (Engine Relay Unit) ESL (Electric Steering Lock) HFA (Hands Full Access ECU(Right-hand Side Or Rear)) H (Instrument Cluster Panel)	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •		
4008 4008 4008 <td>/ <td< td=""><td>ALM (Anti-theft Alarm) ASM (Anti-slip Mode Selector) AVTH (Starting Authorisation ECU) BATT (Battery Charge Status Unit) BCM (Body Control Module) BSI (Built-in Systems Interface) CAS/HFCU (Coded Anti-start/Hands-free Control Unit) CC (External CD Player) DAF (Diesel Additive Pump) DDC (Driver's Door Control Panel) DDC (Driver's Door Control Panel) DDL (Headlamp Height Adjuster/Directional Headlamp) DPCRF (Rear Final Drive Piloted Clutch) DSC (Driver's Seat Comfort ECU) DSP (Driver's Seat Comfort ECU) DSP (Driver's Seat Pneumatic Functions ECU) Display ECM (Engine Control Module) EFS (Electric Power Steering) ERU (Engine Relay Unit) ESL (Electric Steering Lock) HFA (Hands Full Access ECU(Right-hand Side Or Rear)) IP (Instrument Cluster Panel)</td><td></td><td>• •</td><td></td><td></td><td></td></td<></td>	/ / <td< td=""><td>ALM (Anti-theft Alarm) ASM (Anti-slip Mode Selector) AVTH (Starting Authorisation ECU) BATT (Battery Charge Status Unit) BCM (Body Control Module) BSI (Built-in Systems Interface) CAS/HFCU (Coded Anti-start/Hands-free Control Unit) CC (External CD Player) DAF (Diesel Additive Pump) DDC (Driver's Door Control Panel) DDC (Driver's Door Control Panel) DDL (Headlamp Height Adjuster/Directional Headlamp) DPCRF (Rear Final Drive Piloted Clutch) DSC (Driver's Seat Comfort ECU) DSP (Driver's Seat Comfort ECU) DSP (Driver's Seat Pneumatic Functions ECU) Display ECM (Engine Control Module) EFS (Electric Power Steering) ERU (Engine Relay Unit) ESL (Electric Steering Lock) HFA (Hands Full Access ECU(Right-hand Side Or Rear)) IP (Instrument Cluster Panel)</td><td></td><td>• •</td><td></td><td></td><td></td></td<>	ALM (Anti-theft Alarm) ASM (Anti-slip Mode Selector) AVTH (Starting Authorisation ECU) BATT (Battery Charge Status Unit) BCM (Body Control Module) BSI (Built-in Systems Interface) CAS/HFCU (Coded Anti-start/Hands-free Control Unit) CC (External CD Player) DAF (Diesel Additive Pump) DDC (Driver's Door Control Panel) DDC (Driver's Door Control Panel) DDL (Headlamp Height Adjuster/Directional Headlamp) DPCRF (Rear Final Drive Piloted Clutch) DSC (Driver's Seat Comfort ECU) DSP (Driver's Seat Comfort ECU) DSP (Driver's Seat Pneumatic Functions ECU) Display ECM (Engine Control Module) EFS (Electric Power Steering) ERU (Engine Relay Unit) ESL (Electric Steering Lock) HFA (Hands Full Access ECU(Right-hand Side Or Rear)) IP (Instrument Cluster Panel)		• •			
4008 4008 4008 <td>/ <td< td=""><td>ASM (Anti-slip Mode Selector) AUTH (Starting Authorisation ECU) BATT (Battery Charge Status Unit) BCM (Body Control Module) BSI (Built-in Systems Interface) CAS/HFCU (Coded Anti-start/Hands-free Control Unit) CD (External CD Player) DAF (Diesel Additive Pump) DDC (Driver's Door Control Panel) DDC (Driver's Door Control Panel) DDC (Driver's Seat Comfort Panel) DDC (Driver's Seat Comfort ECU) DSP (Driver's Seat Comfort ECU) DSP (Driver's Seat Pneumatic Functions ECU) Display ECM (Engine Control Module) EFS (Electric Power Steering) ERU (Engine Relay Unit) ESL (Electric Steering Lock) HFA (Hands Full Access ECU(Right-hand Side Or Rear)) IF (Instrument Cluster Panel)</td><td></td><td>• • • • • • • • • • • • • • • • • • •</td><td></td><td></td><td></td></td<></td>	/ / <td< td=""><td>ASM (Anti-slip Mode Selector) AUTH (Starting Authorisation ECU) BATT (Battery Charge Status Unit) BCM (Body Control Module) BSI (Built-in Systems Interface) CAS/HFCU (Coded Anti-start/Hands-free Control Unit) CD (External CD Player) DAF (Diesel Additive Pump) DDC (Driver's Door Control Panel) DDC (Driver's Door Control Panel) DDC (Driver's Seat Comfort Panel) DDC (Driver's Seat Comfort ECU) DSP (Driver's Seat Comfort ECU) DSP (Driver's Seat Pneumatic Functions ECU) Display ECM (Engine Control Module) EFS (Electric Power Steering) ERU (Engine Relay Unit) ESL (Electric Steering Lock) HFA (Hands Full Access ECU(Right-hand Side Or Rear)) IF (Instrument Cluster Panel)</td><td></td><td>• • • • • • • • • • • • • • • • • • •</td><td></td><td></td><td></td></td<>	ASM (Anti-slip Mode Selector) AUTH (Starting Authorisation ECU) BATT (Battery Charge Status Unit) BCM (Body Control Module) BSI (Built-in Systems Interface) CAS/HFCU (Coded Anti-start/Hands-free Control Unit) CD (External CD Player) DAF (Diesel Additive Pump) DDC (Driver's Door Control Panel) DDC (Driver's Door Control Panel) DDC (Driver's Seat Comfort Panel) DDC (Driver's Seat Comfort ECU) DSP (Driver's Seat Comfort ECU) DSP (Driver's Seat Pneumatic Functions ECU) Display ECM (Engine Control Module) EFS (Electric Power Steering) ERU (Engine Relay Unit) ESL (Electric Steering Lock) HFA (Hands Full Access ECU(Right-hand Side Or Rear)) IF (Instrument Cluster Panel)		• • • • • • • • • • • • • • • • • • •			
4008 4008 4008 <td>/ F F F C C C C C C C C C C C C C</td> <td>AUTH (Starting Authorisation ECU) BATT (Battery Charge Status Unit) BCM (Body Control Module) BSI (Built-in Systems Interface) CAS/HFCU (Coded Anti-start/Hands-free Control Unit) CD (External CD Player) DAF (Diesel Additive Pump) DDC (Driver's Door Control Panel) DDC (Driver's Door Control Panel) DDL (Headlamp Height Adjuster/Directional Headlamp) DDC (Rear Final Drive Piloted Clutch) DSC (Driver's Seat Comfort ECU) DSP (Driver's Seat Pneumatic Functions ECU) DSP (Driver's Seat Pneumatic Functions ECU) Display ECM (Engine Control Module) EFS (Electric Power Steering) ERU (Engine Relay Unit) ESL (Electric Steering Lock) HFA (Hands Full Access ECU(Right-hand Side Or Rear)) IP (Instrument Cluster Panel)</td> <td></td> <td>• • • • • • • • • • • • • • • • • • •</td> <td></td> <td></td> <td></td>	/ F F F C C C C C C C C C C C C C	AUTH (Starting Authorisation ECU) BATT (Battery Charge Status Unit) BCM (Body Control Module) BSI (Built-in Systems Interface) CAS/HFCU (Coded Anti-start/Hands-free Control Unit) CD (External CD Player) DAF (Diesel Additive Pump) DDC (Driver's Door Control Panel) DDC (Driver's Door Control Panel) DDL (Headlamp Height Adjuster/Directional Headlamp) DDC (Rear Final Drive Piloted Clutch) DSC (Driver's Seat Comfort ECU) DSP (Driver's Seat Pneumatic Functions ECU) DSP (Driver's Seat Pneumatic Functions ECU) Display ECM (Engine Control Module) EFS (Electric Power Steering) ERU (Engine Relay Unit) ESL (Electric Steering Lock) HFA (Hands Full Access ECU(Right-hand Side Or Rear)) IP (Instrument Cluster Panel)		• • • • • • • • • • • • • • • • • • •			
4008 4008 4008 <td>F F F F C C C C C C C C C C C C C C C C</td> <td>BATT (Battery Charge Status Unit) BCM (Body Control Module) BSI (Built-in Systems Interface) CAS/HFCU (Coded Anti-start/Hands-free Control Unit) CD (External CD Player) DAF (Diesel Additive Pump) DDC (Driver's Door Control Panel) DDC (Driver's Door Control Panel) DDC (Driver's Seat Comfort Panel) DPCRF (Rear Final Drive Piloted Clutch) DSC (Driver's Seat Comfort ECU) DSP (Driver's Seat Pneumatic Functions ECU) DSP (Driver's Seat Pneumatic Functions ECU) Display ECM (Engine Control Module) ESS (Electric Power Steering) ECU (Engine Relay Unit) ESL (Electric Steering Lock) HFA (Hands Full Access ECU(Right-hand Side Or Rear)) IF (Instrument Cluster Panel)</td> <td></td> <td>• • • • • • • • • • • • • • • • • • •</td> <td></td> <td></td> <td>•</td>	F F F F C C C C C C C C C C C C C C C C	BATT (Battery Charge Status Unit) BCM (Body Control Module) BSI (Built-in Systems Interface) CAS/HFCU (Coded Anti-start/Hands-free Control Unit) CD (External CD Player) DAF (Diesel Additive Pump) DDC (Driver's Door Control Panel) DDC (Driver's Door Control Panel) DDC (Driver's Seat Comfort Panel) DPCRF (Rear Final Drive Piloted Clutch) DSC (Driver's Seat Comfort ECU) DSP (Driver's Seat Pneumatic Functions ECU) DSP (Driver's Seat Pneumatic Functions ECU) Display ECM (Engine Control Module) ESS (Electric Power Steering) ECU (Engine Relay Unit) ESL (Electric Steering Lock) HFA (Hands Full Access ECU(Right-hand Side Or Rear)) IF (Instrument Cluster Panel)		• • • • • • • • • • • • • • • • • • •			•
4008 4008 4008 4008	H H H H H H H H H H H H H H H H H H H	BCM (Body Control Module) BSI (Built-in Systems Interface) CAS/HFCU (Coded Anti-start/Hands-free Control Unit) CD (External CD Player) DAF (Diesel Additive Pump) DDC (Driver's Door Control Panel) DHL (Headlamp Height Adjuster/Directional Headlamp) DPCRF (Rear Final Drive Piloted Clutch) DSC (Driver's Seat Comfort ECU) DSP (Driver's Seat Pneumatic Functions ECU) Display ECM (Engine Control Module) ESS (Electric Power Steering) ERU (Engine Relay Unit) ESL (Electric Steering Lock) HFA (Hands Full Access ECU(Right-hand Side Or Rear)) IP (Instrument Cluster Panel)		• • • • • • • • • • • • • • • • • • •			•
4008 4008 4008 4008	H H H H H H H H H H H H H H H H H H H	BSI (Built-in Systems Interface) CAS/HFCU (Coded Anti-start/Hands-free Control Unit) CD (External CD Player) DAF (Diesel Additive Pump) DDC (Driver's Door Control Panel) DDHL (Headlamp Height Adjuster/Directional Headlamp) DPCRF (Rear Final Drive Piloted Clutch) DSC (Driver's Seat Comfort ECU) DSP (Driver's Seat Pneumatic Functions ECU) Display ECM (Engine Control Module) EPS (Electric Power Steering) ERU (Engine Relay Unit) ESL (Electric Steering Lock) HFA (Hands Full Access ECU(Right-hand Side Or Rear)) IP (Instrument Cluster Panel)	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •		•
4008 4008 4008 4008	C C C I I I I I I I F F F F F F C C C C	CAS/HFCU (Coded Anti-start/Hands-free Control Unit) CD (External CD Player) DAF (Diesel Additive Pump) DDC (Driver's Door Control Panel) DDL (Headlamp Height Adjuster/Directional Headlamp) DPCRF (Rear Final Drive Piloted Clutch) DSC (Driver's Seat Comfort ECU) DSP (Driver's Seat Comfort ECU) DSP (Driver's Seat Pneumatic Functions ECU) DSP (Driver's Seat Pneumatic Functions ECU) Display ECM (Engine Control Module) EFS (Electric Power Steering) ERU (Engine Relay Unit) ESL (Electric Steering Lock) HFA (Hands Full Access ECU(Right-hand Side Or Rear)) IP (Instrument Cluster Panel)	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • •	• • • • • • • • • •	•
4008 4008 4008 4008	C I I I I I I I I I I I I I	CD (External CD Player) DAF (Diesel Additive Pump) DDC (Driver's Door Control Panel) DDC (Driver's Door Control Panel) DHL (Headlamp Height Adjuster/Directional Headlamp) DPCRF (Rear Final Drive Piloted Clutch) DPCRF (Rear Final Drive Piloted Clutch) DSC (Driver's Seat Comfort ECU) DSP (Driver's Seat Pneumatic Functions ECU) DSP (Driver's Seat Pneumatic Functions ECU) Display ECM (Engine Control Module) EPS (Electric Power Steering) ERU (Engine Relay Unit) ESL (Electric Steering Lock) HFA (Hands Full Access ECU(Right-hand Side Or Rear)) IP (Instrument Cluster Panel)	• • • • • • • • • • • • • • • • • • •	• • • • • • • •	• • • • • • • • • • • • • • • •	• • • • • • •	•
4008 4008 4008 4008	Г Г Г Г Г Г Г Г Г Г Г Г Г Г Г Г Г Г Г	DAF (Diesel Additive Pump) DDC (Driver's Door Control Panel) DHL (Headlamp Height Adjuster/Directional Headlamp) DPCRF (Rear Final Drive Piloted Clutch) DSC (Driver's Seat Comfort ECU) DSP (Driver's Seat Pneumatic Functions ECU) Display ECM (Engine Control Module) EPS (Electric Power Steering) ERU (Engine Relay Unit) ESL (Electric Steering Lock) HFA (Hands Full Access ECU(Right-hand Side Or Rear)) IP (Instrument Cluster Panel)	• • • • • • • • • • •	• • • • • • • •	• • • • • • • • •	• • • • • •	•
4008 4008 4008 4008	I I I I I I I I I I I I I I	DDC (Driver's Door Control Panel) DHL (Headlamp Height Adjuster/Directional Headlamp) DPCRF (Rear Final Drive Piloted Clutch) DSC (Driver's Seat Comfort ECU) DSP (Driver's Seat Pneumatic Functions ECU) Display ECM (Engine Control Module) EPS (Electric Power Steering) ERU (Engine Relay Unit) ESL (Electric Steering Lock) HFA (Hands Full Access ECU(Right-hand Side Or Rear)) IP (Instrument Cluster Panel)	• • • • • • • • •	• • • • • •	• • • • • • •	• • • • •	•
4008 4008 4008 4008	I I I I I I I I I I I I I I I I I I I	DHL (Headlamp Height Adjuster/Directional Headlamp) DPCRF (Rear Final Drive Piloted Clutch) DSC (Driver's Seat Comfort ECU) DSP (Driver's Seat Pneumatic Functions ECU) DSP (Driver's Seat Pneumatic Functions ECU) Display ECM (Engine Control Module) EFS (Electric Power Steering) ECU (Engine Relay Unit) ESL (Electric Steering Lock) HFA (Hands Full Access ECU(Right-hand Side Or Rear)) IP (Instrument Cluster Panel)	• • • • • • • • •	• • • • • •	• • • • • •	• • • • • • • • • • • • • • • • • • • •	•
4008 4008 4008 4008	I I I I I I I I I I I I I I I I I I I	DPCRF (Rear Final Drive Piloted Clutch) DSC (Driver's Seat Comfort ECU) DSP (Driver's Seat Pneumatic Functions ECU) Display ECM (Engine Control Module) EPS (Electric Power Steering) ERU (Engine Relay Unit) ESL (Electric Steering Lock) HFA (Hands Full Access ECU(Right-hand Side Or Rear)) IP (Instrument Cluster Panel)	• • • • • • •	• • • •	• • • •	• • • • • • • • • • • • • • • • • • • •	•
4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008	I I I I I I I I I I I I I I I I I I I	DSC (Driver's Seat Comfort ECU) DSP (Driver's Seat Pneumatic Functions ECU) Display ECM (Engine Control Module) EPS (Electric Power Steering) ERU (Engine Relay Unit) ESL (Electric Steering Lock) HFA (Hands Full Access ECU(Right-hand Side Or Rear)) IP (Instrument Cluster Panel)	• • • • • • • • • • • • • • • • • • • •	• • • •	• • • • • • • • • • • • • • • • • • • •	•	•
4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008	Г Г F F F F F F F Г Г Г Г Г Г Г Г Г Г Г	DSP (Driver's Seat Pneumatic Functions ECU) Display ECM (Engine Control Module) EPS (Electric Power Steering) ERU (Engine Relay Unit) ESL (Electric Steering Lock) HFA (Hands Full Access ECU(Right-hand Side Or Rear)) IP (Instrument Cluster Panel)	• • • •	• • • • • •	• • • • • • • • • • • • • • • • • • • •	•	•
4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008	I F F F F F M N N N	Display ECM (Engine Control Module) EPS (Electric Power Steering) ERU (Engine Relay Unit) ESL (Electric Steering Lock) HFA (Hands Full Access ECU(Right-hand Side Or Rear)) IP (Instrument Cluster Panel)	• • •	•	•	•	•
4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008	F F F F F M N N N N	ECM (Engine Control Module) EPS (Electric Power Steering) ERU (Engine Relay Unit) ESL (Electric Steering Lock) HFA (Hands Full Access ECU(Right-hand Side Or Rear)) IP (Instrument Cluster Panel)	•	•	•	•	
4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008	F F F F F M M N N	EPS (Electric Power Steering) ERU (Engine Relay Unit) ESL (Electric Steering Lock) HFA (Hands Full Access ECU(Right-hand Side Or Rear)) IP (Instrument Cluster Panel)	•	•	•	-	•
4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008	F F F J M M N N	ERU (Engine Relay Unit) ESL (Electric Steering Lock) HFA (Hands Full Access ECU(Right-hand Side Or Rear)) IP (Instrument Cluster Panel)	•		-	•	
4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008	F F J M M N	ESL (Electric Steering Lock) HFA (Hands Full Access ECU(Right-hand Side Or Rear)) IP (Instrument Cluster Panel)		•	•		
4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008	F J M N N	HFA (Hands Full Access ECU(Right-hand Side Or Rear)) IP (Instrument Cluster Panel)	•		<u> </u>	•	•
4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008	1 M M N	IP (Instrument Cluster Panel)	۲	•	•	•	•
4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008	M M			•	•	•	•
4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008 4008	N P	MCP (Multiplayed Control Paral)	•	•	•	•	●
4008 4008 4008 4008 4008 4008 4008 4008	Ν	MCP (Multiplexed Control Panel)	•	•	•	•	•
4008 4008 4008 4008 4008 4008		MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
4008 4008 4008 4008	2	NAVI (Navigation)	•	•	•	•	•
4008 4008		NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio	•	•	•	•	•
4008 4008		System) PAM (Parking Assistance)	•	•	•	•	•
		PSP (Passenger's Seat Pneumatic Functions ECU)	•	•	•	•	
1000		PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
4008 4008		ROR (Radio Or Radiotelephone(Radio Part))	•	•	•	•	•
4008 4008		RSS (Rain-sunlight Sensor)	•	•	•	•	•
			•	•	•	•	•
		Radio SAS (Steering Wheel Angle Sensor)		•	•	•	•
				•		•	
4008 4008		SB (Seat Belts Not Fastened LED Unit(TNB))	•	-	•	•	
4008 4008	S	SHP/VR (Front Left Seat Heated Pads And Ventilation Regulation ECU)	•	•	•	•	•
4008 4008		SHP/VR (Front Right Seat Heated Pads And Ventilation Regulation ECU)	•	•	•	•	•
4008 4008		SM (Services Module)	•	•	•	•	•
4008 4008		SPMU (Supply Protection And Management Unit)	•	•	•	•	•
4008 4008		SRS (Airbag)	•	•	•	•	•
4008 4008		SSC (Stop And Start Control ECU)		•	•	•	•
4008 4008		SWC (Controls On The Steering Wheel)	•	•	•	•	
4008 4008 4008 4008		SWSM (Controls on the Steering wheel)	•	•	•	•	
4008 4008 4008 4008		SwSM (Switch Module Under ine Steering wheel) Siren	•	•	•	•	•
4008 4008 4008 4008		Siren TCM (Automatic Gearbox)	•	•	•	•	•
			•	-	-	_	•
4008 4008		ICM (Sequential Gear Lever)		•	•	•	
4008 4008		IRU (Trailer Relay Unit)	•	•	•	•	•
4008 4008		rs (Touch Screen)	•	•	•	•	•
4008 4008		VDA (Vehicle Distance Assistance)	•	•	•	•	•
4008 4008		VRD (Voltage Retaining Device)	•	•	•	•	•
4008 4008		Wiper (Windscreen Wiper)	•	•	•	•	•
4008 4008 (CHIN		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
4008 4008 (CHIN		AC (Air Conditioning)	•	•	•	•	•
4008 4008 (CHIN		AC (Rear Air Conditioning)	•	•	•	•	•
4008 4008 (CHIN		ALM (Anti-theft Alarm)	•	•	•	•	•
4008 4008 (CHIN	NA) A	ASM (Anti-slip Mode Selector)	•	•	•	•	•
4008 (CHIN	NA) E	BATT (Battery Charge Status Unit)	•	•	•	•	•
4008 4008 (CHIN	NA) E	BCM (Body Control Module)	•	•	•	•	•
4008 4008 (CHIN	NA) E	BSI (Built-in Systems Interface)	•	•	•	•	•
4008 4008 (CHIN	NA) (CD (External CD Player)	•	•	•	•	•

1000	(000 (700))						
4008	4008 (CHINA)	DAF (Diesel Additive Pump)	•	•	•	•	•
4008	4008 (CHINA)	DDC (Driver's Door Control Panel)	•	•	•	•	•
4008	4008 (CHINA)	DHL (Headlamp Height Adjuster/Directional Headlamp)	•	•	•	•	•
4008	4008 (CHINA)	DSC (Driver's Seat Comfort ECU)	•	•	•	•	•
4008	4008 (CHINA)	DSP (Driver's Seat Pneumatic Functions ECU)	•	•	•	•	•
4008	4008 (CHINA)	Display	•	•	•	•	•
4008	4008 (CHINA)	ECM (Engine Control Module)	•	•	•	•	•
4008	4008 (CHINA)	EPS (Electric Power Steering)	•	•	•	•	•
4008	4008 (CHINA)	ERU (Engine Relay Unit)	•	•	•	•	•
4008	4008 (CHINA)	ESL (Electric Steering Lock)	•	•	•	•	•
4008	4008 (CHINA)	HFA (Hands Full Access ECU(Right-hand Side Or Rear))	•	•	•	•	•
4008	4008 (CHINA)	IP (Instrument Cluster Panel)	•	•	•	•	•
4008	4008 (CHINA)	MCP (Multiplexed Control Panel)	•	•	•	•	•
4008	4008 (CHINA)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
4008	4008 (CHINA)	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio System)	•	•	•	•	•
4008	4008 (CHINA)	PAM (Parking Assistance)	•	•	•	•	•
4008	4008 (CHINA)	PSP (Passenger's Seat Pneumatic Functions ECU)	•	•	•	•	•
4008	4008 (CHINA)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
4008	4008 (CHINA)	RSS (Rain-sunlight Sensor)	•	•	•	•	•
4008	4008 (CHINA)	Radio	•	•	•	•	•
4008	4008 (CHINA)	SB (Seat Belts Not Fastened LED Unit(TNB))	•	•	•	•	•
4008	4008 (CHINA)	SHP/VR (Front Left Seat Heated Pads And Ventilation Regulation ECU)	•	•	•	•	•
4008	4008 (CHINA)	SHP/VR (Front Right Seat Heated Pads And Ventilation Regulation ECU)	•	•	•	•	•
4008	4008 (CHINA)	SM (Services Module)	•	•	•	•	•
4008	4008 (CHINA)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
4008	4008 (CHINA)	SRS (Airbag)	•	•	•	•	•
4008	4008 (CHINA)	SWC (Controls On The Steering Wheel)	•	•	•	•	•
4008	4008 (CHINA)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
4008	4008 (CHINA)	Siren	•	•	•	•	•
4008	4008 (CHINA)	TCM (Automatic Gearbox)	•	•	•	•	•
4008	4008 (CHINA)	TCM (Sequential Gear Lever)	•	•	•	•	•
4008	4008 (CHINA)	TRU (Trailer Relay Unit)	•	•	•	•	•
4008	4008 (CHINA)	TS (Touch Screen)	•	•	•	•	•
4008	4008 (CHINA)	VDA (Vehicle Distance Assistance)	•			•	•
4008	4008 (CHINA)	VRD (Voltage Retaining Device)	•		•	•	
4008	4008 (CHINA)	Wiper (Windscreen Wiper)	•	•	•	•	•
406	406	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	
406	406	AC (Air Conditioning)	•	•	•	•	•
406	406	Alarm	•	•	•	•	•
406	406		•		•	•	
406	406	BSI (Built-in Systems Interface) CD (CD Plaver)	•	•	•	•	
			-		-	-	•
406	406	DAF (Diesel Additive Control Unit)	•		•	•	•
406	406	ECM (Engine Control Module)	•	•	•	•	•
406	406	IP (Instrument Cluster Panel)	•	•	•	•	•
406	406	MULS (Multifunction Screen)	•	•	•	•	•
406	406	NAVI (On-board Navigation System)	•	•	•	•	•
406	406	RBS (Rain And Brightness Sensor)	•	•	•	•	•
406	406	Radio	•	•	•	•	•
406	406	SRS (Airbag)	•	•	•	•	•
406	406	SSP (Electronically Managed Suspension)	•	•	•	•	•
406	406	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
406	406	TCM (Automatic Gearbox)	•	•	•	•	•
406	406 (Coupe)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
406	406 (Coupe)	ECM (Engine Control Module)	•	•	•	•	•
406	406 (Coupe)	SRS (Airbag)	•	•	•	•	•
406	406 (Coupe)	TCM (Automatic Gearbox)	•	•	•	•	•
406	406 (R Coupe)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
406	406 (R Coupe)	AC (Air Conditioning)	•	•	•	•	•
400	· • •						
406	406 (R Coupe)	Alarm	٠	•	•	•	•

406	406 (R Coupe)	CD (CD Player)	•	•	•	•	•
406	406 (R Coupe)	DAF (Diesel Additive Control Unit)	•	•	•	•	•
406	406 (R Coupe)	ECM (Engine Control Module)	•	•	•	•	•
406	406 (R Coupe)	IP (Instrument Cluster Panel)	•	•	•	•	•
406	406 (R Coupe)	MULS (Multifunction Screen)	•	•	•	•	•
406	406 (R Coupe)	NAVI (On-board Navigation System)	•	•	•	•	•
406	406 (R Coupe)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
406	406 (R Coupe)	Radio	•	•	•	•	•
406	406 (R Coupe)	SRS (Airbag)	•	•	•	•	•
406	406 (R Coupe)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
406	406 (R Coupe)	TCM (Automatic Gearbox)	•	•	•	•	•
406	406 (R)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
	406 (R)		•	•	•	•	•
406		AC (Air Conditioning)	-	-	-	-	-
406	406 (R)	Alarm	•	•	•	•	•
406	406 (R)	BSI (Built-in Systems Interface)	•	•	•	•	•
406	406 (R)	CD (CD Player)	•	•	•	•	•
406	406 (R)	DAF (Diesel Additive Control Unit)	•	•	•	•	•
406	406 (R)	ECM (Engine Control Module)	•	•	•	•	•
406	406 (R)	IP (Instrument Cluster Panel)	•	•	•	•	•
406	406 (R)	MULS (Multifunction Screen)	•	•	•	•	•
406	406 (R)	NAVI (On-board Navigation System)	•	•	•	•	•
406	406 (R)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
406	406 (R)	Radio	•	•	•	•	
			•	-	-	•	•
406	406 (R)	SRS (Airbag)	-	•	•	-	-
406	406 (R)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
406	406 (R)	TCM (Automatic Gearbox)	•	•	•	•	•
407		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
407		AC (Air Conditioning)	•	•	•	•	•
407		AH (Additional Heating)	•	•	•	•	•
407		Alarm	•	•	•	•	•
407		BATT (Battery Charge Status Unit)	•	•	•	•	•
407		BSI (Built-in Systems Interface)	•	•	•	•	•
407		BW (Boot Wiring)	•	•	•	•	•
407		CD (CD Player)	•	•		•	•
407		DAF (Diesel Additive Control Unit)	•			•	
			-			-	
407		DDM (Driver's Door Module)	•	•	•	•	•
407		DHL (Directional Headlamps)	•	•	•	•	•
407		DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
407		ECM (Engine Control Module)	•	•	•	•	•
407		EPS (Electric Power Steering)	•	•	•	•	•
407		HFC (Hands Free Control Kit)	•	•	•	•	•
407		HFR (High Frequency Receiver)	•	•	•	•	•
407		HLLC (Left Headlamp Beam Level Corrector)	•	•	•	•	•
407		HLRC (Right Headlamp Beam Corrector)	•	•	•	•	•
407	1	IP (Instrument Cluster Panel)	•	•	•	•	•
407		MULD (Multifunction Display)	•	•	•	•	
			•	-	-	•	
407		PAM (Parking Assistance)		•	•	-	-
407		PDM (Passenger's Door Module)	•	•	•	•	•
407		PSM (Passenger's Seat Memorizing Unit)	•	•	•	•	•
407		RBS (Rain And Brightness Sensor)	•	•	•	•	•
407		Radio	•	•	•	•	•
407		SRS (Airbag)	•	•	•	•	•
407		SSP (Electronically Managed Suspension)	•	•	•	•	•
407		SWSM (Steering Wheel Switching Module)	•	•	•	•	•
407		SunRoof	•	•	•	•	•
407	1	TCM (Automatic Gearbox)	•	•	•	•	•
407		TEU (Telematics Unit)	•	•	•	•	
	+			-	-	•	
407		UID (Under Inflation Detection)		•	•	-	
407	100 (0015 5)	Wiper (Windscreen Wiper)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	AC (Air Conditioning)	•	•	●	●	•

408 408 <th>•</th> <th>• •</th> <th></th> <th>-</th>	•	• •		-
488 498 (2010, 01 - 2014, 00) Marn Lin • • 488 498 (2010, 01 - 2014, 00) B1 60111-in Systems Interface) • • 488 488 (2010, 01 - 2014, 00) D10 010 010 010 010 488 488 (2010, 01 - 2014, 00) D10. 010<				
68 69 (2010.01 - 2014.09) BATT (Battery Charge Status (bit) • • 68 408 (2010.01 - 2014.09) BKI (built-in System Interface) • • 68 408 (2010.01 - 2014.09) DK (driver's hort Module) • • 68 (68 (2010.01 - 2014.09) DK (driver's School Module) • • 68 (68 (2010.01 - 2014.09) DK (driver's School Module) • • 68 (68 (2010.01 - 2014.09) DK (driver's School Module) • • • 68 (68 (2010.01 - 2014.09) EX (drigit Control Module) • • • • 68 (68 (2010.01 - 2014.09) EX (clicit: Forer Sterring Lock) •<	-		• •	•
98 498 (2010, 01 - 2014, 40) Bit (Bailt-in Systems Interface) • • • 088 408 (2010, 01 - 2014, 40) DC (D) (D) (D) (D) (D) (D) • • • 088 408 (2010, 01 - 2014, 40) DC (D) (D) DC (D) • • • • 088 408 (2010, 01 - 2014, 40) DSC (D) (D) CO (D)	-		• •	•
108 408 (2010, 01 - 2014, 40) CD (CD (C	-		• •	•
08 08 (2010, 01 - 2014, 00) DBM (Diriver's boor Module) • • 08 488 (2010, 01 - 2014, 00) DBM (Diriver's Schol Module) • • 018 018 (2010, 01 - 2014, 00) DBW (Diriver's Schol Module) • • 018 018 (2010, 01 - 2014, 00) DBW (Diriver's Schol Module) • • 018 018 (2010, 01 - 2014, 00) DBY (Electric Foreer Steering GP) • • • 018 048 (2010, 01 - 2014, 00) DBY (Electric Foreer Steering GP) • • • • 018 048 (2010, 01 - 2014, 00) DBY (Electric Neering GP) • • • • 018 048 (2010, 01 - 2014, 00) DBY (Electric Neering GP) •	-		• •	•
198 198 (2010. 01 - 2014.99) HL (Discharge Balb With Directional Direct Headman) • • 198 198 (2010. 01 - 2014.99) BM (Driver's Set Menory With) • • • 198 198 (2010. 01 - 2014.99) DM (Engine Control Module) •	<u> </u>		• •	•
108 108 107 ivor ² 5 school Module) Image: Control Module) 408 408 (2010.01 - 2014.05) DBM (Driver ² s School Module) Image: Control Module) Image: Control Module) 108 408 (2010.01 - 2014.05) DBS (Electric Power Steering CEP) Image: Control Module) Image: Control Module) 108 108 (2010.01 - 2014.05) ES (Electric Power Steering CEP) Image: Control Module) 408 0.03 (2010.01 - 2014.05) ES (Electric Steering Lock) Image: Control Module) 408 0.03 (2010.01 - 2014.06) ES (Electricic Ker Panel) Image: Control Ker			• •	•
408 408 (2010, 01 - 2014, 09) EXD (Engine Control Modula) • • 408 408 (2010, 01 - 2014, 09) EXD (Engine Control Modula) • • 408 408 (2010, 01 - 2014, 09) EXP (Electric Power Storring GEP) • • 408 408 (2010, 01 - 2014, 09) EXP (Electric Sterring Lock) • • • 408 408 (2010, 01 - 2014, 09) FR (Folding Roof) • • • • 408 408 (2010, 01 - 2014, 09) FR (Folding Roof) •	•		• •	•
4.88 4.98 (2010, 01 - 2014, 90) EX (Engrine Control Works) • • 4.88 4.98 (2010, 01 - 2014, 90) EX (Engrine Four Steering GEP) • • 4.88 4.98 (2010, 01 - 2014, 90) EX (Engrine Kelry Intro) • • • 4.88 4.98 (2010, 01 - 2014, 90) EX (Electric Steering Lock) • • • 4.88 4.98 (2010, 01 - 2014, 90) BF (Dight Record) • • • • 4.98 4.98 (2010, 01 - 2014, 90) BF (Olgading Roch) •	•		• •	•
408 408 201.01 - 2014.00) PPS (Electric Power Steering) • • 408 408 (2010.01 - 2014.00) PPS (Electric Power Steering) • <td>-</td> <td></td> <td>• •</td> <td>•</td>	-		• •	•
408 408 (2010, 01 - 2014, 09) EPS (Electric Power Steering) • • 408 408 (2010, 01 - 2014, 09) ERU (Engine Relay Unit) • • • 408 408 (2010, 01 - 2014, 09) FR (Folding Roof) • • • • 408 408 (2010, 01 - 2014, 09) FR (Folding Roof) • <td>-</td> <td></td> <td>• •</td> <td>•</td>	-		• •	•
408 408 (2010, 01 - 2014, 09) ERU (Engine Relay Unit) •• •• 408 408 (2010, 01 - 2014, 09) BS. (Electric Steering Lock) •• •• 408 408 (2010, 01 - 2014, 09) BF (Ghands Free Control Kit) •• •• 408 408 (2010, 01 - 2014, 09) BF (Giands Free Control Kit) •• •• •• 408 408 (2010, 01 - 2014, 09) BFR (Eilertrionic key Reader) •• •• •• 408 408 (2010, 01 - 2014, 09) BFR (Giande Pareurue Varning System) •• •• •• 408 408 (2010, 01 - 2014, 09) MAP (Maltiplexed Additive Adding Pump) •• •• •• 408 (408 (2010, 01 - 2014, 09) MSI (Matri Screen Integral To The Instrument Panel) •• •• •• 408 (408 (2010, 01 - 2014, 09) MLD (Maltifunction Isplay) •• •• •• •• 408 (2010, 01 - 2014, 09) MUL (Maltifunction Screen) •• •• •• •• •• •• •• •• •• •• ••	<u> </u>		• •	•
108 100 101 <td><u> </u></td> <td></td> <td>• •</td> <td>•</td>	<u> </u>		• •	•
10 10 10 10 10 408 408 (2010, 01 - 2014, 09) FR (Felding RooT) 40 40 408 408 (2010, 01 - 2014, 09) FR (fligh Prequency Receiver) 40 40 408 408 (2010, 01 - 2014, 09) FF (fligh Prequency Receiver) 40 40 408 408 (2010, 01 - 2014, 09) KF (fligh Prequency Receiver) 40 40 408 408 (2010, 01 - 2014, 09) KF (fligh Prequency Receiver) 40 40 408 408 (2010, 01 - 2014, 09) MCP (Multiplexed Control Panel) 40 40 40 408 408 (2010, 01 - 2014, 09) MCP (Multiplexed Control Panel) 40	•		• •	•
408 408 (2010, 01 - 2014, 09) HFC (fligh Frequency Receiver) • • 408 408 (2010, 01 - 2014, 09) HF (fligh Frequency Receiver) • • 408 408 (2010, 01 - 2014, 09) HF (fligh Frequency Receiver) • • 408 408 (2010, 01 - 2014, 09) EF (flectrianic Key Reader) • • 408 408 (2010, 01 - 2014, 09) MAR (Multiploxed Additive Adding Pump) • • 408 408 (2010, 01 - 2014, 09) MAP (Multiploxed Additive Adding Pump) • • • 408 408 (2010, 01 - 2014, 09) MIC Oultifunction Integral To The Instrument Panel) • • • 408 (2010, 01 - 2014, 09) MIC Oultifunction Streen) • <td>•</td> <td>• •</td> <td>• •</td> <td>•</td>	•	• •	• •	•
108 408 2010. 01 - 2014.09) IFR (fligh Frequency Receiver) • • 408 408 2010. 01 - 2014.09) IP (Instrument Cluster Panel) • • • 408 408 (2010. 01 - 2014.09) KEY (Electrionic Key Reader) • • • • 408 408 (2010. 01 - 2014.09) MAP (Multiplexed Additive Adding Pump) •	•	• •	• •	•
408 408 (2010.01 - 2014.09) IP (Instrument Cluster Panel) ● ● 408 408 (2010.01 - 2014.09) KEY (Electronic Key Roader) ● ● 408 408 (2010.01 - 2014.09) LDNS (Lane Departure Warning System) ● ● 408 408 (2010.01 - 2014.09) MCP (Multiplexed Additive Adding Pump) ● ● 408 408 (2010.01 - 2014.09) MCP (Multiplexed Control Panel) ● ● 408 408 (2010.01 - 2014.09) MCP (Multiplexed Control Panel) ● ● 408 (2010.01 - 2014.09) MCD (Multifunction Stereen) ● ● ● 408 (2010.01 - 2014.09) MUL (Multifunction Streen) ● ● ● 408 (2010.01 - 2014.09) MUT (Telematic Narigator) ● ● ● ● 408 (2010.01 - 2014.09) NUT(TElematic Narigator) ● <td>•</td> <td>• •</td> <td>• •</td> <td>•</td>	•	• •	• •	•
108 408 2010. 01 - 2014. 09) KY (Electrionic Key Render) • • 408 408 (2010. 01 - 2014. 09) LDWS (Lane Departure Warning System) • • • 408 408 (2010. 01 - 2014. 09) MAP (Multiplexed Additive Adding Pump) • • • 408 408 (2010. 01 - 2014. 09) MPD (Moving Panel Deflector) • • • • 408 408 (2010. 01 - 2014. 09) MUL (Multifunction Screen) • <td>•</td> <td>• •</td> <td>• •</td> <td>•</td>	•	• •	• •	•
100 101 2014.09 DDS (Lano Departure Warning System) 1 408 408 (2010.01 - 2014.09) MAP (Multiplexed Additive Adding Pump) 1 1 408 408 (2010.01 - 2014.09) MCP (Multiplexed Control Panel) 1 1 1 408 408 (2010.01 - 2014.09) MCP (Multiplexed Control Panel) 1 1 1 408 408 (2010.01 - 2014.09) MUL (Multifunction Video Camera (CMF)) 1 1 1 408 408 (2010.01 - 2014.09) MUL (Multifunction Screen) 1 1 1 1 408 408 (2010.01 - 2014.09) MUL (Multifunction Screen) 1 1 1 1 408 408 (2010.01 - 2014.09) NWI (Telematic Navigator) 1 1 1 1 408 408 (2010.01 - 2014.09) NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio 1	•	• •	• •	•
408 408 (2010.01 - 2014.09) MAP (Multiplexed Control Panel) • 408 408 (2010.01 - 2014.09) MCP (Multiplexed Control Panel) • • 408 408 (2010.01 - 2014.09) MCP (Multiplexed Control Panel) • • 408 408 (2010.01 - 2014.09) MSI (Matrix Screen Integral To The Instrument Panel) • • 408 408 (2010.01 - 2014.09) MLC (Multifunction Video Camera (MF)) • • 408 408 (2010.01 - 2014.09) MLD (Multifunction Screen) • • • 408 408 (2010.01 - 2014.09) NTI (Telmutic Navigator) • • • • 408 408 (2010.01 - 2014.09) NAU (Telmutic Navigator) •	•	• •	• •	•
408 408 (2010.01 - 2014.09) MCP (Multiplexed Control Panel) • • 408 408 (2010.01 - 2014.09) MSI (Matrix Screen Integral To The Instrument Panel) • • 408 408 (2010.01 - 2014.09) MSI (Matrix Screen Integral To The Instrument Panel) • • 408 408 (2010.01 - 2014.09) MULC (Multifunction Display) • • • 408 408 (2010.01 - 2014.09) MULS (Multifunction Screen) • • • • 408 408 (2010.01 - 2014.09) NAVI (Telematic Navigator) • • • • • 408 408 (2010.01 - 2014.09) NAVI (Telematic Navigator) • <td< td=""><td>•</td><td>• •</td><td>• •</td><td>•</td></td<>	•	• •	• •	•
408 408 (2010.01 - 2014.09) MPD (Moving Panel Deflector) • • 408 408 (2010.01 - 2014.09) NSI (Matrix Screen Integral To The Instrument Panel) • • 408 408 (2010.01 - 2014.09) MULC (Multifunction Display) • • • 408 408 (2010.01 - 2014.09) MULS (Multifunction Screen) • • • 408 408 (2010.01 - 2014.09) NFIS (Not Fastened Warning Light(Thb)) • • • 408 408 (2010.01 - 2014.09) NFIS (Not Fastened Warning Light(Thb)) • • • 408 408 (2010.01 - 2014.09) NFIT/FUC/AS (Mudio-mavigation Or Telematic Unit Or Connected Audio System) • • • 408 408 (2010.01 - 2014.09) PAM (Parking Assistance) • • • • 408 408 (2010.01 - 2014.09) RSG (Rain And Brightness Sensor) •	•	• •	• •	•
Description Description <thdescription< th=""> <thdescription< th=""></thdescription<></thdescription<>	•	• •	• •	•
408 408 (2010.01 - 2014.09) MULC (Multifunction Display) • • 408 408 (2010.01 - 2014.09) MULD (Multifunction Screen) • • • 408 408 (2010.01 - 2014.09) MULS (Multifunction Screen) • • • • 408 408 (2010.01 - 2014.09) NAVI (Telematic Navigator) •	•	• •	• •	•
108 408 (201.0.01 - 2014.09) MULD (Multifunction Display) 408 408 (201.0.01 - 2014.09) MULS (Multifunction Screen) • 408 408 (2010.01 - 2014.09) N-TNB (Not Fastened Warning Light(Tnb)) • • 408 408 (2010.01 - 2014.09) N-TNB (Not Fastened Warning Light(Tnb)) • • • 408 408 (2010.01 - 2014.09) NAVI (Telematic Navigator) • • • • 408 408 (2010.01 - 2014.09) PAM (Parking Assistance) •	•	• •	• •	•
108 108 (2010.01 - 2014.09) MULS (Multifunction Screen) • • 408 408 (2010.01 - 2014.09) N-TNB (Not Fastened Warning Light(Thb)) • • • 408 408 (2010.01 - 2014.09) NAVI (Telematic Navigator) • • • • 408 408 (2010.01 - 2014.09) NAVI (Telematic Navigator) • <td>•</td> <td>• •</td> <td>• •</td> <td>•</td>	•	• •	• •	•
408 408 (2010, 01 - 2014, 09) N-TNB (Not Fastened Warning Light(Tnb)) • • • 408 408 (2010, 01 - 2014, 09) NAVI (Telematic Navigator) • • • • 408 408 (2010, 01 - 2014, 09) NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio System) •	•	• •	• •	•
408 408 (2010.01 - 2014.09) NAVI (Telematic Navigator) ● ● 408 408 (2010.01 - 2014.09) NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio System) ● ● 408 408 (2010.01 - 2014.09) PAM (Parking Assistance) ● ● ● 408 408 (2010.01 - 2014.09) PSM (Passenger's Seat Memorizing Unit) ● ● ● 408 408 (2010.01 - 2014.09) RBS (Rain And Brightness Sensor) ● ● ● 408 408 (2010.01 - 2014.09) RBS (Sarin And Brightness Sensor) ● ● ● 408 408 (2010.01 - 2014.09) RBS (Sarin And Brightness Sensor) ● ● ● 408 408 (2010.01 - 2014.09) SPMU (Supply Protection And Management Unit) ● ● ● 408 408 (2010.01 - 2014.09) SPMU (Supply Protection And Management Unit) ● ● ● ● 408 408 (2010.01 - 2014.09) SPMU (Supply Protection And Management Unit) ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● <	•	• •	• •	•
105 105 105 105 105 105 408 408 408 2010.01 - 2014.09) NAV1/TEU/CAS (Addio-navigation Or Telematic Unit Or Connected Addio 1 408 408 408 2010.01 - 2014.09) PAM (Parking Assistance) 1 1 408 408 2010.01 - 2014.09) PSM (Passenger's Seat Memorizing Unit) 1 1 1 408 408 (2010.01 - 2014.09) RBS (Rain And Brightness Sensor) 1 <t< td=""><td>•</td><td>• •</td><td>• •</td><td>•</td></t<>	•	• •	• •	•
408 408 (2010.01 - 2014.09) System) •• •• •• •• 408 408 (2010.01 - 2014.09) PSM (Parking Assistance) •• <td>•</td> <td>• •</td> <td>• •</td> <td>•</td>	•	• •	• •	•
Auge Auge <th< td=""><td>•</td><td>• •</td><td>• •</td><td>•</td></th<>	•	• •	• •	•
408 408 (2010. 01 - 2014.09) PSM (Passenger's Seat Memorizing Unit) ● ● 408 408 (2010. 01 - 2014.09) RBS (Rain And Brightness Sensor) ● ● 408 408 (2010. 01 - 2014.09) Radio ● ● ● 408 408 (2010. 01 - 2014.09) SM (Services Module) ● ● ● ● 408 408 (2010. 01 - 2014.09) SPMU (Supply Protection And Management Unit) ● <			• •	•
408 408 (2010.01 - 2014.09) RBS (Rain And Brightness Sensor) ● ● 408 408 (2010.01 - 2014.09) Radio ● ● ● 408 408 (2010.01 - 2014.09) SM (Services Module) ● ● ● ● ● 408 408 (2010.01 - 2014.09) SPMU (Supply Protection And Management Unit) ● <	-			
408 408 (2010.01 - 2014.09) Radio • <t< td=""><td><u> </u></td><td></td><td></td><td>•</td></t<>	<u> </u>			•
408 408 (2010.01 - 2014.09) SM (Services Module) ● ● ● 408 408 (2010.01 - 2014.09) SPMU (Supply Protection And Management Unit) ● ● ● 408 408 (2010.01 - 2014.09) SRS (Airbag) ● <				-
408 408 (2010.01 - 2014.09) SPMU (Supply Protection And Management Unit) ● ● 408 408 (2010.01 - 2014.09) SRS (Airbag) ● ● ● 408 408 (2010.01 - 2014.09) SWIC (Steering Wheel With Integral Controls (VCI)) ● ● ● 408 408 (2010.01 - 2014.09) SWSM (Steering Wheel Switching Module) ● <td>-</td> <td></td> <td></td> <td>-</td>	-			-
408 408 (2010. 01 - 2014. 09) SRS (Airbag) ● ● 408 408 (2010. 01 - 2014. 09) SWIC (Steering Wheel With Integral Controls (VCI)) ● ● 408 408 (2010. 01 - 2014. 09) SWSM (Steering Wheel Switching Module) ● ● ● 408 408 (2010. 01 - 2014. 09) SWSM (Switch Module Under The Steering Wheel) ●			• •	•
408 408 (2010.01 - 2014.09) SWIC (Steering Wheel With Integral Controls (VCI)) ● <td></td> <td></td> <td>• •</td> <td>•</td>			• •	•
408 408 (2010. 01 - 2014. 09) SWSM (Steering Wheel Switching Module) ● <	-		• •	•
408 408 (2010.01 - 2014.09) SWSM (Switch Module Under The Steering Wheel) ● ● ● 408 408 (2010.01 - 2014.09) SunRoof ●	-		• •	•
408 408 (2010.01 - 2014.09) SunRoof •	-		• •	•
408 408 (2010.01 - 2014.09) TCM (Automatic Gearbox) ● ● ● 408 408 (2010.01 - 2014.09) TCM (Sequential Gear Lever) ● <			• •	•
408 408 (2010.01 - 2014.09) TCM (Sequential Gear Lever) ●			• •	•
408 408 (2010.01 - 2014.09) TEU (Telematics Unit) ● <td< td=""><td>-</td><td></td><td>• •</td><td>•</td></td<>	-		• •	•
408 408 (2010.01 - 2014.09) TRU (Trailer Relay Unit) ● <			• •	•
408 408 (2010. 01 - 2014. 09) UID (Under Inflation Detection) ● ● ● 408 408 (2010. 01 - 2014. 09) VRD (Voltage Retaining Device) ● ● ● ● 408 408 (2010. 01 - 2014. 09) Wiper (Windscreen Wiper) ● ● ● ● ● 408 408 (2010. 01 - 2014. 09) Wiper (Windscreen Wiper) ● <t< td=""><td>-</td><td></td><td>• •</td><td>•</td></t<>	-		• •	•
408 408 (2010.01 - 2014.09) VRD (Voltage Retaining Device) ● ● ● 408 408 (2010.01 - 2014.09) Wiper (Windscreen Wiper) ●	•		• •	•
408 408 (2010. 01 - 2014. 09) Wiper (Windscreen Wiper) ● ● ● 408 408 (T93) (2014. 10 -) ABS/ESP (Anti-lock brake System Or Electric Stability Program) ● ● ● 408 408 (T93) (2014. 10 -) AC (Air Conditioning) ● ● ● ● 408 408 (T93) (2014. 10 -) AC (Air Conditioning) ● ● ● ●	•	• •	• •	•
408 408 (T93) (2014.10 -) ABS/ESP (Anti-lock brake System Or Electric Stability Program) ● ● 408 408 (T93) (2014.10 -) AC (Air Conditioning) ● ● ● 408 408 (T93) (2014.10 -) Alarm ● ● ● ●	-		• •	•
408 408 (T93) (2014.10 -) AC (Air Conditioning) ● ● ● 408 408 (T93) (2014.10 -) Alarm ● ● ● ●	•	• •	• •	•
408 408 (T93) (2014.10 -) Alarm	•	• •	• •	•
	•	• •	• •	•
408 (T93) (2014.10 -) BATT (Battery Charge Status Unit) •	•	• •	• •	•
	•	• •	• •	•
408 408 (T93) (2014.10 -) BSI (Built-in Systems Interface) • •	•	• •	• •	•
408 408 (T93) (2014.10 -) DSMU (Driver's Seat Memory Unit) • •	•	• •	• •	•
408 408 (T93) (2014.10 -) ECM (Engine Control Module) •	•	• •	• •	•
408 (T93) (2014.10 -) EPS (Electric Power Steering GEP)	•	• •	• •	•
408 (T93) (2014.10 -) ERU (Engine Relay Unit)	•	• •	• •	•
408 (T93) (2014.10 -) ESL (Electric Steering Lock)	•	• •	• •	•
408 (T93) (2014.10 -) HFC (Hands Free Control Kit)	•	• •	• •	•
408 408 (T93) (2014.10 -) HLH (Headlamp Height Corrector) ● ●	•	• •	• •	•

100	(00 (700) (77)		-	-	-	-	_
408	408 (T93) (2014.10 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
408	408 (T93) (2014.10 -)	KEY (Electrionic Key Reader)	•	•	•	•	•
408	408 (T93) (2014.10 -)	MCP (Multiplexed Control Panel)	•	•	•	•	•
408	408 (T93) (2014.10 -)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
408	408 (T93) (2014.10 -)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
408	408 (T93) (2014.10 -)	MULD (Multifunction Display)	•	•	•	•	•
408	408 (T93) (2014.10 -)	MULS (Multifunction Screen)	•	•	•	•	•
408	408 (T93) (2014.10 -)	NAVI (Telematic Navigator)	•	•	•	•	•
408	408 (T93) (2014.10 -)	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio System)	•	•	•	•	•
408	408 (T93) (2014.10 -)	PAM (Parking Assistance)	•	•	•	•	•
408	408 (T93) (2014.10 -)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
408	408 (T93) (2014.10 -)	Radio	•	•	•	•	•
408	408 (T93) (2014.10 -)	SM (Services Module)	•	•	•	•	•
408	408 (T93) (2014.10 -)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
408	408 (T93) (2014.10 -)	SRS (Airbag)	•	•	•	•	•
408	408 (T93) (2014.10 -)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
408	408 (T93) (2014.10 -)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
408	408 (T93) (2014.10 -)	TCM (Automatic Gearbox)	•	•	•	•	•
408	408 (T93) (2014.10 -)	TCM (Sequential Gear Lever)	•	•	•	•	•
408	408 (T93) (2014.10 -)	VRD (Voltage Retaining Device)	•	•	•	•	•
5008	5008	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
5008	5008	AC (Air Conditioning)	•	•	•	•	•
5008	5008	AC (Rear Air Conditioning)	•		•	•	
5008 5008	5008	ALM (Anti-theft Alarm)			•	•	•
5008	5008	AMP (Audio Amplifier)	•	•	•	•	•
5008	5008		•	•	•	•	•
5008	5008	ASM (Anti-slip Mode Selector)	•	•	•	•	•
5008	5008	Alarm	•	•	•	•	•
		BATT (Battery Charge Status Unit)	-	-	-	-	-
5008	5008	BCM (Body Control Module)	•	•	•	•	•
5008	5008	BSI (Built-in Systems Interface)	•	•	•	•	•
5008	5008	CD (CD Player)	•	•	•	•	•
5008	5008	CD (External CD Player)	•	•	•	•	•
5008	5008	CPDMD (Control Panel Dot Matrix Display)	•	•	•	•	•
5008	5008	DAF (Diesel Additive Pump)	•	•	•	•	•
5008	5008	DDC (Driver's Door Control Panel)	•	•	•	•	•
5008	5008	DSC (Driver's Seat Comfort ECU)	•	•	•	•	•
5008	5008	DSP (Driver's Seat Pneumatic Functions ECU)	•	•	•	•	•
5008	5008	Display	•	•	•	•	•
5008	5008	ECM (Engine Control Module)	•	•	•	•	•
5008	5008	EPB (Electric Secondary Brake)	•	•	•	•	•
5008	5008	EPS (Electric Power Steering)	•	•	•	•	•
5008	5008	ERU (Engine Relay Unit)	•	•	•	•	•
5008	5008	ESL (Electric Steering Lock)	•	•	•	•	•
5008	5008	HFA (Hands Full Access ECU(Right-hand Side Or Rear))	•	•	•	•	•
5008	5008	HFC (Hands Free Control Kit)	•	•	•	•	•
5008	5008	HFR (High Frequency Receiver)	•	•	•	•	•
5008	5008	HHV (High Head Vision)	•	•	•	•	•
5008	5008	HLH (Headlamp Height Corrector)	•	•	•	•	•
5008	5008	IP (Instrument Cluster Panel)	•	•	•	•	•
5008	5008	LDWS (Lane Departure Warning System)	•	•	•	•	•
5008	5008	MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
5008	5008	MCP (Multiplexed Control Panel)	•	•	•	•	•
5008	5008	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
5008	5008	MULS (Multifunction Screen)	•	•	•	•	•
5008	5008	N-TNB (Not Fastened Warning Light(Tnb))	•	•	•	•	•
5008	5008	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio	•	•	•	•	•
5008	5008	System) NIU (Network Isolation Unit)	•	•	•	•	•
5008	5008	PAM (Parking Assistance)	•	•	•	•	
5008	5008	PSP (Passenger's Seat Pneumatic Functions ECU)	•	•	•	•	•
5008	5008	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
	5008	RBS (Rain And Brightness Sensor)		•	•	•	
5008	0000	NDS (NATH AND DEEBHUNESS SENSOF)	•			-	•

5008	5008	RSS (Rain-sunlight Sensor)	•	•	•	•	•
5008	5008	Radio	•	•	•	•	•
5008	5008	SB (Seat Belts Not Fastened LED Unit(TNB))	•	•	•	•	•
5008	5008	SHP/VR (Front Left Seat Heated Pads And Ventilation Regulation ECU)	•	•	•	•	•
5008	5008	SHP/VR (Front Right Seat Heated Pads And Ventilation Regulation	•	•	•	•	
5008		ECU)		-	•	•	•
5008	5008	SM (Services Module)	•	•	•	•	•
5008	5008	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
5008 5008	5008 5008	SRS (Airbag)	•	•	•	•	•
5008 5008	5008	SWC (Controls On The Steering Wheel) SWSM (Steering Wheel Switching Module)	•	•	•	•	•
5008 5008	5008	SWSM (Steering wheel Switching module) SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
5008	5008	Siren	•	•	•	•	•
5008	5008	TCM (Automatic Gearbox)	•	•	•	•	•
5008	5008	TCM (Sequential Gear Lever)	•	•	•	•	•
5008	5008	TEU (Telematics Unit)	•	•	•	•	•
5008	5008	TRU (Trailer Relay Unit)	•	•	•	•	•
5008	5008	TS (Touch Screen)	•	•	•	•	•
5008	5008	UID (Under Inflation Detection)	•	•	•	•	•
5008	5008	VDA (Vehicle Distance Assistance)	•	•	•	•	•
5008	5008	VRD (Voltage Retaining Device)	•	•	•	•	•
5008	5008	Wiper (Windscreen Wiper)	•	•	•	•	•
5008	5008 (P84)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
5008	5008 (P84)	AC (Air Conditioning)	•	•	•	•	•
5008	5008 (P84)	AC (Rear Air Conditioning)	•	•	•	•	•
5008	5008 (P84)	ALM (Anti-theft Alarm)	•	•	•	•	•
5008	5008 (P84)	AMP (Audio Amplifier)	•	•	•	•	•
5008	5008 (P84)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
5008	5008 (P84)	BATT (Battery Charge Status Unit)	•	•	•	•	•
5008	5008 (P84)	BCM (Body Control Module)	•	•	•	•	•
5008	5008 (P84)	BSI (Built-in Systems Interface)	•	•	•	•	•
5008	5008 (P84)	CD (External CD Player)	•	•	•	•	•
5008	5008 (P84)	DAF (Diesel Additive Pump)	•	•	•	•	•
5008	5008 (P84)	DDC (Driver's Door Control Panel)	•	•	•	•	•
5008	5008 (P84)	DHL (Headlamp Height Adjuster/Directional Headlamp)	•	•	•	•	•
5008	5008 (P84)	DSC (Driver's Seat Comfort ECU)	•	•	•	•	•
5008	5008 (P84)	DSP (Driver's Seat Pneumatic Functions ECU)	•	•	•	•	•
5008	5008 (P84)	Display	●	•	•	•	•
5008	5008 (P84)	ECM (Engine Control Module)	•	•	•	•	•
5008	5008 (P84)	EPS (Electric Power Steering)	•	•	•	•	•
5008	5008 (P84)	ERU (Engine Relay Unit)	•	•	•	•	•
5008	5008 (P84)	ESL (Electric Steering Lock)	•	•	•	•	•
5008	5008 (P84)	HFA (Hands Full Access ECU(Right-hand Side Or Rear))	•	•	•	•	•
5008	5008 (P84)	IP (Instrument Cluster Panel)	•	•	•	•	•
5008	5008 (P84)	MCP (Multiplexed Control Panel)	•	•	•	•	•
5008	5008 (P84)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
5008	5008 (P84)	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio System)	•	•	•	•	•
5008	5008 (P84)	PAM (Parking Assistance)	•	•	•	•	•
5008	5008 (P84)	PSP (Passenger's Seat Pneumatic Functions ECU)	•	•	•	•	•
5008	5008 (P84)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
5008	5008 (P84)	RSS (Rain-sunlight Sensor)	•	•	•	•	•
5008	5008 (P84)	Radio	•	•	•	•	•
5008	5008 (P84)	SB (Seat Belts Not Fastened LED Unit(TNB))	•	•	•	•	•
5008	5008 (P84)	SHP/VR (Front Left Seat Heated Pads And Ventilation Regulation ECU)	•	•	•	•	•
5008	5008 (P84)	SHP/VR (Front Right Seat Heated Pads And Ventilation Regulation	•	•	•	•	
		ECU)			-	-	
5008	5008 (P84)	SM (Services Module)	•	•	•	•	•
5008	5008 (P84)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
5008	5008 (P84)	SRS (Airbag)	•	•	•	•	•
5008	5008 (P84)	SWC (Controls On The Steering Wheel)	•	•	•	•	•
5008	5008 (P84)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
5008	5008 (P84)	Siren	•	•	•	•	

90090190	5008	5008 (D84)	TCN (Automatic Coarbox)	•		•	•	•
90090091	5008	5008 (P84)	TCM (Automatic Gearbox)		•		-	
NUME Diff. 2501 Diff. Ordership Internal Image: State internal i						_	-	•
9299299299299209					-	-	-	•
9001100100100100100100100100100110010010010010010010010010010011001001001001001001001001001001001100 <td></td> <td></td> <td></td> <td></td> <td>-</td> <td>-</td> <td>-</td> <td>-</td>					-	-	-	-
90890890890990890				-		-	-	-
98 99 99 85-29: Garcia head y and the partie Sublities Prograd ••							-	•
99999999999990 <td></td> <td></td> <td></td> <td></td> <td>-</td> <td>-</td> <td>-</td> <td>•</td>					-	-	-	•
98 <td></td> <td></td> <td></td> <td></td> <td>•</td> <td></td> <td></td> <td>•</td>					•			•
99 99 4F Additional Barting) •• •• •• •• •• •• •• 58 69 Attra •• •• •• •• •• 58 69 Attra Status Ball •• •• •• •• •• 58 69 041 Attra Status Ball •• •• •• •• 58 69 051 Dattra Status Ball •• •• •• •• 58 69 051 Dattra Status Ball •• •• •• •• 58 69 051 Dattra Status Ball •• •• •• •• 59 09 051 Dattra Status Ball •• •• •• •• 505 08 08 07 Dattra Status Ball •• •• •• •• 505 08 08 175 Cherrit Starting G87 •• •• •• •• 506 08 185 Cherrit Starting G87 •• •• •• •• 507 08 185 Cherrit Starting G87 •• •• •• •• 508 08 185					•	-	-	•
98 99 99 90 <td< td=""><td></td><td></td><td></td><td></td><td>•</td><td></td><td></td><td>•</td></td<>					•			•
SSM OS Harn Image: Constraint of the second of the sec						-	-	•
SSM 064 D47 Christory Darge Status Brid 0<				-			-	•
Sign Diff Interim Bettery EU) Image: Sign						-	-	-
538 698 SI (bill-in System Interface) •						-	-	-
SIM S				-	-	-	-	
SBM SBM UPC UPTYPT'S Sear (Manny Neit) Image: Sear				-	-		-	-
508 508 DNU (Drive''s Set Maary Thi) •	508			-		-	-	-
908 508 6.9. Oraçine Control Module) • </td <td>508</td> <td></td> <td></td> <td>-</td> <td>•</td> <td>-</td> <td>-</td> <td>•</td>	508			-	•	-	-	•
508 508 EPI (Electric Secondary Brake) •	508	508	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
588 588 FS (Electric Power Storing GEP) •	508				-	-	-	•
508 508 E81 (Englise Relay Uni1) • <td< td=""><td>508</td><td>508</td><td></td><td>•</td><td>•</td><td>•</td><td>-</td><td>•</td></td<>	508	508		•	•	•	-	•
588 584 ISL (Electric Steering Lock) •	508	508	EPS (Electric Power Steering GEP)	•	•	•	•	•
508 BC (Bands Free Control Kit) Image: Control Kit) Image: Control Kit)	508	508	ERU (Engine Relay Unit)	•	•	•	•	•
508 BIV Oligh Road Vision) • </td <td>508</td> <td>508</td> <td>ESL (Electric Steering Lock)</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>	508	508	ESL (Electric Steering Lock)	•	•	•	•	•
508 D8 D8 D9 0 <td>508</td> <td>508</td> <td>HFC (Hands Free Control Kit)</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>	508	508	HFC (Hands Free Control Kit)	•	•	•	•	•
508 INC-1 (flybrid Control ECU 1) Image: Control ECU 2) Image: Control ECU 2) 508 508 IPC (instrument Cluster Panel) Image: Control ECU 2) 508 508 IPC (instrument Cluster Panel) Image: Control ECU 2) 508 508 IPC (instrument Cluster Panel) Image: Control ECU 2) 508 508 NEX (Main Beams Assistant) Image: Control ECU 2) 508 508 NEX (Main Beams Assistant) Image: Control ECU 2) 508 508 NOTO (Motorised Boot ECU 2) Image: Control ECU 2) 508 508 NOTO (Motorised Boot ECU 2) Image: Control ECU 2) 508 508 NOTO (Motorised Boot ECU 2) Image: Control ECU 2) 508 508 NOTO (Motorised Boot ECU 2) Image: Control ECU 2) 508 508 NOT (Telomatic Narjator) Image: Control ECU 2) Image: Control ECU 2) 508 508 NMI (Telomatic Narjator) Image: Control ECU 2) Image: Control ECU 2) 508 508 Radio Image: Control ECU 2) Image: Control ECU 2) Image: Control ECU 2) 508 508 S08 S08 S08	508	508	HHV (High Head Vision)	•	•	•	•	•
608 508 IIX-2 (Bybrid Control ECU 2) Image: Control ECU 2) Image: Control ECU 2) 508 508 IP (Instrument Cluster Panel) Image: Control ECU 2) Image: Control ECU 2) 508 508 KEY (Electrionic Key Reader) Image: Control EcU 2) Image: Control EcU 2) 508 508 KEY (Electrionic Key Reader) Image: Control EcU 2) Image: Control EcU 2) 508 508 MER (Minin Beass Assistant) Image: Control EcU 2) Image: Control EcU 2) 508 508 MCP (Mitiplexed Control Panel) Image: Control EcU 2) Image: Control EcU 2) 508 508 MCP (Mitiplexed Control Panel) Image: Control EcU 2) Image: Control EcU 2) 508 508 MCD (Mitiplexed Control Panel) Image: Control EcU 2) Image: Control EcU 2) 508 508 MSI (Mitifunction Screen) Image: Control EcU 2) Image: Control EcU 2) 508 508 MI (Parking Assistanc) Image: Control EcU 2) Image: Control EcU 2) Image: Control EcU 2) 508 508 Bali (Parking Assistance) Image: Control EcU 2) Image: Control EcU 2) Image: Control EcU 2) 508 508	508	508	HMS (Hybrid Mode Selector)	•	•	•	•	•
508 IP (Instrument Cluster Panel) 508 509 MUT O (Motorised Root ECD) 40 	508	508	HYC-1 (Hybrid Control ECU 1)	•	•	•	•	•
508 KFY (Electrionic Key Reader) 	508	508	HYC-2 (Hybrid Control ECU 2)	•	•	•	•	•
508 MEA (Main Beams Assistant) 	508	508	IP (Instrument Cluster Panel)	•	•	•	•	•
508 MCP (Multiplexed Control Panel) Image: Control Panel) Image: Control Panel) 508 508 MOTO (Motorised Boot ECU) Image: Control Panel) Image: Control Panel) 508 508 MSI (Matrix Screen Integral To The Instrument Panel) Image: Control Panel) Image: Control Panel) 508 508 MULS (Multifunction Screen) Image: Control Panel) Image: Control Panel) 508 508 NVI (Telematic Navigator) Image: Control Panel) Image: Control Panel) 508 508 RAM RS (Rain And Brightness Sensor) Image: Control Panel) Image: Control Panel 508 508 RAdio Image: Control Panel Image: Control Panel Image: Control Panel 508 508 S8 Seat Belts Not Fastened LED Unit (TND) Image: Control Panel Image: Control Panel 508 508 S9 S9 S9 Image: Control Panel Image: Control Panel 508 508 S9 S9 S9 S9 Image: Control Panel Image: Control Panel 508 508 S9 S9 S9 S9 Image: Control Panel Image: Control Panel	508	508	KEY (Electrionic Key Reader)	•	•	•	•	•
508 MOTO (Motorised Boot ECU) Image: Constraint of the second secon	508	508	MBA (Main Beams Assistant)	•	•	•	•	•
508 508 MS1 (Matrix Screen Integral To The Instrument Panel) • <td>508</td> <td>508</td> <td>MCP (Multiplexed Control Panel)</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>	508	508	MCP (Multiplexed Control Panel)	•	•	•	•	•
508MULS (Multifunction Screen)•••<	508	508	MOTO (Motorised Boot ECU)	•	•	•	•	•
508508NAVI (Telematic Navigator)••	508	508	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
508PAM (Parking Assistance)Image: Constraint of the system of the	508	508	MULS (Multifunction Screen)	•	•	•	•	•
508508RBS (Rain Ad Brightness Sensor)Image: Constraint of the sensor of	508	508	NAVI (Telematic Navigator)	•	•	•	•	•
508508Radio••<	508	508	PAM (Parking Assistance)	•	•	•	•	•
508508Radio••<	508	508	RBS (Rain And Brightness Sensor)	•	•	•	•	•
508508SB (Seat Belts Not Fastened LED Unit (TNB))Image: Constraint of the state	508	508		•	•	•	•	•
508508SM (Services Module)Image: SM (Services Module)Image: SM (Services Module)Image: SM (Services Module)508508SPMU (Supply Protection And Management Unit)Image: SM (Services Module)Image: SM (Services	508	508	SB (Seat Belts Not Fastened LED Unit(TNB))	•	•	•	•	•
508508SPMU (Supply Protection And Management Unit)Image: Constraint of the system of	508			•	•	•	•	•
508508SRS (Airbag)••• <td>508</td> <td>508</td> <td>SPMU (Supply Protection And Management Unit)</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>	508	508	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
508508SSP (Active Damper Electronic Unit)Image: Constraint of the start of the	508			•	•	•	•	•
508508SWIC (Steering Wheel With Integral Controls (VCI))•••<	508			•	•	•	•	•
508508SWSM (Switch Module Under The Steering Wheel(Top Of Column))••<				-	-	-	-	•
508508TCM (Automatic Gearbox)•• <td></td> <td></td> <td></td> <td>-</td> <td>•</td> <td>-</td> <td></td> <td>•</td>				-	•	-		•
508508TEU/NAVI (Telematics Unit (Rtx) Or Radio-navigation)••• <td></td> <td></td> <td></td> <td></td> <td>•</td> <td>-</td> <td>-</td> <td>•</td>					•	-	-	•
508508TRU (Trailer Relay Unit)•• </td <td></td> <td></td> <td></td> <td>-</td> <td>-</td> <td>-</td> <td>-</td> <td></td>				-	-	-	-	
508508UID (Under Inflation Detection)Image: Constraint of the state of the stat					-	-	-	
508508VRD (Voltage Retaining Device)•••<				-	-	-	-	-
508508Wiper-L (Windscreen Wiper (Left-hand Side))•• <td></td> <td></td> <td></td> <td>-</td> <td>-</td> <td>-</td> <td>-</td> <td>-</td>				-	-	-	-	-
508508Wiper-R (Windscreen Wiper (Right-hand Side))•• </td <td></td> <td></td> <td></td> <td></td> <td>-</td> <td></td> <td></td> <td></td>					-			
508508 (Hybrid4)ABS/ESP (Anti-lock brake System Or Electric Stability Program)••• <td></td> <td></td> <td></td> <td>-</td> <td>-</td> <td></td> <td>-</td> <td></td>				-	-		-	
508 508 (Hybrid4) AC (Air Conditioning) ●					-	-	-	-
508508 (Hybrid4)AC (Rear Air Conditioning)•••				-	-	-	-	
508508 (Hybrid4)AH (Additional Heating)••••••508508 (Hybrid4)ALM (Anti-theft Alarm)•••••••508508 (Hybrid4)AMP (Audio Amplifier)•••••••						-	-	
508508 (Hybrid4)ALM (Anti-theft Alarm)•••••508508 (Hybrid4)AMP (Audio Amplifier)••••••				-	<u> </u>	-	-	•
508 (Hybrid4) AMP (Audio Amplifier) • • • • •	508			-		-	-	•
					-	-	-	•
508 (Hybrid4) BATT (Battery Charge Status Unit)	508				-	•	-	•
	508	508 (Hybrid4)	BATT (Battery Charge Status Unit)					•

r			1 -	-			
508	508 (Hybrid4)	BATT (Traction Battery ECU)	•	•	•	•	•
508	508 (Hybrid4)	BSI (Built-in Systems Interface)	•	•	•	•	•
508	508 (Hybrid4)	DBVHA (Discharge Bulbs Vertical And Horizontal Adjustment)	•	•	•	•	•
508	508 (Hybrid4)	DCP (Door Control Pad)	•	•	•	•	•
508	508 (Hybrid4)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
508	508 (Hybrid4)	ECM (Engine Control Module)	•	•	•	•	•
508	508 (Hybrid4)	EPB (Electric Secondary Brake)	•	•	•	•	•
508	508 (Hybrid4)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
508	508 (Hybrid4)	ERU (Engine Relay Unit)	•	•	•	•	•
508	508 (Hybrid4)	ESL (Electric Steering Lock)	•	•	•	•	•
508	508 (Hybrid4)	HFC (Hands Free Control Kit)	•	•	•	•	•
508	508 (Hybrid4)	HHV (High Head Vision)	•	•	•	•	•
508	508 (Hybrid4)	HMS (Hybrid Mode Selector)	•	•	•	•	•
508	508 (Hybrid4)	HYG-1 (Hybrid Control ECU 1)	•	•	•	•	•
508	508 (Hybrid4)	HYC-2 (Hybrid Control ECU 2)	•	•	•	•	•
			•	•	•	•	•
508	508 (Hybrid4)	IP (Instrument Cluster Panel)	-		-	-	-
508	508 (Hybrid4)	KEY (Electrionic Key Reader)	•	•	•	•	•
508	508 (Hybrid4)	MBA (Main Beams Assistant)	•	•	•	•	•
508	508 (Hybrid4)	MCP (Multiplexed Control Panel)	•	•	•	•	•
508	508 (Hybrid4)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
508	508 (Hybrid4)	MULD (Multifunction Display)	•	•	•	•	●
508	508 (Hybrid4)	NAVI (Telematic Navigator)	•	•	•	•	•
508	508 (Hybrid4)	PAM (Parking Assistance)	•	•	•	•	•
508	508 (Hybrid4)	Radio RD5	•	•	•	•	•
508	508 (Hybrid4)	SB (Seat Belts Not Fastened LED Unit(TNB))	•	•	•	•	•
508	508 (Hybrid4)	SM (Services Module)	•	•	•	•	•
508	508 (Hybrid4)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
508	508 (Hybrid4)	SRS (Airbag)	•	•	•	•	•
508	508 (Hybrid4)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
508	508 (Hybrid4)		•	•	•	•	
		SWSM (Switch Module Under The Steering Wheel(Top Of Column)) TCM (Automatic Gearbox)			•	•	
508	508 (Hybrid4)					-	•
508	508 (Hybrid4)	TEU (Telematics Unit)	•	•	•	•	•
508	508 (Hybrid4)	TRU (Trailer Relay Unit)	•	•	•	•	•
508	508 (Hybrid4)	UID (Under Inflation Detection)	•	•	•	•	•
508	508 (Hybrid4)	VRD (Voltage Retaining Device)	•	•	•	•	•
508	508 (Hybrid4)	Wiper-L (Windscreen Wiper (Left-hand Side))	•	•	•	•	•
508	508 (Hybrid4)	Wiper-R (Windscreen Wiper (Right-hand Side))	•	•	•	•	•
508	508 (RXH Hybrid4)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
508	508 (RXH Hybrid4)	AC (Air Conditioning)	•	•	•	•	•
508	508 (RXH Hybrid4)	AC (Rear Air Conditioning)	•	•	•	•	•
508	508 (RXH Hybrid4)	AH (Additional Heating)	•	•	•	•	•
508	508 (RXH Hybrid4)	ALM (Anti-theft Alarm)	•	•	•	•	•
508	508 (RXH Hybrid4)	AMP (Audio Amplifier)	•	•	•	•	•
508	508 (RXH Hybrid4)	BATT (Battery Charge Status Unit)	•	•	•	•	•
508	508 (RXH Hybrid4)	BATT (Traction Battery ECU)	•	•	•	•	•
508	508 (RXH Hybrid4)	BSI (Built-in Systems Interface)	•	•	•	•	•
508	508 (RXH Hybrid4)	DBVHA (Discharge Bulbs Vertical And Horizontal Adjustment)	•		•	•	
			•	•	•	•	•
508	508 (RXH Hybrid4)	DCP (Door Control Pad)			-	-	-
508	508 (RXH Hybrid4)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
508	508 (RXH Hybrid4)	ECM (Engine Control Module)	•	•	•	•	•
508	508 (RXH Hybrid4)	EPB (Electric Secondary Brake)	•	•	•	•	•
508	508 (RXH Hybrid4)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
508	508 (RXH Hybrid4)	ERU (Engine Relay Unit)	•	•	•	•	•
508	508 (RXH Hybrid4)	ESL (Electric Steering Lock)	•	•	•	•	•
508	508 (RXH Hybrid4)	HFC (Hands Free Control Kit)	•	•	•	•	•
508	508 (RXH Hybrid4)	HHV (High Head Vision)	•	•	•	•	•
508	508 (RXH Hybrid4)	HMS (Hybrid Mode Selector)	•	•	•	•	•
508	508 (RXH Hybrid4)	HYC-1 (Hybrid Control ECU 1)	•	•	•	•	•
508	508 (RXH Hybrid4)	HYC-2 (Hybrid Control ECU 2)	•	•	•	•	•
508	508 (RXH Hybrid4)	IP (Instrument Cluster Panel)	•	•	•	•	•
				•	•	•	•
508	508 (RXH Hybrid4)	KEY (Electrionic Key Reader)		-	•	•	•

508 508 508 508	8 (RXH Hybrid4) 98 (RXH Hybrid4)	MBA (Main Beams Assistant) MCP (Multiplexed Control Panel) MSI (Matrix Screen Integral To The Instrument Panel) MULD (Multifunction Display) NAVI (Telematic Navigator) PAM (Parking Assistance) Radio RD5 SB (Seat Belts Not Fastened LED Unit(TNB)) SM (Services Module) SPMU (Supply Protection And Management Unit) SRS (Airbag) SWIC (Steering Wheel With Integral Controls (VCI)) SWSM (Switch Module Under The Steering Wheel(Top Of Column)) TCM (Automatic Gearbox) TEU (Telematics Unit) TRU (Trailer Relay Unit) UID (Under Inflation Detection) VRD (Voltage Retaining Device) Wiper-L (Windscreen Wiper (Left-hand Side))	• •	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •		• • • • • • • • • • • • • • • • • • •
508 508 508 508	8 (RXH Hybrid4) 8 (RXH Hybrid4)	MSI (Matrix Screen Integral To The Instrument Panel) MULD (Multifunction Display) NAVI (Telematic Navigator) PAM (Parking Assistance) Radio RD5 SB (Seat Belts Not Fastened LED Unit(TNB)) SM (Services Module) SPMU (Supply Protection And Management Unit) SRS (Airbag) SWIC (Steering Wheel With Integral Controls (VCI)) SWSM (Switch Module Under The Steering Wheel(Top Of Column)) TCM (Automatic Gearbox) TEU (Telematics Unit) TRU (Trailer Relay Unit) UID (Under Inflation Detection) VRD (Voltage Retaining Device) Wiper-L (Windscreen Wiper (Left-hand Side))	• •	• •			• • • • • • • • • • • • • • •
508 508 508 508	88 (RXH Hybrid4)	MULD (Multifunction Display) NAVI (Telematic Navigator) PAM (Parking Assistance) Radio RD5 SB (Seat Belts Not Fastened LED Unit(TNB)) SM (Services Module) SPMU (Supply Protection And Management Unit) SRS (Airbag) SWIC (Steering Wheel With Integral Controls (VCI)) SWSM (Switch Module Under The Steering Wheel(Top Of Column)) TCM (Automatic Gearbox) TEU (Telematics Unit) TRU (Trailer Relay Unit) UID (Under Inflation Detection) VRD (Voltage Retaining Device) Wiper-L (Windscreen Wiper (Left-hand Side))	• •	• •	• • • • • • • • • • • • • • • • • • •		• • • • • • • • • • • • • • •
508 508 508 508	8 (RXH Hybrid4) 9 (RXH Hybrid4)	NAVI (Telematic Navigator) PAM (Parking Assistance) Radio RD5 SB (Seat Belts Not Fastened LED Unit(TNB)) SM (Services Module) SPMU (Supply Protection And Management Unit) SRS (Airbag) SWIC (Steering Wheel With Integral Controls (VCI)) SWSM (Switch Module Under The Steering Wheel(Top Of Column)) TCM (Automatic Gearbox) TEU (Telematics Unit) TEU (Telematics Unit) TRU (Trailer Relay Unit) UID (Under Inflation Detection) VRD (Voltage Retaining Device) Wiper-L (Windscreen Wiper (Left-hand Side))	0 0	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •		• • • • • • • • • • • • • • •
508 508 508 508	88 (RXH Hybrid4)	PAM (Parking Assistance) Radio RD5 SB (Seat Belts Not Fastened LED Unit(TNB)) SM (Services Module) SPMU (Supply Protection And Management Unit) SRS (Airbag) SWIC (Steering Wheel With Integral Controls (VCI)) SWSM (Switch Module Under The Steering Wheel(Top Of Column)) TCM (Automatic Gearbox) TEU (Telematics Unit) TRU (Trailer Relay Unit) UID (Under Inflation Detection) VRD (Voltage Retaining Device) Wiper-L (Windscreen Wiper (Left-hand Side))	0 0	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • •	• • • • • • • •
508 508 508 508	88 (RXH Hybrid4)	Radio RD5 SB (Seat Belts Not Fastened LED Unit(TNB)) SM (Services Module) SPMU (Supply Protection And Management Unit) SRS (Airbag) SWIC (Steering Wheel With Integral Controls (VCI)) SWSM (Switch Module Under The Steering Wheel(Top Of Column)) TCM (Automatic Gearbox) TEU (Telematics Unit) TRU (Trailer Relay Unit) UID (Under Inflation Detection) VRD (Voltage Retaining Device) Wiper-L (Windscreen Wiper (Left-hand Side))	• •	• • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • •	•
508 508 508 508	8 (RXH Hybrid4) 9 (RXH Hybrid4) 9 (RXH Hybrid4)	SB (Seat Belts Not Fastened LED Unit(TNB)) SM (Services Module) SPMU (Supply Protection And Management Unit) SRS (Airbag) SWIC (Steering Wheel With Integral Controls (VCI)) SWSM (Switch Module Under The Steering Wheel(Top Of Column)) TCM (Automatic Gearbox) TEU (Telematics Unit) TRU (Trailer Relay Unit) UID (Under Inflation Detection) VRD (Voltage Retaining Device) Wiper-L (Windscreen Wiper (Left-hand Side))	0 0	• • • • • • • • •	• • • • • • • •	• • • • • • •	•
508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508	8 (RXH Hybrid4) 98 (RXH Hybrid4)	SM (Services Module) SPMU (Supply Protection And Management Unit) SRS (Airbag) SWIC (Steering Wheel With Integral Controls (VCI)) SWSM (Switch Module Under The Steering Wheel(Top Of Column)) TCM (Automatic Gearbox) TEU (Telematics Unit) TEU (Telematics Unit) TRU (Trailer Relay Unit) UID (Under Inflation Detection) VRD (Voltage Retaining Device) Wiper-L (Windscreen Wiper (Left-hand Side))	• • • • • • • • • • • • • • • • • • •	• • • • • • • • •	• • • • • • • •	• • • • • •	•
508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508	88 (RXH Hybrid4)	SPMU (Supply Protection And Management Unit) SRS (Airbag) SWIC (Steering Wheel With Integral Controls (VCI)) SWSM (Switch Module Under The Steering Wheel(Top Of Column)) TCM (Automatic Gearbox) TEU (Telematics Unit) TRU (Trailer Relay Unit) UID (Under Inflation Detection) VRD (Voltage Retaining Device) Wiper-L (Windscreen Wiper (Left-hand Side))	• • • • • • • • • • • • • • • • • • •	• • • • •	• • • • • •	• • • • •	•
508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508	8 (RXH Hybrid4) 18 (RXH Hybrid4)	SRS (Airbag) SWIC (Steering Wheel With Integral Controls (VCI)) SWSM (Switch Module Under The Steering Wheel(Top Of Column)) TCM (Automatic Gearbox) TEU (Telematics Unit) TRU (Trailer Relay Unit) UID (Under Inflation Detection) VRD (Voltage Retaining Device) Wiper-L (Windscreen Wiper (Left-hand Side))	• • • • • • • • • • • • • • •	• • • • •	• • • • • • • • • • • • • • • • • • • •	• • • •	•
508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508	18 (RXH Hybrid4)	SWIC (Steering Wheel With Integral Controls (VCI)) SWSM (Switch Module Under The Steering Wheel(Top Of Column)) TCM (Automatic Gearbox) TEU (Telematics Unit) TRU (Trailer Relay Unit) UID (Under Inflation Detection) VRD (Voltage Retaining Device) Wiper-L (Windscreen Wiper (Left-hand Side))	• • • • • • • • • • • •	• • • • •	• • • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • • •	•
508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508	8 (RXH Hybrid4) 8 (RXH Hybrid4) 8 (RXH Hybrid4) 8 (RXH Hybrid4) 98 (RXH Hybrid4)	SWSM (Switch Module Under The Steering Wheel(Top Of Column)) TCM (Automatic Gearbox) TEU (Telematics Unit) TRU (Trailer Relay Unit) UID (Under Inflation Detection) VRD (Voltage Retaining Device) Wiper-L (Windscreen Wiper (Left-hand Side))	• • • • •	• • • • •	• • • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • • •	•
508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508	8 (RXH Hybrid4) 8 (RXH Hybrid4)	TCM (Automatic Gearbox) TEU (Telematics Unit) TRU (Trailer Relay Unit) UID (Under Inflation Detection) VRD (Voltage Retaining Device) Wiper-L (Windscreen Wiper (Left-hand Side))	• • • • •	• • • •	•	•	•
508 508 508 508 508 508 508 508 508 508 508 508 508 508 508 508	8 (RXH Hybrid4) 98 (RXH Hybrid4)	TEU (Telematics Unit) TRU (Trailer Relay Unit) UID (Under Inflation Detection) VRD (Voltage Retaining Device) Wiper-L (Windscreen Wiper (Left-hand Side))	•	•	•	•	•
508 508 508 508 508 508 508 508 508 508 508 508 508 508	 18 (RXH Hybrid4) 	TRU (Trailer Relay Unit) UID (Under Inflation Detection) VRD (Voltage Retaining Device) Wiper-L (Windscreen Wiper (Left-hand Side))	•	•	•	•	•
508 508 508 508 508 508 508 508 508 508	8 (RXH Hybrid4) 8 (RXH Hybrid4) 8 (RXH Hybrid4) 8 (RXH Hybrid4)	UID (Under Inflation Detection) VRD (Voltage Retaining Device) Wiper-L (Windscreen Wiper (Left-hand Side))	•	•	-	-	•
508 508 508 508 508 508	8 (RXH Hybrid4) 8 (RXH Hybrid4) 8 (RXH Hybrid4)	VRD (Voltage Retaining Device) Wiper-L (Windscreen Wiper (Left-hand Side))	•				
508508508508	08 (RXH Hybrid4) 08 (RXH Hybrid4)	Wiper-L (Windscreen Wiper (Left-hand Side))					•
508 508	08 (RXH Hybrid4)				•	•	•
				•	•	•	•
		Wiper-R (Windscreen Wiper (Right-hand Side))	•	•	•	•	•
000	(ium)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
508 508	98 (RXH)	AC (Air Conditioning)	•	•	•	•	•
		AC (Rear Air Conditioning)	•	•	•	•	
	. ,		•	•	•	•	
		AH (Additional Heating)	•		-	•	
		ALM (Anti-theft Alarm)		•	•	-	
		AMP (Audio Amplifier)	•	•	•	•	•
508 508		BATT (Battery Charge Status Unit)	•	•	•	•	•
		BATT (Traction Battery ECU)	•	•	•	•	•
508 508	08 (RXH)	BSI (Built-in Systems Interface)	•	•	•	•	•
508 508	08 (RXH)	DBVHA (Discharge Bulbs Vertical And Horizontal Adjustment)	•	•	•	•	•
508 508	98 (RXH)	DCP (Door Control Pad)	•	•	•	•	•
508 508	98 (RXH)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
508 508	08 (RXH)	ECM (Engine Control Module)	•	•	•	•	•
508 508	08 (RXH)	EPB (Electric Secondary Brake)	•	•	•	•	•
508 508	98 (RXH)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
508 508	08 (RXH)	ERU (Engine Relay Unit)	•	•	•	•	•
508 508	08 (RXH)	ESL (Electric Steering Lock)	•	•	•	•	•
508 508	98 (RXH)	HFC (Hands Free Control Kit)	•	•	•	•	•
508 508	98 (RXH)	HHV (High Head Vision)	•	•	•	•	•
		HMS (Hybrid Mode Selector)	•	•	•	•	•
		HYC-1 (Hybrid Control ECU 1)	•	•	•	•	•
		HYC-2 (Hybrid Control ECU 2)	•	•	•	•	•
	98 (RXH)	IP (Instrument Cluster Panel)	•	•	•	•	•
		KEY (Electrionic Key Reader)	•		•	•	
			•		•	•	
		MBA (Main Beams Assistant)	-		-	-	
		MCP (Multiplexed Control Panel)	•	•	•	•	•
		MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
		MULD (Multifunction Display)	•	•	•	•	•
		NAVI (Telematic Navigator)	•	•	•	•	•
		PAM (Parking Assistance)	•	•	•	•	•
508 508		Radio RD5	•	•	•	•	•
508 508	98 (RXH)	SB (Seat Belts Not Fastened LED Unit(TNB))	•	•	•	•	•
508 508	98 (RXH)	SM (Services Module)	•	•	•	•	•
508 508	08 (RXH)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
508 508	08 (RXH)	SRS (Airbag)	•	•	•	•	•
508 508	98 (RXH)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
508 508	98 (RXH)	SWSM (Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
508 508	08 (RXH)	TCM (Automatic Gearbox)	•	•	•	•	•
		TEU (Telematics Unit)	•	•	•	•	•
		TRU (Trailer Relay Unit)	•	•	•	•	•
		UID (Under Inflation Detection)	•	•	•	•	•

500	500 (DWW)						
508	508 (RXH)	VRD (Voltage Retaining Device)	•	•	•	•	•
508	508 (RXH)	Wiper-L (Windscreen Wiper (Left-hand Side))	•	•	•	•	•
508	508 (RXH)	Wiper-R (Windscreen Wiper (Right-hand Side))	•	•	•	•	•
607	607 (CAN)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
607	607 (CAN)	AC (Air Conditioning)	•	•	•	•	•
607	607 (CAN)	Alarm	•	•	•	•	•
607	607 (CAN)	BSI (Built-in Systems Interface)	•	•	•	•	•
607	607 (CAN)	CD (CD Player)	•	•	•	•	•
607	607 (CAN)	DAF (Diesel Additive Control Unit)	•	•	•	•	•
607	607 (CAN)	DDM (Driver's Door Module)	•	•	•	•	•
607	607 (CAN)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
607	607 (CAN)	ECM (Engine Control Module)	•	•	•	•	•
607	607 (CAN)	EPS (Electric Power Steering GEP)	•	•	•	•	•
607	607 (CAN)	HFC (Hands Free Control Kit)	•	•	•	•	•
607	607 (CAN)	IP (Instrument Cluster Panel)	•	•	•	•	•
607	607 (CAN)	MULS (Multifunction Screen)	•	•	•	•	•
607	607 (CAN)	PAM (Parking Assistance)	•	•	•	•	•
607	607 (CAN)	PDM (Passenger's Door Module)	•	•	•	•	•
				<u> </u>		-	
607	607 (CAN)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
607	607 (CAN)	Radio	•	•	•	•	•
607	607 (CAN)	SRS (Airbag)	•	•	•	•	•
607	607 (CAN)	SSP (Electronically Managed Suspension)	•	•	•	•	•
607	607 (CAN)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
607	607 (CAN)	TCM (AM6 Automatic Gearbox)	•	•	•	•	•
607	607 (CAN)	TCM (BVA ZF)	•	•	•	•	•
607	607 (CAN)	TEU (Telematics Unit)	•	•	•	•	•
607	607 (CAN)	UID (Under Inflation Detection)	•	•	•	•	•
607	607 (VAN)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
607	607 (VAN)	AC (Air Conditioning)	•	•	•	•	•
607	607 (VAN)	BSI (Built-in Systems Interface)	•	•	•	•	•
607	607 (VAN)	CD (CD Player)	•	•	•	•	
607	607 (VAN)	DAF (Diesel Additive Control Unit)	•	•	•	•	•
607	607 (VAN)	DDC (Driver's Door Control Panel)	•		•	•	
	607 (VAN)					•	
607		DPOS (Storing Of The Driving Position)				-	
607	607 (VAN)	ECM (Engine Control Module)	•	•	•	•	•
607	607 (VAN)	HLH (Headlamp Height Corrector)	•	•	•	•	•
607	607 (VAN)	IP (Instrument Cluster Panel)	•	•	•	•	•
607	607 (VAN)	MULS (Multifunction Screen)	•	•	•	•	•
607	607 (VAN)	PAM (Parking Assistance)	•	•	•	•	•
607	607 (VAN)	PDC (Passenger's Door Control Panel)	•	•	•	•	•
607	607 (VAN)	Radio	•	•	•	•	•
607	607 (VAN)	SRS (Airbag)	•	•	•	•	•
607	607 (VAN)	SSP (Electronically Managed Suspension)	•	•	•	•	•
607	607 (VAN)	TCM (Automatic Gearbox)	•	•	•	•	•
806		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
806		AH (Additional Heating)	•	•	•	•	•
806		ECM (Engine Control Module)	•	•	•	•	•
806		SRS (Airbag)	•	•	•	•	•
806		TCM (Automatic Gearbox)	•	•	•	•	•
807	807 (CAN) (2005 -)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)		•	•	•	•
			•	•	•	•	•
807		AC (Air Conditioning)	-				-
807	807 (CAN) (2005 -)	AH (Additional Heating)	•	•	•	•	•
807	807 (CAN) (2005 -)	Alarm	•	•	•	•	•
807	807 (CAN) (2005 –)	BSI (Built-in Systems Interface)	•	•	•	•	•
807	807 (CAN) (2005 –)	CD (CD Player)	•	•	•	•	•
807	807 (CAN) (2005 –)	DAF (Diesel Additive Control Unit)	•	•	•	•	•
807	807 (CAN) (2005 -)	DDM (Driver's Door Module)	•	•	•	•	•
807	807 (CAN) (2005 –)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
		POW / P $(- 1) (- 1) (- 1)$	•	•	•	•	
807	807 (CAN) (2005 –)	ECM (Engine Control Module)	•		•	•	•
807 807	807 (CAN) (2005 -) 807 (CAN) (2005 -)	ELM (Engine Control Module) EPS (Electric Power Steering GEP)	•	•	•	•	•

807 807	807 (CAN) (2005 –)	HLLC (Left Headlamp Beam Level Corrector)					
	807 (CAN) (2005 -)	HLRC (Right Headlamp Beam Corrector)	•	•	•	•	•
807	807 (CAN) (2005 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
807	807 (CAN) (2005 -)	IP (Warning Lights/Odometer Unit)	•	•	•	•	•
807	807 (CAN) (2005 –)	MULS (Multifunction Screen)	•	•	•	•	•
807	807 (CAN) (2005 –)	PAM (Parking Assistance)	•	•	•	•	•
807	807 (CAN) (2005 –)	PDM (Passenger's Door Module)	•	•	•	•	•
807	807 (CAN) (2005 –)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
807	807 (CAN) (2005 –)	Radio	•	•	•	•	•
807	807 (CAN) (2005 –)	SR-F (Front Sunroof)	•	•	•	•	•
807	807 (CAN) (2005 –)	SR-M (Middle Sunroof)	•	•	•	•	•
807	807 (CAN) (2005 –)	SR-R (Rear Sunroof)	•	•	•	•	•
807	807 (CAN) (2005 –)	SRS (Airbag)	•	•	•	•	•
807	807 (CAN) (2005 –)	SSDM (Sliding Side Doors Module)	•	•	•	•	•
807	807 (CAN) (2005 –)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
807	807 (CAN) (2005 –)	TCM (Automatic Gearbox)	•	•	•	•	•
807	807 (CAN) (2005 –)	TEU (Telematics Unit)	•	•	•	•	•
807	807 (CAN) (2005 –)	TRC (Telematic Receiver Control)	•	•	•	•	•
807	807 (CAN) (2005 –)	UID (Under Inflation Detection)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	AC (Air Conditioning)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	AH (Additional Heating)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	Alarm	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	BSI (Built-in Systems Interface)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	CD (CD Player)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	DAF (Diesel Additive Control Unit)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	DDM (Driver's Door Module)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	DPOS (Storing Of The Driving Position)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	Display/Telematics	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	ECM (Engine Control Module)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	HLLC (Left Headlamp Beam Level Corrector)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	HLRC (Right Headlamp Beam Corrector)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	IP (Instrument Cluster Panel)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	IP (Warning Lights/Odometer Unit)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	PAM (Parking Assistance)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	PDM (Passenger's Door Module)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	Radio	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	SRS (Airbag)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	SSDM (Sliding Side Doors Module)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	TCM (Automatic Gearbox)	•	•	•	•	•
BIPPER		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
BIPPER		BSI (Built-in Systems Interface)	•	•	•	•	•
BIPPER		ECM (Engine Control Module)	•	•	•	•	•
BIPPER		IP (Instrument Cluster Panel)	•	•	•	•	•
BIPPER	1	PAM (Parking Assistance)	•	•	•	•	•
BIPPER	1	SRS (Airbag)	•	•	•	•	•
BIPPER		TCM (Automatic Gearbox)	•	•	•	•	•
BOXER	BOXER (1)	ECM (Engine Control Module)	•	•	•	•	•
BOXER	BOXER (1)	TCM (Automatic Gearbox)	•	•	•	•	•
BOXER	BOXER (3)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
BOXER	BOXER (3)	AC (Air Conditioning)	•	•	•	•	•
BOXER	BOXER (3)	AH (Additional Heating)	•	•	•	•	•
BOXER	BOXER (3)	BSI (Built-in Systems Interface)	•	•	•	•	•
BOXER	BOXER (3)	ECM (Engine Control Module)	•	•	•	•	•
BOXER	BOXER (3)	EPS (Electric Power Steering GEP)	•	•	•	•	•
BOXER	BOXER (3)	IP (Instrument Cluster Panel)	•	•	•	•	•
BOXER	BOXER (3)	LDWS (Lane Departure Warning System)	•	•	•	•	•
BOXER	BOXER (3)	PAM (Parking Assistance)	•	•	•	•	•
BOXER	BOXER (3)	SRS (Airbag)	•	•	•	•	•
BOXER	BOXER (3)	SSP (Electronically Managed Suspension)	•	•	•	•	•

r		1	1	1	1	1	
BOXER	BOXER (3)	TEU/NAVI (Telematics Unit(Rtx) Or Radio-navigation)	•	•	•	•	•
BOXER	BOXER (3)	TG (Tachograph)	•	•	•	•	•
BOXER	BOXER (3) (Euro 5 / 6)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
BOXER	BOXER (3) (Euro 5 / 6)	AC (Air Conditioning)	•	•	•	•	•
BOXER	BOXER (3) (Euro 5 / 6)	AH (Additional Heating)	•	•	•	•	•
BOXER	BOXER (3) (Euro 5 / 6)	BSI (Built-in Systems Interface)	•	•	•	•	•
BOXER	BOXER (3) (Euro 5 / 6)	ECM (Engine Control Module)	•	•	•	•	•
BOXER	BOXER (3) (Euro 5 / 6)	EPS (Electric Power Steering)	•	•	•	•	•
BOXER	BOXER (3) (Euro 5 / 6)	IP (Instrument Cluster Panel)	•	•	•	•	•
BOXER	BOXER (3) (Euro 5 / 6)	LDWS (Lane Departure Warning System)	•	•	•	•	•
BOXER	BOXER (3) (Euro 5 / 6)	PAM (Parking Assistance)	•	•	•	•	•
BOXER	BOXER (3) (Euro 5 / 6)	SRS (Airbag)	•		•	•	
					-	-	•
BOXER	BOXER (3) (Euro 5 / 6)	SSP (Electronically Managed Suspension)	•	•	•	•	•
BOXER	BOXER (3) (Euro 5 / 6)	TG (Tachograph)	•	•	•	•	•
BOXER	BOXER (3) (MiniBus)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
BOXER	BOXER (3) (MiniBus)	AC (Air Conditioning)	•	•	•	•	•
BOXER	BOXER (3) (MiniBus)	AH (Additional Heating)	•	•	•	•	•
BOXER	BOXER (3) (MiniBus)	BSI (Built-in Systems Interface)	•	•	•	•	•
BOXER	BOXER (3) (MiniBus)	ECM (Engine Control Module)	•	•	•	•	•
BOXER	BOXER (3) (MiniBus)	EPS (Electric Power Steering GEP)	•	•	•	•	•
BOXER	BOXER (3) (MiniBus)	IP (Instrument Cluster Panel)	•	•	•	•	•
BOXER	BOXER (3) (MiniBus)	PAM (Parking Assistance)	•	•	•	•	•
BOXER	BOXER (3) (MiniBus)	SRS (Airbag)	•	•	•	•	•
BOXER	BOXER (3) (MiniBus)	SSP (Electronically Managed Suspension)	•	•	•	•	
			•	•	-	•	•
BOXER	BOXER (3) (MiniBus)	TEU/NAVI (Telematics Unit(Rtx) Or Radio-navigation)			•		•
BOXER	BOXER (3) (MiniBus)	TG (Tachograph)	•	•	•	•	•
EXPERT	EXPERT (1)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
EXPERT	EXPERT (1)	AH (Additional Heating)	•	•	•	•	•
EXPERT	EXPERT (1)	ECM (Engine Control Module)	•	•	•	•	•
EXPERT	EXPERT (1)	SRS (Airbag)	•	•	•	•	•
EXPERT	EXPERT (1)	TCM (Automatic Gearbox)	•	•	•	•	•
EXPERT	EXPERT (2)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
EXPERT	EXPERT (2)	AC (Air Conditioning)	•	•	•	•	•
EXPERT	EXPERT (2)	AH (Additional Heating)	•	•	•	•	•
EXPERT	EXPERT (2)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
EXPERT	EXPERT (2)	Alarm					
		BSI (Built-in Systems Interface)	•	•	•	•	
EXPERT	EXPERT (2)		-	<u> </u>	-		•
EXPERT	EXPERT (2)	CD (CD Player)	•	•	•	•	•
EXPERT	EXPERT (2)	ECM (Engine Control Module)	•	•	•	•	•
EXPERT	EXPERT (2)	EPS (Electric Power Steering GEP)	•	•	•	•	•
EXPERT	EXPERT (2)	HFC (Hands Free Control Kit)	•	•	•	•	•
EXPERT	EXPERT (2)	IP (Instrument Cluster Panel)	•	•	•	•	•
EXPERT	EXPERT (2)	MULS (Multifunction Screen)	•	•	•	•	•
EXPERT	EXPERT (2)	PAM (Parking Assistance)	•	•		•	•
EXPERT	EXPERT (2)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
EXPERT	EXPERT (2)	Radio	•	•	•	•	•
EXPERT	EXPERT (2)	SRS (Airbag)	•	•	•	•	•
EXPERT	EXPERT (2)	SSP (Pneumatic Suspension)	•	•	•	•	-
EXPERT	EXPERT (2)	SWSM (Steering Wheel Switching Module)	•		•	•	
			•		•	•	
EXPERT	EXPERT (2)	TCM (Automatic Gearbox)			-	-	
EXPERT	EXPERT (2)	TEU (Telematics Unit)	•	•	•	•	•
EXPERT	EXPERT (2)	UID (Under Inflation Detection)	•	•	•	•	•
EXPERT	EXPERT (3)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
EXPERT	EXPERT (3)	AC (Rear Air Conditioning Table)	•	•	•	•	•
EXPERT	EXPERT (3)	AH (Additional Heating)	•	•	•	•	•
EXPERT	EXPERT (3)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
EXPERT	EXPERT (3)	BATT (Battery Charge Status Unit)	•	•	•	•	•
EXPERT	EXPERT (3)	BSI (Built-in Systems Interface)	•	•	•	•	•
EXPERT	EXPERT (3)	BWCU (Bodywork Conversion Unit)	•	•	•	•	•
EXPERT	EXPERT (3)	CD (CD Player)	•	•	•	•	•
EXPERT	EXPERT (3)	DD (Deflation Detection(Dsg))	•		•	•	-
LAI LAI	EALERI (0)	(Defiaiton Detection(DSg))			-	-	

1			_	r			_
EXPERT	EXPERT (3)	ECM (Engine Control Module)	•	•	•	•	•
EXPERT	EXPERT (3)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
EXPERT	EXPERT (3)	HFC (Hands Free Control Kit)	•	•	•	•	•
EXPERT	EXPERT (3)	HFR (High Frequency Receiver)	•	•	•	•	•
EXPERT	EXPERT (3)	Heating/Ventilation	•	•	•	•	•
EXPERT	EXPERT (3)	IP (Instrument Cluster Panel)	•	•	•	•	•
EXPERT	EXPERT (3)	MULD (Multifunction Display)	●	•	•	•	•
EXPERT	EXPERT (3)	PAM (Parking Assistance)	•	•	•	•	•
EXPERT	EXPERT (3)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
EXPERT	EXPERT (3)	SRS (Airbag)	•	•	•	•	•
EXPERT	EXPERT (3)	SSP (Pneumatic Suspension)	•	•	•	•	•
EXPERT	EXPERT (3)	SWSM (Switch Module Under The Steering Wheel(Top Of Colunm))	٠	•	•	•	•
EXPERT	EXPERT (3)	TCM (Automatic Gearbox)	•	•	•	•	•
EXPERT	EXPERT (3)	TEU (Telematics Unit)	•	•	•	•	•
EXPERT	EXPERT (KO)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
EXPERT	EXPERT (KO)	AC (Air Conditioning)	•	•	•	•	•
EXPERT	EXPERT (KO)	AC (Rear Air Conditioning Control Panel)	•	•	•	•	•
EXPERT	EXPERT (KO)	AC (Rear Air Conditioning)	•	•	•	•	•
EXPERT	EXPERT (KO)	AH (Additional Heating)	•	•	•	•	•
EXPERT	EXPERT (KO)	ALM (Anti-theft Alarm)	•	•	•	•	•
EXPERT	EXPERT (KO)	ASM (Anti-slip Mode Selector)	•	•	•	•	
EXPERT	EXPERT (KO)	BATT (Battery Charge Status Unit)	•	•	•	•	
	EXPERT (KO)	BAIT (battery charge status unit) BSI (Built-in Systems Interface)	•	•	•	•	
EXPERT			-	-	-	-	
EXPERT	EXPERT (KO)	DAF (Diesel Additive Pump)	•	•	•	•	-
EXPERT	EXPERT (KO)	Display	•	•	•	•	•
EXPERT	EXPERT (KO)	ECM (Engine Control Module)	•	•	•	•	•
EXPERT	EXPERT (KO)	ERU (Engine Relay Unit)	•	•	•	•	•
EXPERT	EXPERT (KO)	ESL (Electric Steering Lock)	•	•	•	•	•
EXPERT	EXPERT (KO)	HFA (Hands Full Access ECU(Right-hand Side Or Rear))	•	•	•	•	•
EXPERT	EXPERT (KO)	HHV (High Head Vision)	•	•	•	•	•
EXPERT	EXPERT (KO)	IP (Instrument Cluster Panel)	●	•	•	•	•
EXPERT	EXPERT (KO)	MCP (Multiplexed Control Panel)	•	•	•	•	•
EXPERT	EXPERT (KO)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
EXPERT	EXPERT (KO)	NAVI (Telematic Navigator)	•	•	•	•	•
EXPERT	EXPERT (KO)	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio	•	•	•	•	•
EXPERT	EXPERT (KO)	System) PAM (Parking Assistance)	•	•	•	•	•
EXPERT	EXPERT (KO)	RSS (Rain-sunlight Sensor)	•		•	•	
EXPERT	EXPERT (KO)	Radio	•	•	•	•	•
			-		-	-	•
EXPERT	EXPERT (KO)	SB (Seat Belts Not Fastened LED Unit(TNB))	•	•	•	•	•
EXPERT	EXPERT (KO)	SM (Services Module)	•	•	•	•	•
EXPERT	EXPERT (KO)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
EXPERT	EXPERT (KO)	SRS (Airbag)	•	•	•	•	•
EXPERT	EXPERT (KO)	SSDM (Left-hand Sliding Side Door)	•	•	•	•	•
EXPERT	EXPERT (KO)	SWC (Controls On The Steering Wheel)	•	•	•	•	•
EXPERT	EXPERT (KO)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
EXPERT	EXPERT (KO)	Siren	•	•	•	•	•
EXPERT	EXPERT (KO)	TCM (Automatic Gearbox)	•	•	•	•	•
EXPERT	EXPERT (KO)	TRU (Trailer Relay Unit)	•	•	•	•	●
EXPERT	EXPERT (KO)	TS (Touch Screen)	•	•	•	•	•
EXPERT	EXPERT (KO)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
EXPERT	EXPERT (KO)	VRD (Voltage Retaining Device)	•	•	•	•	•
HOGGAR		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
HOGGAR		AC (Air Conditioning)	•	•	•	•	•
HOGGAR		Alarm	•	•	•	•	•
HOGGAR		BSI (Built-in Systems Interface)	•	•	•	•	•
HOGGAR		CD (CD Player)	•	•	•	•	•
HOGGAR		Display/Telematics	•	•	•	•	•
HOGGAR		ECM (Engine Control Module)	•	•	•	•	•
HOGGAR		IP (Instrument Cluster Panel)	•	•	•	•	
HOGGAR		RBS (Rain And Brightness Sensor)	•	•	•	•	
		Radio	•	•	•	•	
HOGGAR		nauto	-		-	-	•

HOGGAR		SM (Services Module)	•	•		•	
HOGGAR		SRS (Airbag)	•	•	•	•	
HOGGAR		SVLCU (Stolen Vehicle Location Control)	•	•	•	•	
HOGGAR		SWSM (Steering Wheel Switching Module)		•		•	
HOGGAR		TCM (Automatic Gearbox)	•	•	•	•	•
HOGGAR		Wiper-L (Windscreen Wiper (Left-hand Side))	•	•	•	•	•
ION		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•			•	
ION		AC (Air Conditioning)	•	•	•	•	•
ION		BATT (Onboard Charger Of The Traction Battery)	•		•	•	
ION		BATT (Unboard charger of the fraction battery) BATT (Traction Battery ECU)				•	
ION		BATT-01 (Traction Battery Cells Management(Module 01))	•			•	
ION			•	•	•	•	•
		BATT-02 (Traction Battery Cells Management (Module 02))	•	•	•	•	•
ION		BATT-03 (Traction Battery Cells Management (Module 03))		•	-	-	•
ION		BATT-04 (Traction Battery Cells Management (Module 04))	•		•	•	-
ION		BATT-05 (Traction Battery Cells Management (Module 05))	•	•	•	•	•
ION		BATT-07 (Traction Battery Cells Management(Module 07))	•	•	•	•	•
ION		BATT-08 (Traction Battery Cells Management(Module 08))	•	•	•	•	•
ION		BATT-09 (Traction Battery Cells Management(Module 09))	•	•	•	•	•
ION		BATT-10 (Traction Battery Cells Management(Module 10))	•	•	•	•	•
ION		BATT-11 (Traction Battery Cells Management(Module 11))	•	•	•	•	•
ION		DVT (Direct Voltage(DC/DC) Transformer)	•	•	•	•	•
ION		EMM (Electric Machine Management ECU)	•	•	•	•	•
ION		EPS (Electric Power Steering)	•	•	•	•	•
ION		EVM (Electric Vehicle Management ECU)	•	•	•	•	•
ION		GWH (Gateway Wiring Housing)	•	•	•	•	•
ION		IP (Instrument Cluster Panel)	•	•	•	•	•
ION		RPE (Radio Post-equipment)	•	•	•	•	•
ION		SAS (Steering Wheel Angle Sensor)	•	•	•	•	•
ION		SM (Services Module)	•	•	•	•	•
ION		SRS (Airbag)	•	•	•	•	•
PARTNER	PARTNER (2)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
PARTNER	PARTNER (2)	AC (Air Conditioning)	•	•	•	•	•
PARTNER	PARTNER (2)	AH (Additional Heating)	•	•	•	•	•
PARTNER	PARTNER (2)	Alarm	•	•	•	•	•
PARTNER	PARTNER (2)	BSI (Built-in Systems Interface)	•	•	•	•	•
PARTNER	PARTNER (2)	CD (CD Player)	•	•	•	•	•
PARTNER	PARTNER (2)	ECM (Engine Control Module)	•	•	•	•	•
PARTNER	PARTNER (2)	IP (Instrument Cluster Panel)	•	•	•	•	•
PARTNER	PARTNER (2)	MULD (Multifunction Display)	•	•	•	•	•
PARTNER	PARTNER (2)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
PARTNER	PARTNER (2)	Radio	•	•	•	•	•
PARTNER	PARTNER (2)	SM (Services Module)	•	•	•	•	•
PARTNER	PARTNER (2)	SRS (Airbag)	•	•	•	•	•
PARTNER	PARTNER (2)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
PARTNER	PARTNER (2)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
PARTNER	PARTNER (2) (M69)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
PARTNER	PARTNER (2) (M69)	BSI (Built-in Systems Interface)	•	•	•	•	•
PARTNER	PARTNER (2) (M69)	ECM (Engine Control Module)	•	•	•	•	•
PARTNER	PARTNER (2) (M69)	IP (Instrument Cluster Panel)	•	•	•	•	•
PARTNER	PARTNER (2) (M69)	Radio	•	•	•	•	•
			•	•	•	•	•
PARTNER	PARTNER (2) (M69) PARTNER (2) (M69)	SRS (Airbag)	•	•	•	•	•
PARTNER		SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
PARTNER	PARTNER (B9)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	-			-	•
PARTNER	PARTNER (B9)	AC (Air Conditioning Compressor)	•	•	•	•	
PARTNER	PARTNER (B9)	AC (Air Conditioning)	•	•	•	•	•
PARTNER	PARTNER (B9)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
PARTNER	PARTNER (B9)	Alarm	•	•	•	•	•
PARTNER	PARTNER (B9)	BATT (Battery Charge Status Unit)	•	•	•	•	•
PARTNER	PARTNER (B9)	BATT (Onboard Charger Of The Traction Battery)	•	•	•	•	•
PARTNER	PARTNER (B9)	BATT-01 (Traction Battery Cells Management(Module 01))	•	•	•	•	•
PARTNER	PARTNER (B9)	BATT-02 (Traction Battery Cells Management(Module 02))	•	•	•	•	•

				T		1	1
PARTNER	PARTNER (B9)	BATT-03 (Traction Battery Cells Management(Module 03))	•	•	•	•	•
PARTNER	PARTNER (B9)	BATT-04 (Traction Battery Cells Management(Module 04))	•	•	•	•	•
PARTNER	PARTNER (B9)	BATT-05 (Traction Battery Cells Management(Module 05))	•	•	•	•	•
PARTNER	PARTNER (B9)	BATT-06 (Traction Battery Cells Management(Module 06))	•	•	•	•	•
PARTNER	PARTNER (B9)	BATT-07 (Traction Battery Cells Management(Module 07))	•	•	•	•	•
PARTNER	PARTNER (B9)	BATT-08 (Traction Battery Cells Management(Module 08))	•	•	•	•	•
PARTNER	PARTNER (B9)	BATT-09 (Traction Battery Cells Management(Module 09))	•	•	•	•	•
PARTNER	PARTNER (B9)	BATT-10 (Traction Battery Cells Management(Module 10))	•	•	•	•	•
PARTNER	PARTNER (B9)	BSI (Built-in Systems Interface)	•	•	•	•	•
PARTNER	PARTNER (B9)	BWCU (Bodywork Conversion Unit)	•	•	•	•	•
PARTNER	PARTNER (B9)	CD (CD Player)	•	•	•	•	•
PARTNER	PARTNER (B9)	ECM (Engine Control Module)	•	•	•	•	•
PARTNER	PARTNER (B9)	EMM (Electric Machine Management ECU)	•	•	•	•	•
PARTNER	PARTNER (B9)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
PARTNER	PARTNER (B9)	ERU (Engine Relay Unit)	•			•	
	PARTNER (B9)		•		•	•	•
PARTNER		EVM (Electric Vehicle Management ECU)	-	-	-	-	
PARTNER	PARTNER (B9)	HFC (Hands Free Control Kit)	•	•	•	•	•
PARTNER	PARTNER (B9)	HFR (High Frequency Receiver)	•	•	•	•	•
PARTNER	PARTNER (B9)	IP (Instrument Cluster Panel)	•	•	•	•	•
PARTNER	PARTNER (B9)	MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
PARTNER	PARTNER (B9)	MULD (Multifunction Display)	•	•	•	•	•
PARTNER	PARTNER (B9)	PAM (Parking Assistance)	•	•	•	•	•
PARTNER	PARTNER (B9)	PCAHR (Passenger's Compartment Air Heating Resistor)	•	•	•	•	•
PARTNER	PARTNER (B9)	RS (Rain Sensor)	•	•	•	•	•
PARTNER	PARTNER (B9)	Radio	•	•	•	•	•
PARTNER	PARTNER (B9)	SM (Services Module)	•	•	•	•	•
PARTNER	PARTNER (B9)	SRS (Airbag)	•	•	•	•	•
PARTNER	PARTNER (B9)	SWSM (Switch Module Under The Steering Wheel(Top Of Colunm))	•	•	•	•	•
PARTNER	PARTNER (B9)	TCM (Automatic Gearbox)	•	•	•	•	•
PARTNER	PARTNER (B9)	TEU/NAVI (Telematics Unit(Rtx) Or Radio-navigation)	•	•	•	•	•
PARTNER	PARTNER (B9)	TRU (Trailer Relay Unit)	•	•	•	•	•
PARTNER	PARTNER (B9)	UID (Under Inflation Detection)	•	•	•	•	•
PARTNER	PARTNER (B9)	VRD (Voltage Retaining Device)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	
PARTNER	PARTNER Electric (B9E)					•	
		AC (Air Conditioning Compressor)					•
PARTNER	PARTNER Electric (B9E)	Alarm				•	•
PARTNER	PARTNER Electric (B9E)	BATT (Battery Charge Status Unit)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT (Onboard Charger Of The Traction Battery)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT-01 (Traction Battery Cells Management(Module 01))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT-02 (Traction Battery Cells Management(Module 02))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT-03 (Traction Battery Cells Management(Module 03))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT-04 (Traction Battery Cells Management(Module 04))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT-05 (Traction Battery Cells Management(Module 05))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT-06 (Traction Battery Cells Management(Module 06))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT-07 (Traction Battery Cells Management(Module 07))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT-08 (Traction Battery Cells Management(Module 08))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT-09 (Traction Battery Cells Management(Module 09))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT-10 (Traction Battery Cells Management(Module 10))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BSI (Built-in Systems Interface)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	ECM (Engine Control Module)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	EMM (Electric Machine Management ECU)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	ERU (Engine Relay Unit)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	EVM (Electric Vehicle Management ECU)	•	•	•	•	•
PARTNER		IP (Instrument Cluster Panel)	•	•	•	•	•
	PARINER Electric (B9E)	(L		-	
PARINER	PARTNER Electric (B9E)	MULD (Multifunction Display)					
PARTNER	PARTNER Electric (B9E)	MULD (Multifunction Display) PAM (Parking Assistance)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E) PARTNER Electric (B9E)	PAM (Parking Assistance)	•	•	•	•	•
PARTNER PARTNER	PARTNER Electric (B9E) PARTNER Electric (B9E) PARTNER Electric (B9E)	PAM (Parking Assistance) PCAHR (Passenger's Compartment Air Heating Resistor)	•	•	•	•	-
PARTNER PARTNER PARTNER	PARTNER Electric (B9E) PARTNER Electric (B9E) PARTNER Electric (B9E) PARTNER Electric (B9E)	PAM (Parking Assistance) PCAHR (Passenger's Compartment Air Heating Resistor) RS (Rain Sensor)	•	•	• • •	•	•
PARTNER PARTNER	PARTNER Electric (B9E) PARTNER Electric (B9E) PARTNER Electric (B9E)	PAM (Parking Assistance) PCAHR (Passenger's Compartment Air Heating Resistor)	•	•	•	•	-

PARTNER	PARTNER Electric (B9E)	SRS (Airbag)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	SWSM (Switch Module Under The Steering Wheel(Top Of Colunm))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	TEU/NAVI (Telematics Unit(Rtx) Or Radio-navigation)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	VRD (Voltage Retaining Device)	•	•	•	•	•
RCZ		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
RCZ		AC (Air Conditioning)	•	•	•	•	•
RCZ		AMP (Audio Amplifier)	•	•	•	•	•
RCZ		Alarm	•	•	•	•	•
RCZ		Alarm Lin	•	•	•	•	•
RCZ		BATT (Battery Charge Status Unit)	•	•	•	•	•
RCZ		BSI (Built-in Systems Interface)	•	•	•	•	•
RCZ		CD (CD Player)	•	•	•	•	•
RCZ		CPDMD (Control Panel Dot Matrix Display)	•	•	•	•	•
RCZ		DBVHA (Discharge Bulbs Vertical And Horizontal Adjustment)	•	•	•	•	•
RCZ		DDC (Driver's Door Control Panel)	•	•	•	•	•
RCZ		DSM (Driver's School Module)	•	•	•	•	•
			•	•	•	•	
RCZ		DSMU (Driver's Seat Memory Unit)	-			-	•
RCZ	+	ECM (Engine Control Module)	•	•	•	•	•
RCZ		EPA (Electropump Assembly)	•	•	•	•	•
RCZ		EPS (Electric Power Steering)	•	•	•	•	•
RCZ		ERU (Engine Relay Unit)	•	•	•	•	•
RCZ		FR (Folding Roof)	•	•	•	•	•
RCZ		HFC (Hands Free Control Kit)	•	•	•	•	•
RCZ		HFR (High Frequency Receiver)	•	•	•	•	•
RCZ		IP (Instrument Cluster Panel)	•	•	•	•	•
RCZ		LDWS (Lane Departure Warning System)	•	•	•	•	•
RCZ		MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
RCZ		MPD (Moving Panel Deflector)	•	•	•	•	•
RCZ		MULS (Multifunction Screen)	•	•	•	•	•
RCZ		N-TNB (Not Fastened Warning Light(Tnb))	•	•	•	•	•
RCZ		NAVI (Radio Navigation NG4)	•	•	•	•	٠
RCZ		PAM (Parking Assistance)	•	•	•	•	•
RCZ		PID (Pedestrian Impact Detection)	•	•	•	•	•
RCZ		PSM (Passenger's Seat Memorizing Unit)	•	•	•	•	•
RCZ		RBS (Rain And Brightness Sensor)	•	•	•	•	•
RCZ		Radio	•	•	•	•	•
RCZ		SM (Services Module)	•	•	•	•	•
RCZ		SRS (Airbag)	•	•	•	•	•
RCZ		SWSM (Steering Wheel Switching Module)	•	•	•	•	•
RCZ		SunRoof	•	•	•	•	•
RCZ		TCM (Automatic Gearbox)	•	•	•	•	•
RCZ		TEU (Telematics Unit)	•	•	•	•	•
RCZ			•	•	•	•	•
		TRU (Trailer Relay Unit)			-		•
RCZ		UID (Under Inflation Detection)	•	•	•	•	•
RCZ		VRD (Voltage Retaining Device)	•	•	•	•	•
RCZ		Wiper (Windscreen Wiper)	•	•	•	•	•
TRAVELLER		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
TRAVELLER		AC (Air Conditioning)	•	•	•	•	•
TRAVELLER	+	AC (Rear Air Conditioning Control Panel)	•	•	•	•	•
TRAVELLER		AC (Rear Air Conditioning)	•	•	•	•	•
TRAVELLER		AH (Additional Heating)	•	•	•	•	•
TRAVELLER		ALM (Anti-theft Alarm)	•	•	•	•	•
TRAVELLER		ASM (Anti-slip Mode Selector)	•	•	•	•	•
TRAVELLER		BATT (Battery Charge Status Unit)	•	•	•	•	•
TRAVELLER		BSI (Built-in Systems Interface)	•	•	•	•	٠
TRAVELLER		DAF (Diesel Additive Pump)	•	•	•	•	•
TRAVELLER		Display	•	•	•	•	•
TRAVELLER		ECM (Engine Control Module)	•	•	•	•	•
TRAVELLER		ERU (Engine Relay Unit)	•	•	•	•	•
TRAVELLER		ESL (Electric Steering Lock)	•	•	•	•	•
	1 I	HFA (Hands Full Access ECU(Right-hand Side Or Rear))	-	•	1	•	1

TRAVELLER	HHV (High Head Vision)	•	•	•	•	•
TRAVELLER	IP (Instrument Cluster Panel)	•	•	•	•	•
TRAVELLER	MCP (Multiplexed Control Panel)	•	•	•	•	•
TRAVELLER	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
TRAVELLER	NAVI (Telematic Navigator)	•	•	•	•	•
TRAVELLER	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio System)	•	•	•	•	•
TRAVELLER	PAM (Parking Assistance)	•	•	•	•	•
TRAVELLER	RSS (Rain-sunlight Sensor)	•	•	•	•	•
TRAVELLER	Radio	•	•	•	•	•
TRAVELLER	SB (Seat Belts Not Fastened LED Unit(TNB))	•	•	•	•	•
TRAVELLER	SM (Services Module)	•	•	•	•	•
TRAVELLER	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
TRAVELLER	SRS (Airbag)	•	•	•	•	•
TRAVELLER	SSDM (Left-hand Sliding Side Door)	•	•	•	•	•
TRAVELLER	SWC (Controls On The Steering Wheel)	•	•	•	•	•
TRAVELLER	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
TRAVELLER	Siren	•	•	•	•	•
TRAVELLER	TCM (Automatic Gearbox)	•	•	•	•	•
TRAVELLER	TRU (Trailer Relay Unit)	•	•	•	•	•
TRAVELLER	TS (Touch Screen)	•	•	•	•	•
TRAVELLER	VDA (Vehicle Distance Assistance)	•	•	•	•	•
TRAVELLER	VRD (Voltage Retaining Device)	•	•	•	•	•

	PEUGEUT DPF FUNCTION LIST (NOTE:FOI TEIELEIN	
NOTES:		
 This function is s This function may 	upported. y be supported, which depends on the actual condition (of the vehicle
$^{\circ}$ This function may		of the vehicle.
	he new feature in this version.	
Model 1007	Model Type	DPF
	1007 (CAN)	•
2008	200	•
206	206	
206	206 (Mux)	
207	207 (CAN)	
208	208	
208	208 (Ai91)	•
3008	3008	
3008	3008 (CHINA)	•
3008	3008 (Hybrid4)	•
3008	3008 (P84)	
301		U
307	307 (CAN) (2006.01 -)	U
307	307 (VAN) (- 2005.12)	U
308	308 (2010.01 - 2014.09)	U
308	308 (4 Doors)	U
308	308 (S)	U
308	308 (T9) (2014.10 -)	
4007	4007	
4008	4008	
4008	4008 (CHINA)	
407	400 (0010 01 - 0014 00)	
408	408 (2010.01 - 2014.09)	
408	408 (T93) (2014.10 -)	•
5008	5008	•
5008	5008 (P84)	•
508	508	•
508	508 (Hybrid4)	•
508	508 (RXH Hybrid4)	•
508	508 (RXH)	•
607	607 (CAN)	
807	807 (CAN) (2005 -)	•
BOXER	BOXER (3) (Euro 5 / 6)	
EXPERT	EXPERT (2)	U
EXPERT	EXPERT (3)	_
EXPERT	EXPERT (KO)	U
PARTNER	PARTNER (2) (M69)	_
PARTNER	PARTNER (B9)	•
RCZ		
TRAVELLER	207 (+)	U
207	207 (+)	_
	PEUGEOT DPF Function List (Note:For reference	ce only)
Filling Of The D:	esel Additive Adding Reservoir	
	on Of The Particle Emission Filter	
	on Of The Particle Filter, Vehicle Stationary	
	on Of The Particulate Filter While Driving	
	on Vehicle Moving	
	on Vehicle Stationary	
Pariticle Filter	· · · · · · · · · · · · · · · · · · ·	
Particulate Filter		
	er Replacement Ne Diesel Additive Reservoir,Of The Pump Or Of Th	he Pipes
		ne ripes
	ne Differential Pressure Sensor ne Particle Emission Filter	
	le Particle Emission Filter Differential Pressure	Sonsor
Repracement OF In	le rarritte Emission Filter Differential Pressure	e 9611201

	PEUGEOT EPB Function List (Note:For reference only)
NOTES:		
• This function is	s supported.	
	nay be supported, which depends on the actual condition of the v	ehicle.
\odot This function is	s not supported.	
▲ This function is	s the new feature in this version.	
Mode1	Model Type	EPB
3008	3008	•
3008	3008 (CHINA)	•
3008	3008 (Hybrid4)	•
3008	3008 (P84)	
301	000 (0010 01 - 0014 00)	
308	308 (2010.01 - 2014.09)	
308 308	308 (4 Doors) 308 (S)	
308	308 (5) 308 (T9) (2014.10 -)	
308	308 (TX9)	
4008	4008 (CHINA)	
408	408 (2010.01 - 2014.09)	
408	408 (T93) (2014.10 -)	•
5008	5008	•
5008	5008 (P84)	•
508	508	•
508	508 (Hybrid4)	•
508	508 (RXH Hybrid4)	•
508	508 (RXH)	•
EXPERT	EXPERT (KO)	•
PARTNER	PARTNER (B9)	
PARTNER	PARTNER Electric (B9E)	•
RCZ		•
TRAVELLER		
	PEUGEOT EPB Function List (Note:For reference only)
Cable Tensionin	lg	
	E The Automatic Application Of The Electric Parking Brake	e Function
	ng Brake Calibration	
	on Of The Electric Parking Brake	
	Removal Position	
	Automatic Application Of The Electric Parking Brake	
	Motorised Brake Calipers	
Replacement Of		
	The Electric Parking Brake (FSE) Left-hand Actuator	
	The Electric Parking Brake (FSE) Right-hand Actuator	
	The Proportional Brake Switch The Rear Left Motorised Brake Caliper	
	The Rear Right Motorised Brake Caliper	
Nepracement OI	The real right motorised plake callper	

	ay be supported, which depends on the actual condition of th	ne vehicle.
\supset This function is		
This function is	the new feature in this version.	
Model	Model Type	ETC
.007	1007 (CAN)	•
.007	1007 (VAN)	•
008		•
06	206	•
06	206 (+)	•
06	206 (Mux)	•
07	207 (+)	•
07	207 (CAN)	•
07	207 (i)	•
07	207 (VAN)	•
08	208	•
.08	208 (Ai91)	•
008	3008	•
008	3008 (CHINA)	•
008	3008 (Hybrid4)	•
01		•
807	307 (CAN) (2006.01 -)	•
807	307 (VAN) (- 2005.12)	•
08	308 (2010.01 - 2014.09)	
08	308 (4 Doors)	
08	308 (S)	
08	308 (79) (2014.10 -)	
.06	406 (R Coupe)	
.06	406 (R)	
.07	400 (R)	
.08	408 (2010.01 - 2014.09)	
.08	408 (2010.01 - 2014.09) 408 (T93) (2014.10 -)	
8008	5008	
08	508	
08	508 (Hybrid4)	
08	508 (RXH Hybrid4)	
08	508 (RXH)	•
07	607 (CAN)	•
07	607 (VAN)	•
06		•
07	807 (CAN) (2005 -)	•
07	807 (VAN) (2002 - 2005)	•
XPERT	EXPERT (1)	•
XPERT	EXPERT (2)	•
XPERT	EXPERT (3)	•
IOGGAR		•
ARTNER	PARTNER (2)	•
ARTNER	PARTNER (2) (M69)	•
ARTNER	PARTNER (B9)	•
CZ		
	PEUGEOT ETC Function List (Note:For reference	only)
nitialisation O	f The EGR Throttle	
nitialising The		
otorised Thrott		

.

PEUGEOT Diagnostic Function List (Note:For reference only)

NOTES:							
● This f	function is supported.						
≫ This f	function may be support	ed, which depends on the actual condition of the vehicle.					
O This f	function is not support	ed.					
▲ This f	function is the new fea	ture in this version.			_		
Mode1	Model Type	System Name	EcuInfo.	Read Codes	Erase Codes	LiveData	Act
1007	1007 (CAN)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
1007	1007 (CAN)	AC (Air Conditioning)	•	•	•	•	•
1007	1007 (CAN)	Alarm	•	٠	•	•	•
1007	1007 (CAN)	BSI (Built-in Systems Interface)	•	•	•	•	•
1007	1007 (CAN)	CD (CD Player)	•	•	•	•	•
1007	1007 (CAN)	ECM (Engine Control Module)	•	٠	•	•	•
1007	1007 (CAN)	EPS (Electric Power Steering)	•	•	•	•	•
1007	1007 (CAN)	HFC (Hands Free Control Kit)	•	•	•	•	•
1007	1007 (CAN)	IP (Instrument Cluster Panel)	•	•	•	•	•
1007	1007 (CAN)	MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
1007	1007 (CAN)	MULD (Multifunction Display)	•	•	•	•	•
1007	1007 (CAN)	PAM (Parking Assistance)	•	•	•	•	•
1007	1007 (CAN)	RBS (Rain And Brightness Sensor)	•	٠	•	•	•
1007	1007 (CAN)	Radio	•	•	•	•	•
1007	1007 (CAN)	SRS (Airbag)	•	•	•	•	•
1007	1007 (CAN)	SSDM (Sliding Side Doors Module)	•	•	•	•	●
1007	1007 (CAN)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
1007	1007 (CAN)	TCM (Automatic Gearbox)	•	•	•	•	•
1007	1007 (CAN)	TEU (Telematics Unit)	•	٠	•	•	•
1007	1007 (CAN)	UID (Under Inflation Detection)	•	٠	•	•	•
1007	1007 (VAN)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
1007	1007 (VAN)	AC (Air Conditioning)	•	٠	•	•	•
1007	1007 (VAN)	BSI (Built-in Systems Interface)	•	•	•	•	•
1007	1007 (VAN)	CD (CD Player)	•	•	•	•	•
1007	1007 (VAN)	ECM (Engine Control Module)	•	•	•	•	•
1007	1007 (VAN)	EPS (Electric Power Steering GEP)	•	٠	•	•	•
1007	1007 (VAN)	IP (Instrument Cluster Panel)	•	٠	•	•	•
1007	1007 (VAN)	MULD (Multifunction Display)	•	٠	•	•	•
1007	1007 (VAN)	MULS (Multifunction Screen)	•	•	•	•	•
1007	1007 (VAN)	PAM (Parking Assistance)	•	•	•	•	•
1007	1007 (VAN)	RBS (Rain And Brightness Sensor)	•	٠	•	•	•
1007	1007 (VAN)	Radio	•	•	•	•	•
1007	1007 (VAN)	SRS (Airbag)	•	•	•	•	•
1007	1007 (VAN)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
1007	1007 (VAN)	TCM (Automatic Gearbox)	•	•	•	•	•
107		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
107		CAS (Coded Anti-start)	•	•	•	•	•
107		ECM (Engine Control Module)	•	•	•	•	•
107		EPS (Electric Power Steering GEP)	•	•	•	•	
107		Radio	•	•	•	•	•
107		SRS (Airbag)	-	•			•
107		TCM (Automatic Gearbox)	•	•	•	•	•
108 108		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
	+	AC (Air Conditioning)	•	•	•	•	•
108 108		ECM (Engine Control Module) EPS (Electric Power Steering)	•	•	•	•	•
	+	EFS (Electric Power Steering) IMMO/HFSM (Engine Immobiliser\Hands Free Starting Access Electric	-	_	_	-	•
108		Module)	•	•	•	•	•
108		IP (Instrument Cluster Panel)	•	•	•	•	●
108		MULC/RD (Multifunction Video Camera And Remote Detection By Laser Assembly)	•	•	•	•	•
108		MULS (Multifunction Screen)	•	•	•	•	•
108		SRS (Airbag)	•	•	•	•	•
108		SSC (Stop And Start Control ECU)	•	•	•	•	•
		TCM (Automatic Gearbox)	•	•	•	•	•

				1	1	1	1
2008		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
2008		AC (Air Conditioning)	•	•	•	•	•
2008		AMP (Audio Amplifier)	•	•	•	•	•
2008		Alarm	•	•	•	•	•
2008		BATT (Battery Charge Status Unit)	•	•	•	•	•
2008		BSI (Built-in Systems Interface)	٠	•	•	•	•
2008		CD (External CD Player)	•	•	•	•	•
2008		ECM (Engine Control Module)	•	•	•	•	•
2008		EPS (Electric Power Steering)	•	•	•	•	•
2008		ESL (Electric Steering Lock)	•	•	•	•	•
2008		IP (Instrument Cluster Panel)	•	•	•	•	•
2008			•		•	•	
		MAAP (Multiplexed Additive Adding Pump)	-	-	•		•
2008		MCP (Multiplexed Control Panel)	•	•	•	•	•
2008		MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
2008		NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio System)	•	•	•	•	•
2008		PAM (Parking Assistance)	•	•	•	•	•
2008		RBS (Rain And Brightness Sensor)	•	•	•	•	•
2008		Radio	•	•	•	•	•
2008		RAGIO SM (Services Module)	•	•	•	•	•
			-		-	-	-
2008		SRS (Airbag)	•	•	•	•	•
2008		SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
2008		SWSM (Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
2008		Siren	•	•	•	•	•
2008		TCM (Automatic Gearbox)	•	•	•	٠	•
2008		TRU (Trailer Relay Unit)	•	•	•	•	•
2008		VRD (Voltage Retaining Device)	•	•	•	•	•
206	206	ABS (Anti-lock brake System TEVES)	•	•	•	•	•
206	206	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
206	206	AC (Air Conditioning)	•	•	•	•	•
200	206	Alarm	•	•	•	•	•
			•	•	-	•	•
206	206	BSI (Built-in Systems Interface)	-		•	-	-
206	206	CD (CD Player)	•	•	•	•	•
206	206	DAF (Diesel Additive Control Unit)	•	•	•	•	•
206	206	DSM (Driver's School Module)	•	•	•	•	•
206	206	Display/Telematics	•	•	•	•	•
206	206	ECM (Engine Control Module)	•	•	•	•	•
206	206	EPS (Electric Power Steering GEP)	•	•	•	•	•
206	206	EPS (Electric Power Steering)	•	•	•	•	•
206	206	ERF (Electric Retractable Roof)	•	•	•	•	•
206	206	IP (Instrument Cluster Panel)	•	•	•	•	•
206	206	MULD (Multifunction Display)	•	•	•	•	•
206	206	MULS (Multifunction Screen)	•	•		•	
			-		•	-	•
206	206	NAVI (On-board Navigation System)	•	•	•	•	•
206	206	RBS (Rain And Brightness Sensor)	•	•	•	•	•
206	206	Radio	•	•	•	•	•
206	206	SM (Services Module)	●	•	•	•	•
206	206	SRS (Airbag)	•	•	•	•	•
206	206	SWSM (Steering Wheel Switching Module)	•	•	•	٠	•
206	206	TCM (Automatic Gearbox)	•	•	•	•	•
206	206 (+)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
206	206 (+)	AC (Air Conditioning)	•	•	•	•	•
206	206 (+)	Alarm	•	•	•	•	•
206	206 (+)	BSI (Built-in Systems Interface)	•	•	•	•	•
206	206 (+)	CD (CD Player)	•	•	•	•	
			-	-	-	-	
206	206 (+)	Display/Telematics	•	•	•	•	•
206	206 (+)	ECM (Engine Control Module)	•	•	•	•	•
206	206 (+)	EPS (Electric Power Steering)	●	•	•	•	•
-	206 (+)	IP (Instrument Cluster Panel)	•	•	•	•	•
206					1 -	i .	
206 206	206 (+)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
	206 (+) 206 (+)	RBS (Rain And Brightness Sensor) Radio	•	•	•	•	•

206	206 (+)	SRS (Airbag)	•	•	•	•	•
206	206 (+)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
206	206 (+)	TCM (Automatic Gearbox)	•	•	•	•	•
206	206 (Mux)	ABS (Anti-lock brake System TEVES)	•	•	•	•	•
206	206 (Mux)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
206	206 (Mux)	AC (Air Conditioning)	•	•	•	•	•
206	206 (Mux)	Alarm	•	•	•	•	•
206	206 (Mux)	BSI (Built-in Systems Interface)	•	•	•	•	•
206	206 (Mux)	CD (CD Player)	•	•	•	•	•
206	206 (Mux)	DAF (Diesel Additive Control Unit)	•	•	•	•	•
206	206 (Mux)	DSM (Driver's School Module)	•	•	•	•	•
206	206 (Mux)	ECM (Engine Control Module)	•	•	•	•	•
206	206 (Mux)	EPS (Electric Power Steering GEP)	•	•	•	•	•
206	206 (Mux)	ERF (Electric Retractable Roof)	•	•	•	•	•
206	206 (Mux)	IP (Instrument Cluster Panel)	•	•	•	•	•
206	206 (Mux)	MULD (Multifunction Display)	•	•	•	•	•
206	206 (Mux)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
206	206 (Mux)	Radio	•	•	•	•	•
206	206 (Mux)	SRS (Airbag)	•	•	•	•	•
206	206 (Mux)	TCM (Automatic Gearbox)	•	•	•	•	•
207	207 (+)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
207	207 (+)	AC (Air Conditioning)	•	•	•	•	•
207	207 (+)	ALM (Anti-theft Alarm)	•	•	•	•	•
207	207 (+)	BATT (Battery Charge Status Unit)	•	•	•	•	•
207	207 (+)	BSI (Built-in Systems Interface)	•	•	•	•	•
207	207 (+)	CD (CD Player)	•	•	•	•	•
207	207 (+)	DAF (Diesel Additive Control Unit)	•	•	•	•	•
207	207 (+)	DHL (Directional Headlamps)	•	•	•	•	•
207	207 (+)	DSM (Driver's School Module)	•	•	•	•	•
207	207 (+)	ECM (Engine Control Module)	•	•	•	•	
207	207 (+)	EPS (Electric Power Steering)	•	•	•	•	•
207	207 (+)	FR (Folding Roof)	•	•	•	•	
207	207 (+)	HFC (Hands Free Control Kit)		•	•	•	
207	207 (+)	HFR (High Frequency Receiver)	•	•	•	•	
207			•		•	•	•
	207 (+)	IP (Instrument Cluster Panel)	•				•
207	207 (+)	MULD (Multifunction Display)	•	•	•	•	•
207	207 (+)	PAM (Parking Assistance)	•	•	•	•	•
207	207 (+)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
207	207 (+)	ROR (Radio Or Radiotelephone(Radio Part))	•	•	•	•	•
207	207 (+)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
207	207 (+)	SM (Services Module)	•	•	•	•	•
207	207 (+)	SRS (Airbag)	•	•	•	•	•
207	207 (+)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
207	207 (+)	TCM (Automatic Gearbox)	•	•	•	•	•
207	207 (+)	TEU (Telematics Unit)	•	•	•	•	•
207	207 (+)	UID (Under Inflation Detection)	•	•	•	•	•
207	207 (CAN)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
207	207 (CAN)	AC (Air Conditioning)	•	•	•	•	•
207	207 (CAN)	Alarm	•	•	•	•	•
207	207 (CAN)	BATT (Battery Charge Status Unit)	•	•	•	•	•
207	207 (CAN)	BSI (Built-in Systems Interface)	•	•	•	•	•
207	207 (CAN)	CD (CD Player)	•	•	•	•	•
207	207 (CAN)	DHL (Directional Headlamps)	•	•	•	•	•
207	207 (CAN)	DSM (Driver's School Module)	•	•	•	•	•
207	207 (CAN)	ECM (Engine Control Module)	•	•	•	•	•
207	207 (CAN)	EPS (Electric Power Steering)	•	•	•	•	•
207	207 (CAN)	FR (Folding Roof)	•	•	•	•	•
207	207 (CAN)	HFC (Hands Free Control Kit)	•	•	•	•	•
207	207 (CAN)	HFR (High Frequency Receiver)	•	•	•	•	•
207	207 (CAN)	IP (Instrument Cluster Panel)	•	•	•	•	•
			-				

91916394 <th></th> <th>I</th> <th></th> <th></th> <th>1</th> <th>1</th> <th>1</th> <th></th>		I			1	1	1	
927 927 928 928 928 92 92 92 92 92 93 92 93 92 93 92 93 92 93 92 93 92 93 92 93 92 93 92 93 92 93 93 93 93 93 93 93 93 93 93 94 <t< td=""><td>207</td><td>207 (CAN)</td><td>MULS (Multifunction Screen)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></t<>	207	207 (CAN)	MULS (Multifunction Screen)	•	•	•	•	•
97 97 93 96 90<	207	207 (CAN)	N-TNB (Not Fastened Warning Light(Tnb))	•	•	•	•	•
900 902 903 903 904 <td>207</td> <td>207 (CAN)</td> <td>PAM (Parking Assistance)</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>	207	207 (CAN)	PAM (Parking Assistance)	•	•	•	•	•
97 937 938 94 9	207	207 (CAN)	RBS (Rain And Brightness Sensor)	٠	•	•	•	•
97 267 CAD 985 Line (1), Americal Security, Market Security, Statuty, Market Security 9 9 9 1	207	207 (CAN)	Radio	•	•	•	•	•
97 <	207	207 (CAN)	SM (Services Module)	•	•	•	•	•
07 07 080 181 (Drawnich Earthwall •	207	207 (CAN)	SRS (Airbag)	•	•	•	•	•
917 207 207 200 TP (Toleration function)	207	207 (CAN)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
917 207 207 200 TP (Toleration function)	207	207 (CAN)	TCM (Automatic Gearbox)	•	•	•	•	•
B7 D70 (D1) D12 of relation beseries) •	207		TEU (Telematics Unit)	•	•	•	•	•
277 297 0503 BK/EF (arti-lock trade System for Electric Sublity Program) •	207		UID (Under Inflation Detection)	•	•	•	•	•
971 9701 971 10700 971 10700 971 10700 971 1070 107 107 107 107 107 107 107 107 107 107 107 107 107 107 107 107 107 107				-		_	-	
207 207 1000 N1 (Bull to System Interface) •					-	-	-	•
97 980 931				-	-	-	-	•
87 87 600 (D) (D) Player) •				-	-	-	-	•
371 371 0.001 FL (Inglac Carrell Model) •					-	-		-
937 937 (MA) 1P (instrument Cluster Famel) •			CD (CD Player)	-	•	-	-	•
207 207 (MA) MLD (Mali function Display) •	207	207 (VAN)	ECM (Engine Control Module)	•	•	•	•	•
D37D5	207	207 (VAN)	IP (Instrument Cluster Panel)	•	•	•	•	•
977 979 (404) 544 (207	207 (VAN)	MULD (Multifunction Display)	•	•	•	•	•
207 207 1040 St Cservices Module) •	207	207 (VAN)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
207 207 (Ak) SiS (Airbag) •	207	207 (VAN)	Radio	•	•	•	•	•
207 207 (Ak) SiS (Airbag) •	207	207 (VAN)	SM (Services Module)	•	•	•	•	•
897 207 (MAX) STLCU (Stolen Vehicle Location Control) •	207			•	•	•	•	•
297 207 (VAN) SYSE (Steering Herel Switching Module) 207 (VAN) TO (Martomitic Gerebox) 207 (VAN) 208 (VAN) Prevent Closer Panel) 207 (VAN) 207 (VAN) 207 (VAN) 207 (VAN) 207 (VAN) 207 (VAN) 208 (VAN) Prevent Closer Panel) 207 (VAN) 207 (VAN) 207 (VAN) 207 (VAN) 208 (VAN) Prevent Closer Vanel) 208 (VAN) Prevent Closer Vanel) 207 (VAN) 207 (VAN)			-		-	-	-	•
207 (VAR) TCM (Automatic Gearbox) • <t< td=""><td></td><td></td><td></td><td>-</td><td>-</td><td>-</td><td>-</td><td>•</td></t<>				-	-	-	-	•
257 207 (VA8) Fiper-I. (Findscreen Fiper (Left-hand Side)) •				•			-	•
207 101 ABS/ESP (Anti-lock brake System 0r Electric Stability Frogram) •				-	-	-	-	•
207 (1) AC (Air Coditioning) • </td <td></td> <td></td> <td></td> <td></td> <td>-</td> <td>-</td> <td></td> <td>-</td>					-	-		-
207 (1) Alara •			ABS/ESP (Anti-lock brake System Or Electric Stability Program)	-	-	-		•
207 (i) BS1 (Built-in Systems Interface) Image: Constraint of the systems Interface) 207 207 (i) C) CD Player) Image: Constraint of the systems Interface) Image: Constraint of the systems Interface) 207 207 (i) Display/Felematics Image: Constraint of the systems Interface) Image: Constraint of the systems Interface) Image: Constraint of the systems Interface) 207 207 (i) Display/Felematics Image: Constraint of the systems Interface) Image: Constraint of the systems Interface) Image: Constraint of the systems Interface) 207 207 (i) Display/Felematics Image: Constraint of the systems Interface) Image: Constraint o	207	207 (i)	AC (Air Conditioning)	•	•	•	•	•
207 207 (i) CD (CD Player) • <td>207</td> <td>207 (i)</td> <td>Alarm</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>	207	207 (i)	Alarm	•	•	•	•	•
207 207 (1) Display/Tolematics •	207	207 (i)	BSI (Built-in Systems Interface)	•	•	•	•	•
207 207 (i) ECM (Engine Control Module) •	207	207 (i)	CD (CD Player)	•	•	•	•	•
207 207 (i) IP (Instrument Cluster Panel) •	207	207 (i)	Display/Telematics	•	•	•	•	•
Drive Drive <td< td=""><td>207</td><td>207 (i)</td><td>ECM (Engine Control Module)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></td<>	207	207 (i)	ECM (Engine Control Module)	•	•	•	•	•
207207 (i)RadioImage: status line s	207	207 (i)	IP (Instrument Cluster Panel)	•	•	•	•	•
207207 (i)RadioImage: status line s	207	207 (i)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
207 207 (i) SM (Services Module) • <td< td=""><td>207</td><td></td><td></td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></td<>	207			•	•	•	•	•
207207 (i)SRS (Airbag)Image: state in the image: state in the i						•	•	
207207 (i)SVLCU (stolen Vehicle Location Control)•• <td></td> <td></td> <td></td> <td>-</td> <td>_</td> <td>-</td> <td>-</td> <td>•</td>				-	_	-	-	•
207207 (i)SWSM (Steering Wheel Switching Module)Image: Constraint of the system of th					-	-	-	•
207207 (i)TCM (Automatic Gearbox)Image: Constraint of the second					-			•
207207 (i)Wiper-L (Windscreen Wiper (Left-hand Side))•••					-	-	-	-
208208ABS/ESP (Anti-lock brake System Or Electric Stability Program)•• <td></td> <td></td> <td></td> <td>-</td> <td>-</td> <td></td> <td></td> <td>•</td>				-	-			•
208AC (Air Conditioning)Image: A C (207	207 (i)	Wiper-L (Windscreen Wiper (Left-hand Side))	•	•	•	•	•
208208ALM (Anti-theft Alarm)Image: Constraint of the second seco	208		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
208208AMP (Audio Amplifier)Image: Constraint of the systems of the systems of the system of the sys	208	208	AC (Air Conditioning)	•	•	•	•	•
208208BATT (Battery Charge Status Unit)Image: Charge Status Unit)Image: Charge Status Unit)208208BSI (Built-in Systems Interface)Image: Charge Status Unit)Image: Charge Status Unit)Image: Charge Status Unit)208208CD (CD Player)Image: Charge Status Unit)Image: Charge Status Unit)Image: Charge Status Unit)Image: Charge Status Unit)208208CD (CD Player)Image: Charge Status Unit)Image: Charge Status Unit)Image: Charge Status Unit)Image: Charge Status Unit)208208ECM (Engine Control Module)Image: Charge Status Unit)Image: Charge Status Unit)Image: Charge Status Unit)Image: Charge Status Unit)208208EPS (Electric Power Steering)Image: Charge Status Unit)Image: Charge Status Unit)Image: Charge Status Unit)Image: Charge Status Unit)208208IP (Instrument Cluster Panel)Image: Charge Status Unit)Image: Charge Status Unit)Image: Charge Status Unit)Image: Charge Status Unit)208208MAAP (Multiplexed Additive Adding Pump)Image: Charge Status Unit)Image: Charge Status Unit)Image: Charge Status Unit)Image: Charge Status Unit)208208MCP (Multiplexed Control Panel)Image: Charge Status Unit)Image: Charge Status Unit)Image: Charge Status Unit)Image: Charge Status Unit)208208MSI (Matrix Screen Integral To The Instrument Panel)Image: Charge Status Unit)Image: Charge Status Unit)Image: Charge Status Unit)208208MAM (Parking Assistance) </td <td>208</td> <td>208</td> <td>ALM (Anti-theft Alarm)</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>	208	208	ALM (Anti-theft Alarm)	•	•	•	•	•
208208BSI (Built-in Systems Interface)Image: Constant of the system interface)Image: Constant of the system interface)Image: Constant of the system interface interfa	208	208	AMP (Audio Amplifier)	•	•	•	•	•
208208CD (CD Player)Image: CD Player) <thimage: cd="" player)<="" th=""><thi< td=""><td>208</td><td>208</td><td>BATT (Battery Charge Status Unit)</td><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></thi<></thimage:>	208	208	BATT (Battery Charge Status Unit)	•	•	•	•	•
208208DSM (Driver's School Module)••	208	208	BSI (Built-in Systems Interface)	•	•	•	•	•
208208DSM (Driver's School Module)••	208	208	CD (CD Player)	•	•	•	•	•
208208ECM (Engine Control Module)Image: Control Mo	208			-	-	-	-	•
208208EPS (Electric Power Steering)Image: Comparison of the steering of the steerin	208			-	-	-	-	•
208208IP (Instrument Cluster Panel)••• <t< td=""><td></td><td></td><td></td><td>-</td><td>-</td><td>-</td><td>-</td><td></td></t<>				-	-	-	-	
208208LRU (Lighting Relay Unit)••<				-	-	-	-	-
208208MAAP (Multiplexed Additive Adding Pump)••••••••208208MCP (Multiplexed Control Panel)••• <td></td> <td></td> <td></td> <td>-</td> <td>-</td> <td></td> <td>-</td> <td>-</td>				-	-		-	-
208208MCP (Multiplexed Control Panel)•••				-	-		-	-
208208MSI (Matrix Screen Integral To The Instrument Panel)••• <td>208</td> <td></td> <td></td> <td>-</td> <td>-</td> <td>-</td> <td>-</td> <td>-</td>	208			-	-	-	-	-
208NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio System)••••208208PAM (Parking Assistance)••••••	208		MCP (Multiplexed Control Panel)	•	•	•	•	•
208 208 System) Image: Constraint of the system 208 208 PAM (Parking Assistance) Image: Constraint of the system	208	208		•	•	•	•	•
208 PAM (Parking Assistance)	208	208		•	•	•	•	•
				•				
200 ADS (Natili Aliu Diaglithess Sensor)			-	-	-	-	-	-
	200	200	NDS (NAIH AHU DIIGHUHESS SENSOR)	•	-	•	•	•

208	208	Radio	•	•	•	•	
208	208	SM (Services Module)	•	•	•	•	•
208	208	SRS (Airbag)	•	•	•	•	•
208	208	SWIC (Steering Wheel With Integral Controls)	•	•	•	•	
	208		•	•	•	•	
208		SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
208	208 208	Siren	•	•	•	•	•
208		TCM (Automatic Gearbox)	-	•	-	-	•
208	208	TRU (Trailer Relay Unit)	•	•	•	•	•
208	208	VRD (Voltage Retaining Device)	•	•	•	•	•
208	208 (Ai91)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
208	208 (Ai91)	AC (Air Conditioning)	•	•	•	•	•
208	208 (Ai91)	ALM (Anti-theft Alarm)	•	•	•	•	•
208	208 (Ai91)	BSI (Built-in Systems Interface)	•	•	•	•	•
208	208 (Ai91)	CD (External CD Player)	•	•	•	•	•
208	208 (Ai91)	ECM (Engine Control Module)	•	•	•	•	•
208	208 (Ai91)	EPS (Electric Power Steering)	•	•	•	•	•
208	208 (Ai91)	IP (Instrument Cluster Panel)	•	•	•	•	•
208	208 (Ai91)	MCP (Multiplexed Control Panel)	•	•	•	•	•
208	208 (Ai91)	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio System)	•	•	•	•	•
208	208 (Ai91)	System) PAM (Parking Assistance)	•	•	•	•	•
208	208 (Ai91)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
208	208 (Ai91)	Radio	•	•	•	•	•
208	208 (Ai91) 208 (Ai91)	SM (Services Module)	•	•	•	•	•
208	208 (A191) 208 (A191)	SRS (Airbag)	•		•	•	•
208	208 (Ai91)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•		•	
208	208 (A191) 208 (A191)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
208	208 (A191) 208 (A191)	Siren	•	•	•	•	•
208	208 (A191) 208 (A191)	TCM (Automatic Gearbox)	•	•	•	•	•
			•	-	•	•	-
208	208 (Ai91)	VRD (Voltage Retaining Device)	•	•	-	•	•
3008	3008	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	-
3008	3008	AC (Air Conditioning)	-	•	-	_	•
3008	3008	AC (Rear Air Conditioning)	•	•	•	•	•
3008	3008	ALM (Anti-theft Alarm)	•	•	•	•	•
3008	3008	AMP (Audio Amplifier)	•	•	•	•	•
3008	3008	ASM (Anti-slip Mode Selector)	•	•	•	•	•
3008	3008	Alarm	•	•	•	•	•
3008	3008	BATT (Battery Charge Status Unit)	•	•	•	•	•
3008	3008	BATT (Traction Battery ECU)	•	•	•	•	•
3008	3008	BCM (Body Control Module)	•	•	•	•	•
3008	3008	BSI (Built-in Systems Interface)	•	•	•	•	•
3008	3008	CD (CD Player)	•	•	•	•	•
3008	3008	CD (External CD Player)	•	•	•	•	•
3008	3008	CPDMD (Control Panel Dot Matrix Display)	•	•	•	•	•
3008	3008	DAF (Diesel Additive Pump)	•	•	•	•	•
3008	3008	DDC (Driver's Door Control Panel)	•	•	•	•	•
3008	3008	DSC (Driver's Seat Comfort ECU)	•	•	•	•	•
3008	3008	DSP (Driver's Seat Pneumatic Functions ECU)	•	•	•	•	•
3008	3008	Display	•	•	•	•	•
3008	3008	ECM (Engine Control Module)	•	•	•	•	•
3008	3008	EPB (Electric Secondary Brake)	•	•	•	•	•
3008	3008	EPS (Electric Power Steering GEP)	•	•	•	•	•
3008	3008	EPS (Electric Power Steering)	•	•	•	•	•
3008	3008	ERU (Engine Relay Unit)	•	•	•	•	•
3008	3008	ESL (Electric Steering Lock)	•	•	•	•	•
3008	3008	HFA (Hands Full Access ECU(Right-hand Side Or Rear))	•	•	•	•	•
3008	3008	HFC (Hands Free Control Kit)	•	•	•	•	•
3008	3008	HFR (High Frequency Receiver)	•	•	•	•	•
3008	3008	HHV (High Head Vision)	•	•	•	•	•
3008	3008	HLH (Headlamp Height Corrector)	•	•	•	•	•
3008	3008	HMS (Hybrid Mode Selector)	•	•	•	•	•
3008	3008	HYG-1 (Hybrid Control ECU 1)	•		•	•	
		ATO A (AJORIN CONCLOSE DOC 1/	-				-

3008	3008	HYC-2 (Hybrid Control ECU 2)	•		•	•	•
3008	3008	IP (Instrument Cluster Panel)	•	•	•	•	•
3008	3008	MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
3008	3008	MCP (Multiplexed Control Panel)	•	•	•	•	•
3008	3008	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
3008	3008	MULS (Multifunction Screen)	•	•	•	•	•
3008	3008	N-TNB (Not Fastened Warning Light(Tnb))	•	•	•	•	•
3008	3008	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio	•	•	•	•	•
3008	3008	System) NIU (Network Isolation Unit)	•	•	•	•	
3008	3008	PAM (Parking Assistance)		•	•	•	
3008	3008	PSP (Passenger's Seat Pneumatic Functions ECU)		•	•	•	•
3008	3008	PVA (Panoramic Visual Assistance ECU)			•	•	•
3008	3008	RBS (Rain And Brightness Sensor)		•	•	•	•
3008	3008	RSS (Rain-sunlight Sensor)	•	•	•	•	•
3008	3008	Radio	•	•	•	•	
3008	3008	SB (Seat Belts Not Fastened LED Unit(TNB))		•	•	•	•
			•	•	•	•	
3008	3008	SHP/VR (Front Left Seat Heated Pads And Ventilation Regulation ECU) SHP/VR (Front Right Seat Heated Pads And Ventilation Regulation	•	•	•	•	•
3008	3008	ECU)	•	•	•	•	•
3008	3008	SM (Services Module)	•	•	•	•	•
3008	3008	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
3008	3008	SRS (Airbag)	•	•	•	•	•
3008	3008	SWC (Controls On The Steering Wheel)	•	•	•	•	•
3008	3008	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
3008	3008	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
3008	3008	Siren	•	•	•	•	•
3008	3008	TCM (Automatic Gearbox)	•	•	•	•	•
3008	3008	TCM (Sequential Gear Lever)	•	•	•	•	•
3008	3008	TEU (Telematics Unit)	•	•	•	•	•
3008	3008	TRU (Trailer Relay Unit)	•	•	•	•	•
3008	3008	TS (Touch Screen)	•	•	•	•	•
3008	3008	UID (Under Inflation Detection)	•	•	•	•	•
3008	3008	VDA (Vehicle Distance Assistance)	•	•	•	•	•
3008	3008	VRD (Voltage Retaining Device)	•	•	•	•	•
3008	3008	Wiper (Windscreen Wiper)	•	•	•	•	•
3008	3008 (CHINA)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
3008	3008 (CHINA)	AC (Air Conditioning)	•	•	•	•	•
3008	3008 (CHINA)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
3008	3008 (CHINA)	Alarm	•	•	•	•	•
3008	3008 (CHINA)	BATT (Battery Charge Status Unit)	•	•	•	•	•
3008	3008 (CHINA)	BSI (Built-in Systems Interface)	•	•	•	•	•
3008	3008 (CHINA)	DCP (Door Control Pad)	•	•	•	•	•
3008	3008 (CHINA)	ECM (Engine Control Module)	•	•	•	•	•
3008	3008 (CHINA)	EPB (Electric Secondary Brake)	•	•	•	•	•
3008	3008 (CHINA)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
3008	3008 (CHINA)	ERU (Engine Relay Unit)	•	•	•	•	•
3008	3008 (CHINA)	HHV (High Head Vision)	•	•	•	•	•
3008	3008 (CHINA)	IP (Instrument Cluster Panel)	•	•	•	•	•
3008	3008 (CHINA)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
3008	3008 (CHINA)	MULD (Multifunction Display)	•	•	•	•	•
3008	3008 (CHINA)	PAM (Parking Assistance)	•	•	•	•	•
3008	3008 (CHINA)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
3008	3008 (CHINA)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
3008	3008 (CHINA)	Radio	•	•	•	•	•
3008	3008 (CHINA)	SM (Services Module)	•	•	•	•	•
3008	3008 (CHINA)	SRS (Airbag)	•	•	•	•	•
3008	3008 (CHINA)	SWSM (Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
3008	3008 (CHINA)	TCM (Automatic Gearbox)	•	•	•	•	•
3008	3008 (CHINA)	TEU (Telematics Unit)	•	•	•	•	•
3008	3008 (CHINA)	UID (Under Inflation Detection)	•	•	•	•	•
3008	3008 (CHINA)	VRD (Voltage Retaining Device)	•		•	•	•

5008 5008 0.008 0		• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •
2008 2008 Ulybrida) AC (Air Conditioning) Image: Conditioning) 2008 2008 Ulybrida) ALM (Anti-theff Alarm) Image: Conditioning) 2008 2008 Ulybrida) BATI (Extery Charge Status Unit) Image: Conditioning) 2008 2008 Ulybrida) BATI (Traction Battery EU) Image: Conditioning) 2008 2008 Ulybrida) DST (Built-in Systems Interface) Image: Conditioning) 2008 2008 Ulybrida) DCP (Door Control Pad) Image: Conditioning) Image: Conditioning) 2008 2008 Ulybrida) DCP (Door Control Module) Image: Conditioning) Image: Conditioning) 2008 2008 Ulybrida) DFP (Boor Control Module) Image: Conditioning) Image: Conditioning) 2008 2008 Ulybrida) DFF (Electric Secondary Brake) Image: Conditioning) Image: Conditioning) 2008 2008 Ulybrida) DFF (Electric Secondary Brake) Image: Conditioning) Image: Conditioning) Image: Conditioning) Image: Conditioning) Image: Conditioning) Image: Condit		• • • • • • • • • • • • • • • • • • •	
1008 3008 (lyhrid4) AM (Anti-theft Alarm) •		• • • • • • • • • • • • • • • • • • •	
3008 3008 (Hybrid4) AMP (Andio Amplifier) •		• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • •
3008 3008 (hyhrid) IATT Okttery Charge Status Unit) • • • 3008 3008 (hyhrid) IATT Okttery Charge Status Unit) • • • 3008 3008 (hyhrid) IBTI (Built-in Systems Interface) • • • 3008 3008 (hyhrid) CDC [Dayer] • <td></td> <td>• • • • • • • • • • • • • • • • • • •</td> <td>•</td>		• • • • • • • • • • • • • • • • • • •	•
2008 2008 Glybrid4) BATT (Traction Battery EU) •		• • • • • • • • • • • • • • • • • • •	•
3008 3008 Biphrid4) BSI (Bullt-in Systems Interface) Image: Constraint of the systems Interface) 3008 3008 Biphrid4) DCD (Do Player) Image: Constraint of the systems Interface) Image: Constraint of the systems Interface) 3008 3008 Biphrid4) EDC (Door Control Pad) Image: Constraint of the systems Interface) Image: Constraint of the systems Interface) 3008 3008 Biphrid4) EPC (Electric Secondary Brake) Image: Constraint of the systems Interface) Image: Constraint of the systems Interface) 3008 3008 Biphrid4) EPC (Electric Fower Steering Electric Pump Unit) Image: Constraint of the systems Interface) Image: Constraint of the systems Interface) 3008 3008 Biphrid4) EPC (Electric Fower Steering Electric Pump Unit) Image: Constraint of the systems Interface) Image: Constraint of the systems Interface) 3008 3008 Biphrid4) EPC - Constraint BCU 1 Image: Constraint of the systems Interface) Image: Constraint of the systems Interface) 3008 3008 Biphrid4) EPC - Constraint Cluster Pane) Image: Constraint of the systems Interface) Image: Constraint of the systems Interface) Image: Constrain		• • • • • • • • • • •	•
3008 3008 (Uybrid4) CD (CD Player) • </td <td>• • • • • • • • • • • • • • • • • • •</td> <td>• • • • • • • • •</td> <td>•</td>	• • • • • • • • • • • • • • • • • • •	• • • • • • • • •	•
3008 3008 (lybrid4) DCP (hoor Control Pad) • • • 3008 3008 (lybrid4) ECK (Engine Control Module) • • • 3008 3008 (lybrid4) EFB (Electric Secondary Brake) • • • 3008 3008 (lybrid4) EFB (Electric Secondary Brake) • • • 3008 3008 (lybrid4) EFB (Electric Secondary Brake) • • • 3008 3008 (lybrid4) HFC (lands Free Control Kit) • • • • 3008 3008 (lybrid4) HWC (lighrid Control ECU 1) •		• • • • • •	•
3008 3008 (hybrid4) ECM (Engine Control Modulo) • • • 3008 3008 (hybrid4) EPR (Electric Secondary Erake) • <t< td=""><td></td><td>• • • • •</td><td>•</td></t<>		• • • • •	•
3008 3008 (ltybrid4) EPB (Electric Secondary Brake) ● ● 3008 3008 (ltybrid4) EPS (Electric Power Steering Electric Pump Unit) ● ● 3008 3008 (ltybrid4) HFC (liands Free Control Kit) ● ● ● 3008 3008 (ltybrid4) HFC (liands Free Control Kit) ● ● ● 3008 3008 (ltybrid4) HFC-1 (ltybrid Control ECU 1) ● ● ● 3008 3008 (ltybrid4) HFC-1 (ltybrid Control ECU 2) ● ● ● 3008 3008 (ltybrid4) HFC-1 (ltybrid Control ECU 2) ● ● ● 3008 3008 (ltybrid4) MFC-1 (ltybrid Control ECU 2) ● ● ● 3008 3008 (ltybrid4) MS (ltybrid4) MIC Plantificacd Additive Adding Pump) ● ● 3008 3008 (ltybrid4) MID (ltificaction Display) ● ● ● 3008 3008 (ltybrid4) PA (Paronaic Visual Assistance ECU) ● ● ● 3008 3008 (ltybrid4) Radi	• • • • • • • • • • • • •	• • • •	•
3008 3008 Glybrid4) EPS (Electric Power Steering Electric Pump Unit) • • 3008 3008 Glybrid4) HPC (Hands Free Control Kit) •<	• • • • • • • • • •	• • • • • • •	•
3008 3008 (Hybrid4) HFC (Hands Free Control Kit) • • 3008 3008 (Hybrid4) HHV (High Head Vision) • • • 3008 3008 (Hybrid4) HHV (High Head Vision) • • • 3008 3008 (Hybrid4) HHC-1 (Hybrid Control ECU 1) • • • 3008 3008 (Hybrid4) HYC-2 (Hybrid Control ECU 2) • • • 3008 3008 (Hybrid4) HYC-2 (Hybrid Control ECU 2) • • • 3008 3008 (Hybrid4) MAP (Multiplexed Additive Adding Pump) • • • 3008 3008 (Hybrid4) MSI (Matrix Screen Integral To The Instrument Panel) • • • 3008 3008 (Hybrid4) PAA (Parking Assistance) • <	• • • • • • • •	•	-
3008 3008 (Hybrid4) HHV (High Head Vision) • • 3008 3008 (Hybrid4) HBC (Hybrid Control ECU 1) • • • 3008 3008 (Hybrid4) HYC-1 (Hybrid Control ECU 1) • • • • 3008 3008 (Hybrid4) HYC-2 (Hybrid Control ECU 2) •	• • • • • •	•	-
District District District District 3008 3008 (Hybrid4) HNS (Hybrid Mode Selector) ● ● 3008 3008 (Hybrid4) HYC-1 (Hybrid Control ECU 1) ● ● ● 3008 3008 (Hybrid4) HYC-2 (Hybrid Control ECU 2) ● ● ● 3008 3008 (Hybrid4) MAP (Multiplexed Additive Adding Pump) ● ● ● 3008 3008 (Hybrid4) MAP (Multiplexed Additive Adding Pump) ● ● ● ● 3008 3008 (Hybrid4) MULD (Multifunction Display) ●	• • • • • • • • • • • • • • • • • • • •	•	•
3008 3008 (Hybrid4) HYC-1 (Hybrid Control ECU 1) • • 3008 3008 (Hybrid4) HYC-2 (Hybrid Control ECU 2) • • 3008 3008 (Hybrid4) IP (Instrument Cluster Panel) • • 3008 3008 (Hybrid4) MAP (Multiplexed Additive Adding Pump) • • • 3008 3008 (Hybrid4) MSI (Matrix Screen Integral To The Instrument Panel) • • • 3008 3008 (Hybrid4) MULD (Multifunction Display) • • • • 3008 3008 (Hybrid4) PAM (Parking Assistance) • • • • 3008 3008 (Hybrid4) PAM (Parking Assistance) • • • • 3008 3008 (Hybrid4) RS (Rain Sensor) • • • • • 3008 3008 (Hybrid4) RS (Sitch Module) • <td< td=""><td>• • • •</td><td>-</td><td></td></td<>	• • • •	-	
3008 3008 (Hybrid4) HYC-2 (Hybrid Control ECU 2) • • 3008 3008 (Hybrid4) IP (Instrument Cluster Panel) • • 3008 3008 (Hybrid4) MAAP (Multiplexed Additive Adding Pump) • • • 3008 3008 (Hybrid4) MSI (Matrix Screen Integral To The Instrument Panel) • • • 3008 3008 (Hybrid4) MILD (Multifunction Display) • • • • 3008 3008 (Hybrid4) PAM (Parking Assistance) • <t< td=""><td>•</td><td></td><td>•</td></t<>	•		•
DotsDotsDescription30083008 (Hybrid4)IP (Instrument Cluster Panel)•30083008 (Hybrid4)MAP (Multiplexed Additive Adding Pump)•30083008 (Hybrid4)MSI (Matrix Screen Integral To The Instrument Panel)•30083008 (Hybrid4)MILD (Multifunction Display)•30083008 (Hybrid4)PM (Parking Assistance)•30083008 (Hybrid4)PYA (Panoramic Visual Assistance ECU)•30083008 (Hybrid4)RS (Rain Sensor)•30083008 (Hybrid4)Radio•30083008 (Hybrid4)Radio•30083008 (Hybrid4)Radio•30083008 (Hybrid4)SS (Airbag)•30083008 (Hybrid4)SSS (Airbag)•30083008 (Hybrid4)SSSM (Switch Module Under The Steering Wheel)•30083008 (Hybrid4)TEU (Telematics Unit)•30083008 (Hybrid4)TEU (Telematics Unit)•30083008 (Hybrid4)WED (Voltage Retaining Device)•30083008 (Hybrid4)WED (Voltage Retaining Device)•30083008 (Hybrid4)Maper (Windscreen Wiper)•30083008 (Ps4)AC (Air Conditioning)•30083008 (Ps4)AC (Air Conditioning)•30083008 (Ps4)AIM (Anti-theft Alarm)•30083008 (Ps4)AIM (Anti-theft Alarm)•30083008 (Ps4)AIM (Anti-theft Alarm)•<	•	•	•
30083008 (Hybrid4)MAAP (Multiplexed Additive Adding Pump)•30083008 (Hybrid4)MSI (Matrix Screen Integral To The Instrument Panel)•30083008 (Hybrid4)MULD (Multifunction Display)•30083008 (Hybrid4)PAM (Parking Assistance)•30083008 (Hybrid4)PAM (Parking Assistance)•30083008 (Hybrid4)PAM (Parking Assistance)•30083008 (Hybrid4)RS (Rain Sensor)•30083008 (Hybrid4)RS (Rain Sensor)•30083008 (Hybrid4)Radio•30083008 (Hybrid4)SK (Airbag)30083008 (Hybrid4)SKS (Airbag)30083008 (Hybrid4)SKS (Airbag)30083008 (Hybrid4)SKS (Kich Module Under The Steering Wheel)30083008 (Hybrid4)SKS (Kich Module Under The Steering Wheel)30083008 (Hybrid4)TCM (Automatic Gearbox)30083008 (Hybrid4)TEU (Telematics Unit)30083008 (Hybrid4)TEU (Telematics Unit)30083008 (Hybrid4)WED (Voltage Retaining Device)30083008 (Hybrid4)Wiper (Windscreen Wiper)30083008 (R4)AC (Air Conditioning)30083008 (P84)AC (Air Conditioning)30083008 (P84)AC (Air Conditioning)30083008 (P84)AC (Air Conditioning)30083008 (P84)AM (Anti-Heft Alarm)30083008 (P84)ASM (Anti-slip Mode Selector)3008300	•	•	•
30083008(Hybrid4)MSI (Matrix Screen Integral To The Instrument Panel)•30083008(Hybrid4)MULD (Multifunction Display)••30083008(Hybrid4)PAM (Parking Assistance)••30083008(Hybrid4)PVA (Panoramic Visual Assistance ECU)••30083008(Hybrid4)RS (Rain Sensor)•••30083008(Hybrid4)Radio•••30083008(Hybrid4)Radio•••30083008(Hybrid4)SRS (Airbag)•••30083008(Hybrid4)SRS (Airbag)•••30083008(Hybrid4)SRS (Switch Module Under The Steering Wheel)•••30083008(Hybrid4)TEU (Telematics Unit)••••30083008(Hybrid4)UID (Under Inflation Detection)••••30083008(Hybrid4)WED (Voltage Retaining Device)••••30083008(Hybrid4)Wiper (Windscreen Wiper)•••••30083008(P84)AC (Air Conditioning)•••••30083008(P84)ALC (Air Conditioning)•••••30083008(P84)ALC (Air Conditioning)••••••30	•	•	•
3008 3008 Hybrid4 MULD (Multifunction Display) Image: Constraint of the system	-	•	•
3008 3008 (Hybrid4) PAM (Parking Assistance) ● 3008 3008 (Hybrid4) PVA (Panoranic Visual Assistance ECU) ● ● 3008 3008 (Hybrid4) RS (Rain Sensor) ● ● ● 3008 3008 (Hybrid4) RAdio ● ● ● ● 3008 3008 (Hybrid4) Radio ● <td< td=""><td>•</td><td>•</td><td>•</td></td<>	•	•	•
30083008 (Hybrid4)PVA (Panoramic Visual Assistance ECU)Image: Constraint of the system of the syste		•	•
30083008 (Hybrid4)RS (Rain Sensor)••• <th< td=""><td>•</td><td>•</td><td>•</td></th<>	•	•	•
30083008 (Hybrid4)RadioImage: Constraint of the system of	•	•	•
30083008 (Hybrid4)SM (Services Module)••••30083008 (Hybrid4)SRS (Airbag)•••••••30083008 (Hybrid4)SWSM (Switch Module Under The Steering Wheel)•••	•	•	•
30083008 (Hybrid4)SRS (Airbag)30083008 (Hybrid4)SWSM (Switch Module Under The Steering Wheel)•30083008 (Hybrid4)TCM (Automatic Gearbox)•30083008 (Hybrid4)TCU (Telematics Unit)•30083008 (Hybrid4)TEU (Telematics Unit)•30083008 (Hybrid4)UID (Under Inflation Detection)•30083008 (Hybrid4)WID (Voltage Retaining Device)•30083008 (Hybrid4)Wiper (Windscreen Wiper)•30083008 (P84)ABS/ESP (Anti-lock brake System Or Electric Stability Program)•30083008 (P84)AC (Air Conditioning)•30083008 (P84)AC (Rear Air Conditioning)•30083008 (P84)ALM (Anti-theft Alarm)•30083008 (P84)ASM (Anti-slip Mode Selector)•30083008 (P84)ASM (Anti-slip Mode Selector)•30083008 (P84)BATT (Battery Charge Status Unit)•30083008 (P84)BCM (Body Control Module)•30083008 (P84)BSI (Built-in Systems Interface)•	•	•	•
30083008 (Hybrid4)SWSM (Switch Module Under The Steering Wheel)●●●30083008 (Hybrid4)TCM (Automatic Gearbox)●●●●30083008 (Hybrid4)TEU (Telematics Unit)●●●●30083008 (Hybrid4)UID (Under Inflation Detection)●●●●30083008 (Hybrid4)VRD (Voltage Retaining Device)●●●●30083008 (Hybrid4)Wiper (Windscreen Wiper)●●●●30083008 (P84)ABS/ESP (Anti-lock brake System Or Electric Stability Program)●●●30083008 (P84)AC (Air Conditioning)●●●●30083008 (P84)ALM (Anti-theft Alarm)●●●●30083008 (P84)ASM (Anti-slip Mode Selector)●●●●30083008 (P84)BATT (Battery Charge Status Unit)●●●●30083008 (P84)BSI (Built-in Systems Interface)●●●●	•	•	٠
30083008 (Hybrid4)TCM (Automatic Gearbox)•••<	•	•	•
30083008 (Hybrid4)TEU (Telematics Unit)••••30083008 (Hybrid4)UID (Under Inflation Detection)•••••30083008 (Hybrid4)VRD (Voltage Retaining Device)••••••30083008 (Hybrid4)Wiper (Windscreen Wiper)•••<	•	•	•
30083008 (Hybrid4)UID (Under Inflation Detection)•••30083008 (Hybrid4)VRD (Voltage Retaining Device)••••30083008 (Hybrid4)Wiper (Windscreen Wiper)•••••30083008 (P84)ABS/ESP (Anti-lock brake System Or Electric Stability Program)••••30083008 (P84)AC (Air Conditioning)••••••30083008 (P84)AC (Rear Air Conditioning)•• </td <td>•</td> <td>•</td> <td>•</td>	•	•	•
30083008 (Hybrid4)VRD (Voltage Retaining Device)•••30083008 (Hybrid4)Wiper (Windscreen Wiper)•••••30083008 (Hybrid4)ABS/ESP (Anti-lock brake System Or Electric Stability Program)••••30083008 (P84)AC (Air Conditioning)•••••••30083008 (P84)AC (Rear Air Conditioning)••• <td>•</td> <td>•</td> <td>•</td>	•	•	•
30083008 (Hybrid4)Wiper (Windscreen Wiper)•30083008 (P84)ABS/ESP (Anti-lock brake System Or Electric Stability Program)••30083008 (P84)AC (Air Conditioning)•••30083008 (P84)AC (Rear Air Conditioning)•••30083008 (P84)AC (Rear Air Conditioning)•••30083008 (P84)ALM (Anti-theft Alarm)•••30083008 (P84)ALM (Anti-theft Alarm)•••30083008 (P84)ASM (Anti-slip Mode Selector)•••30083008 (P84)BATT (Battery Charge Status Unit)•••30083008 (P84)BCM (Body Control Module)•••30083008 (P84)BSI (Built-in Systems Interface)•••	•	•	•
30083008 (P84)ABS/ESP (Anti-lock brake System Or Electric Stability Program)•30083008 (P84)AC (Air Conditioning)••30083008 (P84)AC (Rear Air Conditioning)••30083008 (P84)ALM (Anti-theft Alarm)••30083008 (P84)ALM (Anti-theft Alarm)••30083008 (P84)ALM (Anti-theft Alarm)••30083008 (P84)ASM (Anti-slip Mode Selector)••30083008 (P84)BATT (Battery Charge Status Unit)••30083008 (P84)BCM (Body Control Module)••30083008 (P84)BSI (Built-in Systems Interface)••	•	•	•
30083008 (P84)AC (Air Conditioning)••30083008 (P84)AC (Rear Air Conditioning)•••30083008 (P84)ALM (Anti-theft Alarm)•••30083008 (P84)ALM (Anti-theft Alarm)•••30083008 (P84)AMP (Audio Amplifier)•••30083008 (P84)ASM (Anti-slip Mode Selector)•••30083008 (P84)BATT (Battery Charge Status Unit)•••30083008 (P84)BCM (Body Control Module)•••30083008 (P84)BSI (Built-in Systems Interface)•••	•	•	•
30083008 (P84)AC (Rear Air Conditioning)•••••30083008 (P84)ALM (Anti-theft Alarm)•••	•	•	•
30083008 (P84)ALM (Anti-theft Alarm)•••30083008 (P84)AMP (Audio Amplifier)••••30083008 (P84)ASM (Anti-slip Mode Selector)••••30083008 (P84)BATT (Battery Charge Status Unit)••••30083008 (P84)BCM (Body Control Module)••••30083008 (P84)BSI (Built-in Systems Interface)••••	•	•	•
30083008 (P84)AMP (Audio Amplifier)••••30083008 (P84)ASM (Anti-slip Mode Selector)•••••30083008 (P84)BATT (Battery Charge Status Unit)•••••30083008 (P84)BCM (Body Control Module)••••••30083008 (P84)BSI (Built-in Systems Interface)•••••	•	•	•
30083008 (P84)ASM (Anti-slip Mode Selector)••30083008 (P84)BATT (Battery Charge Status Unit)•••30083008 (P84)BCM (Body Control Module)•••30083008 (P84)BSI (Built-in Systems Interface)•••	•	•	•
30083008 (P84)ASM (Anti-slip Mode Selector)•••30083008 (P84)BATT (Battery Charge Status Unit)•••30083008 (P84)BCM (Body Control Module)•••30083008 (P84)BSI (Built-in Systems Interface)•••	•	•	•
30083008 (P84)BATT (Battery Charge Status Unit)●●30083008 (P84)BCM (Body Control Module)●●30083008 (P84)BSI (Built-in Systems Interface)●●	•	•	•
30083008 (P84)BCM (Body Control Module)••30083008 (P84)BSI (Built-in Systems Interface)••	•	•	•
3008 (P84) BSI (Built-in Systems Interface) • •	•	•	•
	•	•	•
	•	•	•
3008 3008 (P84) DAF (Diesel Additive Pump)	•	•	•
3008 3008 (P84) DDC (Driver's Door Control Panel)	•	•	•
3008 3008 (P84) DHL (Headlamp Height Adjuster/Directional Headlamp)	•	•	•
3008 3008 (P84) DSC (Driver's Seat Comfort ECU)	•	•	•
3008 3008 (P84) DSP (Driver's Seat Pneumatic Functions ECU)	•	•	•
3008 3008 (P84) Display • • •	•	•	•
3008 3008 (P84) ECM (Engine Control Module) • •	•	•	•
3008 3008 (P84) EPS (Electric Power Steering)	•	•	•
3008 3008 (P84) ERU (Engine Relay Unit) • •	•	•	•
3008 3008 (P84) ESL (Electric Steering Lock)	•	•	•
		•	•
		•	-
		•	
		-	
NAUT/FEU/AS (audio-naviation Or Folomatic Unit Or Connected Audio	•	•	-
3008 3008 (P84) ANVI/IEO/CRS (Addio havigation of refematic onit of connected Addio System)	•	•	•
3008 (P84) PAM (Parking Assistance) ● ●	-	•	•
30083008 (P84)PSP (Passenger's Seat Pneumatic Functions ECU)●	•	•	

r			-	1	1	1	1
3008	3008 (P84)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
3008	3008 (P84)	RSS (Rain-sunlight Sensor)	•	•	•	•	•
3008	3008 (P84)	Radio	•	•	•	•	•
3008	3008 (P84)	SB (Seat Belts Not Fastened LED Unit(TNB))	•	•	•	•	•
3008	3008 (P84)	SHP/VR (Front Left Seat Heated Pads And Ventilation Regulation ECU)	•	•	•	•	•
0000	0000 (004)	SHP/VR (Front Right Seat Heated Pads And Ventilation Regulation	•				
3008	3008 (P84)	ECU)	•	•	•	•	•
3008	3008 (P84)	SM (Services Module)	•	•	•	•	•
3008	3008 (P84)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
3008	3008 (P84)	SRS (Airbag)	•	•	•	•	•
3008	3008 (P84)	SWC (Controls On The Steering Wheel)	•	•	•	•	•
3008	3008 (P84)	SWSM (Switch Module Under The Steering Wheel)	٠	•	•	•	•
3008	3008 (P84)	Siren	•	•	•	•	•
3008	3008 (P84)	TCM (Automatic Gearbox)	•	•	•	•	•
3008	3008 (P84)	TCM (Sequential Gear Lever)	•	•	•	•	•
3008	3008 (P84)	TRU (Trailer Relay Unit)	•	•	•	•	•
3008	3008 (P84)	TS (Touch Screen)	•	•	•	•	
3008	3008 (P84)	VDA (Vehicle Distance Assistance)	•	•	•	•	
-			•	•	•	-	•
3008	3008 (P84)	VRD (Voltage Retaining Device)	•	-	•	•	•
3008	3008 (P84)	Wiper (Windscreen Wiper)	•	•	•	•	•
301		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
301		BATT (Battery Charge Status Unit)	•	•	•	•	•
301		BSI (Built-in Systems Interface)	●	•	•	•	•
301		ECM (Engine Control Module)	•	•	•	•	•
301		EPS (Electric Power Steering)	•	•	•	•	•
301		ESL (Electric Steering Lock)	•	•	•	•	•
301		IP (Instrument Cluster Panel)	•	•	•	•	•
301		MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
301		MULS (Multifunction Screen)	•	•	•	•	•
		NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio	•		-	•	-
301		System)		•	•	-	•
301		PAM (Parking Assistance)	•	•	•	•	•
301		Radio	•	•	•	•	•
301		SM (Services Module)	•	•	•	•	•
301		SRS (Airbag)	•	•	•	•	•
301		SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
301		Siren	•	•	•	•	•
301		TCM (Automatic Gearbox)	•	•	•	•	•
301		TRU (Trailer Relay Unit)	•	•	•	•	•
301		VRD (Voltage Retaining Device)	•	•	•	•	•
306	306	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
306	306	ECM (Engine Control Module)	•	•	•	•	•
	306		•	•	•	•	•
306		SRS (Airbag)	-	-	-	-	•
306	306	TCM (Automatic Gearbox)	•	•	•	•	
306	306 (R)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
306	306 (R)	ECM (Engine Control Module)	•	•	•	•	•
306	306 (R)	SRS (Airbag)	•	•	•	•	•
306	306 (R)	TCM (Automatic Gearbox)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	AC (Air Conditioning)	•	•	•	٠	•
307	307 (CAN) (2006.01 -)	Alarm	•	•	•	•	•
307	307 (CAN) (2006.01 -)	BSI (Built-in Systems Interface)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	CD (CD Player)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	DAF (Diesel Additive Control Unit)	•	•	•	٠	•
307	307 (CAN) (2006.01 -)	DDM (Driver's Door Module)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	DSM (Driver's School Module)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	ECM (Engine Control Module)	•	•	•	•	
307			•	•	•	•	•
		EPS (Electric Power Steering)	-		-	-	
307	307 (CAN) (2006.01 -)	FR (Folding Roof)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	HFC (Hands Free Control Kit)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	HFR (High Frequency Receiver)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	HLLC (Left Headlamp Beam Level Corrector)	•	•	•	•	

				-			
307	307 (CAN) (2006.01 -)	HLRC (Right Headlamp Beam Corrector)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	MULS (Multifunction Screen)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	PAM (Parking Assistance)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	PDM (Passenger's Door Module)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	Radio	•	•	•	•	•
307	307 (CAN) (2006.01 -)	SM (Services Module)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	SRS (Airbag)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	SunRoof	•	•	•	•	•
307	307 (CAN) (2006.01 -)	TCM (Automatic Gearbox)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	TEU (Telematics Unit)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	UID (Under Inflation Detection)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	AC (Air Conditioning)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	Alarm	•	•	•	•	•
307	307 (VAN) (- 2005.12)	BSI (Built-in Systems Interface)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	CD (CD Player)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	DAF (Diesel Additive Control Unit)	•		•	•	•
307	307 (VAN) (2005.12) 307 (VAN) (- 2005.12)	DDM (Driver's Door Module)			•	•	
				•	•	•	•
307	307 (VAN) (-2005.12) 307 (VAN) (-2005.12)	DSM (Driver's School Module)	•	•	•	•	
307	307 (VAN) (-2005.12)	ECM (Engine Control Module)		-	-		•
307	307 (VAN) (- 2005.12)	EPS (Electric Power Steering GEP)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	IP (Instrument Cluster Panel)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	MULD (Multifunction Display)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	PAM (Parking Assistance)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	PDM (Passenger's Door Module)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	Radio	•	•	•	•	•
307	307 (VAN) (- 2005.12)	SM (Services Module)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	SRS (Airbag)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	TCM (Automatic Gearbox)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	AC (Air Conditioning)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	AH (Additional Heating)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	ALM (Anti-theft Alarm)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	AMP (Audio Amplifier)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	Alarm	•	•	•	•	•
308	308 (2010.01 - 2014.09)	Alarm Lin	•	•	•	•	•
308	308 (2010.01 - 2014.09)	BATT (Battery Charge Status Unit)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	BSI (Built-in Systems Interface)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	CD (CD Player)	•	•	•	•	•
308	308 (2010.01 - 2014.09) 308 (2010.01 - 2014.09)	CD (External CD Player)	•	•	•	•	•
			•	•	•	•	•
308	$308 (2010. \ 01 - 2014. \ 09)$	CPDMD (Control Panel Dot Matrix Display)	•	•	•	•	
308	308 (2010.01 - 2014.09)	DDC (Driver's Door Control Panel)	-	-	-	-	
308	308 (2010.01 - 2014.09)	DDM (Driver's Door Module)	•	•	•	•	-
308	308 (2010.01 - 2014.09)	DHL (Discharge Bulb With Directional Dipped Headlamp)	•	-	•	•	•
308	308 (2010.01 - 2014.09)	DSM (Driver's School Module)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	ECM (Engine Control Module)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	EPS (Electric Power Steering GEP)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	ERU (Engine Relay Unit)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	ESL (Electric Steering Lock)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	FR (Folding Roof)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	HFC (Hands Free Control Kit)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	HFR (High Frequency Receiver)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	IP (Instrument Cluster Panel)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	KEY (Electrionic Key Reader)	•	•	٠	•	•
308	308 (2010.01 - 2014.09)	LDWS (Lane Departure Warning System)	•	•	•	•	•
r							

200	200 (0010 01 0014 00)		•				
308	308 (2010.01 - 2014.09)	MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	MCP (Multiplexed Control Panel)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	MPD (Moving Panel Deflector)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
308	308 (2010.01 - 2014.09)	MULD (Multifunction Display)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	MULS (Multifunction Screen)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	N-TNB (Not Fastened Warning Light(Tnb))	•	•	•	•	•
308	308 (2010.01 - 2014.09)	NAVI (Telematic Navigator)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio System)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	PAM (Parking Assistance)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	PSM (Passenger's Seat Memorizing Unit)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	Radio	•	•	•	•	•
308	308 (2010.01 - 2014.09)	SB (Seat Belts Not Fastened LED Unit(TNB))	•	•	•	•	•
308	308 (2010.01 - 2014.09)	SM (Services Module)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
308	308 (2010.01 - 2014.09) 308 (2010.01 - 2014.09)	SRS (Airbag)	•	•	•	•	
308	308 (2010.01 - 2014.09) 308 (2010.01 - 2014.09)	SWIC (Steering Wheel With Integral Controls (VCI))		•	•	•	•
308	308 (2010.01 - 2014.09) $308 (2010.01 - 2014.09)$	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
308	308 (2010.01 - 2014.09) $308 (2010.01 - 2014.09)$		•	•	•	•	•
	308 (2010.01 - 2014.09) $308 (2010.01 - 2014.09)$	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
308		Siren SumPact	•		•	•	
308	$308 (2010. \ 01 - 2014. \ 09)$	SunRoof TCN (Automotic Coombox)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	TCM (Automatic Gearbox)	-	-	-	-	•
308	308 (2010.01 - 2014.09)	TCM (Sequential Gear Lever)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	TEU (Telematics Unit)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	TRU (Trailer Relay Unit)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	UID (Under Inflation Detection)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	VRD (Voltage Retaining Device)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	Wiper (Windscreen Wiper)	•	•	•	•	•
308	308 (4 Doors)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
308	308 (4 Doors)	AC (Air Conditioning)	•	•	•	•	•
308	308 (4 Doors)	AMP (Audio Amplifier)	•	•	•	•	•
308	308 (4 Doors)	Alarm	•	•	•	•	•
308	308 (4 Doors)	Alarm Lin	•	•	•	•	•
308	308 (4 Doors)	BATT (Battery Charge Status Unit)	•	•	•	•	•
308	308 (4 Doors)	BSI (Built-in Systems Interface)	•	•	•	•	•
308	308 (4 Doors)	CD (CD Player)	•	•	•	•	•
308	308 (4 Doors)	DCP (Door Control Pad)	•	•	•	•	•
308	308 (4 Doors)	DHL (Directional Headlamps)	•	•	•	•	•
308	308 (4 Doors)	DSM (Driver's School Module)	•	•	•	•	•
308	308 (4 Doors)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
308	308 (4 Doors)	ECM (Engine Control Module)	•	•	•	•	•
308	308 (4 Doors)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
308	308 (4 Doors)	ERU (Engine Relay Unit)	•	•	•	•	•
308	308 (4 Doors)	FR (Folding Roof)	•	•	•	•	•
308	308 (4 Doors)	HFC (Hands Free Control Kit)	•	•	●	•	•
308	308 (4 Doors)	IP (Instrument Cluster Panel)	•	•	•	•	•
308	308 (4 Doors)	LDWS (Lane Departure Warning System)	•	•	•	•	•
308	308 (4 Doors)	MPD (Moving Panel Deflector)	•	•	•	•	•
308	308 (4 Doors)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
308	308 (4 Doors)	MULD (Multifunction Display)	•	•	•	•	•
308	308 (4 Doors)	PAM (Parking Assistance)	•	•	•	•	•
308	308 (4 Doors)	PSM (Passenger's Seat Memorisation Unit)	•	•	•	•	•
308	308 (4 Doors)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
308	308 (4 Doors)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
308	308 (4 Doors)	SM (Services Module)	•	•	•	•	•
308	308 (4 Doors)	SRS (Airbag)	•	•	•	•	•
308	308 (4 Doors)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
308	308 (4 Doors)	SunRoof	•	•	•	•	٠
		۰		<u>.</u>			

200	202 (4 P)						
308	308 (4 Doors)	TCM (Automatic Gearbox)	•	•	•	•	•
308	308 (4 Doors)	TEU (Telematics Unit)	•	•	•	•	•
308	308 (4 Doors)	UID (Under Inflation Detection)	•	•	•	•	•
308	308 (4 Doors)	VRD (Voltage Retaining Device)	•	•	•	•	•
308	308 (4 Doors)	Wiper (Windscreen Wiper)	•	•	•	•	•
308	308 (S)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
308	308 (S)	AC (Air Conditioning)	•	•	•	•	•
308	308 (S)	Alarm	•	•	•	•	•
308	308 (S)	BATT (Battery Charge Status Unit)	•	•	•	•	•
308	308 (S)	BSI (Built-in Systems Interface)	•	•	•	•	•
308	308 (S)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
308	308 (S)	ECM (Engine Control Module)	•	•	•	•	•
308	308 (S)	EPS (Electric Power Steering GEP)	•	•	•	•	•
308	308 (S)	ERU (Engine Relay Unit)	•	•	•	•	•
308	308 (S)	ESL (Electric Steering Lock)	•	•	•	•	•
308	308 (S)	HFC (Hands Free Control Kit)	•	•	•	•	•
308	308 (S)	HLH (Headlamp Height Corrector)	•	•	•	•	•
308	308 (S)	IP (Instrument Cluster Panel)	٠	•	•	•	•
308	308 (S)	KEY (Electrionic Key Reader)	•	•	•	•	•
308	308 (S)	MCP (Multiplexed Control Panel)	•	•	•	•	•
308	308 (S)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
308	308 (S)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
308	308 (S)	MULD (Multifunction Display)	•	•	•	•	•
308	308 (S)	MULS (Multifunction Screen)	•	•	•	•	•
308	308 (S)	NAVI (Telematic Navigator)	•	•	•	•	•
		NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio	•	•		•	-
308	308 (S)	System)	•	•	•	•	•
308	308 (S)	PAM (Parking Assistance)	•	•	•	•	•
308	308 (S)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
308	308 (S)	Radio	•	•	•	•	•
308	308 (S)	SM (Services Module)	٠	•	•	•	•
308	308 (S)	SPMU (Supply Protection And Management Unit)	٠	•	•	•	•
308	308 (S)	SRS (Airbag)	•	•	•	•	•
308	308 (S)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
308	308 (S)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
308	308 (S)	TCM (Automatic Gearbox)	•	•	•	•	•
308	308 (S)	TCM (Sequential Gear Lever)	•	•	•	•	•
308	308 (S)	VRD (Voltage Retaining Device)	•	•	•	•	•
308	308 (T9) (2014.10 -)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	٠	•	•	•	•
308	308 (T9) (2014.10 -)	AC (Air Conditioning)	•	•	•	•	•
308	308 (T9) (2014.10 -)	AH (Additional Heating)	•	•	•	•	•
308	308 (T9) (2014.10 -)	ALM (Anti-theft Alarm)	•	•	•	•	•
308	308 (T9) (2014.10 -)	AMP (Audio Amplifier)	•	•	•	•	•
308	308 (T9) (2014.10 -)	BATT (Battery Charge Status Unit)	•	•	•	•	•
308	308 (T9) (2014.10 -)	BSI (Built-in Systems Interface)	•	•	•	•	•
308	308 (T9) (2014.10 -)	CD (External CD Player)	•	•	•	•	•
308	308 (T9) (2014.10 -)	DDC (Driver's Door Control Panel)	•	•	•	•	•
308	308 (T9) (2014.10 -)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
308	308 (T9) (2014.10 -)	ECM (Engine Control Module)	•	•	•	•	•
308	308 (T9) (2014.10 -)	EPS (Electric Power Steering GEP)	•	•	•	•	
308	308 (T9) (2014. 10 -) 308 (T9) (2014. 10 -)	ERU (Engine Relay Unit)	•	•	•	•	
			•	-	•	•	•
308		ESL (Electric Steering Lock)		•			
308	308 (T9) (2014.10 -)	HFC (Hands Free Control Kit)	•	•	•	•	•
308	308 (T9) (2014.10 -)	HLH (Headlamp Height Corrector)	•	•	•	•	•
308	308 (T9) (2014.10 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
308	308 (T9) (2014.10 -)	KEY (Electrionic Key Reader)	•	•	•	•	•
308	308 (T9) (2014.10 -)	MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
308	308 (T9) (2014.10 -)	MCP (Multiplexed Control Panel)	•	•	•	•	•
	308 (T9) (2014.10 -)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
308	000 (10) (2011.10)						
308 308	308 (T9) (2014.10 -)	MULC (Multifunction Video Camera (CMF))	٠	•	•	•	•
		MULC (Multifunction Video Camera (CMF)) MULD (Multifunction Display)	•	•	•	•	•

308	308 (T9) (2014.10 -)	NAVI (Telematic Navigator)	•	•	•	•	
308	308 (T9) (2014.10 -)	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio	•	•	•	•	-
308	308 (T9) (2014. 10 -)	System)	•	•	•	•	•
308	308 (T9) (2014. 10 -) 308 (T9) (2014. 10 -)	PAM (Parking Assistance) RBS (Rain And Brightness Sensor)	•	•	•	•	•
308	308 (T9) (2014.10 -)	Radio	•	•	•	•	•
308	308 (T9) (2014.10 -)	SB (Seat Belts Not Fastened LED Unit(TNB))	•	•	•	•	•
308	308 (T9) (2014.10 -)	SM (Services Module)	•	•	•	•	•
308	308 (T9) (2014.10 -)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
308	308 (T9) (2014.10 -)	SRS (Airbag)	•	•	•	•	•
308	308 (T9) (2014.10 -)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
308	308 (T9) (2014.10 -)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
308	308 (T9) (2014.10 -)	Siren	•	•	•	•	•
308	308 (T9) (2014.10 -)	TCM (Automatic Gearbox)	•	•	٠	•	•
308	308 (T9) (2014.10 -)	TCM (Sequential Gear Lever)	•	•	•	•	•
308	308 (T9) (2014.10 -)	TRU (Trailer Relay Unit)	•	•	•	•	•
308	308 (T9) (2014.10 -)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
308	308 (T9) (2014.10 -)	VRD (Voltage Retaining Device)	•	•	•	•	•
308	308 (TX9)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
308	308 (TX9)	AC (Air Conditioning)	•	•	•	•	•
308	308 (TX9)	BATT (Battery Charge Status Unit)	•	•	•	•	•
308	308 (TX9)	BSI (Built-in Systems Interface)	•	•	•	•	•
308	308 (TX9)	ECM (Engine Control Module)	•	•	•	•	•
308	308 (TX9)	EPS (Electric Power Steering)	•	•	٠	•	•
308	308 (TX9)	ESL (Electric Steering Lock)	•	•	•	•	•
308	308 (TX9)	IP (Instrument Cluster Panel)	•	•	•	•	•
308	308 (TX9)	MCP (Multiplexed Control Panel)	•	•	٠	•	•
308	308 (TX9)	MSI (Matrix Screen Integral To The Instrument Panel)	٠	•	٠	•	•
308	308 (TX9)	MULS (Multifunction Screen)	•	•	٠	•	•
308	308 (TX9)	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio	•	•	•	•	•
308	308 (TX9)	System) PAM (Parking Assistance)	•	•	•	•	•
308	308 (TX9)	RSS (Rain-sunlight Sensor)	•	•	•	•	•
308	308 (TX9)	Radio	•	•	•	•	•
308	308 (TX9)	SM (Services Module)	•	•	•	•	•
308	308 (TX9)	SRS (Airbag)	•	•	•	•	•
308	308 (TX9)	SWC (Controls On The Steering Wheel)	•	•	•	•	•
308	308 (TX9)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
308	308 (TX9)	TCM (Automatic Gearbox)	•	•	•	•	•
308	308 (TX9)	VRD (Voltage Retaining Device)	•	•	•	•	•
4007	4007	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
4007	4007	AC (Air Conditioning)	•	•	•	•	•
4007	4007	BSI (Built-in Systems Interface)	•	•	•	•	•
4007	4007	CAS (Coded Anti-start)	•	•	•	•	•
4007	4007	DDM (Driver's Door Module)	•	•	•	•	•
4007	4007	DHL (Headlamp Height Adjuster/Directional Headlamp)	•	•	•	•	•
4007	4007	DPCRF (Rear Final Drive Piloted Clutch)	•	•	•	•	•
4007	4007	DSPRLH (Rear LH Door Switch Panel)	•	•	•	•	•
4007	4007	DSPRRH (Rear RH Door Switch Panel)	•	•	•	•	•
4007	4007	ECM (Engine Control Module)	•	•	•	•	•
4007	4007	HFC (Hands Free Control Kit)	•	•	•	•	•
4007	4007	IP (Instrument Cluster Panel)	•	•	•	•	•
4007	4007	NAVI (Navigation)	•	•	•	•	•
4007	4007	PAM (Parking Assistance)	•	•	•	•	•
4007	4007	PDM (Passenger's Door Module)	•	•	•	•	•
4007	4007	Radio	•	•	•	•	•
4007	4007	SAS (Flywheel Angle Sensor)	•	•	•	•	•
4007	4007	SRS (Airbag)	•	•	•	•	•
4007	4007	SunRoof	•	•	•	•	•
4007	4007	TCM (Automatic Gearbox)	•	•	•	•	•
4007	4007	TCM (Gear Lever(Dct))	•	•	•	•	•
4008	4008	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
4008	4008	AC (Air Conditioning)	•	•	•	•	•
				-	-	-	

4008	4008	AC (Rear Air Conditioning)	•	•	•	•	•
4008	4008	ALM (Anti-theft Alarm)	•	•	•	•	•
4008	4008	ASM (Anti-slip Mode Selector)	•	•	•	•	•
4008	4008	AUTH (Starting Authorisation ECU)	•	•	•	•	•
4008	4008	BATT (Battery Charge Status Unit)	•	•	•	•	•
4008	4008	BCM (Body Control Module)	•	•	•	•	•
4008	4008	BSI (Built-in Systems Interface)	•	•	•	•	•
4008	4008	CAS/HFCU (Coded Anti-start/Hands-free Control Unit)	•	•	•	•	•
4008	4008	CD (External CD Player)	•	•	•	•	•
4008	4008	DAF (Diesel Additive Pump)	•	•	•	•	•
4008	4008	DDC (Driver's Door Control Panel)	•	•	•	•	•
4008	4008	DHL (Headlamp Height Adjuster/Directional Headlamp)	•	•	•	•	•
4008	4008	DPCRF (Rear Final Drive Piloted Clutch)	•	•	•	•	•
4008	4008	DSC (Driver's Seat Comfort ECU)	•	•	•	•	•
4008	4008	DSP (Driver's Seat Pneumatic Functions ECU)	•	•	•	•	•
4008	4008	Display	•	•	•	•	•
4008	4008	ECM (Engine Control Module)	•	•	•	•	•
4008	4008	EPS (Electric Power Steering)	•	•	•	•	•
4008	4008	ERU (Engine Relay Unit)	•	•	•	•	•
4008	4008	ESL (Electric Steering Lock)	•	•	•	•	•
4008	4008	HFA (Hands Full Access ECU(Right-hand Side Or Rear))	•	•	•	•	•
4008	4008	IP (Instrument Cluster Panel)	•	•	•	•	•
4008	4008	MCP (Multiplexed Control Panel)	•	•	•	•	•
4008	4008	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
4008	4008	NAVI (Navigation)	•	•	•	•	•
4008	4008	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio	•	•	•	•	-
		System)	-	•	-	-	•
4008	4008	PAM (Parking Assistance)	•	•	•	•	•
4008	4008	PSP (Passenger's Seat Pneumatic Functions ECU)	•	•	•	•	•
4008	4008	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
4008	4008	ROR (Radio Or Radiotelephone(Radio Part))	•	•	•	•	•
4008	4008	RSS (Rain-sunlight Sensor)	•	•	•	•	•
4008	4008	Radio	•	•	•	•	•
4008	4008	SAS (Steering Wheel Angle Sensor)	•	•	•	•	•
4008	4008	SB (Seat Belts Not Fastened LED Unit(TNB))	•	•	•	•	•
4008	4008	SHP/VR (Front Left Seat Heated Pads And Ventilation Regulation ECU)	•	•	•	•	•
4008	4008	SHP/VR (Front Right Seat Heated Pads And Ventilation Regulation ECU)	•	•	•	•	•
4008	4008	SM (Services Module)	•	•	•	•	•
4008	4008	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
4008	4008	SRS (Airbag)	•	•	•	•	•
4008	4008	SSC (Stop And Start Control ECU)	•	•	•	•	•
4008	4008	SWC (Controls On The Steering Wheel)	•	•	•	•	•
4008	4008	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
4008	4008	Siren	•	•	•	•	•
4008	4008	TCM (Automatic Gearbox)	•	•	•	•	•
4008	4008	TCM (Sequential Gear Lever)	•	•	•	•	•
4008	4008	TRU (Trailer Relay Unit)	•	•	•	•	•
4008	4008	TS (Touch Screen)	•	•	•	•	•
4008	4008	VDA (Vehicle Distance Assistance)	•	•	•	•	•
4008	4008	VRD (Voltage Retaining Device)	•	•	•	•	•
4008	4008	Wiper (Windscreen Wiper)	•	•	•	•	•
4008	4008 (CHINA)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
4008	4008 (CHINA)	AC (Air Conditioning)	•	•	•	•	•
4008	4008 (CHINA)	AC (Rear Air Conditioning)	•	•	•	•	•
4008	4008 (CHINA)	ALM (Anti-theft Alarm)	•	•	•	•	•
4008	4008 (CHINA)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
4008	4008 (CHINA)	BATT (Battery Charge Status Unit)	•	•	•	•	•
4008	4008 (CHINA)	BCM (Body Control Module)	•	•	•	•	•
4008	4008 (CHINA)	BSI (Built-in Systems Interface)	•	•	•	•	•
4008	4008 (CHINA)	CD (External CD Player)	•	•	•	•	•
4008	4008 (CHINA)	DAF (Diesel Additive Pump)	•	•	•	•	•
	\	,	<u> </u>	+ <u> </u>		<u> </u>	<u> </u>

4008	4008 (CHINA)	DDC (Driver's Door Control Panel)	•	•	•	•	•
4008	4008 (CHINA)	DHL (Headlamp Height Adjuster/Directional Headlamp)	•	•	•	•	•
4008	4008 (CHINA)	DSC (Driver's Seat Comfort ECU)	•	•	•	•	•
4008	4008 (CHINA)	DSP (Driver's Seat Pneumatic Functions ECU)	•	•	•	•	•
4008	4008 (CHINA)	Display	•	•	•	•	•
4008	4008 (CHINA)	ECM (Engine Control Module)	•	•	•	•	•
4008	4008 (CHINA)	EPS (Electric Power Steering)	•	•	•	•	•
4008	4008 (CHINA)	ERU (Engine Relay Unit)	•	•	٠	•	•
4008	4008 (CHINA)	ESL (Electric Steering Lock)	•	•	•	•	•
4008	4008 (CHINA)	HFA (Hands Full Access ECU(Right-hand Side Or Rear))	•	•	٠	•	٠
4008	4008 (CHINA)	IP (Instrument Cluster Panel)	•	•	•	•	•
4008	4008 (CHINA)	MCP (Multiplexed Control Panel)	•	•	•	•	•
4008	4008 (CHINA)	MULC (Multifunction Video Camera (CMF))	•	•	٠	•	٠
4008	4008 (CHINA)	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio	•	•	•	•	•
4008	4008 (CHINA)	System) PAM (Parking Assistance)	•	•		•	
4008	4008 (CHINA)	PSP (Passenger's Seat Pneumatic Functions ECU)	•	•	•	•	
4008	4008 (CHINA)	PVA (Panoramic Visual Assistance ECU)		•	•	•	•
4008	4008 (CHINA)	RSS (Rain-sunlight Sensor)	•	•	•	•	•
4008	4008 (CHINA)	Radio	•	•	•	•	•
4008	4008 (CHINA)	SB (Seat Belts Not Fastened LED Unit(TNB))	•	•	•	•	•
			-	-		-	
4008	4008 (CHINA)	SHP/VR (Front Left Seat Heated Pads And Ventilation Regulation ECU)	•	•	-	•	–
4008	4008 (CHINA)	SHP/VR (Front Right Seat Heated Pads And Ventilation Regulation ECU)	•	•	•	•	•
4008	4008 (CHINA)	SM (Services Module)	•	•	•	•	•
4008	4008 (CHINA)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
4008	4008 (CHINA)	SRS (Airbag)	•	•	•	•	•
4008	4008 (CHINA)	SWC (Controls On The Steering Wheel)	•	•	•	•	•
4008	4008 (CHINA)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
4008	4008 (CHINA)	Siren	•	•	•	•	•
4008	4008 (CHINA)	TCM (Automatic Gearbox)	•	•	•	•	•
4008	4008 (CHINA)	TCM (Sequential Gear Lever)	•	•	•	•	•
4008	4008 (CHINA)	TRU (Trailer Relay Unit)	•	•	•	•	•
4008	4008 (CHINA)	TS (Touch Screen)	•	•	•	•	•
4008	4008 (CHINA)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
4008	4008 (CHINA)	VRD (Voltage Retaining Device)	•	•	•	•	•
4008	4008 (CHINA)	Wiper (Windscreen Wiper)	•	•	•	•	•
406	406	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
406	406	AC (Air Conditioning)	•	•	•	•	•
406	406	Alarm	•	•	•	•	•
406	406	BSI (Built-in Systems Interface)	•	•	٠	•	•
406	406	CD (CD Player)	•	•	•	•	•
406	406	DAF (Diesel Additive Control Unit)	•	•	٠	•	•
406	406	ECM (Engine Control Module)	•	•	•	•	•
406	406	IP (Instrument Cluster Panel)	•	•	•	•	•
406	406	MULS (Multifunction Screen)	•	•	•	•	•
406	406	NAVI (On-board Navigation System)	•	•	•	•	•
406	406	RBS (Rain And Brightness Sensor)	•	•	•	•	•
406	406	Radio	•	•	•	•	•
406	406	SRS (Airbag)	•	•	•	•	•
406	406	SSP (Electronically Managed Suspension)	•	•	•	•	•
406	406	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
406	406	TCM (Automatic Gearbox)	•	•	•	•	•
406	406 (Coupe)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
406	406 (Coupe)	ECM (Engine Control Module)	•	•	•	•	•
406	406 (Coupe)	SRS (Airbag)	•	•	•	•	•
406	406 (Coupe)	TCM (Automatic Gearbox)	•	•	•	•	•
406	406 (R Coupe)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
406	406 (R Coupe)	AC (Air Conditioning)	•	•	•	•	•
406	406 (R Coupe)	Alarm	•	•	•	•	•
	100 (K coupe)						
406	406 (R Coupe)	BSI (Built-in Systems Interface)	٠	•	•	•	•

406	406 (R Coupe)	DAF (Diesel Additive Control Unit)	•	•	•		
406	406 (R Coupe)	ECM (Engine Control Module)	•	•	•	•	•
406	406 (R Coupe)	IP (Instrument Cluster Panel)	•	•	•	•	•
406	406 (R Coupe)	MULS (Multifunction Screen)	•	•	•	•	•
406	406 (R Coupe)	NAVI (On-board Navigation System)	•	•	•	•	•
406	406 (R Coupe)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
406	406 (R Coupe)	Radio	•	•	•	•	•
406	406 (R Coupe)	SRS (Airbag)	•	•	•	•	•
406	406 (R Coupe)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
406	406 (R Coupe)	TCM (Automatic Gearbox)	•	•	•	•	•
406	406 (R)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
406	406 (R)	AC (Air Conditioning)	•	•	•	•	•
406	406 (R)	Alarm	•	•	•	•	
406	406 (R)	BSI (Built-in Systems Interface)	•	•	•	•	
406	406 (R)	CD (CD Player)	•	•	•	•	
400	406 (R)	DAF (Diesel Additive Control Unit)	•	•	•	•	•
			•	•	•	•	•
406	406 (R) 406 (R)	ECM (Engine Control Module)	•	-	-	•	
406		IP (Instrument Cluster Panel)	-	•	•	-	•
406	406 (R)	MULS (Multifunction Screen)	•	•	•	•	•
406	406 (R)	NAVI (On-board Navigation System)	•	•	•	•	•
406	406 (R)	RBS (Rain And Brightness Sensor)	•	•	•	•	-
406	406 (R)	Radio	•	•	•	•	•
406	406 (R)	SRS (Airbag)	•	•	•	•	•
406	406 (R)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
406	406 (R)	TCM (Automatic Gearbox)	•	•	•	•	•
407		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
407		AC (Air Conditioning)	•	•	•	•	•
407		AH (Additional Heating)	•	•	•	•	•
407		Alarm	•	•	•	•	•
407		BATT (Battery Charge Status Unit)	•	•	•	•	•
407		BSI (Built-in Systems Interface)	•	•	•	•	•
407		BW (Boot Wiring)	•	•	•	•	•
407		CD (CD Player)	•	•	•	•	•
407		DAF (Diesel Additive Control Unit)	•	•	•	•	•
407		DDM (Driver's Door Module)	•	•	•	•	•
407		DHL (Directional Headlamps)	•	•	•	•	•
407		DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
407		ECM (Engine Control Module)	•	•	•	•	•
407		EPS (Electric Power Steering)	•	•	•	•	•
407		HFC (Hands Free Control Kit)	•	•	•	•	•
407		HFR (High Frequency Receiver)	•	•	•	•	•
407		HLLC (Left Headlamp Beam Level Corrector)	•	•	•	•	•
407		HLRC (Right Headlamp Beam Corrector)	•	•	•	•	•
407		IP (Instrument Cluster Panel)	•	•	•	•	•
407		MULD (Multifunction Display)	•	•	•	•	•
407		PAM (Parking Assistance)	•	•	•	•	•
407		PDM (Passenger's Door Module)	•	•	•	•	•
407		PSM (Passenger's Seat Memorizing Unit)	•	•	•	•	•
407		RBS (Rain And Brightness Sensor)	•	•	•	•	•
407		Radio	•	•	•	•	•
407		SRS (Airbag)	•	•	•	•	•
407		SSP (Electronically Managed Suspension)	•	•	•	•	•
407	1	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
407		SunRoof	•	•	•	•	•
407		TCM (Automatic Gearbox)	•	•	•	•	•
407		TEU (Telematics Unit)	•	•	•	•	•
407 407		UID (Under Inflation Detection)	•	•	•	•	•
407 407			•	•	•	•	-
407 408	408 (2010.01 - 2014.09)	Wiper (Windscreen Wiper)	•	•	•	•	•
TUO	$\pm 00 (2010, 01 - 2014, 09)$	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	-				
408	408 (2010.01 - 2014.09)	AC (Air Conditioning)	•	•	•	•	

408	408 (2010.01 - 2014.09)	Alarm	•		•	•	
408	408 (2010.01 - 2014.09) 408 (2010.01 - 2014.09)	Alarm Lin	•	•	•	•	•
408	408 (2010.01 - 2014.09) 408 (2010.01 - 2014.09)	BATT (Battery Charge Status Unit)	•	•	•	•	•
408	$408 (2010. \ 01 - \ 2014. \ 09)$	BSI (Built-in Systems Interface)	•	•	•	•	•
408	408 (2010.01 - 2014.09) 408 (2010.01 - 2014.09)	CD (CD Plaver)	•	•	•	•	•
408	408 (2010.01 - 2014.09) 408 (2010.01 - 2014.09)	DDM (Driver's Door Module)		•	•	•	
408	$408 (2010. \ 01 \ - \ 2014. \ 09)$ $408 (2010. \ 01 \ - \ 2014. \ 09)$		•	•	•	•	•
	408 (2010.01 - 2014.09) 408 (2010.01 - 2014.09)	DHL (Discharge Bulb With Directional Dipped Headlamp)		•	•	•	•
408	· · · · · · · · · · · · · · · · · · ·	DSM (Driver's School Module)	-	-		-	•
408	408 (2010.01 - 2014.09)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	ECM (Engine Control Module)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	EPS (Electric Power Steering GEP)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	EPS (Electric Power Steering)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	ERU (Engine Relay Unit)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	ESL (Electric Steering Lock)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	FR (Folding Roof)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	HFC (Hands Free Control Kit)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	HFR (High Frequency Receiver)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	IP (Instrument Cluster Panel)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	KEY (Electrionic Key Reader)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	LDWS (Lane Departure Warning System)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	MCP (Multiplexed Control Panel)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	MPD (Moving Panel Deflector)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
408	408 (2010.01 - 2014.09)	MULD (Multifunction Display)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	MULS (Multifunction Screen)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	N-TNB (Not Fastened Warning Light(Tnb))	•	•	•	•	•
408	408 (2010.01 - 2014.09)	NAVI (Telematic Navigator)	•	•	•	•	•
		NAVI (Telematic Navigator) NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio	•	•	-	-	•
408	408 (2010.01 - 2014.09)	System)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	PAM (Parking Assistance)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	PSM (Passenger's Seat Memorizing Unit)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	Radio	•	•	•	•	•
408	408 (2010.01 - 2014.09)	SM (Services Module)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	SRS (Airbag)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
408	408 (2010.01 - 2014.09)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	SunRoof	•	•	•	•	•
408	408 (2010.01 - 2014.09)	TCM (Automatic Gearbox)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	TCM (Sequential Gear Lever)	•	•	•	•	
408	408 (2010.01 - 2014.09) $408 (2010.01 - 2014.09)$	TEU (Telematics Unit)	•	•	•	•	•
408	408 (2010.01 - 2014.09) $408 (2010.01 - 2014.09)$		•	•	•	•	•
		TRU (Trailer Relay Unit)		-			•
408	408 (2010.01 - 2014.09)	UID (Under Inflation Detection)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	VRD (Voltage Retaining Device)	•	•	•	•	•
408	408 (2010.01 - 2014.09)	Wiper (Windscreen Wiper)	•	•	•	•	•
408	408 (T93) (2014.10 -)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
408	408 (T93) (2014.10 -)	AC (Air Conditioning)	•	•	•	•	•
408	408 (T93) (2014.10 -)	Alarm	•	•	•	•	•
408	408 (T93) (2014.10 -)	BATT (Battery Charge Status Unit)	•	•	•	•	●
408	408 (T93) (2014.10 -)	BSI (Built-in Systems Interface)	•	•	•	•	•
408	408 (T93) (2014.10 -)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
408	408 (T93) (2014.10 -)	ECM (Engine Control Module)	•	•	•	•	•
408	408 (T93) (2014.10 -)	EPS (Electric Power Steering GEP)	•	•	•	•	•
408	408 (T93) (2014.10 -)	ERU (Engine Relay Unit)	•	•	•	•	•
408	408 (T93) (2014.10 -)	ESL (Electric Steering Lock)	•	•	•	•	•
408	408 (T93) (2014.10 -)	HFC (Hands Free Control Kit)	•	•	•	•	•
408	408 (T93) (2014.10 -)	HLH (Headlamp Height Corrector)	•	•	•	•	•
408	408 (T93) (2014.10 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
	(100) (2011) 10 /	- (-	. <u> </u>	. <u> </u>		L -

408 408 (T93) (2014.10 -) KEY (Electrionic Key Reader) 408 408 (T93) (2014.10 -) MCP (Multiplexed Control Panel) 408 408 (T93) (2014.10 -) MSI (Matrix Screen Integral To The Instrument 408 408 (T93) (2014.10 -) MULC (Multiplexed Control Panel) 408 408 (T93) (2014.10 -) MULC (Multifunction Video Camera (CMF)) 408 408 (T93) (2014.10 -) MULD (Multifunction Display) 408 408 (T93) (2014.10 -) MULS (Multifunction Screen) 408 408 (T93) (2014.10 -) NAVI (Telematic Navigator) 408 408 (T93) (2014.10 -) NAVI/TEU/CAS (Audio-navigation Or Telematic Topology)	Image: state	•
408 408 (T93) (2014.10 -) MSI (Matrix Screen Integral To The Instrument 408 408 (T93) (2014.10 -) MULC (Multifunction Video Camera (CMF)) 408 408 (T93) (2014.10 -) MULD (Multifunction Display) 408 408 (T93) (2014.10 -) MULD (Multifunction Screen) 408 408 (T93) (2014.10 -) MULS (Multifunction Screen) 408 408 (T93) (2014.10 -) NAVI (Telematic Navigator) 408 408 (T93) (2014.10 -) NAVI/TEU/CAS (Audio-navigation Or Telematic	t Panel) • • • • • • • • • • • • • • • • • • • • • • •	•
408 408 (T93) (2014.10 -) MULC (Multifunction Video Camera (CMF)) 408 408 (T93) (2014.10 -) MULD (Multifunction Display) 408 408 (T93) (2014.10 -) MULS (Multifunction Screen) 408 408 (T93) (2014.10 -) MULS (Multifunction Screen) 408 408 (T93) (2014.10 -) NAVI (Telematic Navigator) 408 408 (T93) (2014.10 -) NAVI /TEU/CAS (Audio-navigation Or Telematic Navigator)		
408 408 (T93) (2014.10 -) MULD (Multifunction Display) 408 408 (T93) (2014.10 -) MULS (Multifunction Screen) 408 408 (T93) (2014.10 -) NAVI (Telematic Navigator) 408 408 (T93) (2014.10 -) NAVI (Telematic Navigator) 408 408 (T93) (2014.10 -) NAVI /TEU/CAS (Audio-navigation Or Telematic Navigator)	• • • •	•
408 408 (T93) (2014.10 -) MULS (Multifunction Screen) 408 408 (T93) (2014.10 -) NAVI (Telematic Navigator) 408 408 (T93) (2014.10 -) NAVI (Telematic Navigator) 408 408 (T93) (2014.10 -) NAVI/TEU/CAS (Audio-navigation Or Telematic Navigator)	• • • •	
408 408 (T93) (2014.10 -) NAVI (Telematic Navigator) 408 408 (T93) (2014.10 -) NAVI/TEU/CAS (Audio-navigation Or Telematic I		•
408 (T93) (2014 10 -) NAVI/TEU/CAS (Audio-navigation Or Telematic)		•
406 (153) (2014.10) System)	Jnit Or Connected Audio	-
		•
408 408 (T93) (2014.10 -) PAM (Parking Assistance)		•
408 408 (T93) (2014.10 -) RBS (Rain And Brightness Sensor)		•
408 408 (T93) (2014.10 -) Radio		•
408 408 (T93) (2014.10 -) SM (Services Module)		•
408 408 (T93) (2014.10 -) SPMU (Supply Protection And Management Unit)		•
408 408 (T93) (2014.10 -) SRS (Airbag)		•
408 408 (T93) (2014.10 -) SWIC (Steering Wheel With Integral Controls	(VCI)) • • • •	•
408 408 (T93) (2014.10 -) SWSM (Switch Module Under The Steering Wheel)		•
408 408 (T93) (2014.10 -) TCM (Automatic Gearbox)		•
408 408 (T93) (2014.10 -) TCM (Sequential Gear Lever)		•
408 408 (T93) (2014.10 -) VRD (Voltage Retaining Device)		•
5008 ABS/ESP (Anti-lock brake System Or Electric System)		•
5008 AC (Air Conditioning)	• • • •	•
5008 AC (Rear Air Conditioning)	• • • •	•
5008 ALM (Anti-theft Alarm)	• • • •	•
5008 5008 AMP (Audio Amplifier)	• • • •	•
5008 ASM (Anti-slip Mode Selector)		•
5008 5008 Alarm	• • • •	•
5008BATT (Battery Charge Status Unit)		•
5008 BCM (Body Control Module)		•
5008 BSI (Built-in Systems Interface)		•
5008 CD (CD Player)		•
5008 CD (External CD Player)		•
5008 CPDMD (Control Panel Dot Matrix Display)		•
5008 DAF (Diesel Additive Pump)		•
5008 DDC (Driver's Door Control Panel)		•
5008 DSC (Driver's Seat Comfort ECU)		•
5008DSP (Driver's Seat Pneumatic Functions ECU)		•
5008 5008 Display		•
5008 ECM (Engine Control Module)		•
5008 EPB (Electric Secondary Brake)		•
5008 EPS (Electric Power Steering)		•
5008 ERU (Engine Relay Unit)		•
5008 ESL (Electric Steering Lock)		•
5008 HFA (Hands Full Access ECU(Right-hand Side On	r Rear)) • • • •	•
5008 5008 HFC (Hands Free Control Kit)		•
5008 HFR (High Frequency Receiver)	• • • •	•
5008 5008 HHV (High Head Vision)		•
5008 5008 HLH (Headlamp Height Corrector)	• • • •	•
5008 IP (Instrument Cluster Panel)	• • • •	•
5008 5008 LDWS (Lane Departure Warning System)	• • • •	•
5008 5008 MAAP (Multiplexed Additive Adding Pump)		•
5008 5008 MCP (Multiplexed Control Panel)		•
5008 5008 MULC (Multifunction Video Camera (CMF))		•
5008 5008 MULS (Multifunction Screen)	• • • •	•
5008 5008 N-TNB (Not Fastened Warning Light(Tnb))		•
5008 5008 NAVI/TEU/CAS (Audio-navigation Or Telematic)	Jnit Or Connected Audio	•
System)		
5008 5008 NIU (Network Isolation Unit)		•
5008 5008 PAM (Parking Assistance) 5009 5009 5009		•
5008 5008 PSP (Passenger's Seat Pneumatic Functions ECI		•
5008 5008 PVA (Panoramic Visual Assistance ECU) 5009 5009 5009		•
5008 5008 RBS (Rain And Brightness Sensor)		•
5008 RSS (Rain-sunlight Sensor)		•

5008	5008	Radio	•	•	•	•	•
5008	5008	SB (Seat Belts Not Fastened LED Unit(TNB))	•	•	•	•	•
5008	5008	SHP/VR (Front Left Seat Heated Pads And Ventilation Regulation ECU)	•	•	•	•	•
5008	5008	SHP/VR (Front Right Seat Heated Pads And Ventilation Regulation	•	•	•	•	•
5008	5008	ECU) SM (Services Module)	•	•	•	•	-
5008 5008	5008	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
5008	5008	SRS (Airbag)	•	•	•	•	•
5008	5008	SWC (Controls On The Steering Wheel)	•	•	•	•	•
5008	5008	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
5008	5008	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
5008	5008	Siren	•	•	•	•	•
5008	5008	TCM (Automatic Gearbox)	•	•	•	•	•
5008	5008	TCM (Sequential Gear Lever)	•	•	•	•	•
5008	5008	TEU (Telematics Unit)	•	•	•	•	•
5008	5008	TRU (Trailer Relay Unit)	•	•	•	•	•
5008	5008	TS (Touch Screen)	•	•	•	•	•
5008	5008	UID (Under Inflation Detection)	•	•	•	•	•
5008	5008	VDA (Vehicle Distance Assistance)	•	•	•	•	•
5008	5008	VRD (Voltage Retaining Device)	•	•	•	•	•
5008	5008	Wiper (Windscreen Wiper)	●	•	•	•	●
5008	5008 (P84)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
5008	5008 (P84)	AC (Air Conditioning)	•	•	•	•	•
5008	5008 (P84)	AC (Rear Air Conditioning)	•	•	•	•	•
5008	5008 (P84)	ALM (Anti-theft Alarm)	•	•	•	•	•
5008	5008 (P84)	AMP (Audio Amplifier)	•	•	•	•	•
5008	5008 (P84)	ASM (Anti-slip Mode Selector)	٠	•	•	•	•
5008	5008 (P84)	BATT (Battery Charge Status Unit)	•	•	•	•	•
5008	5008 (P84)	BCM (Body Control Module)	•	•	•	•	•
5008	5008 (P84)	BSI (Built-in Systems Interface)	•	•	•	•	•
5008	5008 (P84)	CD (External CD Player)	•	•	•	•	•
5008	5008 (P84)	DAF (Diesel Additive Pump)	•	•	•	•	•
5008	5008 (P84)	DDC (Driver's Door Control Panel)	•	•	•	•	•
5008	5008 (P84)	DHL (Headlamp Height Adjuster/Directional Headlamp)	•	•	•	•	•
5008	5008 (P84)	DSC (Driver's Seat Comfort ECU)	•	•	•	•	•
	5008 (P84)	DSP (Driver's Seat Pneumatic Functions ECU)	•	•	•	•	•
5008	5008 (P84)	Display	•	•	•	•	•
5008	5008 (P84)	ECM (Engine Control Module)	•	•	•	•	•
5008	5008 (P84)	EPS (Electric Power Steering)	•	•	•	•	•
5008	5008 (P84)	ERU (Engine Relay Unit)	•	•	•	•	•
5008	5008 (P84) 5008 (P84)	ESL (Electric Steering Lock)	•	•	•	•	•
5008	5008 (P84) 5008 (P84)	HFA (Hands Full Access ECU(Right-hand Side Or Rear)) IP (Instrument Cluster Panel)	•	•	•	•	
5008 5008	5008 (P84) 5008 (P84)	IP (Instrument Cluster Panel) MCP (Multiplexed Control Panel)	•	•	•	•	•
5008 5008	5008 (P84) 5008 (P84)	MCP (Multiplexed Control Panel) MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
		NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio		-	-		
5008	5008 (P84)	System)	•	•	•	•	•
5008	5008 (P84)	PAM (Parking Assistance)	•	•	•	•	•
5008	5008 (P84)	PSP (Passenger's Seat Pneumatic Functions ECU)	•	•	•	•	•
5008	5008 (P84)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
5008	5008 (P84)	RSS (Rain-sunlight Sensor)	•	•	•	•	•
5008	5008 (P84)	Radio	•	•	•	•	•
5008	5008 (P84)	SB (Seat Belts Not Fastened LED Unit(TNB))	•	•	•	•	•
5008	5008 (P84)	SHP/VR (Front Left Seat Heated Pads And Ventilation Regulation ECU) SHP/VR (Front Right Seat Heated Pads And Ventilation Regulation	•	•	•	•	•
5008	5008 (P84)	ECU)	•	•	•	•	•
5008	5008 (P84)	SM (Services Module)	●	•	•	•	•
5008	5008 (P84)	SPMU (Supply Protection And Management Unit)	●	•	•	•	•
5008	5008 (P84)	SRS (Airbag)	•	•	•	•	•
5008	5008 (P84)	SWC (Controls On The Steering Wheel)	•	•	•	•	•
5008	5008 (P84)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
5008	5008 (P84)	Siren	•	•	•	•	•
5008	5008 (P84)	TCM (Automatic Gearbox)	•	•	•	•	•

5008	5008 (P84)	TCM (Sequential Gear Lever)			•	•	
5008	5008 (P84)	TRU (Trailer Relay Unit)	•	•	•	•	
5008	5008 (P84)	TS (Touch Screen)	•	•	•	•	
5008	5008 (P84)	VDA (Vehicle Distance Assistance)	•	•	•	•	
5008	5008 (P84)	VRD (Voltage Retaining Device)	•	•	•	•	
5008	5008 (P84)	Wiper (Windscreen Wiper)	•	•	•	•	
508	508	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
508	508	AC (Air Conditioning)	•	•	•	•	•
508	508	AC (Rear Air Conditioning)	•	•	•	•	
508	508	AH (Additional Heating)	•	•	•	•	
508	508	AMP (Radio Amplifier)	•	•		•	
508	508	Alarm	•	•		•	
508 508	508	BATT (Battery Charge Status Unit)	•	•	•	•	
508 508	508	BATT (Traction Battery ECU)	•	•	•	•	
508	508	BSI (Built-in Systems Interface)	•	•	•	•	
	508		•	•	•	•	•
508		DBVHA (Discharge Bulbs Vertical And Horizontal Adjustment)	•	•	•	•	•
508	508	DDC (Driver's Door Control Panel)	•	•		•	•
508	508	DSMU (Driver's Seat Memory Unit)	-	-	•	-	•
508	508	ECM (Engine Control Module)	•	•	•	•	•
508	508	EPB (Electric Secondary Brake)	•	•	•	•	•
508	508	EPS (Electric Power Steering GEP)	•	•	•	•	•
508	508	ERU (Engine Relay Unit)	•	•	•	•	•
508	508	ESL (Electric Steering Lock)	•	•	•	•	•
508	508	HFC (Hands Free Control Kit)	•	•	•	•	•
508	508	HHV (High Head Vision)	•	•	•	•	•
508	508	HMS (Hybrid Mode Selector)	•	•	•	•	•
508	508	HYC-1 (Hybrid Control ECU 1)	•	•	•	•	•
508	508	HYC-2 (Hybrid Control ECU 2)	•	•	•	•	•
508	508	IP (Instrument Cluster Panel)	•	•	•	•	•
508	508	KEY (Electrionic Key Reader)	•	•	•	•	•
508	508	MBA (Main Beams Assistant)	•	•	•	•	•
508	508	MCP (Multiplexed Control Panel)	•	•	•	•	•
508	508	MOTO (Motorised Boot ECU)	•	•	•	•	•
508	508	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
508	508	MULS (Multifunction Screen)	•	•	•	•	•
508	508	NAVI (Telematic Navigator)	•	•	•	•	•
508	508	PAM (Parking Assistance)	•	•	•	•	•
508	508	RBS (Rain And Brightness Sensor)	•	•	•	•	•
508	508	Radio	•	•	•	•	•
508	508	SB (Seat Belts Not Fastened LED Unit(TNB))	•	•	•	•	•
508	508	SM (Services Module)	•	•	•	•	•
508	508	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
508	508	SRS (Airbag)	•	•	•	•	•
508	508	SSP (Active Damper Electronic Unit)	•	•	٠	•	•
508	508	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
508	508	SWSM (Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
508	508	TCM (Automatic Gearbox)	•	•	•	•	•
508	508	TEU/NAVI (Telematics Unit(Rtx) Or Radio-navigation)	•	•	•	•	•
508	508	TRU (Trailer Relay Unit)	•	•	•	•	•
508	508	UID (Under Inflation Detection)	•	•	•	•	•
508	508	VRD (Voltage Retaining Device)	•	•	•	•	•
508	508	Wiper-L (Windscreen Wiper (Left-hand Side))	•	•	•	•	•
508	508	Wiper-R (Windscreen Wiper (Right-hand Side))	•	•	•	•	•
508	508 (Hybrid4)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
508	508 (Hybrid4)	AC (Air Conditioning)	•	•	•	•	•
508 508	508 (Hybrid4)	AC (Rear Air Conditioning)	•	•	•	•	•
508 508	508 (Hybrid4) 508 (Hybrid4)	AU (Additional Heating)	•	•	•	•	
508 508	508 (Hybrid4) 508 (Hybrid4)		•	•	•	•	
508 508	508 (Hybrid4) 508 (Hybrid4)	ALM (Anti-theft Alarm) AMP (Audio Amplifier)	•	•	•	•	
			•	•	-	•	
508	508 (Hybrid4)	BATT (Battery Charge Status Unit)	-		•	-	
508	508 (Hybrid4)	BATT (Traction Battery ECU)	•		•	•	•

	1	n		1		1	
508	508 (Hybrid4)	BSI (Built-in Systems Interface)	•	•	•	•	•
508	508 (Hybrid4)	DBVHA (Discharge Bulbs Vertical And Horizontal Adjustment)	•	•	•	•	•
508	508 (Hybrid4)	DCP (Door Control Pad)	•	•	•	•	•
508	508 (Hybrid4)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
508	508 (Hybrid4)	ECM (Engine Control Module)	•	•	•	•	•
508	508 (Hybrid4)	EPB (Electric Secondary Brake)	•	•	•	•	•
508	508 (Hybrid4)	EPS (Electric Power Steering Electric Pump Unit)	٠	•	•	•	•
508	508 (Hybrid4)	ERU (Engine Relay Unit)	•	•	•	•	•
508	508 (Hybrid4)	ESL (Electric Steering Lock)	•	•	•	•	•
508	508 (Hybrid4)	HFC (Hands Free Control Kit)	•	•	•	•	•
508	508 (Hybrid4)	HHV (High Head Vision)	•	•	•	•	•
508	508 (Hybrid4)	HMS (Hybrid Mode Selector)		•	•	•	•
508	508 (Hybrid4)	HYC-1 (Hybrid Control ECU 1)	•	•	•	•	•
508	508 (Hybrid4)	HYC-2 (Hybrid Control ECU 2)	•	•	•	•	
508	508 (Hybrid4)	IP (Instrument Cluster Panel)	•	•	•	•	
			-	-	-	_	
508	508 (Hybrid4)	KEY (Electrionic Key Reader)	•	•	•	•	•
508	508 (Hybrid4)	MBA (Main Beams Assistant)	•	•	•	•	•
508	508 (Hybrid4)	MCP (Multiplexed Control Panel)	•	•	•	•	•
508	508 (Hybrid4)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
508	508 (Hybrid4)	MULD (Multifunction Display)	•	•	•	•	•
508	508 (Hybrid4)	NAVI (Telematic Navigator)	•	•	•	•	•
508	508 (Hybrid4)	PAM (Parking Assistance)	•	•	•	•	•
508	508 (Hybrid4)	Radio RD5	•	•	•	•	•
508	508 (Hybrid4)	SB (Seat Belts Not Fastened LED Unit(TNB))	•	•	•	•	•
508	508 (Hybrid4)	SM (Services Module)	٠	•	•	•	•
508	508 (Hybrid4)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
508	508 (Hybrid4)	SRS (Airbag)	•	•	•	•	•
508	508 (Hybrid4)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
508	508 (Hybrid4)	SWSM (Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
508	508 (Hybrid4)	TCM (Automatic Gearbox)	•	•	•	•	•
508	508 (Hybrid4)	TEU (Telematics Unit)	•	•	•	•	•
508	508 (Hybrid4)	TRU (Trailer Relay Unit)	•	•	•	•	•
508	508 (Hybrid4)	UID (Under Inflation Detection)	•	•	•	•	
	508 (Hybrid4)		•	•	•	•	
508		VRD (Voltage Retaining Device)	•	•	•	•	
508	508 (Hybrid4)	Wiper-L (Windscreen Wiper (Left-hand Side))	•	•	•	•	
508	508 (Hybrid4)	Wiper-R (Windscreen Wiper (Right-hand Side))	•	•	•	•	•
508	508 (RXH Hybrid4)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
508	508 (RXH Hybrid4)	AC (Air Conditioning)	•	•	•	•	•
508	508 (RXH Hybrid4)	AC (Rear Air Conditioning)	•	•	•	•	•
508	508 (RXH Hybrid4)	AH (Additional Heating)	•	•	•	•	•
508	508 (RXH Hybrid4)	ALM (Anti-theft Alarm)	•	•	•	•	•
508	508 (RXH Hybrid4)	AMP (Audio Amplifier)	•	•	•	•	•
508	508 (RXH Hybrid4)	BATT (Battery Charge Status Unit)	•	•	•	•	•
508	508 (RXH Hybrid4)	BATT (Traction Battery ECU)	•	•	•	•	•
508	508 (RXH Hybrid4)	BSI (Built-in Systems Interface)	•	•	•	•	•
508	508 (RXH Hybrid4)	DBVHA (Discharge Bulbs Vertical And Horizontal Adjustment)	•	•	•	•	•
508	508 (RXH Hybrid4)	DCP (Door Control Pad)	•	•	•	•	•
508	508 (RXH Hybrid4)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
508	508 (RXH Hybrid4)	ECM (Engine Control Module)	•	•	•	•	•
508	508 (RXH Hybrid4)	EPB (Electric Secondary Brake)	•	•	•	•	•
508	508 (RXH Hybrid4)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
508	508 (RXH Hybrid4)	ERU (Engine Relay Unit)	•	•	•	•	•
508	508 (RXH Hybrid4)	ESL (Electric Steering Lock)	•	•	•	•	•
508	508 (RXH Hybrid4)	HFC (Hands Free Control Kit)	•	•	•	•	•
			•	•	•	•	
508	508 (RXH Hybrid4)	HHV (High Head Vision)	-	-			
508	508 (RXH Hybrid4)	HMS (Hybrid Mode Selector)	•	•	•	•	-
508	508 (RXH Hybrid4)	HYC-1 (Hybrid Control ECU 1)	•	•	•	•	•
508	508 (RXH Hybrid4)	HYC-2 (Hybrid Control ECU 2)	•	•	•	•	-
508	508 (RXH Hybrid4)	IP (Instrument Cluster Panel)	•		•	•	•
							· · · ·
508 508	508 (RXH Hybrid4) 508 (RXH Hybrid4)	KEY (Electrionic Key Reader) MBA (Main Beams Assistant)	•	•	•	•	•

508	508 (RXH Hybrid4)	MCP (Multiplexed Control Panel)	•	•	•	•	•
508	508 (RXH Hybrid4)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
508	508 (RXH Hybrid4)	MULD (Multifunction Display)	•	•	•	•	•
508	508 (RXH Hybrid4)	NAVI (Telematic Navigator)	•	•	•	•	•
508	508 (RXH Hybrid4)	PAM (Parking Assistance)	•	•	•	•	•
508	508 (RXH Hybrid4)	Radio RD5	•	•	٠	•	•
508	508 (RXH Hybrid4)	SB (Seat Belts Not Fastened LED Unit(TNB))	•	•	٠	•	•
508	508 (RXH Hybrid4)	SM (Services Module)	•	•	•	•	•
508	508 (RXH Hybrid4)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
508	508 (RXH Hybrid4)	SRS (Airbag)	•	•	•	•	•
508	508 (RXH Hybrid4)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
508	508 (RXH Hybrid4)	SWSM (Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
508	508 (RXH Hybrid4)	TCM (Automatic Gearbox)	•	•	•	•	•
508	508 (RXH Hybrid4)	TEU (Telematics Unit)	•	•	•	•	•
508	508 (RXH Hybrid4)	TRU (Trailer Relay Unit)	•	•	•	•	•
508	508 (RXH Hybrid4)	UID (Under Inflation Detection)	•	•	٠	•	•
508	508 (RXH Hybrid4)	VRD (Voltage Retaining Device)	•	•	٠	•	•
508	508 (RXH Hybrid4)	Wiper-L (Windscreen Wiper (Left-hand Side))	•	•	٠	•	•
508	508 (RXH Hybrid4)	Wiper-R (Windscreen Wiper (Right-hand Side))	•	•	•	•	•
508	508 (RXH)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
508	508 (RXH)	AC (Air Conditioning)	•	•	•	•	•
508	508 (RXH)	AC (Rear Air Conditioning)	•	•	•	•	•
508	508 (RXH)	AH (Additional Heating)	•	•	•	•	•
508	508 (RXH)	ALM (Anti-theft Alarm)	•	•	•	•	•
508	508 (RXH)	AMP (Audio Amplifier)	•	•	•	•	•
508	508 (RXH)	BATT (Battery Charge Status Unit)	•	•	•	•	•
508	508 (RXH)	BATT (Traction Battery ECU)	•	•	•	•	•
508	508 (RXH)	BSI (Built-in Systems Interface)	•	•	•	•	•
508	508 (RXH)	DBVHA (Discharge Bulbs Vertical And Horizontal Adjustment)	•	•	•	•	•
508	508 (RXH)	DCP (Door Control Pad)	•	•	•	•	•
508	508 (RXH)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
508	508 (RXH)	ECM (Engine Control Module)	•	•	•	•	•
508	508 (RXH)	EPB (Electric Secondary Brake)	•	•	•	•	•
508	508 (RXH)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
508	508 (RXH)	ERU (Engine Relay Unit)	•	•	•	•	•
508	508 (RXH)	ESL (Electric Steering Lock)	•	•	•	•	•
508	508 (RXH)	HFC (Hands Free Control Kit)	•	•	•	•	•
508	508 (RXH)	HIV (High Head Vision)	•	•	•	•	•
508	508 (RXH)	HMS (Hybrid Mode Selector)	•	•	•	•	•
508	508 (RXH)	HYC-1 (Hybrid Control ECU 1)	•	•	•	•	•
508	508 (RXH)	HYC-2 (Hybrid Control ECU 2)	•	•	•	•	•
508	508 (RXH)	IP (Instrument Cluster Panel)	•	•	•	•	•
508	508 (RXH)	KEY (Electrionic Key Reader)	•	•	•	•	•
508	508 (RXH)	MBA (Main Beams Assistant)	•	•	•	•	
508	508 (RXH)	MCP (Multiplexed Control Panel)	•	•	•	•	•
508	508 (RXH)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	
508 508	508 (RXH) 508 (RXH)	MULD (Multifunction Display)	•	•	•	•	
508 508	508 (RXH) 508 (RXH)	NAVI (Telematic Navigator)	•	-	•	•	
508 508	508 (RXH) 508 (RXH)	PAM (Parking Assistance)	•		•	•	
			•		•	•	
508	508 (RXH)	Radio RD5	•	•	•	•	•
508 508	508 (RXH) 508 (RXH)	SB (Seat Belts Not Fastened LED Unit(TNB)) SM (Services Module)	•	•	•	•	•
			•	-		-	•
508	508 (RXH)	SPMU (Supply Protection And Management Unit)	-	•	•	•	-
508	508 (RXH)	SRS (Airbag)	•	•	•	•	•
508	508 (RXH)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
508	508 (RXH)	SWSM (Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
508	508 (RXH)	TCM (Automatic Gearbox)	•	•	•	•	•
508	508 (RXH)	TEU (Telematics Unit)	•	•	•	•	•
508	508 (RXH)	TRU (Trailer Relay Unit)	•	•	•	•	•
508	508 (RXH)	UID (Under Inflation Detection)	•	•	•	•	•
508	508 (RXH)	VRD (Voltage Retaining Device)					•

500	500 (DVII)						
508	508 (RXH)	Wiper-L (Windscreen Wiper (Left-hand Side))	•	•	•	•	•
508	508 (RXH)	Wiper-R (Windscreen Wiper (Right-hand Side))	•	•	•	•	•
607	607 (CAN)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
607	607 (CAN)	AC (Air Conditioning)	•	-	•	•	•
607	607 (CAN)	Alarm	•	•	•	•	•
607	607 (CAN)	BSI (Built-in Systems Interface)	•	•	•	•	•
607 607	607 (CAN)	CD (CD Player)	-	•	•	•	•
607	607 (CAN)	DAF (Diesel Additive Control Unit)	•	-	-	-	•
607	607 (CAN)	DDM (Driver's Door Module)	•	•	•	•	•
607	607 (CAN)	DSMU (Driver's Seat Memory Unit)	•	•	-	•	•
607	607 (CAN)	ECM (Engine Control Module)		-	•	-	•
607	607 (CAN)	EPS (Electric Power Steering GEP)	•	•	•	•	•
607	607 (CAN)	HFC (Hands Free Control Kit)	•	•	•	•	•
607	607 (CAN)	IP (Instrument Cluster Panel)	•	•	•	•	•
607	607 (CAN)	MULS (Multifunction Screen)	•	•	•	•	•
607	607 (CAN)	PAM (Parking Assistance)	•	•	•	•	•
607	607 (CAN)	PDM (Passenger's Door Module)	•	•	•	•	•
607	607 (CAN)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
607	607 (CAN)	Radio	•	•	•	•	•
607	607 (CAN)	SRS (Airbag)	•	•	•	•	•
607	607 (CAN)	SSP (Electronically Managed Suspension)	•	•	•	•	•
607	607 (CAN)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
607	607 (CAN)	TCM (AM6 Automatic Gearbox)	•	•	•	•	•
607	607 (CAN)	TCM (BVA ZF)	•	•	•	•	•
607	607 (CAN)	TEU (Telematics Unit)	•	•	•	•	•
607	607 (CAN)	UID (Under Inflation Detection)	•	•	•	•	•
607	607 (VAN)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
607	607 (VAN)	AC (Air Conditioning)	•	•	•	•	•
607	607 (VAN)	BSI (Built-in Systems Interface)	•	•	•	•	•
607	607 (VAN)	CD (CD Player)	•	•	•	•	•
607	607 (VAN)	DAF (Diesel Additive Control Unit)	•	•	•	•	•
607	607 (VAN)	DDC (Driver's Door Control Panel)	•	•	•	•	•
607	607 (VAN)	DPOS (Storing Of The Driving Position)	•	•	•	•	•
607	607 (VAN)	ECM (Engine Control Module)	•	•	•	•	•
607	607 (VAN)	HLH (Headlamp Height Corrector)	•	•	•	•	•
607	607 (VAN)	IP (Instrument Cluster Panel)	•	•	•	•	•
607	607 (VAN)	MULS (Multifunction Screen)	•	•	•	•	•
607	607 (VAN)	PAM (Parking Assistance)	•	•	•	•	•
607	607 (VAN)	PDC (Passenger's Door Control Panel)	•	•	•	•	•
607	607 (VAN)	Radio	•	•	•	•	•
607	607 (VAN)	SRS (Airbag)	•	•	•	•	•
607	607 (VAN)	SSP (Electronically Managed Suspension)	•	•	•	•	•
607	607 (VAN)	TCM (Automatic Gearbox)	•	•	•	•	•
806		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
806		AH (Additional Heating)	•	•	•	•	•
806		ECM (Engine Control Module)	•	•	•	•	
806		SRS (Airbag)	•	•	•	•	
806		SKS (Alroag) TCM (Automatic Gearbox)	•	•	•	•	
	807 (CAN) (2005 -)		•	•	•	•	
807		ABS/ESP (Anti-lock brake System Or Electric Stability Program)		-	-	-	
807	807 (CAN) (2005 -)	AC (Air Conditioning)	•	•	•	•	
807	807 (CAN) (2005 -)	AH (Additional Heating)	•	•	•	•	
807	807 (CAN) (2005 -)	Alarm	•	•	•	•	•
807	807 (CAN) (2005 -)	BSI (Built-in Systems Interface)	•	•	•	•	•
807	807 (CAN) (2005 -)	CD (CD Player)	•	•	•	•	•
807	807 (CAN) (2005 –)	DAF (Diesel Additive Control Unit)	•	•	•	•	•
807	807 (CAN) (2005 –)	DDM (Driver's Door Module)	•	•	•	•	•
807	807 (CAN) (2005 –)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
807	807 (CAN) (2005 –)	ECM (Engine Control Module)	•	•	•	•	•
807	807 (CAN) (2005 –)	EPS (Electric Power Steering GEP)	•	•	•	•	•
807	807 (CAN) (2005 –)	HFC (Hands Free Control Kit)	•	•	•	•	•
807	807 (CAN) (2005 -)	HLLC (Left Headlamp Beam Level Corrector)	•	•	•	•	

807	807 (CAN) (2005 –)	HLRC (Right Headlamp Beam Corrector)	•	•	•	•	
807	807 (CAN) (2005 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
807	807 (CAN) (2005 -)	IP (Warning Lights/Odometer Unit)	•	•	•	•	•
807	807 (CAN) (2005 -)	MULS (Multifunction Screen)	•	•	•	•	•
807	807 (CAN) (2005 -)	PAM (Parking Assistance)	•	•	•	•	•
807	807 (CAN) (2005 -)	PDM (Passenger's Door Module)	•	•	•	•	•
807	807 (CAN) (2005 -)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
807	807 (CAN) (2005 -)	Radio	•	•	•	•	•
807	807 (CAN) (2005 -)	SR-F (Front Sunroof)	•	•	•	•	
807	807 (CAN) (2005 -)	SR-M (Middle Sunroof)	•	•	•	•	•
807	807 (CAN) (2005 -)	SR-R (Rear Sunroof)	•	•	•	•	•
807	807 (CAN) (2005 -)	SRS (Airbag)	•	•	•	•	•
807	807 (CAN) (2005 -)	SSDM (Sliding Side Doors Module)	•	•	•	•	•
807	807 (CAN) (2005 -)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
807	807 (CAN) (2005 -)	TCM (Automatic Gearbox)	•	•	•	•	•
		TEU (Telematics Unit)	•	•	•	•	•
807	807 (CAN) (2005 -)	TRC (Telematics Unit)	•	•	•	•	•
807	807 (CAN) (2005 -)		•	-	•	•	-
807	807 (CAN) (2005 -)	UID (Under Inflation Detection)	-	•		-	•
807	807 (VAN) (2002 - 2005)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	AC (Air Conditioning)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	AH (Additional Heating)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	Alarm	•	•	•	•	•
807	807 (VAN) (2002 – 2005)	BSI (Built-in Systems Interface)	•	•	•	•	•
807	807 (VAN) (2002 – 2005)	CD (CD Player)	•	•	•	•	•
807	807 (VAN) (2002 – 2005)	DAF (Diesel Additive Control Unit)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	DDM (Driver's Door Module)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	DPOS (Storing Of The Driving Position)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	Display/Telematics	•	•	•	•	•
807	807 (VAN) (2002 – 2005)	ECM (Engine Control Module)	•	•	•	•	•
807	807 (VAN) (2002 – 2005)	HLLC (Left Headlamp Beam Level Corrector)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	HLRC (Right Headlamp Beam Corrector)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	IP (Instrument Cluster Panel)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	IP (Warning Lights/Odometer Unit)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	PAM (Parking Assistance)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	PDM (Passenger's Door Module)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	Radio	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	SRS (Airbag)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	SSDM (Sliding Side Doors Module)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	TCM (Automatic Gearbox)	•	•	•	•	•
BIPPER		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	٠	•	•
BIPPER		BSI (Built-in Systems Interface)	•	•	•	•	•
BIPPER		ECM (Engine Control Module)	•	•	•	•	•
BIPPER		IP (Instrument Cluster Panel)	•	•	•	•	•
BIPPER		PAM (Parking Assistance)	•	•	•	•	•
BIPPER		SRS (Airbag)	•	•	•	•	•
BIPPER	1	TCM (Automatic Gearbox)	•	•	•	•	•
BOXER	BOXER (1)	ECM (Engine Control Module)	•	•	•	•	•
BOXER	BOXER (1)	TCM (Automatic Gearbox)	•	•	•	•	•
BOXER	BOXER (3)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
BOXER	BOXER (3)	AC (Air Conditioning)	•	•	•	•	•
BOXER	BOXER (3)	AH (Additional Heating)	•	•	•	•	•
BOXER	BOXER (3)	BSI (Built-in Systems Interface)	•	•	•	•	•
BOXER	BOXER (3)	ECM (Engine Control Module)	•	•	•	•	•
BOXER	BOXER (3)	EPS (Electric Power Steering GEP)	•	•	•	•	•
BOXER	BOXER (3)	IP (Instrument Cluster Panel)	•		•	•	
BOXER	BOXER (3)	LDWS (Lane Departure Warning System)	•	•	•	•	
BOXER	BOXER (3)		•	•	•	•	
	BOXER (3) BOXER (3)	PAM (Parking Assistance)	•	•	•	•	
BOXER		SRS (Airbag)	•		-	•	
BOXER	BOXER (3)	SSP (Electronically Managed Suspension)			•	-	
BOXER	BOXER (3)	TEU/NAVI (Telematics Unit(Rtx) Or Radio-navigation)	•	•	•	•	

BOXER	BOXER (3)	TG (Tachograph)	•	•	•	•	•
BOXER	BOXER (3) (Euro 5 / 6)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
BOXER	BOXER (3) (Euro 5 / 6)	AC (Air Conditioning)	•	•	•	•	•
BOXER	BOXER (3) (Euro 5 / 6)	AH (Additional Heating)	•	•	•	•	•
BOXER	BOXER (3) (Euro 5 / 6)	BSI (Built-in Systems Interface)	•	•	•	•	•
BOXER	BOXER (3) (Euro 5 / 6)	ECM (Engine Control Module)	•	•	•	•	•
BOXER	BOXER (3) (Euro 5 / 6)	EPS (Electric Power Steering)	•	•	•	•	•
BOXER	BOXER (3) (Euro 5 / 6)	IP (Instrument Cluster Panel)	•	•	•	•	•
BOXER	BOXER (3) (Euro 5 / 6)	LDWS (Lane Departure Warning System)	•	•	•	•	•
BOXER	BOXER (3) (Euro 5 / 6)	PAM (Parking Assistance)	•	•	•	•	•
BOXER	BOXER (3) (Euro 5 / 6)	SRS (Airbag)	•	•	•	•	•
BOXER	BOXER (3) (Euro 5 / 6)	SSP (Electronically Managed Suspension)	•	•	•	•	•
BOXER	BOXER (3) (Euro 5 / 6)	TG (Tachograph)	•	•	•	•	•
BOXER	BOXER (3) (MiniBus)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
BOXER	BOXER (3) (MiniBus)	AC (Air Conditioning)	•	•	•	•	•
BOXER	BOXER (3) (MiniBus)	AH (Additional Heating)	•	•	•	•	•
BOXER	BOXER (3) (MiniBus)	BSI (Built-in Systems Interface)	•	•	•	•	•
BOXER	BOXER (3) (MiniBus)	ECM (Engine Control Module)	•	•	•	•	•
h			-	-	-	-	-
BOXER	BOXER (3) (MiniBus)	EPS (Electric Power Steering GEP)	•	•	•	•	•
BOXER	BOXER (3) (MiniBus)	IP (Instrument Cluster Panel)	•	•	•	•	•
BOXER	BOXER (3) (MiniBus)	PAM (Parking Assistance)	•	•	•	•	•
BOXER	BOXER (3) (MiniBus)	SRS (Airbag)	•	•	•	•	•
BOXER	BOXER (3) (MiniBus)	SSP (Electronically Managed Suspension)	•	•	•	•	•
BOXER	BOXER (3) (MiniBus)	TEU/NAVI (Telematics Unit(Rtx) Or Radio-navigation)	•	•	•	•	•
BOXER	BOXER (3) (MiniBus)	TG (Tachograph)	•	•	•	•	•
EXPERT	EXPERT (1)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
EXPERT	EXPERT (1)	AH (Additional Heating)	•	•	•	•	•
EXPERT	EXPERT (1)	ECM (Engine Control Module)	•	•	•	•	•
EXPERT	EXPERT (1)	SRS (Airbag)	•	•	•	•	•
EXPERT	EXPERT (1)	TCM (Automatic Gearbox)	•	•	•	•	•
EXPERT	EXPERT (2)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
EXPERT	EXPERT (2)	AC (Air Conditioning)	•	•	•	•	•
EXPERT	EXPERT (2)	AH (Additional Heating)	•	•	•	•	•
EXPERT	EXPERT (2)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
EXPERT	EXPERT (2)	Alarm	•	•	•	•	•
EXPERT	EXPERT (2)	BSI (Built-in Systems Interface)	•	•	•	•	•
EXPERT	EXPERT (2)	CD (CD Player)	•	•	•	•	•
EXPERT	EXPERT (2)	ECM (Engine Control Module)	•	•	•	•	•
EXPERT	EXPERT (2)	EPS (Electric Power Steering GEP)	•	•	•	•	•
EXPERT	EXPERT (2)	HFC (Hands Free Control Kit)	•	•	•	•	•
EXPERT	EXPERT (2)	IP (Instrument Cluster Panel)	•	•	•	•	•
EXPERT	EXPERT (2)	MULS (Multifunction Screen)	•	•	•	•	•
EXPERT	EXPERT (2)	PAM (Parking Assistance)	•	•	•	•	•
EXPERT	EXPERT (2)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
EXPERT	EXPERT (2)	Radio	•	•	•	•	•
EXPERT	EXPERT (2)	SRS (Airbag)	•	•	•	•	•
EXPERT	EXPERT (2)	SSP (Pneumatic Suspension)	•		•	•	•
EXPERT	EXPERT (2)	SWSM (Steering Wheel Switching Module)	•		•	•	
EXPERT	EXPERT (2)	TCM (Automatic Gearbox)	•	•	•	•	
		TEU (Telematics Unit)	•	•	•	•	•
EXPERT	EXPERT (2)		•	•	•	•	•
EXPERT	EXPERT (2)	UID (Under Inflation Detection)	-	-	-	-	•
EXPERT	EXPERT (3)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	
EXPERT	EXPERT (3)	AC (Rear Air Conditioning Table)	•	•	•	•	•
EXPERT	EXPERT (3)	AH (Additional Heating)	•	•	•	•	•
EXPERT	EXPERT (3)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
EXPERT	EXPERT (3)	BATT (Battery Charge Status Unit)	•	•	•	•	•
EXPERT	EXPERT (3)	BSI (Built-in Systems Interface)	•	•	•	•	•
EXPERT	EXPERT (3)	BWCU (Bodywork Conversion Unit)	•	•	•	•	•
EXPERT	EXPERT (3)	CD (CD Player)	•	•	•	•	•
EXPERT	EXPERT (3)	DD (Deflation Detection(Dsg))	•	•	•	•	•
EXPERT	EXPERT (3)	ECM (Engine Control Module)	•	•		•	

-	1	1		1			
EXPERT	EXPERT (3)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
EXPERT	EXPERT (3)	HFC (Hands Free Control Kit)	•	•	•	•	•
EXPERT	EXPERT (3)	HFR (High Frequency Receiver)	•	•	•	•	•
EXPERT	EXPERT (3)	Heating/Ventilation	•	•	•	•	•
EXPERT	EXPERT (3)	IP (Instrument Cluster Panel)	•	•	•	•	•
EXPERT	EXPERT (3)	MULD (Multifunction Display)	•	•	•	•	•
EXPERT	EXPERT (3)	PAM (Parking Assistance)	•	•	•	•	•
EXPERT	EXPERT (3)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
EXPERT	EXPERT (3)	SRS (Airbag)	•	•	•	•	•
EXPERT	EXPERT (3)	SSP (Pneumatic Suspension)	•	•	•	•	•
EXPERT	EXPERT (3)	SWSM (Switch Module Under The Steering Wheel(Top Of Columm))	•	•	•	•	•
EXPERT	EXPERT (3)	TCM (Automatic Gearbox)	•	•	•	•	•
EXPERT	EXPERT (3)	TEU (Telematics Unit)	•	•	•	•	•
EXPERT	EXPERT (KO)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
EXPERT	EXPERT (KO)	AC (Air Conditioning)	•	•	•	•	•
EXPERT	EXPERT (KO)	AC (Rear Air Conditioning Control Panel)	•	•	•	•	•
EXPERT	EXPERT (KO)	AC (Rear Air Conditioning)	•	•	•	•	•
EXPERT	EXPERT (KO)	AH (Additional Heating)	•	•	•	•	•
	EXPERT (KO)	-	•	•	•	•	•
EXPERT		ALM (Anti-theft Alarm) ASM (Anti-slip Mode Selector)	•	•	•	•	•
EXPERT	EXPERT (KO)		•	•	•	•	•
EXPERT	EXPERT (KO)	BATT (Battery Charge Status Unit)	-	-	-	-	
EXPERT	EXPERT (KO)	BSI (Built-in Systems Interface)	•	•	•	•	-
EXPERT	EXPERT (KO)	DAF (Diesel Additive Pump)	•	•	•	•	-
EXPERT	EXPERT (KO)	Display	•	•	•	•	•
EXPERT	EXPERT (KO)	ECM (Engine Control Module)	•	•	•	•	•
EXPERT	EXPERT (KO)	ERU (Engine Relay Unit)	•	•	•	•	•
EXPERT	EXPERT (KO)	ESL (Electric Steering Lock)	•	•	•	•	•
EXPERT	EXPERT (KO)	HFA (Hands Full Access ECU(Right-hand Side Or Rear))	•	•	•	•	•
EXPERT	EXPERT (KO)	HHV (High Head Vision)	•	•	•	•	•
EXPERT	EXPERT (KO)	IP (Instrument Cluster Panel)	•	•	•	•	•
EXPERT	EXPERT (KO)	MCP (Multiplexed Control Panel)	•	•	•	•	•
EXPERT	EXPERT (KO)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
EXPERT	EXPERT (KO)	NAVI (Telematic Navigator)	•	•	•	•	•
EXPERT	EXPERT (KO)	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio	•	•	•	•	•
EXPERT	EXPERT (KO)	System)	•	•		•	•
		PAM (Parking Assistance)		•		•	
EXPERT	EXPERT (KO)	RSS (Rain-sunlight Sensor)		•		•	
EXPERT	EXPERT (KO)	Radio		•		-	
EXPERT	EXPERT (KO)	SB (Seat Belts Not Fastened LED Unit(TNB))	-	•	•	•	•
EXPERT	EXPERT (KO)	SM (Services Module)	•	•	•	•	•
EXPERT	EXPERT (KO)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
EXPERT	EXPERT (KO)	SRS (Airbag)	•	•	•	•	└ ●
EXPERT	EXPERT (KO)	SSDM (Left-hand Sliding Side Door)	•	•	•	•	•
EXPERT	EXPERT (KO)	SWC (Controls On The Steering Wheel)	•	•	•	•	•
EXPERT	EXPERT (KO)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
EXPERT	EXPERT (KO)	Siren	•	•	•	•	●
EXPERT	EXPERT (KO)	TCM (Automatic Gearbox)	•	•	•	•	•
EXPERT	EXPERT (KO)	TRU (Trailer Relay Unit)	•	•	•	•	•
EXPERT	EXPERT (KO)	TS (Touch Screen)	•	•	•	•	•
EXPERT	EXPERT (KO)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
EXPERT	EXPERT (KO)	VRD (Voltage Retaining Device)	•	•	•	•	•
HOGGAR		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
HOGGAR		AC (Air Conditioning)	•	•	•	•	•
HOGGAR		Alarm	•	•	•	•	•
HOGGAR		BSI (Built-in Systems Interface)	•	•	•	•	•
HOGGAR		CD (CD Player)	•	•	•	•	•
HOGGAR		Display/Telematics	•	•	•	•	•
HOGGAR		ECM (Engine Control Module)	•	•	•	•	•
HOGGAR		IP (Instrument Cluster Panel)	•	•	•	•	•
HOGGAR		RBS (Rain And Brightness Sensor)	•	•	•	•	
HOGGAR		Radio	•	•	•	•	•
I I V V V V V V							
HOGGAR		SM (Services Module)	•	•	•	•	•

HOGGAR		SRS (Airbag)	•	•	•	•	•
HOGGAR		SVLCU (Stolen Vehicle Location Control)	•	•	•	•	•
HOGGAR		SWSM (Steering Wheel Switching Module)	•	•	•	•	•
HOGGAR		TCM (Automatic Gearbox)	•	•	•	•	•
HOGGAR		Wiper-L (Windscreen Wiper (Left-hand Side))	•	•	•	•	•
ION		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
ION		AC (Air Conditioning)	•	•	•	•	•
ION		BATT (Onboard Charger Of The Traction Battery)	•	•	•	•	•
ION		BATT (Traction Battery ECU)	•	•	•	•	•
ION		BATT-01 (Traction Battery Cells Management(Module 01))	•	•	•	•	•
ION		BATT-02 (Traction Battery Cells Management(Module 02))	•	•	•	•	•
ION		BATT-03 (Traction Battery Cells Management(Module 03))	•	•	•	•	•
ION		BATT-04 (Traction Battery Cells Management(Module 04))	•	•	•	•	•
ION		BATT-05 (Traction Battery Cells Management(Module 05))	•	•	•	•	•
ION		BATT-07 (Traction Battery Cells Management(Module 07))	•	•	•	•	•
ION		BATT-08 (Traction Battery Cells Management(Module 08))	•	•	•	•	•
ION		BATT-09 (Traction Battery Cells Management(Module 09))	•	•	•	•	•
ION		BATT-10 (Traction Battery Cells Management(Module 10))	•	•	•	•	•
ION		BATT-11 (Traction Battery Cells Management(Module 1))	•	•	•	•	•
ION		DVT (Direct Voltage(DC/DC) Transformer)	•	•	•	•	•
ION		EMM (Electric Machine Management ECU)	•	•	•	•	
ION		EPS (Electric Power Steering)	•	•	•	•	
ION		EVM (Electric Vehicle Management ECU)	•		•	•	
ION		GWH (Gateway Wiring Housing)	•	•	•	•	
ION		IP (Instrument Cluster Panel)	•	•	•	•	
			-	-	-	•	•
ION		RPE (Radio Post-equipment)	•	•	•	-	•
ION		SAS (Steering Wheel Angle Sensor)	•	-	•	•	-
ION		SM (Services Module)	•	•	•	•	•
ION		SRS (Airbag)	•	•	•	•	•
PARTNER	PARTNER (2)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
PARTNER	PARTNER (2)	AC (Air Conditioning)	•	•	•	•	•
PARTNER	PARTNER (2)	AH (Additional Heating)	•	•	•	•	•
PARTNER	PARTNER (2)	Alarm	•	•	•	•	•
PARTNER	PARTNER (2)	BSI (Built-in Systems Interface)	•	•	•	•	•
PARTNER	PARTNER (2)	CD (CD Player)	•	•	•	•	•
PARTNER	PARTNER (2)	ECM (Engine Control Module)	•	•	•	•	•
PARTNER	PARTNER (2)	IP (Instrument Cluster Panel)	•	•	•	•	•
PARTNER	PARTNER (2)	MULD (Multifunction Display)	•	•	•	•	•
PARTNER	PARTNER (2)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
PARTNER	PARTNER (2)	Radio	•	•	•	•	•
PARTNER	PARTNER (2)	SM (Services Module)	•	•	•	•	•
PARTNER	PARTNER (2)	SRS (Airbag)	•	•	•	•	•
PARTNER	PARTNER (2)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
PARTNER	PARTNER (2)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
PARTNER	PARTNER (2) (M69)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
PARTNER	PARTNER (2) (M69)	BSI (Built-in Systems Interface)	•	•	•	•	•
PARTNER	PARTNER (2) (M69)	ECM (Engine Control Module)	•	•	•	•	•
PARTNER	PARTNER (2) (M69)	IP (Instrument Cluster Panel)	•	•	•	•	•
PARTNER	PARTNER (2) (M69)	Radio	•	•	•	•	•
PARTNER	PARTNER (2) (M69)	SRS (Airbag)	•	•	•	•	•
PARTNER	PARTNER (2) (M69)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
PARTNER	PARTNER (B9)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
PARTNER	PARTNER (B9)	AC (Air Conditioning Compressor)	•	•	•	•	•
PARTNER	PARTNER (B9)	AC (Air Conditioning)	•	•	•	•	•
PARTNER	PARTNER (B9)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
PARTNER	PARTNER (B9)	Alarm	•	•	•	•	•
PARTNER	PARTNER (B9)	BATT (Battery Charge Status Unit)	•	•	•	•	•
PARTNER	PARTNER (B9)	BATT (Onboard Charger Of The Traction Battery)	•	•	•	•	•
PARTNER	PARTNER (B9)	BATT-01 (Traction Battery Cells Management(Module 01))	•	•	•	•	•
			1			•	
PARTNER	PARTNER (B9)	BATT-02 (Traction Battery Cells Management(Module 02))	•	•	•	•	•

PARTNER	PARTNER (B9)	BATT-04 (Traction Battery Cells Management(Module 04))	•	•	•	•	•
PARTNER	PARTNER (B9)	BATT-05 (Traction Battery Cells Management(Module 05))	•	•	•	•	●
PARTNER	PARTNER (B9)	BATT-06 (Traction Battery Cells Management(Module 06))	•	•	•	•	●
PARTNER	PARTNER (B9)	BATT-07 (Traction Battery Cells Management(Module 07))	•	•	•	•	•
PARTNER	PARTNER (B9)	BATT-08 (Traction Battery Cells Management(Module 08))	•	•	•	•	•
PARTNER	PARTNER (B9)	BATT-09 (Traction Battery Cells Management(Module 09))	•	•	•	•	•
PARTNER	PARTNER (B9)	BATT-10 (Traction Battery Cells Management(Module 10))	•	•	•	•	•
PARTNER	PARTNER (B9)	BSI (Built-in Systems Interface)	•	•	•	•	•
PARTNER	PARTNER (B9)	BWCU (Bodywork Conversion Unit)	•	•	•	•	•
PARTNER	PARTNER (B9)	CD (CD Player)	•	•	•	•	•
PARTNER	PARTNER (B9)	ECM (Engine Control Module)	•	•	•	•	•
PARTNER	PARTNER (B9)	EMM (Electric Machine Management ECU)	•	•	•	•	
PARTNER	PARTNER (B9)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
PARTNER	PARTNER (B9)	ERU (Engine Relay Unit)	•	•	•	•	•
PARTNER	PARTNER (B9)	EVM (Electric Vehicle Management ECU)	•	•	•	•	•
PARTNER	PARTNER (B9)	HFC (Hands Free Control Kit)	•	•	•	•	•
PARTNER	PARTNER (B9)			•	•	•	•
		HFR (High Frequency Receiver) IP (Instrument Cluster Panel)	•	•	•	•	•
PARTNER	PARTNER (B9)		-	-	-	-	-
PARTNER	PARTNER (B9)	MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
PARTNER	PARTNER (B9)	MULD (Multifunction Display)	•	•	•	•	•
PARTNER	PARTNER (B9)	PAM (Parking Assistance)	•	•	•	•	•
PARTNER	PARTNER (B9)	PCAHR (Passenger's Compartment Air Heating Resistor)	•	•	•	•	•
PARTNER	PARTNER (B9)	RS (Rain Sensor)	•	•	•	•	•
PARTNER	PARTNER (B9)	Radio	•	•	•	•	•
PARTNER	PARTNER (B9)	SM (Services Module)	•	•	•	•	•
PARTNER	PARTNER (B9)	SRS (Airbag)	•	•	•	•	•
PARTNER	PARTNER (B9)	SWSM (Switch Module Under The Steering Wheel(Top Of Columm))	•	•	•	•	•
PARTNER	PARTNER (B9)	TCM (Automatic Gearbox)	•	•	•	•	•
PARTNER	PARTNER (B9)	TEU/NAVI (Telematics Unit(Rtx) Or Radio-navigation)	•	•	•	•	•
PARTNER	PARTNER (B9)	TRU (Trailer Relay Unit)	•	•	•	•	•
PARTNER	PARTNER (B9)	UID (Under Inflation Detection)	•	•	•	•	•
PARTNER	PARTNER (B9)	VRD (Voltage Retaining Device)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	-
PARTNER	PARTNER Electric (B9E)	AC (Air Conditioning Compressor)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	Alarm	•	•	•	•	•
PARTNER	PARTNER Electric (B9E) PARTNER Electric (B9E)	BATT (Battery Charge Status Unit)	•	•		•	
PARTNER	. ,	BATT (Onboard Charger Of The Traction Battery)	-	-		-	
PARTNER	PARTNER Electric (B9E)	BATT-01 (Traction Battery Cells Management(Module 01))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT-02 (Traction Battery Cells Management(Module 02))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT-03 (Traction Battery Cells Management(Module 03))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT-04 (Traction Battery Cells Management(Module 04))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT-05 (Traction Battery Cells Management(Module 05))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT-06 (Traction Battery Cells Management(Module 06))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT-07 (Traction Battery Cells Management(Module 07))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT-08 (Traction Battery Cells Management(Module 08))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT-09 (Traction Battery Cells Management(Module 09))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT-10 (Traction Battery Cells Management(Module 10))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BSI (Built-in Systems Interface)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	ECM (Engine Control Module)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	EMM (Electric Machine Management ECU)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	ERU (Engine Relay Unit)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	EVM (Electric Vehicle Management ECU)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	IP (Instrument Cluster Panel)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	MULD (Multifunction Display)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	PAM (Parking Assistance)	•	•	•	•	•
			•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	PCAHR (Passenger's Compartment Air Heating Resistor)	•	•	•	•	
PARTNER	PARTNER Electric (B9E)	RS (Rain Sensor)	-	-	-	-	
PARTNER	PARTNER Electric (B9E)	Radio	•	•	•	•	•
	PARTNER Electric (B9E)	SM (Services Module)		•		•	
PARTNER PARTNER	PARTNER Electric (B9E)	SRS (Airbag)	•	•	•	•	<u> </u>

PARTNER	PARTNER Electric (B9E)	SWSM (Switch Module Under The Steering Wheel(Top Of Colunm))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	TEU/NAVI (Telematics Unit(Rtx) Or Radio-navigation)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	VRD (Voltage Retaining Device)	•	•	•	•	•
RCZ		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
RCZ		AC (Air Conditioning)	•	•	•	•	•
RCZ		AMP (Audio Amplifier)	•	•	•	•	•
RCZ		Alarm	•	•	•	•	•
RCZ		Alarm Lin	•	•	•	•	•
RCZ		BATT (Battery Charge Status Unit)	•	•	•	•	•
RCZ		BSI (Built-in Systems Interface)	•	•	•	•	•
RCZ		CD (CD Player)	•	•	•	•	•
RCZ		CPDMD (Control Panel Dot Matrix Display)	•	•	•	•	•
RCZ		DBVHA (Discharge Bulbs Vertical And Horizontal Adjustment)	•	•	•	•	•
RCZ		DDC (Driver's Door Control Panel)	•	•	•	•	•
RCZ		DSM (Driver's School Module)	•	•	•	•	•
RCZ		DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
RCZ		ECM (Engine Control Module)	•	•	•	•	
RCZ		EPA (Electropump Assembly)	•	•	•	•	•
			•	•	•	•	•
RCZ RCZ	+	EPS (Electric Power Steering)	•	•	•	•	•
	+	ERU (Engine Relay Unit)	•	-	•	•	•
RCZ	+	FR (Folding Roof)	-	•	-	-	
RCZ		HFC (Hands Free Control Kit)	•	•	•	•	•
RCZ		HFR (High Frequency Receiver)	•	•	•	•	•
RCZ		IP (Instrument Cluster Panel)	•	•	•	•	•
RCZ		LDWS (Lane Departure Warning System)	•	•	•	•	•
RCZ		MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
RCZ		MPD (Moving Panel Deflector)	•	•	•	•	•
RCZ		MULS (Multifunction Screen)	•	•	•	•	•
RCZ		N-TNB (Not Fastened Warning Light(Tnb))	•	•	•	•	•
RCZ		NAVI (Radio Navigation NG4)	•	•	•	•	•
RCZ		PAM (Parking Assistance)	•	•	•	•	•
RCZ		PID (Pedestrian Impact Detection)	•	•	•	•	•
RCZ		PSM (Passenger's Seat Memorizing Unit)	•	•	•	•	•
RCZ		RBS (Rain And Brightness Sensor)	•	•	•	•	•
RCZ		Radio	•	•	•	•	•
RCZ		SM (Services Module)	•	•	•	•	•
RCZ		SRS (Airbag)	•	•	•	•	•
RCZ		SWSM (Steering Wheel Switching Module)	•	•	•	•	•
RCZ		SunRoof	•	•	•	•	•
RCZ		TCM (Automatic Gearbox)	•	•	•	•	•
RCZ		TEU (Telematics Unit)	•	•	•	•	•
RCZ		TRU (Trailer Relay Unit)	•	•	•	•	•
RCZ		UID (Under Inflation Detection)	•	•	•	•	•
RCZ		VRD (Voltage Retaining Device)	•	•	•	•	•
RCZ		Wiper (Windscreen Wiper)	•	•	•	•	•
TRAVELLER		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
TRAVELLER		AC (Air Conditioning)	•	•	•	•	•
TRAVELLER		AC (Rear Air Conditioning Control Panel)	•	•	•	•	•
TRAVELLER		AC (Rear Air Conditioning)	•	•	•	•	•
TRAVELLER		AH (Additional Heating)	•	•	•	•	•
TRAVELLER		ALM (Anti-theft Alarm)	•	•	•	•	•
TRAVELLER		ASM (Anti-slip Mode Selector)	•	•	•	•	•
TRAVELLER		BATT (Battery Charge Status Unit)	•	•	•	•	•
TRAVELLER	1	BSI (Built-in Systems Interface)	•	•	•	•	•
TRAVELLER	1	DAF (Diesel Additive Pump)	•	•	•	•	•
TRAVELLER	1	Display	•	•	•	•	•
TRAVELLER	1	ECM (Engine Control Module)	•	•	•	•	•
TRAVELLER		ERU (Engine Relay Unit)	•	•	•	•	•
TRAVELLER		ESL (Electric Steering Lock)	•	•	•	•	•
TRAVELLER		HFA (Hands Full Access ECU(Right-hand Side Or Rear))	•	•	•	•	
TRAVELLER	+	HHV (High Head Vision)	•	•	•	•	•
INNIELLEK	1	inii, /iitkii iicau (1910ii)	–				

TRAVELLER	IP (Instrument Cluster Panel)	•	•	•	•	•
TRAVELLER	MCP (Multiplexed Control Panel)	•	•	•	•	•
TRAVELLER	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
TRAVELLER	NAVI (Telematic Navigator)	•	•	•	•	•
TRAVELLER	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio System)	•	•	•	•	•
TRAVELLER	PAM (Parking Assistance)	•	•	•	•	•
TRAVELLER	RSS (Rain-sunlight Sensor)	•	•	•	•	•
TRAVELLER	Radio	•	•	•	•	•
TRAVELLER	SB (Seat Belts Not Fastened LED Unit(TNB))	•	•	•	•	•
TRAVELLER	SM (Services Module)	•	•	•	•	•
TRAVELLER	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
TRAVELLER	SRS (Airbag)	•	•	•	•	•
TRAVELLER	SSDM (Left-hand Sliding Side Door)	•	•	•	•	•
TRAVELLER	SWC (Controls On The Steering Wheel)	•	•	•	•	•
TRAVELLER	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
TRAVELLER	Siren	•	•	•	•	•
TRAVELLER	TCM (Automatic Gearbox)	•	•	•	•	•
TRAVELLER	TRU (Trailer Relay Unit)	•	•	•	•	•
TRAVELLER	TS (Touch Screen)	•	•	•	•	•
TRAVELLER	VDA (Vehicle Distance Assistance)	•	•	•	•	•
TRAVELLER	VRD (Voltage Retaining Device)	•	•	•	•	•

	PEUGEOT INJ Function List (Note:For referenc	e only)
NOTES:		
 This function is si 	unnorted	
	y be supported, which depends on the actual condition of	of the vehicle
\odot This function is n		
	ne new feature in this version.	
Model	Model Type	INJ
2008	model Type	•
207	207 (+)	•
207	207 (CAN)	•
208	208	•
3008	3008	•
3008	3008 (CHINA)	•
3008	3008 (Hybrid4)	•
3008	3008 (P84)	•
301		•
307	307 (CAN) (2006.01 -)	•
308	308 (2010.01 - 2014.09)	
308	308 (4 Doors)	•
308	308 (T9) (2014.10 -)	
4007	4007	•
4008	4008	•
4008	4008 (CHINA)	•
407		•
408	408 (2010.01 - 2014.09)	•
5008	5008	•
5008	5008 (P84)	•
508	508	•
508	508 (Hybrid4)	•
508	508 (RXH Hybrid4)	
508	508 (RXH)	•
607	607 (CAN)	•
807	807 (CAN) (2005 -)	
BOXER	BOXER (3) (Euro 5 / 6)	
EXPERT	EXPERT (2)	•
EXPERT	EXPERT (3)	•
EXPERT	EXPERT (KO)	
PARTNER	PARTNER (2) (M69)	•
PARTNER	PARTNER (B9)	•
RCZ		•
TRAVELLER		•
	PEUGEOT INJ Function List (Note:For referenc	e only)
Classification Of	``	
Configuration Of	The Characterisation Of Diesel Injector	
Diesel Injectors	Programming Procedure	
Initialisation Of	Diesel Injector	
Injector Replacem	nent	
Injectors		
Reinitialisation	Following Replacement Of The Urea Injector	
Replacement Of In	jector	
Replacement Of On	e Or More Petrol Injectors	
Replacement Of On	e Or Several Injectors	
	e Cyliner Head Or Programming Of The Injectors	

	PEUGEOT OIL FUNCTION LIST (Note:For referen	
NOTES:		
This function is s		
	y be supported, which depends on the actual condition	of the vehicle.
○ This function is r		
	he new feature in this version.	
Mode1	Model Type	OIL
2008		•
206	206 (+)	•
206	206 (Mux)	•
207	207 (+)	•
207	207 (CAN)	•
207	207 (i)	•
207	207 (VAN)	•
208	208	•
208	208 (Ai91)	•
3008	3008	•
3008	3008 (CHINA)	•
3008	3008 (Hybrid4)	•
301		•
307	307 (CAN) (2006.01 -)	•
308	308 (2010.01 - 2014.09)	•
308	308 (4 Doors)	•
308	308 (S)	•
308	308 (T9) (2014.10 -)	•
4007	4007	•
4008	4008	•
407		•
408	408 (2010.01 - 2014.09)	•
408	408 (T93) (2014.10 -)	•
5008	5008	•
508	508	•
508	508 (Hybrid4)	•
508	508 (RXH Hybrid4)	•
508	508 (RXH)	•
607	607 (CAN)	•
807	807 (CAN) (2005 -)	•
BIPPER		•
BOXER	BOXER (3) (Euro 5 / 6)	•
EXPERT	EXPERT (2)	•
EXPERT	EXPERT (3)	•
HOGGAR		•
		•
	PARTNER (2)	•
	PARTNER (2) (M69)	
	PARTNER (B9)	●
PARTNER	PARTNER Electric (B9E)	•
RCZ		
	PEUGEOT OIL Function List (Note:For referen	ice only)
Choice Of Mainter	nance Schedule	
	A New Maintenance Plan	
Maintenance Indio		
Maintenance India		
Maintenance Limit		
	age Zero Reset + Maintenance Number	
Maintenance Numbe		
	er Zero Reset Carried Out	
0il Parameter Re:		
Replacement Of Th		
Reset Service		
Zeroing Of The Se	ervice Indicator	

007 1007 (VAN) 06 206 (+) 06 206 (Mux) 07 207 (+) 07 207 (CAN) 07 207 (CAN) 07 207 (VAN) 08 3008 098 3008 (Hybrid4) 008 3008 (Hybrid4) 008 3008 (Pd4) 01		y be supported, which depends on the actual condition (of the vehicle.
Model Model Type SAS 007 1007 (CAN) • 06 206 (+) • 06 206 (+) • 07 207 (+) • 07 207 (cAN) • 07 207 (AN) • 07 207 (AN) • 07 207 (AN) • 08 3008 • 08 3008 • 008 3008 (CHINA) • 008 3008 (P84) • 01 • • 07 307 (CAN) (206601 -) • 07 307 (CAN) (200601 -) • 08 308 (201001 - 2014.09) • 08 308 (TS9) • <			
007 1007 (CAN) 006 206 (H) 06 206 (Mux) 07 207 (+) 07 207 (AN) 07 207 (CAN) 07 207 (VAN) 08 3008 098 3008 008 3008 008 3008 (CHINA) 01 ● 07 307 (CAN) (2006 01 -) 07 307 (VAN) (- 2005 12) 08 308 (2010.01 - 2014.09) 08 308 (S) 09 308 (TS9) 007 4007 008 4008 008 4008 (CHINA) 01 ● 028 408 (CHINA) 039 408 (CHINA) 0408 103 (2014.10 -) 0508 4008 (CHINA) <	This function is t	he new feature in this version.	
D07 1007 (VAN) D6 206 (H) D6 206 (Mux) D7 207 (CAN) D7 207 (VAN) D7 207 (VAN) D8 3008 D08 3008 D08 3008 (Hybrid4) D08 3008 (PB4) D1 ● D07 307 (VAN) (- 2005.12) D8 308 (2010.1 - 2014.09) D8 308 (19) (2014.10 -) D8 308 (T9) (2014.10 -) D8 308 (T9) D9 308 (S) D8 308 (T9) (2014.10 -) D9 4008 (D9) D07 4007 D08 4008 (D9) D08 4008 (CHINA) D07 4007 D08 4008 (D9) (2014.10 -) D08 4008 (D9) (2014.10 -) D08 4008 (D9) (2014.10 -) D08 <t< th=""><th>Model</th><th>Model Type</th><th>SAS</th></t<>	Model	Model Type	SAS
06 206 (H) 06 206 (Mux) 07 207 (CAN) 07 207 (CAN) 07 207 (VAN) 08 3008 098 3008 (CHINA) 008 3008 (Pybrid4) 009 307 (CAN) (2066 01 -) 07 307 (CAN) (2066 01 -) 07 307 (CAN) (2006 01 -) 07 307 (CAN) (2006 01 -) 08 308 (2010.01 - 2014.09) 08 308 (19) (2014.10 -) 08 308 (19) (2014.10 -) 09 308 (19) (2014.10 -) 08 308 (19) (2014.10 -) 08 308 (19) (2014.10 -) 08 4008 (CHINA) 07 4007 08 408 (2010.01 - 2014.09) 08 408 (2010.01 - 2014.09) 08 408 (2010.01 - 2014.09) 08 408 (2010.01 - 2014.09) 08 5008 098	007	1007 (CAN)	•
D6 206 (Hux) • D7 207 (+) • D7 207 (CAN) • D7 207 (VAN) • D8 3008 • D08 3008 (Hybrid4) • D08 3008 (Hybrid4) • D08 3008 (P84) • D1 • • D7 307 (CAN) (2006.01 -) • D7 307 (CAN) (2005.12) • D8 308 (201.01 - 2014.09) • D8 308 (201.01 - 2014.09) • D8 308 (Desc) • D8 308 (TA9) • D8 308 (TA9) • D08 4008 • D08 4008 • D08 4008 (CHINA) • D7 • • D8 308 (TA9) • D8 308 (TA9) • D07 • • D08 4008 (CHINA) • D7 • • D8	007		•
D6 206 (Hux) • D7 207 (+) • D7 207 (CAN) • D7 207 (VAN) • D8 3008 • D08 3008 (Hybrid4) • D08 3008 (Hybrid4) • D08 3008 (P84) • D1 • • D7 307 (CAN) (2006.01 -) • D7 307 (CAN) (2005.12) • D8 308 (201.01 - 2014.09) • D8 308 (201.01 - 2014.09) • D8 308 (Desc) • D8 308 (TA9) • D8 308 (TA9) • D08 4008 • D08 4008 • D08 4008 (CHINA) • D7 • • D8 308 (TA9) • D8 308 (TA9) • D07 • • D08 4008 (CHINA) • D7 • • D8	06	206 (+)	•
07 207 (+) • 07 207 (CAN) • 07 207 (QAN) • 08 3008 • 008 3008 (CHINA) • 01 • • 01 • • 01 • • 01 • • 01 • • 01 • • 01 • • 02 307 (CAN) (2006.01 -) • 03 908 (201.01 - 2014.09) • 028 308 (TS9) • 007 4007 • 008 4008 (201.01 - 2014.09) • 028 4008 (201.01 - 2014.09) • 038 4008 (201.01 - 2014.09) • 038 4008 (201.01 - 2014.09) • 038 4008 (201.01 - 2014.09) •	06		•
D7 207 (CAN) • D7 207 (VAN) • D08 3008 • D08 3008 (CHINA) • D08 3008 (CHINA) • D08 3008 (P84) • D1 • • D7 307 (CAN) (2006.01 -) • D7 307 (CAN) (2005.12) • D8 308 (2010.01 - 2014.09) • D8 308 (2010.01 - 2014.09) • D8 308 (TS) • D8 308 (TS) • D8 308 (TS) • D08 4008 • D08 5008 • D08 5008 • D08 5008 • D08 5008 (P3/104) • D08 5008 (P3/104) • D09 •	07		•
07 207 (i) 07 207 (VAN) 07 207 (VAN) 08 3008 (CHINA) 008 3008 (CHINA) 008 3008 (P84) 01 • 07 307 (CAN) (206.01 -) 07 307 (VAN) (- 2005.12) 08 308 (2010.01 - 2014.09) 08 308 (S) 08 308 (T9) (2014.10 -) 08 4007 097 • 007 4007 008 4008 (CHINA) 07 • 08 408 (P3) (2014.10 -) 08 408 (P3) (2014.10 -) 08 408 (P3) (2014.10 -) 08 508 (P84) 08 508 (P84) 098 508 (P84) 098 508 (P84) 098 508 (P4brid4) 08 508 (P4	07		•
07 207 (VAN) 008 3008 008 3008 (Hybrid4) 008 3008 (P84) 01 • 07 307 (CAN) (206.01 -) 07 307 (CAN) (2005.01 -) 08 308 (P84) 01 • 07 307 (CAN) (2005.12) 08 308 (201.01 - 2014.09) 08 308 (19) (2014.10 -) 08 308 (T9) 08 308 (T9) 097 4007 008 4008 007 4007 008 4008 (CHINA) 07 • 08 4008 (CHINA) 09 • 008 5008 (P84) 08 5008 098 508 (RXH Hybrid4) 098 508 (RXH Hybrid4) 097 607 (CAN) (2005 -)	07		•
008 3006 008 3008 (CHINA) 008 3008 (P84) 01 • 07 307 (CAN) (2006.01 -) 07 307 (VAN) (- 2005.12) 08 308 (2010.01 - 2014.09) 08 308 (2010.01 - 2014.09) 08 308 (10 pors) 09 308 (19) (2014.10 -) 08 308 (19) (2014.10 -) 09 308 (19) (2014.10 -) 008 4007 008 4008 007 4007 008 4008 (2010.01 - 2014.09) 008 4008 (2010.01 - 2014.09) 008 4008 (193) (2014.10 -) 008 4008 (193) (2014.10 -) 008 5008 (P84) 008 5008 008 5008 (P84) 08 508 09 508 (RXH Hybrid4) 08 508 (RXH) 09 508 (RXH) 07 607 (CAN) (2005 -) PPFR • 00XER BOXER (3) (MiniBus) 0XER BOXER (3) (MiniBus) <	07		•
008 3008 (CHINA) 008 3008 (Pky/inid) 008 3008 (Pky) 01 • 01 • 07 307 (CAN) (2006.01 -) 07 307 (VAN) (- 2005.12) 08 308 (2010.01 - 2014.09) 08 308 (2010.01 - 2014.09) 08 308 (S) 08 308 (T9) (2014.10 -) 08 308 (T9) 007 4007 008 4008 008 4008 (CHINA) 007 4007 008 4008 (CHINA) 008 4008 (CHINA) 007 4007 008 4008 (CHINA) 01 • 028 4008 (CHINA) 038 4008 (CHINA) 0407 • 008 5008 008 5008 008 5008 (P84) 008 5008 (RXH) 028 508 (RXH) 039 508 (RXH) 0407 607 (CAN) (2005 -) 0508 (CAN) (200			•
008 3008 (Hybrid4) 008 3008 (P84) 001 • 007 307 (CAN) (2006.01 -) 07 307 (VAN) (- 2005.12) 08 308 (4 Doors) 08 308 (201.01 - 2014.09) 08 308 (19) (2014.10 -) 08 308 (T9) 008 308 (T9) 008 308 (T9) 007 4007 008 4008 008 4008 008 4008 008 4008 (CHINA) 07 • 08 308 (P84) 08 5008 (P84) 08 5008 (P84) 08 508 (RXH Hybrid4) 08 508 (RXH) 097 • 098 508 (RXH) 098 508 (RXH) 098 508 (RXH) 098 508 (RXH) 097 • 098 508 (RXH) 097 607 (CAN) 077 607 (CAN) 07 607 (CAN)			•
008 3008 (P84) • 01 • • 07 307 (CAN) (2006.01 -) • 07 307 (VAN) (- 2005.12) • 08 308 (2010.01 - 2014.09) • 08 308 (4 Doors) • 08 308 (79) (2014.10 -) • 08 308 (T9) (2014.10 -) • 08 308 (T9) (2014.10 -) • 007 4007 • 008 4008 • 007 4007 • 008 4008 (CHINA) • 007 4007 • 008 4008 (CHINA) • 007 4007 • 008 4008 (CHINA) • 008 408 (2010.01 - 2014.09) • 008 5008 • • 008 5008 • • 008 5008 (P84) • • 008 5008 (P84) • • 008 508 (RXH) • • 028 508 (RXH)			•
01 01 07 307 (CAN) (2006.01 -) 08 308 (201.01 - 2014.09) 08 308 (201.01 - 2014.09) 08 308 (10.01 - 2014.09) 08 308 (10.01 - 2014.09) 08 308 (10.01 - 2014.09) 08 308 (TS) 08 308 (TS) 08 308 (TX9) 007 4007 008 4008 008 4008 (CHINA) 07 - 08 408 (201.01 - 2014.09) 08 408 (10.01 - 2014.09) 08 408 (10.01 - 2014.09) 08 408 (10.01 - 2014.09) 08 408 (10.01 - 2014.09) 08 408 (10.01 - 2014.09) 08 5008 098 5008 008 5008 (P84) 08 508 (P84) 098 508 (P84) 097 607 (CAN)<			•
07 307 (CAN) (2006.01 -) 07 307 (VAN) (- 2005.12) 08 308 (2010.01 - 2014.09) 08 308 (2010.01 - 2014.09) 08 308 (19 (2014.10 -) 08 308 (T9) (2014.10 -) 08 308 (T9) (2014.10 -) 08 308 (T9) (2014.10 -) 007 4007 008 4008 009 4007 008 4008 008 4008 007 4007 008 4008 008 4008 008 4008 008 4008 (2010.01 - 2014.09) 08 408 (793) (2014.10 -) 008 5008 008 5008 008 5008 008 5008 008 5008 (P84) 08 508 (RXH Hybrid4) 08 508 (RXH Hybrid4) 08 508 (RXH Hybrid4) 08 508 (RXH) 07 607 (CAN) 07 607 (CAN) 07 807 (CAN) (2005 -)			•
07 307 (VAN) (- 2005.12) ● 08 308 (2010.01 - 2014.09) ● 08 308 (4 Doors) ● 08 308 (5) ● 08 308 (T9) (2014.10 -) ● 08 308 (T9) (2014.10 -) ● 07 4007 ● 008 4008 (CHINA) ● 007 4007 ● 008 4008 (COLOLI - 2014.09) ● 08 408 (2010.01 - 2014.09) ● 08 408 (2010.01 - 2014.09) ● 08 408 (2010.01 - 2014.09) ● 08 408 (793) (2014.10 -) ● 008 5008 (P84) ● 008 5008 (P84) ● 08 508 (P84) ● 08 508 (RXH Hybrid4) ● 08 508 (RXH Hybrid4) ● 07 607 (CAN) ● 07 807 (CAN) (2005 -) ● 07 807 (CAN) (2005 -) ● 07 807 (CAN) (2005 -) ● 07 807 (CAN) (2		307 (CAN) (2006 01 -)	
08 308 (2010.01 - 2014.09) ● 08 308 (4 Doors) ● 08 308 (5) ● 08 308 (79) (2014.10 -) ● 08 308 (TX9) ● 007 4007 ● 008 4008 ● 007 4007 ● 008 4008 (CHINA) ● 07 ● ● 08 408 (2010.01 - 2014.09) ● 08 408 (793) (2014.10 -) ● 008 5008 ● 008 5008 ● 008 5008 ● 008 5008 (P84) ● 008 508 (P84) ● 08 508 (P84) ● 08 508 (RXH ● 08 508 (RXH) ● 07 607 (CAN) ● 07 807 (CAN) (2005 -) ● 07 807 (CAN) (2005 -) ● 08 508 (RXH (3) ● 0XER BOXER (3) (MiniBus) ● <			
08 308 (4 Doors) ● 08 308 (T) ● 08 308 (T9) (2014.10 -) ● 08 308 (T8) ● 007 4007 ● 008 4008 ● 007 4007 ● 008 4008 (CHINA) ● 07 ● ● 08 408 (2010.01 - 2014.09) ● 08 408 (2010.01 - 2014.09) ● 08 408 (T33) (2014.10 -) ● 008 5008 ● 008 5008 ● 008 5008 (P84) ● 08 508 (RXH Hybrid4) ● 08 508 (RXH Hybrid4) ● 08 508 (RXH) ● 07 607 (CAN) (2005 -) ● 07 607 (CAN) ● 07 607 (CAN) (2005 -) ● 07 607 (CAN) ● 07 607 (CAN) ● 07 607 (CAN) ● 08 508 (RXH) ●			
08 308 (S) ● 08 308 (T9) (2014.10 -) ● 08 308 (TS9) ● 007 4007 ● 008 4008 ● 008 4008 (CHINA) ● 07 ● ● 08 4008 (2010.01 - 2014.09) ● 08 408 (2010.01 - 2014.09) ● 08 408 (T93) (2014.10 -) ● 008 5008 ● 008 5008 (P84) ● 08 508 (P84) ● 08 508 (RXH Hybrid4) ● 08 508 (RXH) ● 07 607 (CAN) (2005 -) ● 1PPER ● ● 07 807 (CAN) (2005 -) ● 1PPER ● ● 0XER BOXER (3) ● 0XFAT EXPERT (2) ●			
08 308 (T9) (2014.10 -) ● 08 308 (TX9) ● 0007 4007 ● 008 4008 ● 008 4008 (CHINA) ● 07 ● ● 08 408 (CHINA) ● 07 ● ● 08 408 (C10.01 - 2014.09) ● 08 408 (C103) (2014.10 -) ● 008 5008 ● 008 5008 ● 008 5008 (P84) ● 08 508 (Hybrid4) ● 08 508 (RXH) ● 08 508 (RXH) ● 07 607 (CAN) (2005 -) ● 07 807 (CAN) (2005 -) ● 07 807 (CAN) (2005 -) ● 02KER BOXER (3) ● 0XER BOXER (3) ● 0XER BOXER (3) ● 0XER BOXER (3) ● 0ARTNER PARTNER (2) ● ARTNER PARTNER (2) ● <td></td> <td></td> <td></td>			
008 308 (TX9) • 007 4007 • 008 4008 (CHINA) • 07 • • 08 408 (CHINA) • 07 • • 08 408 (2010.01 - 2014.09) • 08 408 (193) (2014.10 -) • 008 5008 • 008 5008 (P84) • 008 5008 (P84) • 008 508 (RXH Hybrid4) • 08 508 (RXH) • 07 607 (CAN) • 07 807 (CAN) (2005 -) • IPPER • • 0XER BOXER (3) • 0XER BOXER (3) • 0XER BOXER (3) • 0XER BOXER (3) • 0ARTNER EXPERT (40) • 0GGAR • • 0N • • ARTNER PARTNER (2) • ARTNER PARTNER Electric (B9E) • <t< td=""><td></td><td></td><td></td></t<>			
0007 4007 008 4008 008 4008 (CHINA) 07 • 08 408 (2010.01 - 2014.09) 08 408 (T93) (2014.10 -) 008 5008 008 5008 008 5008 008 5008 008 5008 (P84) 008 508 (P84) 008 508 (Hybrid4) 008 508 (Hybrid4) 008 508 (RXH Hybrid4) 008 508 (RXH) 007 607 (CAN) 07 607 (CAN) 07 807 (CAN) (2005 -) 1PPER • 00XER BOXER (3) 0XER BOXER (3) 0XER BOXER (3) 0XER BOXER (3) 0ARTNER • 0ARTNER			
008 4008 • 008 4008 (CHINA) • 07 • • 08 408 (2010.01 - 2014.09) • 08 408 (2013.01 - 2014.09) • 008 408 (193) (2014.10 -) • 008 5008 • 008 5008 • 008 5008 (P84) • 008 508 (Hybrid4) • 028 508 (Hybrid4) • 028 508 (RXH) • 028 508 (RXH) • 028 508 (RXH) • 037 607 (CAN) • 0407 607 (CAN) • 07 607 (CAN) • 07 807 (CAN) (2005 -) • 19PER • • 0XER BOXER (3) • 0XER BOXER (3) (MiniBus) • XPERT EXPERT (2) • XPERT EXPERT (KO) • • ON ARTNER PARTNER (B9) • ARTNE			
008 4008 (CHINA) • 07 • • 08 408 (2010.01 - 2014.09) • 08 408 (T93) (2014.10 -) • 008 5008 • 008 5008 • 008 5008 • 008 5008 (P84) • 008 508 (Hybrid4) • 028 508 (RXH Hybrid4) • 028 508 (RXH Hybrid4) • 028 508 (RXH) • 07 607 (CAN) • 07 607 (CAN) • 07 807 (CAN) (2005 -) • IPPER • • OXER BOXER (3) (MiniBus) • OXER BOXER (3) (MiniBus) • XPERT EXPERT (2) • XPERT EXPERT (3) • XPERT EXPERT (KO) • OGGAR • • • N • • • ARTNER PARTNER (B9) • • <			
07 ● 08 408 (2010.01 - 2014.09) ● 08 408 (T93) (2014.10 -) ● 008 5008 ● 008 5008 ● 008 5008 (P84) ● 08 508 ● 08 508 (Hybrid4) ● 08 508 (RXH Hybrid4) ● 08 508 (RXH) ● 07 607 (CAN) ● 07 607 (CAN) (2005 -) ● IPPER ● ● OXER BOXER (3) ● APERT EXPERT (2) ● APERT EXPERT (80) ● ARTI			
08 408 (2010.01 - 2014.09) ● 08 408 (T93) (2014.10 -) ● 008 5008 ● 008 5008 (P84) ● 08 508 ● 08 508 (P84) ● 09 508 (P84) ● 008 508 (P84) ● 07 607 (CAN) ● 07 807 (CAN) (2005 -) ● 19PER ● ● OXER BOXER (3) ● OXER BOXER (3) ● OXER BOXER (3) ● XPERT EXPERT (2) ● ARTNE		4008 (CHINA)	
08 408 (T93) (2014.10 -) 008 5008 008 5008 (P84) 08 508 08 508 (Hybrid4) 08 508 (RXH Hybrid4) 08 508 (RXH) 07 607 (CAN) 07 807 (CAN) (2005 -) 1PPER • 0XER BOXER (3) 0XER C 0ACKER C 0ACKER <td< td=""><td></td><td>400 (2010 01 - 2014 00)</td><td></td></td<>		400 (2010 01 - 2014 00)	
008 5008 008 5008 (P84) 08 508 08 508 (Hybrid4) 08 508 (RXH Hybrid4) 08 508 (RXH) 07 607 (CAN) 07 807 (CAN) (2005 -) 1PPER • 0XER BOXER (3) 0XER BOXER (3) 0XER BOXER (3) (MiniBus) XPERT EXPERT (2) XPERT EXPERT (3) XPERT EXPERT (60) OGGAR • ON • ARTNER PARTNER (2) ARTNER PARTNER (2) ARTNER PARTNER (B9) ARTNER PARTNER Electric (B9E) CZ • RAVELLER • PEUGEOT SAS Function List (Note:For reference only)			•
008 5008 (P84) • 08 508 • 08 508 (Hybrid4) • 08 508 (RXH Hybrid4) • 08 508 (RXH) • 07 607 (CAN) • 07 807 (CAN) (2005 -) • 1PPER • • 0XER BOXER (3) • OXER BOXER (2) • ARTNER PARTNER (2) • ARTNER <			•
08 508 • 08 508 (Hybrid4) • 08 508 (RXH Hybrid4) • 08 508 (RXH) • 07 607 (CAN) • 07 807 (CAN) (2005 -) • 1PPER • • 0XER BOXER (3) • OXER BOXER (3) • OXER BOXER (3) (MiniBus) • XPERT EXPERT (2) • XPERT EXPERT (2) • XPERT EXPERT (KO) • OGGAR • • ON • • ARTNER PARTNER (2) • ARTNER PARTNER (B9) • ARTNER PARTNER Electric (B9E) • CZ • • RAVELLER • • PEUGEOT SAS Function List (Note:For reference only) • alibration Of The Steering Wheel Angle Sensor • alibration Of The Yaw Speed Sensor •			•
08 508 (Hybrid4) 08 508 (RXH Hybrid4) 08 508 (RXH) 07 607 (CAN) 07 807 (CAN) (2005 -) IPPER • OXER BOXER (3) OXER BOXER (3) OXER BOXER (3) (MiniBus) XPERT EXPERT (2) XPERT EXPERT (3) XPERT EXPERT (3) XPERT EXPERT (KO) OGGAR • ON • ARTNER PARTNER (2) ARTNER PARTNER (B9) ARTNER PARTNER (B9E) CZ • RAVELLER • PEUGEOT SAS Function List (Note:For reference only) alibration Of The Steering Wheel Angle Sensor • alibration Of The Yaw Speed Sensor •			•
08 508 (RXH Hybrid4) 08 508 (RXH) 07 607 (CAN) 07 807 (CAN) (2005 -) 08 BOXER (3) 00X 0 XPERT EXPERT (2) XPERT EXPERT (K0) OGGAR 0 ON 0 ARTNER PARTNER (2) ARTNER 0 ARTNER 0 ARVELLER 0 PEUGEOT SAS Function List (Note:For reference only) alibration Of The Yaw Speed Sensor <td></td> <td></td> <td>•</td>			•
08 508 (RXH) ● 07 607 (CAN) ● 07 807 (CAN) (2005 -) ● IPPER ● ● OXER BOXER (3) ● OXER BOXER (3) (MiniBus) ● OXER BOXER (3) (MiniBus) ● XPERT EXPERT (2) ● XPERT EXPERT (3) ● OGGAR ● ● ON ● ● ARTNER PARTNER (2) ● ARTNER PARTNER (B9) ● ARTNER PARTNER (B9) ● CZ ● ● PEUGEOT SAS Function List (Note:For reference only) ● alibration Of The Steering Wheel Angle Sensor ● alibration Of The Yaw Speed Sensor ●			•
07607 (CAN)07807 (CAN) (2005 -)IPPER•OXERBOXER (3)OXERBOXER (3) (MiniBus)OXERBOXER (3) (MiniBus)XPERTEXPERT (2)XPERTEXPERT (3)XPERTEXPERT (3)OGGAR•ON•ARTNERPARTNER (2)ARTNERPARTNER (B9)ARTNERPARTNER (B9)ARTNERPARTNER Electric (B9E)CZ•RAVELLER•Alibration Of The Steering Wheel Angle Sensoralibration Of The Yaw Speed Sensor			•
07 807 (CAN) (2005 -) ● IPPER ● OXER BOXER (3) ● OXER BOXER (3) (MiniBus) ● XPERT EXPERT (2) ● XPERT EXPERT (3) ● XPERT EXPERT (3) ● OGGAR ● ● ON ● ● ARTNER PARTNER (2) ● ARTNER PARTNER (B9) ● ARTNER PARTNER Electric (B9E) ● CZ ● ● RAVELLER ● ● PEUGEOT SAS Function List (Note:For reference only) alibration Of The Steering Wheel Angle Sensor ●			•
IPPER Implementation of the Steering Wheel Angle Sensor OXER BOXER (3) OXER BOXER (3) (MiniBus) OXER BOXER (3) (MiniBus) XPERT EXPERT (2) XPERT EXPERT (3) XPERT EXPERT (KO) OGGAR Implementation ON Implementation ARTNER PARTNER (2) ARTNER PARTNER (B9) ARTNER Implementation OK Implementation			•
OXERBOXER (3)OXERBOXER (3) (MiniBus)XPERTEXPERT (2)XPERTEXPERT (3)XPERTEXPERT (KO)OGGARImage: Constraint of the steering Wheel Angle SensorAlibration Of The Yaw Speed Sensor		807 (CAN) (2005 -)	•
OXER BOXER (3) (MiniBus) XPERT EXPERT (2) XPERT EXPERT (3) XPERT EXPERT (K0) OGGAR • ON • ARTNER PARTNER (2) ARTNER PARTNER (B9) ARTNER PARTNER Electric (B9E) CZ • RAVELLER • PEUGEOT SAS Function List (Note:For reference only) alibration Of The Steering Wheel Angle Sensor			•
XPERT EXPERT (2) XPERT EXPERT (3) XPERT EXPERT (KO) OGGAR • ON • ARTNER PARTNER (2) ARTNER PARTNER (B9) ARTNER PARTNER Electric (B9E) CZ • RAVELLER • PEUGEOT SAS Function List (Note:For reference only) alibration Of The Steering Wheel Angle Sensor			•
XPERT EXPERT (3) ● XPERT EXPERT (KO) ● OGGAR ● ● ON ● ● ARTNER PARTNER (2) ● ARTNER PARTNER (B9) ● ARTNER PARTNER Electric (B9E) ● CZ ● ● RAVELLER ● ● PEUGEOT SAS Function List (Note:For reference only) ● alibration Of The Steering Wheel Angle Sensor ●			•
XPERT EXPERT (KO) ● OGGAR ● DN ● ARTNER PARTNER (2) ● ARTNER PARTNER (B9) ● ARTNER PARTNER Electric (B9E) ● CZ ● ● RAVELLER ● ● PEUGEOT SAS Function List (Note:For reference only) ● alibration Of The Steering Wheel Angle Sensor alibration Of The Yaw Speed Sensor			•
OGGAR • ON • ARTNER PARTNER (2) ARTNER PARTNER (B9) ARTNER PARTNER Electric (B9E) CZ • RAVELLER • PEUGEOT SAS Function List (Note:For reference only) alibration Of The Steering Wheel Angle Sensor alibration Of The Yaw Speed Sensor			•
ON ● ARTNER PARTNER (2) ● ARTNER PARTNER (B9) ● ARTNER PARTNER Electric (B9E) ● CZ ● ● RAVELLER ● ● PEUGEOT SAS Function List (Note:For reference only) alibration Of The Steering Wheel Angle Sensor ●		EXPERT (KO)	•
ARTNER PARTNER (2) ● ARTNER PARTNER (B9) ● ARTNER PARTNER Electric (B9E) ● CZ ● ● RAVELLER ● ● PEUGEOT SAS Function List (Note:For reference only) alibration Of The Steering Wheel Angle Sensor ●	IOGGAR		•
ARTNER PARTNER (B9) ● ARTNER PARTNER Electric (B9E) ● CZ ● ● RAVELLER ● ● PEUGEOT SAS Function List (Note:For reference only) alibration Of The Steering Wheel Angle Sensor alibration Of The Yaw Speed Sensor	N		•
ARTNER PARTNER Electric (B9E) ● CZ ● RAVELLER ● PEUGEOT SAS Function List (Note:For reference only) alibration Of The Steering Wheel Angle Sensor alibration Of The Yaw Speed Sensor	ARTNER	PARTNER (2)	
CZ RAVELLER PEUGEOT SAS Function List (Note:For reference only) alibration Of The Steering Wheel Angle Sensor alibration Of The Yaw Speed Sensor	ARTNER	PARTNER (B9)	
PEUGEOT SAS Function List (Note:For reference only) alibration Of The Steering Wheel Angle Sensor alibration Of The Yaw Speed Sensor	ARTNER	PARTNER Electric (B9E)	
PEUGEOT SAS Function List (Note:For reference only) alibration Of The Steering Wheel Angle Sensor alibration Of The Yaw Speed Sensor	CZ		
alibration Of The Steering Wheel Angle Sensor alibration Of The Yaw Speed Sensor	RAVELLER		
alibration Of The Yaw Speed Sensor		PEUGEOT SAS Function List (Note:For reference	ce only)
8			
alibration/Decalibration Of The Steering Wheel Angle Sensor			
	alibration/Deca!	libration Of The Steering Wheel Angle Sensor	