

TOYOTA/LEXUS/SCION Diagnostic Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|-----------------------------|---------------------------|------------------------|----------------------------|
| 4Runner | 86 | AGYA | ALLION/PREMIO |
| ALPHARD | ALPHARD HV | ALPHARD HV/VELLFIRE HV | ALPHARD/VELLFIRE |
| ALTEZZA/ALTEZZA GITA | AQUA | ARISTO | AURIS |
| AURIS HV | AVANZA | AVENSIS | AVENSIS VERSO/PICNIC |
| AYGO | Avalon | Avalon HV | BB |
| BELTA | BLADE | C-HR | C-HR HV |
| CALDINA | CALYA | CAMRY | CAMRY HV |
| CAMRY/AURION | CARINA | CELSIOR | CENTURY |
| COASTER | COMFORT | COROLLA | COROLLA AXIO |
| COROLLA AXIO HV/FIELDER HV | COROLLA AXIO/FIELDER | COROLLA HV | COROLLA HV/AURIS HV |
| COROLLA RUMION | COROLLA RUNX/ALLEX | COROLLA SPACIO | COROLLA VERSO |
| COROLLA/AURIS | CORONA | CROWN | CROWN COMFORT |
| CROWN ESTATE | CROWN HV | CROWN MAJESTA | CROWN Mild Hybrid |
| CROWN PATROL CAR | CROWN SEDAN/COMFORT | CT200h | Celica |
| Celica/CURREN | Corolla iM | DYNA | E' z |
| ES200 | ES240 | ES250 | ES300 |
| ES300h | ES330 | ES350 | ESTIMA |
| ESTIMA HV | ETIOS | Echo | FCHV-adv |
| FJ CRUISER | FORTUNER/HILUX SW4 | FR-S | FT-86 |
| Fun Cargo | GAIA | GS F | GS200t |
| GS250 | GS300 | GS300h | GS350 |
| GS400 | GS430 | GS450h | GS460 |
| GX400 | GX460 | GX470 | Granvia/GRAND HIACE |
| HARRIER | HARRIER HV | HIACE | HIACE/REGIUSACE/HIMEDIC |
| HIGHLANDER HV | HIGHLANDER/KLUGER | HILUX SURF | HONGQI |
| HS250h | Highlander | Hilux | INNOVA/KIJANG INNOVA |
| IPSUM | IS F | IS200 | IS200D |
| IS200t | IS220D | IS250 | IS250C |
| IS300 | IS300C | IS300h | IS350 |
| IS350C | ISIS | Japan SDF Vehicle | KLUGER |
| KLUGER HV | LAND CR PRADO | LAND CR. | LAND CRUISER |
| LAND CRUISER PRADO | LC500 | LC500h | LEVIN |
| LEVIN HV | LFA | LITEACE | LS350 |
| LS400 | LS430 | LS460 | LS500 |
| LS500h | LS600h | LX450 | LX450d |
| LX460 | LX470 | LX570 | MARK X |
| MARK X Zio | MARK2 QUALIS/CAMRY GRACIA | MARK2/MARK2 BLIT | MIRAI |
| MR-S | MR2 | MR2 Spyder | Matrix |
| NADIA | NOAH | NOAH HV/VOXY HV | NOAH HV/VOXY HV/ESQUIRE HV |
| NOAH/VOXY | NOAH/VOXY/ESQUIRE | NX200 | NX200t |
| NX300 | NX300h | Opa | PASSO |
| PASSO SETTE | PIXIS EPOCH | PIXIS JOY | PIXIS MEGA |
| PIXIS SPACE | PIXIS Truck/Van | PLATZ | PORTE/SPADE |
| PREVIA HV | PREVIA/TARAGO | PRIUS | PRIUS +/PRIUS V |
| PRIUS +/PRIUS V/PRIUS ALPHA | PRIUS C | PRIUS PHV | PRIUS Plug-in |
| PRIUS alpha | PRIUS α | PROBOX/SUCCEED | PROGRES/BREVIS |
| Paseo | Previa | Prius Prime | Prius V |
| Pronard | QUICKDELIVERY | RACTIS | RAUM |
| RAV4 | RC-F | RC200t | RC300 |
| RC300h | RC350 | REGIUS/TOURING HIACE | REIZ |
| RUKUS | RUSH | RX200t | RX270 |

| | | | |
|------------|------------------------------|----------------------|------------------------|
| RX300 | RX330 | RX350 | RX400H |
| RX450h | Rav4 EV | Rav4 HV | SAI |
| SC300 | SC400 | SC430 | SDF Vehicle |
| SEQUOIA | SIENTA | SIENTA HV | SOARER |
| SPADE | SUPRA | SURF | Sienna |
| Solara | T100 | TANK | TANK/ROOMY |
| TOWNACE | TOYOACE/CAMROAD/DYNA 150/100 | TOYOACE/DYNA 150/100 | TOYOACE/DYNA 200 |
| TUNDRA | Tacoma | Tercel | URBAN CRUISER |
| VANGUARD | VELLFIRE | VERSO | VIOS |
| VITZ | VITZ HV | VOLTZ | Venza |
| Verossa | Verso-s | Verso-s/Ractis | Vista/Vista Ardeo |
| WIGO | WINDOM | WISH | WiLL Cypha |
| WiLL VS | WiLL Vi | YARIS HV | YARIS VERSO/ECHO VERSO |
| YARIS/ECHO | Yaris | Yaris R | Yaris iA |
| ZELAS | ZZZ1_P3S | ZZZ2_P4S | ZZZ3_P4C |
| ZZZ4_P5C | eQ | iA | iM |
| iQ | iQ EV | ist | tC |
| xA | xB | xD | |

Ecu List

| System Name | Read Codes | Erase Codes | LiveData | Act |
|--|------------|-------------|----------|-----|
| 4WD_CAN | ● | ● | ● | ● |
| A/B | ● | ● | ● | ● |
| A/T | ● | ● | ● | ● |
| ABS | ● | ● | ● | ● |
| ABS/DSC/TCS | ● | ● | ● | ● |
| ABS/VSC | ● | ● | ● | ● |
| ABS/VSC/ARS | ● | ● | ● | ● |
| ABS/VSC/TRAC | ● | ● | ● | ● |
| ABS/VSC/TRAC/EPB | ● | ● | ● | ● |
| ABS/VSC/TRC | ● | ● | ● | ● |
| ABS/VSC/TRC (TRAC) | ● | ● | ● | ● |
| ABS/VSC/TRC (TRAC) (CAN) | ● | ● | ● | ● |
| ABS/VSC/TRC (TRAC) (SIL) | ● | ● | ● | ● |
| ABS/VSC/TRC (TRAC) /EPB | ● | ● | ● | ● |
| ABS/VSC/TRC/EPB | ● | ● | ● | ● |
| ABS_CAN | ● | ● | ● | ● |
| AFS | ● | ● | ● | ● |
| AFS (CAN) | ● | ● | ● | ● |
| AFS (Sub) | ● | ● | ● | ● |
| AFS (SIL) | ● | ● | ● | ● |
| AHC | ● | ● | ● | ● |
| AHS | ● | ● | ● | ● |
| AHS (Sub) | ● | ● | ● | ● |
| AMT | ● | ● | ● | ● |
| ARS | ● | ● | ● | ● |
| ASC | ● | ● | ● | ● |
| ASG | ● | ● | ● | ● |
| Accessory Gateway | ● | ● | ● | ● |
| Active Headrest L | ● | ● | ● | ● |
| Active Headrest R | ● | ● | ● | ● |
| Active Headrest RL | ● | ● | ● | ● |
| Active Headrest RR | ● | ● | ● | ● |
| Active Noise Control | ● | ● | ● | ● |
| Active Rear Wing | ● | ● | ● | ● |
| Adaptive Variable Suspension System | ● | ● | ● | ● |
| Additional Heating | ● | ● | ● | ● |
| Adjustable Pedal | ● | ● | ● | ● |
| Advanced Parking Guidance/ICS/Intuitive P/A | ● | ● | ● | ● |
| Advanced Parking Guidance/Parking Assist Monitor | ● | ● | ● | ● |
| Air Conditioner | ● | ● | ● | ● |

| | | | | |
|--|---|---|---|---|
| Air Conditioner (CAN) | ● | ● | ● | ● |
| Air Conditioner (SIL) | ● | ● | ● | ● |
| Air Suspension | ● | ● | ● | ● |
| Anti-slip Mode Selector | ● | ● | ● | ● |
| Anti-theft Alarm | ● | ● | ● | ● |
| Audio System | ● | ● | ● | ● |
| Auto A/C | ● | ● | ● | ● |
| Automatic High Beam | ● | ● | ● | ● |
| BODY | ● | ● | ● | ● |
| Back Door | ● | ● | ● | ● |
| Back Door Power Window | ● | ● | ● | ● |
| Battery | ● | ● | ● | ● |
| Battery Charge Status Unit | ● | ● | ● | ● |
| Blind Spot Monitor Master | ● | ● | ● | ● |
| Blind Spot Monitor Slave | ● | ● | ● | ● |
| Bluetooth Communication Module | ● | ● | ● | ● |
| Body No. 2 | ● | ● | ● | ● |
| Body No. 2 (JZS,GS17#) | ● | ● | ● | ● |
| Body No. 2 (other JZS,GS17#) | ● | ● | ● | ● |
| Body No. 3 | ● | ● | ● | ● |
| Body No. 3 (except for GS, JZS, UZS) | ● | ● | ● | ● |
| Body No. 3 (for GS, JZS, UZS) | ● | ● | ● | ● |
| Body No. 4 | ● | ● | ● | ● |
| Body No. 5 | ● | ● | ● | ● |
| Body/Gateway | ● | ● | ● | ● |
| Bodywork Conversion Unit | ● | ● | ● | ● |
| Built-In System Interface(BSI) | ● | ● | ● | ● |
| CARB Mode ECU | ● | ● | ● | ● |
| CVT | ● | ● | ● | ● |
| Camera | ● | ● | ● | ● |
| Center Console Switch | ● | ● | ● | ● |
| Central Gateway | ● | ● | ● | ● |
| Charging Control | ● | ● | ● | ● |
| Circumference Monitoring Camera Control Module | ● | ● | ● | ● |
| Clearance Sonar | ● | ● | ● | ● |
| Clearance Sonar (CAN) | ● | ● | ● | ● |
| Clearance Sonar (SIL) | ● | ● | ● | ● |
| Clearance Sonar / Simple-IPA. | ● | ● | ● | ● |
| Clearance Sonar/Simple-IPA | ● | ● | ● | ● |
| Combi SW | ● | ● | ● | ● |
| Combination Meter | ● | ● | ● | ● |
| Combination Meter (CAN) | ● | ● | ● | ● |
| Combination Meter(SIL) | ● | ● | ● | ● |
| Combination Switch | ● | ● | ● | ● |
| Cruise Control | ● | ● | ● | ● |
| Cruise Control (CAN Engine) | ● | ● | ● | ● |
| Cruise Control (CAN Hybrid Control) | ● | ● | ● | ● |
| Cruise Control (SIL Diesel Engine) | ● | ● | ● | ● |
| Cruise Control (SIL Gasoline Engine) | ● | ● | ● | ● |
| Cruise Control (SIL Hybrid Control) | ● | ● | ● | ● |
| Cruise Control (SIL2 Engine) | ● | ● | ● | ● |
| Cruise Control2 | ● | ● | ● | ● |
| D-Door Motor | ● | ● | ● | ● |
| D-SEAT SW | ● | ● | ● | ● |
| DC Quick Charging Control | ● | ● | ● | ● |
| DRS | ● | ● | ● | ● |
| Diagnostic Recorder | ● | ● | ● | ● |
| Driver Door | ● | ● | ● | ● |
| Driver Seat | ● | ● | ● | ● |
| Driving Support Computer | ● | ● | ● | ● |
| E-ACM | ● | ● | ● | ● |

| | | | | |
|---|---|---|---|---|
| ECB Gateway | ● | ● | ● | ● |
| ECM Gateway | ● | ● | ● | ● |
| ECT | ● | ● | ● | ● |
| ECT (CAN) | ● | ● | ● | ● |
| ECT (SIL) | ● | ● | ● | ● |
| ECT (SIL2) | ● | ● | ● | ● |
| EFI | ● | ● | ● | ● |
| EHPS | ● | ● | ● | ● |
| EMPS | ● | ● | ● | ● |
| EMPS (CAN Rack) | ● | ● | ● | ● |
| EMPS (CAN With Brush/Brushless) | ● | ● | ● | ● |
| EMPS (SIL NHW11 With Brush) | ● | ● | ● | ● |
| EMPS (SIL Other than NHW11 With Brush) | ● | ● | ● | ● |
| EMPS (SIL Rack) | ● | ● | ● | ● |
| EMPS (SIL ZZW EHPS) | ● | ● | ● | ● |
| EMS | ● | ● | ● | ● |
| EPS | ● | ● | ● | ● |
| EV | ● | ● | ● | ● |
| EV Battery | ● | ● | ● | ● |
| Electric Parking Brake | ● | ● | ● | ● |
| Electric Power Control | ● | ● | ● | ● |
| Electric Propulsion Control System | ● | ● | ● | ● |
| Electronic-Controlled Power Steering | ● | ● | ● | ● |
| Engine | ● | ● | ● | ● |
| Engine (CAN) | ● | ● | ● | ● |
| Engine (LH Bank) | ● | ● | ● | ● |
| Engine (RH Bank) | ● | ● | ● | ● |
| Engine (SIL) | ● | ● | ● | ● |
| Engine Relay Unit (BSM) | ● | ● | ● | ● |
| Engine and ECT | ● | ● | ● | ● |
| Engine (SIL2) | ● | ● | ● | ● |
| Engine2 | ● | ● | ● | ● |
| Entry&Start | ● | ● | ● | ● |
| Entry&Start (SIL) | ● | ● | ● | ● |
| Entry&Start (CAN) | ● | ● | ● | ● |
| FC | ● | ● | ● | ● |
| FC External Power Supply | ● | ● | ● | ● |
| FCDC | ● | ● | ● | ● |
| FCHV | ● | ● | ● | ● |
| Four Wheel Drive | ● | ● | ● | ● |
| Four Wheel Drive (CAN) | ● | ● | ● | ● |
| Four Wheel Drive (SIL) | ● | ● | ● | ● |
| Free-Tronic | ● | ● | ● | ● |
| Front Left Door | ● | ● | ● | ● |
| Front Left Seat A/C | ● | ● | ● | ● |
| Front Radar Sensor | ● | ● | ● | ● |
| Front Recognition Camera | ● | ● | ● | ● |
| Front Recognition Camera (Front Lighting Control) | ● | ● | ● | ● |
| Front Right Door | ● | ● | ● | ● |
| Front Right Seat A/C | ● | ● | ● | ● |
| Front Side Radar Master | ● | ● | ● | ● |
| Front Side Radar Slave | ● | ● | ● | ● |
| Front Stabilizer | ● | ● | ● | ● |
| Gateway | ● | ● | ● | ● |
| Gateway BEAN | ● | ● | ● | ● |
| Gateway CAN | ● | ● | ● | ● |
| Gateway V | ● | ● | ● | ● |
| Grill Shutter | ● | ● | ● | ● |
| HL AutoLeveling | ● | ● | ● | ● |
| HL AutoLeveling (Sub) | ● | ● | ● | ● |
| HV Battery | ● | ● | ● | ● |

| | | | | |
|-----------------------------------|---|---|---|---|
| HV Battery (CAN) | ● | ● | ● | ● |
| HV Battery (SIL Except For NHW11) | ● | ● | ● | ● |
| HV Gateway | ● | ● | ● | ● |
| Head Up Display | ● | ● | ● | ● |
| Heating Ventilation | ● | ● | ● | ● |
| High Frequency Receiver | ● | ● | ● | ● |
| Hybrid Control | ● | ● | ● | ● |
| Hybrid Control (CAN) | ● | ● | ● | ● |
| Hybrid Control (SIL) | ● | ● | ● | ● |
| IMB | ● | ● | ● | ● |
| IPA/ICS/Clearance Sonar | ● | ● | ● | ● |
| IPA/Parking Assist Monitor | ● | ● | ● | ● |
| ITC | ● | ● | ● | ● |
| ITS Connect | ● | ● | ● | ● |
| Illumination | ● | ● | ● | ● |
| Immobiliser | ● | ● | ● | ● |
| Immobiliser (Engine ECU) | ● | ● | ● | ● |
| Instrument Panel | ● | ● | ● | ● |
| Intelligent Clearance Sonar | ● | ● | ● | ● |
| Intuitive P/A | ● | ● | ● | ● |
| KDSS | ● | ● | ● | ● |
| KFS | ● | ● | ● | ● |
| LH Door | ● | ● | ● | ● |
| LKA/LDA | ● | ● | ● | ● |
| LKA/LDA (Sub) | ● | ● | ● | ● |
| Lane Control | ● | ● | ● | ● |
| Lane Departure Alert | ● | ● | ● | ● |
| Lane Keeping Assist | ● | ● | ● | ● |
| Laser Cruise | ● | ● | ● | ● |
| Main Body | ● | ● | ● | ● |
| Master Switch | ● | ● | ● | ● |
| Master Switch (CAN) | ● | ● | ● | ● |
| Master Switch (SIL) | ● | ● | ● | ● |
| Mayday Gateway | ● | ● | ● | ● |
| Meter | ● | ● | ● | ● |
| Mild Hybrid Control | ● | ● | ● | ● |
| Mirror | ● | ● | ● | ● |
| Mirror L | ● | ● | ● | ● |
| Mirror L/R | ● | ● | ● | ● |
| Mirror R | ● | ● | ● | ● |
| Monitor Camera | ● | ● | ● | ● |
| Motor Generator | ● | ● | ● | ● |
| Multi Bus Gateway | ● | ● | ● | ● |
| Multi Bus Monitor No.1 | ● | ● | ● | ● |
| Multi Bus Monitor No.2 | ● | ● | ● | ● |
| Multi-Mode M/T | ● | ● | ● | ● |
| Multifunction Display | ● | ● | ● | ● |
| Navigation Receiver | ● | ● | ● | ● |
| Navigation System | ● | ● | ● | ● |
| Night View | ● | ● | ● | ● |
| Occupant Detection | ● | ● | ● | ● |
| P Master Switch | ● | ● | ● | ● |
| P-Door Motor | ● | ● | ● | ● |
| PCB | ● | ● | ● | ● |
| PCS/LDA/RSA/LVN | ● | ● | ● | ● |
| PM1 Gateway | ● | ● | ● | ● |
| PM2 Gateway | ● | ● | ● | ● |
| PPS | ● | ● | ● | ● |
| PSD_LH | ● | ● | ● | ● |
| PSD_RH | ● | ● | ● | ● |
| Panoramic View Monitor | ● | ● | ● | ● |

| | | | | |
|-------------------------------------|---|---|---|---|
| Parking Assist Camera | ● | ● | ● | ● |
| Passenger Door | ● | ● | ● | ● |
| Passenger Seat | ● | ● | ● | ● |
| Pedestrian Protection | ● | ● | ● | ● |
| Plug-in Control | ● | ● | ● | ● |
| Power Integration No.1 | ● | ● | ● | ● |
| Power Integration No.2 | ● | ● | ● | ● |
| Power Integration No.3 | ● | ● | ● | ● |
| Power Source Control | ● | ● | ● | ● |
| Power Steering Electric Pump Unit | ● | ● | ● | ● |
| Pre-Collision | ● | ● | ● | ● |
| Pre-Collision (CAN) | ● | ● | ● | ● |
| Pre-Collision (SIL) | ● | ● | ● | ● |
| Pre-Collision 2 | ● | ● | ● | ● |
| Pre-Collision Seatback RL | ● | ● | ● | ● |
| Pre-Collision Seatback RR | ● | ● | ● | ● |
| Pre-Collision System | ● | ● | ● | ● |
| Pre-Crash | ● | ● | ● | ● |
| Pre-Crash 2 | ● | ● | ● | ● |
| RL-Door Motor | ● | ● | ● | ● |
| RR-Door Motor | ● | ● | ● | ● |
| Radar Cruise | ● | ● | ● | ● |
| Radar Cruise (CAN Engine) | ● | ● | ● | ● |
| Radar Cruise (SIL Engine) | ● | ● | ● | ● |
| Radar Cruise (SIL Hybrid Control) | ● | ● | ● | ● |
| Radar Cruise1 | ● | ● | ● | ● |
| Radar Cruise2 | ● | ● | ● | ● |
| Radio or Radiotelephone(Radio Part) | ● | ● | ● | ● |
| Rain and Brightness Sensor | ● | ● | ● | ● |
| Rain and/or Humidity Sensor | ● | ● | ● | ● |
| Rear Camera | ● | ● | ● | ● |
| Rear Console Switch | ● | ● | ● | ● |
| Rear Left Door | ● | ● | ● | ● |
| Rear Left Door (CAN) | ● | ● | ● | ● |
| Rear Left Door (SIL) | ● | ● | ● | ● |
| Rear Left Seat | ● | ● | ● | ● |
| Rear Left Seat A/C | ● | ● | ● | ● |
| Rear Motor Generator | ● | ● | ● | ● |
| Rear Right Door | ● | ● | ● | ● |
| Rear Right Door (CAN) | ● | ● | ● | ● |
| Rear Right Door (SIL) | ● | ● | ● | ● |
| Rear Right Seat | ● | ● | ● | ● |
| Rear Right Seat A/C | ● | ● | ● | ● |
| Rear Seat Switch | ● | ● | ● | ● |
| Rear Sliding Sunshade | ● | ● | ● | ● |
| Rear Stabilizer | ● | ● | ● | ● |
| Remote Engine Starter | ● | ● | ● | ● |
| Remote Security | ● | ● | ● | ● |
| Restraint Control Module | ● | ● | ● | ● |
| Retractable Hardtop | ● | ● | ● | ● |
| Road Sign Assist | ● | ● | ● | ● |
| SCBS | ● | ● | ● | ● |
| SRS Airbag | ● | ● | ● | ● |
| SRS Airbag (CAN) | ● | ● | ● | ● |
| SRS Airbag (SIL) | ● | ● | ● | ● |
| SRS Airbag (SIL2) | ● | ● | ● | ● |
| SRS Side Airbag | ● | ● | ● | ● |
| Seat Belt Control | ● | ● | ● | ● |
| Sequential M/T | ● | ● | ● | ● |
| Sliding Roof | ● | ● | ● | ● |
| Sliding Roof (CAN) | ● | ● | ● | ● |

| | | | | |
|--|---|---|---|---|
| Sliding Roof (SIL) | ● | ● | ● | ● |
| Sliding Sunshade | ● | ● | ● | ● |
| Smart Access | ● | ● | ● | ● |
| Smart Key | ● | ● | ● | ● |
| Solar Charging Control | ● | ● | ● | ● |
| Sonar | ● | ● | ● | ● |
| Stabilizer | ● | ● | ● | ● |
| Starting Control | ● | ● | ● | ● |
| Steering Angle Sensor | ● | ● | ● | ● |
| Steering Lock | ● | ● | ● | ● |
| Steering Pad Switch | ● | ● | ● | ● |
| Steering Sensor | ● | ● | ● | ● |
| Stereo Camera | ● | ● | ● | ● |
| Stop And Go | ● | ● | ● | ● |
| Stop And Start | ● | ● | ● | ● |
| Sub Battery Module | ● | ● | ● | ● |
| Switch Module Under The Steering Wheel | ● | ● | ● | ● |
| TRAC | ● | ● | ● | ● |
| TVD | ● | ● | ● | ● |
| TVSS | ● | ● | ● | ● |
| Telematics | ● | ● | ● | ● |
| Theft Deterrent | ● | ● | ● | ● |
| Theft Deterrent (CAN) | ● | ● | ● | ● |
| Theft Deterrent (SIL) | ● | ● | ● | ● |
| Tilt&Telescopic | ● | ● | ● | ● |
| Tire Pressure Monitor | ● | ● | ● | ● |
| Trailer Brake Controller | ● | ● | ● | ● |
| Traller Relay Unit (BSR) | ● | ● | ● | ● |
| Transmission | ● | ● | ● | ● |
| Transmission Control | ● | ● | ● | ● |
| Tyre Under-Inflation Detection (DSG) | ● | ● | ● | ● |
| VGRS | ● | ● | ● | ● |
| VSC | ● | ● | ● | ● |
| Vehicle Control | ● | ● | ● | ● |
| Vehicle Proximity Notification System | ● | ● | ● | ● |
| WIL Gateway | ● | ● | ● | ● |
| Wiper | ● | ● | ● | ● |
| eco IDLE | ● | ● | ● | ● |

TOYOTA/LEXUS/SCION BLD Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|----------------------------|-----------------------------|----------------------------|----------------------|
| 4Runner | AGYA | ALLION/PREMIO | ALPHARD |
| ALPHARD HV | ALPHARD HV/VELLFIRE HV | ALPHARD/VELLFIRE | AQUA |
| ARISTO | AURIS | AURIS HV | AVANZA |
| AVENSIS | AYGO | Avalon | Avalon HV |
| BB | BELTA | BLADE | C-HR |
| C-HR HV | CALDINA | CAMRY | CAMRY HV |
| CAMRY/AURION | CENTURY | COASTER | COMFORT |
| COROLLA | COROLLA AXIO | COROLLA AXIO HV/FIELDER HV | COROLLA AXIO/FIELDER |
| COROLLA HV | COROLLA HV/AURIS HV | COROLLA RUMION | COROLLA RUNX/ALLEX |
| COROLLA SPACIO | COROLLA VERSO | COROLLA/AURIS | CROWN |
| CROWN COMFORT | CROWN HV | CROWN MAJESTA | CROWN Mild Hybrid |
| CROWN PATROL CAR | CROWN SEDAN/COMFORT | CT200h | Celica/CURREN |
| Corolla iM | DYNA | E'z | ES200 |
| ES240 | ES250 | ES300h | ES350 |
| ESTIMA | ESTIMA HV | ETIOS | FJ CRUISER |
| FORTUNER/HILUX SW4 | Fun Cargo | GS F | GS200t |
| GS250 | GS300 | GS300h | GS350 |
| GS430 | GS450h | GS460 | GX400 |
| GX460 | HARRIER | HARRIER HV | HIACE |
| HIACE/REGIUSACE/HIMEDIC | HIGHLANDER HV | HIGHLANDER/KLUGER | HILUX SURF |
| HS250h | Highlander | Hilux | INNOVA/KIJANG INNOVA |
| IPSUM | IS F | IS200D | IS200t |
| IS220D | IS250 | IS250C | IS300 |
| IS300C | IS300h | IS350 | IS350C |
| ISIS | KLUGER | KLUGER HV | LAND CR PRADO |
| LAND CR. | LAND CRUISER | LAND CRUISER PRADO | LC500 |
| LC500h | LEVIN | LEVIN HV | LFA |
| LITEACE | LS350 | LS460 | LS500 |
| LS500h | LS600h | LX450d | LX460 |
| LX570 | MARK X | MARK X Zio | MARK2/MARK2 BLIT |
| MIRAI | Matrix | NOAH | NOAH HV/VOXY HV |
| NOAH HV/VOXY HV/ESQUIRE HV | NOAH/VOXY | NOAH/VOXY/ESQUIRE | NX200 |
| NX200t | NX300 | NX300h | PASSO |
| PASSO SETTE | PIXIS SPACE | PIXIS Truck/Van | PLATZ |
| PORTE/SPADE | PREVIA HV | PREVIA/TARAGO | PRIUS |
| PRIUS +/PRIUS V | PRIUS +/PRIUS V/PRIUS ALPHA | PRIUS C | PRIUS PHV |
| PRIUS Plug-in | PRIUS alpha | PRIUS α | PROBOX/SUCCEED |
| PROGRES/BREVIS | Prius Prime | Prius V | QUICKDELIVERY |
| RACTIS | RAUM | RAV4 | RC-F |
| RC200t | RC300 | RC300h | RC350 |
| REIZ | RUKUS | RUSH | RX200t |
| RX270 | RX300 | RX350 | RX400H |
| RX450h | Rav4 EV | Rav4 HV | SAI |
| SDF Vehicle | SEQUOIA | SIENTA | SIENTA HV |
| SPADE | Sienna | TOWNACE | TOYOACE/DYNA 150/100 |
| TOYOACE/DYNA 200 | TUNDRA | Tacoma | URBAN CRUISER |
| VANGUARD | VELLFIRE | VERSO | VIOS |
| VITZ | VITZ HV | Venza | Verso-s |
| Verso-s/Ractis | WIGO | WINDOM | WISH |
| Will Cypha | YARIS HV | YARIS/ECHO | Yaris |
| ZELAS | ZZZ3_P4C | eQ | iM |
| iQ | iQ EV | ist | tC |
| xB | xD | | |

| BLD Function List (Note:For reference only) |
|---|
| 2nd Sys. Air Bleeding |
| Air Bleeding |
| B1 Air Bleeding |
| ECB-R Utility(Brake Fluid Replacement) |

TOYOTA/LEXUS/SCION BMS Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|------------------------|------------------------------|----------------------------|----------------------|
| 4Runner | ALLION/PREMIO | ALPHARD | ALPHARD HV |
| ALPHARD HV/VELLFIRE HV | ALPHARD/VELLFIRE | AQUA | AURIS |
| AURIS HV | AVENSIS | AYGO | Avalon |
| Avalon HV | BELTA | BLADE | C-HR |
| C-HR HV | CAMRY | CAMRY HV | CAMRY/AURION |
| CELSIOR | CENTURY | COASTER | COMFORT |
| COROLLA | COROLLA AXIO | COROLLA AXIO HV/FIELDER HV | COROLLA AXIO/FIELDER |
| COROLLA HV | COROLLA HV/AURIS HV | COROLLA RUMION | COROLLA VERSO |
| COROLLA/AURIS | CROWN | CROWN COMFORT | CROWN HV |
| CROWN MAJESTA | CROWN Mild Hybrid | CROWN PATROL CAR | CROWN SEDAN/COMFORT |
| CT200h | Corolla iM | DYNA | E' z |
| ES200 | ES240 | ES250 | ES300h |
| ES350 | ESTIMA | ESTIMA HV | ETIOS |
| FCHV-adv | FJ CRUISER | FORTUNER/HILUX SW4 | GS F |
| GS200t | GS250 | GS300 | GS300h |
| GS350 | GS430 | GS450h | GS460 |
| GX400 | GX460 | GX470 | HARRIER |
| HARRIER HV | HIACE | HIACE/REGIUSACE/HIMEDIC | HIGHLANDER HV |
| HIGHLANDER/KLUGER | HILUX SURF | HONGQI | HS250h |
| Highlander | Hilux | INNOVA/KIJANG INNOVA | IS F |
| IS200D | IS200t | IS220D | IS250 |
| IS250C | IS300 | IS300C | IS300h |
| IS350 | IS350C | ISIS | Japan SDF Vehicle |
| KLUGER HV | LAND CR PRADO | LAND CR. | LAND CRUISER |
| LAND CRUISER PRADO | LC500 | LC500h | LEVIN |
| LEVIN HV | LFA | LS350 | LS430 |
| LS460 | LS500 | LS500h | LS600h |
| LX450d | LX460 | LX470 | LX570 |
| MARK X | MARK X Zio | Matrix | NOAH |
| NOAH HV/VOXY HV | NOAH HV/VOXY HV/ESQUIRE HV | NOAH/VOXY | NOAH/VOXY/ESQUIRE |
| NX200 | NX200t | NX300 | NX300h |
| PORTE/SPADE | PREVIA HV | PREVIA/TARAGO | PRIUS |
| PRIUS +/PRIUS V | PRIUS +/PRIUS V/PRIUS ALPHA | PRIUS C | PRIUS PHV |
| PRIUS Plug-in | PRIUS alpha | PRIUS α | PROBOX/SUCCEED |
| Prius Prime | Prius V | QUICKDELIVERY | RACTIS |
| RAUM | RAV4 | RC-F | RC200t |
| RC300 | RC300h | RC350 | REIZ |
| RUKUS | RX200t | RX270 | RX300 |
| RX350 | RX400H | RX450h | Rav4 HV |
| SAI | SC430 | SEQUOIA | SIENTA |
| SIENTA HV | SPADE | SURF | Sienna |
| Solara | TOYOACE/CAMROAD/DYNA 150/100 | TOYOACE/DYNA 150/100 | TOYOACE/DYNA 200 |
| TUNDRA | Tacoma | URBAN CRUISER | VANGUARD |
| VELLFIRE | VERSO | VIOS | VITZ |
| VITZ HV | Venza | Verso-s | Verso-s/Ractis |
| WISH | YARIS HV | YARIS/ECHO | Yaris |
| ZELAS | ZZZ1_P3S | ZZZ2_P4S | ZZZ3_P4C |
| ZZZ4_P5C | iM | iQ | ist |

| tC | xA | xB | xD |
|--|----|----|----|
| BMS Function List (Note:For reference only) | | | |
| Auxiliary Battery Exchange | | | |
| BSM Master Abnormal History | | | |
| BSM Master Beam Axis Adjustment | | | |
| BSM Master Beam Axis Display | | | |
| BSM Master Beam Axis Inspection | | | |
| BSM Slave Abnormal History | | | |
| BSM Slave Beam Axis Adjustment | | | |
| BSM Slave Beam Axis Display | | | |
| BSM Slave Beam Axis Inspection | | | |
| Battery Diagnosis | | | |
| Battery Status Info Update | | | |
| HV Batt Cell Low Volt Ready ON Prevention Cancel | | | |
| Initialization | | | |
| Integrated Current Value Initialization | | | |
| Normal Battery Stack Average Voltage Calculation | | | |
| Prediagnostic Battery Charge | | | |
| Switch Battery Type | | | |

TOYOTA/LEXUS/SCION BSC Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|----------------------------|----------------------|----------------------------|-----------------------------|
| 4Runner | 86 | AGYA | ALLION/PREMIO |
| ALPHARD | ALPHARD HV | ALPHARD HV/VELLFIRE HV | ALPHARD/VELLFIRE |
| ALTEZZA/ALTEZZA GITA | AQUA | ARISTO | AURIS |
| AURIS HV | AVANZA | AVENSIS | AVENSIS VERSO/PICNIC |
| AYGO | Avalon | Avalon HV | BB |
| BELTA | BLADE | C-HR | C-HR HV |
| CALDINA | CALYA | CAMRY | CAMRY HV |
| CAMRY/AURION | CARINA | CELSIOR | CENTURY |
| COASTER | COMFORT | COROLLA | COROLLA AXIO |
| COROLLA AXIO HV/FIELDER HV | COROLLA AXIO/FIELDER | COROLLA HV | COROLLA HV/AURIS HV |
| COROLLA RUMION | COROLLA RUNX/ALLEX | COROLLA SPACIO | COROLLA VERSO |
| COROLLA/AURIS | CORONA | CROWN | CROWN COMFORT |
| CROWN ESTATE | CROWN HV | CROWN MAJESTA | CROWN Mild Hybrid |
| CROWN PATROL CAR | CROWN SEDAN/COMFORT | CT200h | Celica |
| Celica/CURREN | Corolla iM | DYNA | E' z |
| ES200 | ES240 | ES250 | ES300 |
| ES300h | ES330 | ES350 | ESTIMA |
| ESTIMA HV | ETIOS | Echo | FCHV-adv |
| FJ CRUISER | FORTUNER/HILUX SW4 | FR-S | FT-86 |
| Fun Cargo | GAIA | GS F | GS200t |
| GS250 | GS300 | GS300h | GS350 |
| GS400 | GS430 | GS450h | GS460 |
| GX400 | GX460 | GX470 | Granvia/GRAND HIACE |
| HARRIER | HARRIER HV | HIACE | HIACE/REGIUSACE/HIMEDIC |
| HIGHLANDER HV | HIGHLANDER/KLUGER | HILUX SURF | HONGQI |
| HS250h | Highlander | Hilux | INNOVA/KIJANG INNOVA |
| IPSUM | IS F | IS200 | IS200D |
| IS200t | IS220D | IS250 | IS250C |
| IS300 | IS300C | IS300h | IS350 |
| IS350C | ISIS | Japan SDF Vehicle | KLUGER |
| KLUGER HV | LAND CR PRADO | LAND CR. | LAND CRUISER |
| LAND CRUISER PRADO | LC500 | LC500h | LEVIN |
| LEVIN HV | LFA | LITEACE | LS350 |
| LS400 | LS430 | LS460 | LS500 |
| LS500h | LS600h | LX450d | LX460 |
| LX470 | LX570 | MARK X | MARK X Zio |
| MARK2 QUALIS/CAMRY GRACIA | MARK2/MARK2 BLIT | MIRAI | MR-S |
| MR2 | MR2 Spyder | Matrix | NADIA |
| NOAH | NOAH HV/VOXY HV | NOAH HV/VOXY HV/ESQUIRE HV | NOAH/VOXY |
| NOAH/VOXY/ESQUIRE | NX200 | NX200t | NX300 |
| NX300h | Opa | PASSO | PASSO SETTE |
| PIXIS EPOCH | PIXIS JOY | PIXIS MEGA | PIXIS SPACE |
| PIXIS Truck/Van | PLATZ | PORTE/SPADE | PREVIA HV |
| PREVIA/TARAGO | PRIUS | PRIUS +/PRIUS V | PRIUS +/PRIUS V/PRIUS ALPHA |
| PRIUS C | PRIUS PHV | PRIUS Plug-in | PRIUS alpha |
| PRIUS α | PROBOX/SUCCEED | PROGRES/BREVIS | Prius Prime |
| Prius V | Pronard | QUICKDELIVERY | RACTIS |
| RAUM | RAV4 | RC-F | RC200t |

| | | | |
|--|------------------------------|------------------------|----------------------|
| RC300 | RC300h | RC350 | REGIUS/TOURING HIACE |
| REIZ | RUKUS | RUSH | RX200t |
| RX270 | RX300 | RX330 | RX350 |
| RX400H | RX450h | Rav4 EV | Rav4 HV |
| SAI | SC430 | SDF Vehicle | SEQUOIA |
| SIENTA | SIENTA HV | SOARER | SPADE |
| SUPRA | SURF | Sienna | Solara |
| TOWNACE | TOYOACE/CAMROAD/DYNA 150/100 | TOYOACE/DYNA 150/100 | TOYOACE/DYNA 200 |
| TUNDRA | Tacoma | URBAN CRUISER | VANGUARD |
| VELLFIRE | VERSO | VIOS | VITZ |
| VITZ HV | VOLTZ | Venza | Verossa |
| Verso-s | Verso-s/Ractis | Vista/Vista Ardeo | WIGO |
| WINDOM | WISH | Will Cypha | Will VS |
| Will Vi | YARIS HV | YARIS VERSO/ECHO VERSO | YARIS/ECHO |
| Yaris | ZELAS | ZZZ1_P3S | ZZZ2_P4S |
| ZZZ3_P4C | eQ | iM | iQ |
| iQ EV | ist | tC | xA |
| xB | xD | | |
| BSC Function List (Note:For reference only) | | | |
| Control Mode Change | | | |
| ECB Utility | | | |
| ES Calibration | | | |
| Inspection Mode | | | |
| Reset Memory | | | |
| Test Mode | | | |

TOYOTA/LEXUS/SCION DPF Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|-----------------------------|----------------------------|----------------------------|------------------------------|
| 4Runner | ALLION/PREMIO | ALPHARD | ALPHARD HV |
| ALPHARD HV/VELLFIRE HV | ALPHARD/VELLFIRE | AQUA | AURIS |
| AURIS HV | AVENSIS | AYGO | Avalon |
| Avalon HV | BELTA | BLADE | C-HR |
| CAMRY | CAMRY HV | CAMRY/AURION | CELSIOR |
| CENTURY | COASTER | COMFORT | COROLLA |
| COROLLA AXIO | COROLLA AXIO HV/FIELDER HV | COROLLA AXIO/FIELDER | COROLLA HV |
| COROLLA RUMION | COROLLA VERSO | COROLLA/AURIS | CROWN |
| CROWN COMFORT | CROWN HV | CROWN MAJESTA | CROWN PATROL CAR |
| CROWN SEDAN/COMFORT | CT200h | Corolla iM | DYNA |
| E'z | ES240 | ES250 | ES300h |
| ES350 | ESTIMA | ESTIMA HV | ETIOS |
| FJ CRUISER | FORTUNER/HILUX SW4 | GS F | GS250 |
| GS300 | GS300h | GS350 | GS430 |
| GS450h | GS460 | GX400 | GX460 |
| GX470 | HARRIER | HARRIER HV | HIACE |
| HIACE/REGIUSACE/HIMEDIC | HIGHLANDER HV | HIGHLANDER/KLUGER | HILUX SURF |
| HONGQI | HS250h | Highlander | Hilux |
| INNOVA/KIJANG INNOVA | IS F | IS200D | IS220D |
| IS250 | IS250C | IS300 | IS300C |
| IS300h | IS350 | IS350C | ISIS |
| Japan SDF Vehicle | KLUGER HV | LAND CR PRADO | LAND CR. |
| LAND CRUISER | LAND CRUISER PRADO | LC500 | LEVIN |
| LEVIN HV | LFA | LS430 | LS460 |
| LS600h | LX450d | LX460 | LX470 |
| LX570 | MARK X | MARK X Zio | Matrix |
| NOAH | NOAH HV/VOXY HV | NOAH HV/VOXY HV/ESQUIRE HV | NOAH/VOXY |
| NOAH/VOXY/ESQUIRE | NX200 | NX300h | PORTE/SPADE |
| PREVIA HV | PREVIA/TARAGO | PRIUS | PRIUS +/PRIUS V |
| PRIUS +/PRIUS V/PRIUS ALPHA | PRIUS C | PRIUS PHV | PRIUS alpha |
| PRIUS α | PROBOX/SUCCEED | Prius V | QUICKDELIVERY |
| RACTIS | RAUM | RAV4 | RC-F |
| RC300 | RC300h | RC350 | REIZ |
| RUKUS | RX270 | RX350 | RX400H |
| RX450h | Rav4 HV | SAI | SC430 |
| SEQUOIA | SIENTA | SIENTA HV | SPADE |
| SURF | Sienna | Solara | TOYOACE/CAMROAD/DYNA 150/100 |
| TOYOACE/DYNA 150/100 | TOYOACE/DYNA 200 | TUNDRA | Tacoma |
| URBAN CRUISER | VANGUARD | VELLFIRE | VERSO |
| VIOS | VITZ | VITZ HV | Venza |
| Verso-s | Verso-s/Ractis | WISH | YARIS HV |
| YARIS/ECHO | Yaris | ZELAS | ZZZ2_P4S |
| ZZZ3_P4C | iM | iQ | ist |
| tC | xB | xD | |

DPF Function List (Note:For reference only)

DPF Deterioration Record Clear

DPF History Information Reset

DPF Rejuvenation Timing Reset

TOYOTA/LEXUS/SCION ECM Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|----------------------------|-------------------------|-----------------------------|----------------------------|
| 4Runner | ALLION/PREMIO | ALPHARD | ALPHARD HV |
| ALPHARD HV/VELLFIRE HV | ALPHARD/VELLFIRE | ALTEZZA/ALTEZZA GITA | AQUA |
| ARISTO | AURIS | AURIS HV | AVENSIS |
| AYGO | Avalon | Avalon HV | BB |
| BELTA | BLADE | C-HR | C-HR HV |
| CALDINA | CAMRY | CAMRY HV | CAMRY/AURION |
| CARINA | CELSIOR | CENTURY | COASTER |
| COMFORT | COROLLA | COROLLA AXIO | COROLLA AXIO HV/FIELDER HV |
| COROLLA AXIO/FIELDER | COROLLA HV | COROLLA HV/AURIS HV | COROLLA RUMION |
| COROLLA RUNX/ALEX | COROLLA SPACIO | COROLLA VERSO | COROLLA/AURIS |
| CROWN | CROWN COMFORT | CROWN ESTATE | CROWN HV |
| CROWN MAJESTA | CROWN Mild Hybrid | CROWN PATROL CAR | CROWN SEDAN/COMFORT |
| CT200h | Celica/CURREN | Corolla iM | DYNA |
| E'z | ES200 | ES240 | ES250 |
| ES300h | ES350 | ESTIMA | ESTIMA HV |
| ETIOS | FJ CRUISER | FORTUNER/HILUX SW4 | Fun Cargo |
| GAIA | GS F | GS200t | GS250 |
| GS300 | GS300h | GS350 | GS430 |
| GS450h | GS460 | GX400 | GX460 |
| GX470 | Granvia/GRAND HIACE | HARRIER | HARRIER HV |
| HIACE | HIACE/REGIUSACE/HIMEDIC | HIGHLANDER HV | HIGHLANDER/KLUGER |
| HILUX SURF | HONGQI | HS250h | Highlander |
| Hilux | INNOVA/KIJANG INNOVA | IPSUM | IS F |
| IS200D | IS200t | IS220D | IS250 |
| IS250C | IS300 | IS300C | IS300h |
| IS350 | IS350C | ISIS | Japan SDF Vehicle |
| KLUGER | KLUGER HV | LAND CR PRADO | LAND CR. |
| LAND CRUISER | LAND CRUISER PRADO | LC500 | LC500h |
| LEVIN | LEVIN HV | LFA | LITEACE |
| LS350 | LS430 | LS460 | LS500 |
| LS500h | LS600h | LX450d | LX460 |
| LX470 | LX570 | MARK X | MARK X Zio |
| MARK2 QUALIS/CAMRY GRACIA | MARK2/MARK2 BLIT | MR-S | MR2 |
| Matrix | NADIA | NOAH | NOAH HV/VOXY HV |
| NOAH HV/VOXY HV/ESQUIRE HV | NOAH/VOXY | NOAH/VOXY/ESQUIRE | NX200 |
| NX200t | NX300 | NX300h | Opa |
| PLATZ | PORTE/SPADE | PREVIA HV | PREVIA/TARAGO |
| PRIUS | PRIUS +/PRIUS V | PRIUS +/PRIUS V/PRIUS ALPHA | PRIUS C |
| PRIUS PHV | PRIUS Plug-in | PRIUS alpha | PRIUS α |
| PROBOX/SUCCEED | PROGRES/BREVIS | Prius Prime | Prius V |
| Pronard | QUICKDELIVERY | RACTIS | RAUM |
| RAV4 | RC-F | RC200t | RC300 |
| RC300h | RC350 | REGIUS/TOURING HIACE | REIZ |
| RUKUS | RX200t | RX270 | RX300 |
| RX350 | RX400H | RX450h | Rav4 HV |
| SAI | SC430 | SDF Vehicle | SEQUOIA |
| SIENTA | SIENTA HV | SOARER | SPADE |
| SUPRA | SURF | Sienna | Solara |

| | | | |
|----------|------------------------------|----------------------|------------------|
| TOWNACE | TOYOACE/CAMROAD/DYNA 150/100 | TOYOACE/DYNA 150/100 | TOYOACE/DYNA 200 |
| TUNDRA | Tacoma | URBAN CRUISER | VANGUARD |
| VELLFIRE | VERSO | VIOS | VITZ |
| VITZ HV | VOLTZ | Venza | Verossa |
| Verso-s | Verso-s/Ractis | Vista/Vista Ardeo | WINDOM |
| WISH | WiLL Cypha | WiLL VS | WiLL Vi |
| YARIS HV | YARIS/ECHO | Yaris | Yaris R |
| Yaris iA | ZELAS | ZZZ1_P3S | ZZZ2_P4S |
| ZZZ3_P4C | ZZZ4_P5C | iA | iM |
| iQ | ist | tC | xB |
| xD | | | |

ECM Function List (Note:For reference only)

| |
|--|
| Crank Time Compensation Reset |
| Deceleration Sensor Zero Point Calibration |
| Deceleration Sensor Zero Point Clear |
| ECU Exchange |
| Engine History Utility |
| Engine control initialization |
| History Clear |
| Key-On Engine Running Self-Test |
| Learning Value Reset |
| Shift Control Synchronization |
| Starter Actuation Count Utility |
| Supply Pump Initialization |
| Total Number of Engine Starts Reset |
| Vehicle Mileage Write |

TOYOTA/LEXUS/SCION EPB Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|----------------------------|-------------------|-----------------------------|----------------------------|
| 4Runner | ALLION/PREMIO | ALPHARD | ALPHARD HV |
| ALPHARD HV/VELLFIRE HV | ALPHARD/VELLFIRE | ALTEZZA/ALTEZZA GITA | AQUA |
| ARISTO | AURIS | AURIS HV | AVENSIS |
| AYGO | Avalon | Avalon HV | BB |
| BELTA | BLADE | C-HR | C-HR HV |
| CALDINA | CAMRY | CAMRY HV | CAMRY/AURION |
| CARINA | CELSIOR | CENTURY | COASTER |
| COMFORT | COROLLA | COROLLA AXIO | COROLLA AXIO HV/FIELDER HV |
| COROLLA AXIO/FIELDER | COROLLA HV | COROLLA HV/AURIS HV | COROLLA RUMION |
| COROLLA RUNX/ALEX | COROLLA SPACIO | COROLLA VERSO | COROLLA/AURIS |
| CROWN | CROWN COMFORT | CROWN ESTATE | CROWN HV |
| CROWN MAJESTA | CROWN Mild Hybrid | CROWN PATROL CAR | CROWN SEDAN/COMFORT |
| CT200h | Celica/CURREN | Corolla iM | DYNA |
| E'z | ES200 | ES240 | ES250 |
| ES300h | ES350 | ESTIMA | ESTIMA HV |
| ETIOS | FJ CRUISER | FORTUNER/HILUX SW4 | Fun Cargo |
| GAIA | GS F | GS200t | GS250 |
| GS300 | GS300h | GS350 | GS430 |
| GS450h | GS460 | GX400 | GX460 |
| Granvia/GRAND HIACE | HARRIER | HARRIER HV | HIACE |
| HIACE/REGIUSACE/HIMEDIC | HIGHLANDER HV | HIGHLANDER/KLUGER | HILUX SURF |
| HS250h | Highlander | Hilux | INNOVA/KIJANG INNOVA |
| IPSUM | IS F | IS200D | IS200t |
| IS220D | IS250 | IS250C | IS300 |
| IS300C | IS300h | IS350 | IS350C |
| ISIS | KLUGER | KLUGER HV | LAND CR PRADO |
| LAND CR. | LAND CRUISER | LAND CRUISER PRADO | LC500 |
| LC500h | LEVIN | LEVIN HV | LFA |
| LITEACE | LS350 | LS460 | LS500 |
| LS500h | LS600h | LX450d | LX460 |
| LX570 | MARK X | MARK X Zio | MARK2 QUALIS/CAMRY GRACIA |
| MARK2/MARK2 BLIT | MIRAI | MR-S | MR2 |
| Matrix | NADIA | NOAH | NOAH HV/VOXY HV |
| NOAH HV/VOXY HV/ESQUIRE HV | NOAH/VOXY | NOAH/VOXY/ESQUIRE | NX200 |
| NX200t | NX300 | NX300h | Opa |
| PLATZ | PORTE/SPADE | PREVIA HV | PREVIA/TARAGO |
| PRIUS | PRIUS +/PRIUS V | PRIUS +/PRIUS V/PRIUS ALPHA | PRIUS C |
| PRIUS PHV | PRIUS Plug-in | PRIUS alpha | PRIUS α |
| PROBOX/SUCCEED | PROGRES/BREVIS | Prius Prime | Prius V |
| Pronard | QUICKDELIVERY | RACTIS | RAUM |
| RAV4 | RC-F | RC200t | RC300 |
| RC300h | RC350 | REGIUS/TOURING HIACE | REIZ |
| RUKUS | RX200t | RX270 | RX300 |
| RX350 | RX400H | RX450h | Rav4 EV |
| Rav4 HV | SAI | SDF Vehicle | SEQUOIA |
| SIENTA | SIENTA HV | SOARER | SPADE |
| SUPRA | Sienna | TOWNACE | TOYOACE/DYNA 150/100 |
| TOYOACE/DYNA 200 | TUNDRA | Tacoma | URBAN CRUISER |

| | | | |
|---|----------|----------------|-------------------|
| VANGUARD | VELLFIRE | VERSO | VIOS |
| VITZ | VITZ HV | VOLTZ | Venza |
| Verossa | Verso-s | Verso-s/Ractis | Vista/Vista Ardeo |
| WINDOM | WISH | Will Cypha | Will VS |
| Will Vi | YARIS HV | YARIS/ECHO | Yaris |
| ZELAS | ZZZ1_P3S | ZZZ3_P4C | eQ |
| iM | iQ | iQ EV | ist |
| tC | xB | xD | |
| EPB Function List (Note:For reference only) | | | |
| ECB 2.0/2.5 Utility | | | |
| Reset Memory | | | |

TOYOTA/LEXUS/SCION ETC Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|----------------------------|----------------------------|-------------------------|-------------------|
| 4Runner | ALPHARD | ALPHARD HV/VELLFIRE HV | ALPHARD/VELLFIRE |
| AQUA | AURIS | AURIS HV | AVENSIS |
| AVENSIS VERSO/PICNIC | AYGO | Avalon | CAMRY |
| CAMRY HV | CENTURY | COASTER | COROLLA |
| COROLLA AXIO HV/FIELDER HV | COROLLA AXIO/FIELDER | COROLLA VERSO | CORONA |
| CROWN | CROWN COMFORT | CROWN HV | CROWN MAJESTA |
| CROWN PATROL CAR | CROWN SEDAN/COMFORT | CT200h | Celica |
| DYNA | ES300 | ES330 | FJ CRUISER |
| GS F | GS250 | GS300 | GS300h |
| GS350 | GS430 | GS450h | HARRIER |
| HARRIER HV | HIACE | HIACE/REGIUSACE/HIMEDIC | HIGHLANDER/KLUGER |
| Highlander | Hilux | IS200 | IS250 |
| IS300 | IS300h | IS350 | LAND CR. |
| LAND CRUISER PRADO | LC500 | LFA | LS400 |
| LS430 | LX470 | LX570 | MR2 |
| NOAH HV/VOXY HV | NOAH HV/VOXY HV/ESQUIRE HV | NOAH/VOXY | NOAH/VOXY/ESQUIRE |
| NX300h | PORTE/SPADE | PREVIA/TARAGO | PRIUS |
| PRIUS PHV | PROBOX/SUCCEED | RAV4 | RC-F |
| RC300h | RC350 | RX270 | RX300 |
| RX330 | RX450h | SC300 | SC430 |
| SEQUOIA | SIENTA | SIENTA HV | Sienna |
| T100 | TUNDRA | VIOS | VITZ |
| VITZ HV | WISH | YARIS VERSO/ECHO VERSO | YARIS/ECHO |
| xA | | | |

ETC Function List (Note:For reference only)

Electric Throttle Learning

TOYOTA/LEXUS/SCION IDL Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|---------|---------------|---------|------------------|
| AVENSIS | COROLLA/AURIS | RAV4 | TOYOACE/DYNA 200 |
| VERSO | | | |

IDL Function List (Note:For reference only)

Idle Speed Adjustment

Idling Stop Information

TOYOTA/LEXUS/SCION IMM Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|-------------------------|----------------------|------------------------------|------------------------|
| 4Runner | ALLION/PREMIO | ALPHARD | ALPHARD HV/VELLFIRE HV |
| ALPHARD/VELLFIRE | ALTEZZA/ALTEZZA GITA | ARISTO | AURIS |
| AURIS HV | AVENSIS | AVENSIS VERSO/PICNIC | AYGO |
| Avalon | BB | BELTA | BLADE |
| CALDINA | CAMRY | CAMRY/AURION | CARINA |
| CELSIOR | CENTURY | COASTER | COROLLA |
| COROLLA AXIO/FIELDER | COROLLA RUNX/ALLEX | COROLLA SPACIO | COROLLA VERSO |
| COROLLA/AURIS | CROWN | CROWN ESTATE | CROWN MAJESTA |
| CROWN Mild Hybrid | CROWN PATROL CAR | CROWN SEDAN/COMFORT | Celica/CURREN |
| DYNA | E' z | ES300 | ES330 |
| ESTIMA | ESTIMA HV | ETIOS | Echo |
| FJ CRUISER | FORTUNER/HILUX SW4 | Fun Cargo | GAIA |
| GS300 | GS400 | GS430 | GX470 |
| Granvia/GRAND HIACE | HARRIER | HARRIER HV | HIACE |
| HIACE/REGIUSACE/HIMEDIC | HIGHLANDER HV | HIGHLANDER/KLUGER | HILUX SURF |
| HONGQI | Highlander | Hilux | INNOVA/KIJANG INNOVA |
| IPSUM | IS300 | ISIS | KLUGER |
| KLUGER HV | LAND CR PRADO | LAND CR. | LAND CRUISER |
| LAND CRUISER PRADO | LITEACE | LS400 | LS430 |
| LX470 | MARK X | MARK2 QUALIS/CAMRY CRACIA | MARK2/MARK2 BLIT |
| MR-S | MR2 | MR2 Spyder | Matrix |
| NADIA | NOAH/VOXY | Opa | PLATZ |
| PORTE/SPADE | PREVIA/TARAGO | PRIUS | PROBOX/SUCCEED |
| PROGRES/BREVIS | Pronard | QUICKDELIVERY | RACTIS |
| RAUM | RAV4 | REGIUS/TOURING HIACE | REIZ |
| RX300 | RX330 | RX350 | RX400H |
| SC300 | SC400 | SC430 | SDF Vehicle |
| SEQUOIA | SIENTA | SOARER | SUPRA |
| SURF | Sienna | Solara | TOWNACE |
| TOYOACE/DYNA 150/100 | TOYOACE/DYNA 200 | TUNDRA | Tacoma |
| URBAN CRUISER | VANGUARD | VIOS | VITZ |
| VOLTZ | Venza | Verossa | Verso-s |
| Verso-s/Ractis | Vista/Vista Ardeo | WINDOM | WISH |
| Will Cypha | Will VS | Will Vi | YARIS/ECHO |
| Yaris | ZZZ1_P3S | iQ | ist |
| tC | xB | xD | |

IMM Function List (Note:For reference only)

Transponder Code Erasure

Transponder Code Registration

TOYOTA/LEXUS/SCION INJ Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|------------------------|----------------------------|------------------------------|-----------------------------|
| 4Runner | ALLION/PREMIO | ALPHARD | ALPHARD HV |
| ALPHARD HV/VELLFIRE HV | ALPHARD/VELLFIRE | AQUA | AURIS |
| AURIS HV | AVENSIS | AVENSIS VERSO/PICNIC | AYGO |
| Avalon | Avalon HV | BELTA | BLADE |
| C-HR | CAMRY | CAMRY HV | CAMRY/AURION |
| CELSIOR | CENTURY | COASTER | COMFORT |
| COROLLA | COROLLA AXIO | COROLLA AXIO HV/FIELDER HV | COROLLA AXIO/FIELDER |
| COROLLA HV | COROLLA RUMION | COROLLA VERSO | COROLLA/AURIS |
| CORONA | CROWN | CROWN COMFORT | CROWN HV |
| CROWN MAJESTA | CROWN PATROL CAR | CROWN SEDAN/COMFORT | CT200h |
| Corolla iM | DYNA | E' z | ES240 |
| ES250 | ES300h | ES350 | ESTIMA |
| ESTIMA HV | ETIOS | FJ CRUISER | FORTUNER/HILUX SW4 |
| GS F | GS250 | GS300 | GS300h |
| GS350 | GS430 | GS450h | GS460 |
| GX400 | GX460 | GX470 | HARRIER |
| HARRIER HV | HIACE | HIACE/REGIUSACE/HIMEDIC | HIGHLANDER HV |
| HIGHLANDER/KLUGER | HILUX SURF | HONGQI | HS250h |
| Highlander | Hilux | INNOVA/KIJANG INNOVA | IS F |
| IS200D | IS220D | IS250 | IS250C |
| IS300 | IS300C | IS300h | IS350 |
| IS350C | ISIS | Japan SDF Vehicle | KLUGER HV |
| LAND CR PRADO | LAND CR. | LAND CRUISER | LAND CRUISER PRADO |
| LC500 | LEVIN | LEVIN HV | LFA |
| LITEACE | LS430 | LS460 | LS600h |
| LX450d | LX460 | LX470 | LX570 |
| MARK X | MARK X Zio | Matrix | NOAH |
| NOAH HV/VOXY HV | NOAH HV/VOXY HV/ESQUIRE HV | NOAH/VOXY | NOAH/VOXY/ESQUIRE |
| NX200 | NX300h | PORTE/SPADE | PREVIA HV |
| PREVIA/TARAGO | PRIUS | PRIUS +/PRIUS V | PRIUS +/PRIUS V/PRIUS ALPHA |
| PRIUS C | PRIUS PHV | PRIUS alpha | PRIUS α |
| PROBOX/SUCCEED | Prius V | QUICKDELIVERY | RACTIS |
| RAUM | RAV4 | RC-F | RC300 |
| RC300h | RC350 | REIZ | RUKUS |
| RX270 | RX350 | RX400H | RX450h |
| Rav4 HV | SAI | SC430 | SEQUOIA |
| SIENTA | SIENTA HV | SPADE | SURF |
| Sienna | Solara | TOYOACE/CAMROAD/DYNA 150/100 | TOYOACE/DYNA 150/100 |
| TOYOACE/DYNA 200 | TUNDRA | Tacoma | URBAN CRUISER |
| VANGUARD | VELLFIRE | VERSO | VIOS |
| VITZ | VITZ HV | Venza | Verso-s |
| Verso-s/Ractis | WISH | YARIS HV | YARIS/ECHO |
| Yaris | ZELAS | ZZZ2_P4S | ZZZ3_P4C |
| iM | iQ | ist | tC |
| xA | xB | xD | |

INJ Function List (Note:For reference only)

Injector Compensation

| |
|--------------------------------------|
| Injector Compensation(12byte) |
| Injector Compensation(30byte) |
| Pilot Quantity Learning |
| Pilot Quantity Learning Values Reset |
| Pilot Quantity Learning values Clear |
| Pilot Quantity Learning(Detail) |
| Secondary Air Injection Check |

TOYOTA/LEXUS/SCION LAP Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|-----------------------------|------------------------|---------------------|---------------|
| ALPHARD HV | ALPHARD HV/VELLFIRE HV | ALPHARD/VELLFIRE | AURIS |
| AURIS HV | AVENSIS | AYGO | Avalon |
| Avalon HV | C-HR | C-HR HV | CAMRY |
| CAMRY HV | CAMRY/AURION | CENTURY | COROLLA |
| COROLLA AXIO | COROLLA HV | COROLLA HV/AURIS HV | COROLLA VERSO |
| COROLLA/AURIS | CROWN | CROWN HV | CROWN MAJESTA |
| CT200h | ES200 | ES250 | ES300h |
| ES350 | FORTUNER/HILUX SW4 | GS F | GS200t |
| GS250 | GS300 | GS300h | GS350 |
| GS450h | GX400 | GX460 | HARRIER |
| HIGHLANDER HV | HIGHLANDER/Kluger | Highlander | Hilux |
| IS200t | IS250 | IS300 | IS300h |
| IS350 | LAND CR PRADO | LAND CR. | LAND CRUISER |
| LAND CRUISER PRADO | LC500 | LC500h | LS350 |
| LS460 | LS500 | LS500h | LS600h |
| LX450d | LX570 | MIRAI | NX200 |
| NX200t | NX300 | NX300h | PRIUS |
| PRIUS +/PRIUS V/PRIUS ALPHA | PRIUS C | PRIUS PHV | PRIUS Plug-in |
| Prius Prime | RAV4 | RC-F | RC200t |
| RC300 | RC300h | RC350 | RX200t |
| RX300 | RX350 | RX450h | Rav4 HV |
| SEQUOIA | Sienna | TUNDRA | Tacoma |
| VERSO | YARIS HV | Yaris | ZZZ3_P4C |

LAP Function List (Note:For reference only)

Headlight Type Setting

TOYOTA/LEXUS/SCION OIL Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|-------------------------|---------------------|----------------------------|------------------------------|
| 4Runner | ALLION/PREMIO | ALPHARD | ALPHARD HV |
| ALPHARD HV/VELLFIRE HV | ALPHARD/VELLFIRE | AQUA | AURIS |
| AURIS HV | AVENSIS | AYGO | Avalon |
| Avalon HV | BELTA | BLADE | C-HR |
| C-HR HV | CAMRY | CAMRY HV | CAMRY/AURION |
| CELSIOR | CENTURY | COASTER | COMFORT |
| COROLLA | COROLLA AXIO | COROLLA AXIO HV/FIELDER HV | COROLLA AXIO/FIELDER |
| COROLLA HV | COROLLA HV/AURIS HV | COROLLA RUMION | COROLLA VERSO |
| COROLLA/AURIS | CROWN | CROWN COMFORT | CROWN HV |
| CROWN MAJESTA | CROWN PATROL CAR | CROWN SEDAN/COMFORT | CT200h |
| Corolla iM | DYNA | E' z | ES200 |
| ES240 | ES250 | ES300h | ES350 |
| ESTIMA | ESTIMA HV | ETIOS | FJ CRUISER |
| FORTUNER/HILUX SW4 | GS F | GS200t | GS250 |
| GS300 | GS300h | GS350 | GS430 |
| GS450h | GS460 | GX400 | GX460 |
| GX470 | HARRIER | HARRIER HV | HIACE |
| HIACE/REGIUSACE/HIMEDIC | HIGHLANDER HV | HIGHLANDER/KLUGER | HILUX SURF |
| HONGQI | HS250h | Highlander | Hilux |
| INNOVA/KIJANG INNOVA | IS F | IS200D | IS200t |
| IS220D | IS250 | IS250C | IS300 |
| IS300C | IS300h | IS350 | IS350C |
| ISIS | Japan SDF Vehicle | KLUGER HV | LAND CR PRADO |
| LAND CR. | LAND CRUISER | LAND CRUISER PRADO | LC500 |
| LC500h | LEVIN | LEVIN HV | LFA |
| LS350 | LS430 | LS460 | LS500 |
| LS500h | LS600h | LX450d | LX460 |
| LX470 | LX570 | MARK X | MARK X Zio |
| Matrix | NOAH | NOAH HV/VOXY HV | NOAH HV/VOXY HV/ESQUIRE HV |
| NOAH/VOXY | NOAH/VOXY/ESQUIRE | NX200 | NX200t |
| NX300 | NX300h | PORTE/SPADE | PREVIA HV |
| PREVIA/TARAGO | PRIUS | PRIUS +/PRIUS V | PRIUS +/PRIUS V/PRIUS ALPHA |
| PRIUS C | PRIUS PHV | PRIUS Plug-in | PRIUS alpha |
| PRIUS α | PROBOX/SUCCEED | Prius Prime | Prius V |
| QUICKDELIVERY | RACTIS | RAUM | RAV4 |
| RC-F | RC200t | RC300 | RC300h |
| RC350 | REIZ | RUKUS | RX200t |
| RX270 | RX300 | RX350 | RX400H |
| RX450h | Rav4 HV | SAI | SC430 |
| SEQUOIA | SIENTA | SIENTA HV | SPADE |
| SURF | Sienna | Solara | TOYOACE/CAMROAD/DYNA 150/100 |
| TOYOACE/DYNA 150/100 | TOYOACE/DYNA 200 | TUNDRA | Tacoma |
| URBAN CRUISER | VANGUARD | VELLFIRE | VERSO |
| VIOS | VITZ | VITZ HV | Venza |
| Verso-s | Verso-s/Ractis | WISH | YARIS HV |
| YARIS/ECHO | Yaris | ZELAS | ZZZ1_P3S |
| ZZZ2_P4S | ZZZ3_P4C | ZZZ4_P5C | iM |
| iQ | ist | tC | xB |

| | | | |
|---|--|--|--|
| xD | | | |
| OIL Function List (Note:For reference only) | | | |
| CVT Oil Pressure Calibration | | | |
| CVT fluid pressure learn | | | |
| Engine Oil Pressure Control Check | | | |
| Oil Pump Air Bleeding | | | |
| Switch Oil Maintenance Display | | | |

TOYOTA/LEXUS/SCION SAS Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|-----------------------------|----------------------------|----------------------|----------------------------|
| 4Runner | 86 | ALLION/PREMIO | ALPHARD |
| ALPHARD HV | ALPHARD HV/VELLFIRE HV | ALPHARD/VELLFIRE | ALTEZZA/ALTEZZA GITA |
| AQUA | ARISTO | AURIS | AURIS HV |
| AVENSIS | AYGO | Avalon | Avalon HV |
| BELTA | BLADE | C-HR | C-HR HV |
| CAMRY | CAMRY HV | CAMRY/AURION | CELSIOR |
| CENTURY | COASTER | COMFORT | COROLLA |
| COROLLA AXIO | COROLLA AXIO HV/FIELDER HV | COROLLA AXIO/FIELDER | COROLLA HV |
| COROLLA HV/AURIS HV | COROLLA RUMION | COROLLA VERSO | COROLLA/AURIS |
| CROWN | CROWN ESTATE | CROWN HV | CROWN MAJESTA |
| CROWN Mild Hybrid | CROWN PATROL CAR | CROWN SEDAN/COMFORT | CT200h |
| Corolla iM | E' z | ES200 | ES250 |
| ES300h | ES350 | ESTIMA | ESTIMA HV |
| FR-S | FT-86 | GS F | GS200t |
| GS250 | GS300 | GS300h | GS350 |
| GS430 | GS450h | GS460 | HARRIER |
| HARRIER HV | HIACE/REGIUSACE/HIMEDIC | HIGHLANDER HV | HIGHLANDER/KLUGER |
| HILUX SURF | HS250h | Highlander | IS F |
| IS200D | IS200t | IS220D | IS250 |
| IS250C | IS300 | IS300C | IS300h |
| IS350 | IS350C | ISIS | KLUGER |
| KLUGER HV | LAND CR PRADO | LAND CR. | LAND CRUISER |
| LAND CRUISER PRADO | LC500 | LC500h | LEVIN |
| LEVIN HV | LFA | LITEACE | LS350 |
| LS460 | LS500 | LS500h | LS600h |
| LX450d | LX460 | LX470 | LX570 |
| MARK X | MARK X Zio | MARK2/MARK2 BLIT | MIRAI |
| Matrix | NOAH | NOAH HV/VOXY HV | NOAH HV/VOXY HV/ESQUIRE HV |
| NOAH/VOXY | NOAH/VOXY/ESQUIRE | NX200 | NX200t |
| NX300 | NX300h | Opa | PORTE/SPADE |
| PREVIA HV | PREVIA/TARAGO | PRIUS | PRIUS +/PRIUS V |
| PRIUS +/PRIUS V/PRIUS ALPHA | PRIUS C | PRIUS PHV | PRIUS Plug-in |
| PRIUS alpha | PRIUS α | PROBOX/SUCCEED | PROGRES/BREVIS |
| Prius Prime | Prius V | QUICKDELIVERY | RACTIS |
| RAUM | RAV4 | RC-F | RC200t |
| RC300 | RC300h | RC350 | REIZ |
| RUKUS | RX200t | RX270 | RX300 |
| RX350 | RX450h | Rav4 EV | Rav4 HV |
| SAI | SDF Vehicle | SEQUOIA | SIENTA |
| SIENTA HV | SOARER | SPADE | Sienna |
| TOWNACE | TOYOACE/DYNA 150/100 | TOYOACE/DYNA 200 | TUNDRA |
| URBAN CRUISER | VANGUARD | VELLFIRE | VERSO |
| VIOS | VITZ | VITZ HV | Venza |
| Verossa | Verso-s | Verso-s/Ractis | WINDOM |
| WISH | YARIS HV | YARIS/ECHO | Yaris |
| ZELAS | ZZZ1_P3S | ZZZ3_P4C | eQ |
| iM | iQ | iQ EV | ist |
| tC | xB | xD | |

| SAS Function List (Note:For reference only) |
|---|
| Steering Angle Adjust |
| Stabilizer System Check |
| Torque Sensor Adjustment |
| VSC Sensor Neutral Memorization |

TOYOTA/LEXUS/SCION SIT Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|------------|---------------|--------------------|-----------------------------|
| 4Runner | Avalon | Avalon HV | C-HR |
| CAMRY | CAMRY HV | COROLLA | COROLLA/AURIS |
| CT200h | Corolla iM | ES300h | ES330 |
| ES350 | FJ CRUISER | FORTUNER/HILUX SW4 | GS F |
| GS200t | GS250 | GS300 | GS350 |
| GS430 | GS450h | GS460 | GX460 |
| GX470 | HIGHLANDER HV | HIGHLANDER/KLUGER | HS250h |
| Highlander | Hilux | IS F | IS200t |
| IS250 | IS250C | IS300 | IS350 |
| IS350C | LAND CR. | LAND CRUISER | LC500 |
| LC500h | LFA | LS460 | LS500 |
| LS500h | LS600h | LX470 | LX570 |
| MIRAI | Matrix | NX200t | NX300 |
| NX300h | PRIUS | PRIUS +/PRIUS V | PRIUS +/PRIUS V/PRIUS ALPHA |
| PRIUS C | PRIUS PHV | PRIUS Plug-in | Prius V |
| RAV4 | RC-F | RC200t | RC300 |
| RC350 | RX330 | RX350 | RX400H |
| RX450h | Rav4 EV | Rav4 HV | SC430 |
| SEQUOIA | Sienna | Solara | TUNDRA |
| Tacoma | Venza | Yaris | ZELAS |
| iM | iQ | iQ EV | tC |
| xA | xB | xD | |

SIT Function List (Note:For reference only)

Sensitivity Check

Zero Point Calibration

TOYOTA/LEXUS/SCION TCM Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|------------------------|------------------------------|-------------------------|-----------------------------|
| 4Runner | ALLION/PREMIO | ALPHARD | ALPHARD HV |
| ALPHARD HV/VELLFIRE HV | ALPHARD/VELLFIRE | AQUA | AURIS |
| AURIS HV | AVENSIS | AYGO | Avalon |
| Avalon HV | BELTA | BLADE | C-HR |
| CAMRY | CAMRY HV | CAMRY/AURION | CELSIOR |
| CENTURY | COASTER | COMFORT | COROLLA |
| COROLLA AXIO | COROLLA AXIO HV/FIELDER HV | COROLLA AXIO/FIELDER | COROLLA HV |
| COROLLA RUMION | COROLLA VERSO | COROLLA/AURIS | CROWN |
| CROWN COMFORT | CROWN HV | CROWN MAJESTA | CROWN PATROL CAR |
| CROWN SEDAN/COMFORT | CT200h | Corolla iM | DYNA |
| E' z | ES200 | ES240 | ES250 |
| ES300h | ES350 | ESTIMA | ESTIMA HV |
| ETIOS | FJ CRUISER | FORTUNER/HILUX SW4 | GS F |
| GS200t | GS250 | GS300 | GS300h |
| GS350 | GS430 | GS450h | GS460 |
| GX400 | GX460 | GX470 | HARRIER |
| HARRIER HV | HIACE | HIACE/REGIUSACE/HIMEDIC | HIGHLANDER HV |
| HIGHLANDER/KLUGER | HILUX SURF | HONGQI | HS250h |
| Highlander | Hilux | INNOVA/KIJANG INNOVA | IS F |
| IS200D | IS200t | IS220D | IS250 |
| IS250C | IS300 | IS300C | IS300h |
| IS350 | IS350C | ISIS | Japan SDF Vehicle |
| KLUGER HV | LAND CR PRADO | LAND CR. | LAND CRUISER |
| LAND CRUISER PRADO | LC500 | LEVIN | LEVIN HV |
| LFA | LS350 | LS430 | LS460 |
| LS500 | LS600h | LX450d | LX460 |
| LX470 | LX570 | MARK X | MARK X Zio |
| Matrix | NOAH | NOAH HV/VOXY HV | NOAH HV/VOXY HV/ESQUIRE HV |
| NOAH/VOXY | NOAH/VOXY/ESQUIRE | NX200 | NX200t |
| NX300 | NX300h | PORTE/SPADE | PREVIA HV |
| PREVIA/TARAGO | PRIUS | PRIUS +/PRIUS V | PRIUS +/PRIUS V/PRIUS ALPHA |
| PRIUS C | PRIUS PHV | PRIUS alpha | PRIUS α |
| PROBOX/SUCCEED | Prius V | QUICKDELIVERY | RACTIS |
| RAUM | RAV4 | RC-F | RC200t |
| RC300 | RC300h | RC350 | REIZ |
| RUKUS | RX200t | RX270 | RX300 |
| RX350 | RX400H | RX450h | Rav4 HV |
| SAI | SC430 | SEQUOIA | SIENTA |
| SIENTA HV | SPADE | SURF | Sienna |
| Solara | TOYOACE/CAMROAD/DYNA 150/100 | TOYOACE/DYNA 150/100 | TOYOACE/DYNA 200 |
| TUNDRA | Tacoma | URBAN CRUISER | VANGUARD |
| VELLFIRE | VIOS | VITZ | VITZ HV |
| Venza | Verso-s | Verso-s/Ractis | WISH |
| YARIS HV | YARIS/ECHO | Yaris | ZELAS |
| ZZZ2_P4S | ZZZ3_P4C | ZZZ4_P5C | iM |
| iQ | ist | tC | xA |
| xB | xD | | |

| |
|---|
| TCM Function List (Note:For reference only) |
|---|

| |
|----------------|
| A/T Code Reset |
|----------------|

| |
|------------------------------|
| CVT Oil Pressure Calibration |
|------------------------------|

| |
|--|
| Deceleration Sensor Zero Point Calibration |
|--|

TOYOTA/LEXUS/SCION TPM Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|----------------------|-----------------------------|------------------------|--------------------|
| 4Runner | 86 | ALPHARD HV/VELLFIRE HV | ALPHARD/VELLFIRE |
| ALTEZZA/ALTEZZA GITA | ARISTO | AURIS HV | AVANZA |
| AVENSIS | Avalon | Avalon HV | BLADE |
| C-HR | C-HR HV | CAMRY | CAMRY HV |
| CAMRY/AURION | CENTURY | COROLLA | COROLLA HV |
| COROLLA VERSO | COROLLA/AURIS | CROWN | CROWN ESTATE |
| CROWN HV | CROWN MAJESTA | CROWN Mild Hybrid | CT200h |
| Corolla iM | ES200 | ES250 | ES300h |
| ES350 | ESTIMA | FJ CRUISER | FORTUNER/HILUX SW4 |
| FR-S | GS F | GS200t | GS250 |
| GS300 | GS300h | GS350 | GS430 |
| GS450h | GS460 | GX400 | GX460 |
| GX470 | HARRIER | HIACE | HIGHLANDER HV |
| HIGHLANDER/KLUGER | HS250h | Highlander | Hilux |
| INNOVA/KIJANG INNOVA | IS F | IS200t | IS250 |
| IS250C | IS300 | IS300C | IS300h |
| IS350 | IS350C | KLUGER | KLUGER HV |
| LAND CR PRADO | LAND CR. | LAND CRUISER | LAND CRUISER PRADO |
| LC500 | LC500h | LEVIN | LEVIN HV |
| LFA | LS350 | LS460 | LS500 |
| LS500h | LS600h | LX450d | LX460 |
| LX470 | LX570 | MARK X | MARK2/MARK2 BLIT |
| MIRAI | Matrix | NX200 | NX200t |
| NX300 | NX300h | PREVIA/TARAGO | PRIUS |
| PRIUS +/PRIUS V | PRIUS +/PRIUS V/PRIUS ALPHA | PRIUS C | PRIUS PHV |
| PRIUS Plug-in | PROGRES/BREVIS | Prius Prime | Prius V |
| RAV4 | RC-F | RC200t | RC300 |
| RC300h | RC350 | RX200t | RX270 |
| RX300 | RX350 | RX400H | RX450h |
| Rav4 EV | Rav4 HV | SC430 | SEQUOIA |
| SIENTA | SOARER | Sienna | Solara |
| TUNDRA | Tacoma | VERSO | VIOS |
| Venza | Verossa | Verso-s/Ractis | Vista/Vista Ardeo |
| WINDOM | YARIS HV | Yaris | ZELAS |
| ZZZ1_P3S | ZZZ3_P4C | iM | iQ |
| iQ EV | tC | xB | xD |

TPM Function List (Note:For reference only)

ID Registration

Tire position writing

TOYOTA/LEXUS/SCION BLD Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|----------------------------|----------------------------|---------------------|-----------------------------|
| 4Runner | AGYA | ALLION/PREMIO | ALPHARD |
| ALPHARD HV | ALPHARD HV/VELLFIRE HV | ALPHARD/VELLFIRE | ALTEZZA/ALTEZZA GITA |
| AQUA | ARISTO | AURIS | AURIS HV |
| Avalon | Avalon HV | AVANZA | AVENSIS |
| AVENSIS VERSO/PICNIC | AYGO | BB | before 1997 |
| before 2000 | before 2003 | before 2005 | BELTA |
| BLADE | CALDINA | CAMRY | CAMRY HV |
| CAMRY/AURION | CARINA | Celica | Celica/CURRENT |
| CELSIOR | CENTURY | C-HR | C-HR HV |
| COASTER | COMFORT | COROLLA | COROLLA AXIO |
| COROLLA AXIO HV/FIELDER HV | COROLLA AXIO/FIELDER | COROLLA HV | COROLLA HV/AURIS HV |
| Corolla iM | COROLLA RUMION | COROLLA RUNX/ALEX | COROLLA SPACIO |
| COROLLA VERSO | COROLLA/AURIS | CORONA | CROWN |
| CROWN COMFORT | CROWN ESTATE | CROWN HV | CROWN MAJESTA |
| CROWN Mild Hybrid | CROWN PATROL CAR | CROWN SEDAN/COMFORT | CT200h |
| DYNA | Echo | eQ | ES200 |
| ES240 | ES250 | ES300 | ES300h |
| ES330 | ES350 | ESTIMA | ESTIMA HV |
| ETIOS | E' z | FCHV-adv | FJ CRUISER |
| FORTUNER/HILUX SW4 | Fun Cargo | GAIA | Granvia/GRAND HIACE |
| GS F | GS200t | GS250 | GS300 |
| GS300h | GS350 | GS400 | GS430 |
| GS450h | GS460 | GX400 | GX460 |
| GX470 | HARRIER | HARRIER HV | HIACE |
| HIACE/REGIUSACE/HIMEDIC | Highlander | HIGHLANDER HV | HIGHLANDER/KLUGER |
| Hilux | HILUX SURF | HONGQI | HS250h |
| iM | INNOVA/KIJANG INNOVA | IPSUM | iQ |
| iQ EV | IS F | IS200 | IS200D |
| IS200t | IS220D | IS250 | IS250C |
| IS300 | IS300C | IS300h | IS350 |
| IS350C | ISIS | ist | KLUGER |
| KLUGER HV | LAND CR PRADO | LAND CR. | LAND CRUISER |
| LAND CRUISER PRADO | LC500 | LC500h | LEVIN |
| LEVIN HV | LFA | LITEACE | LS350 |
| LS400 | LS430 | LS460 | LS500 |
| LS500h | LS600h | LX450d | LX460 |
| LX470 | LX570 | MARK X | MARK X Zio |
| MARK2 QUALIS/CAMRY GRACIA | MARK2/MARK2 BLIT | Matrix | MIRAI |
| MR2 | MR2 Spyder | NADIA | NOAH |
| NOAH HV/VOXY HV | NOAH HV/VOXY HV/ESQUIRE HV | NOAH/VOXY | NOAH/VOXY/ESQUIRE |
| NX200 | NX200t | NX300 | NX300h |
| Opa | PASSO | PASSO SETTE | PIXIS SPACE |
| PIXIS Truck/Van | PLATZ | PORTE/SPADE | PREVIA HV |
| PREVIA/TARAGO | PRIUS | PRIUS +/PRIUS V | PRIUS +/PRIUS V/PRIUS ALPHA |
| PRIUS alpha | PRIUS C | PRIUS PHV | PRIUS Plug-in |
| Prius Prime | Prius V | PRIUS α | PROBOX/SUCCEED |
| PROGRES/BREVIS | Pronard | QUICKDELIVERY | RACTIS |
| RAUM | RAV4 | Rav4 EV | Rav4 HV |
| RC200t | RC300 | RC300h | RC350 |
| RC-F | REGIUS/TOURING HIACE | REIZ | RUKUS |
| RUSH | RX200t | RX270 | RX300 |
| RX330 | RX350 | RX400H | RX450h |
| SAI | SC430 | SDF Vehicle | SEQUOIA |

| | | | |
|----------------------|------------------|----------------|------------------------------|
| Sienna | SIENTA | SIENTA HV | SOARER |
| Solara | SPADE | SUPRA | SURF |
| Tacoma | tC | TOWNACE | TOYOACE/CAMROAD/DYNA 150/100 |
| TOYOACE/DYNA 150/100 | TOYOACE/DYNA 200 | TUNDRA | URBAN CRUISER |
| VANGUARD | VELLFIRE | Venza | Verossa |
| VERSO | Verso-s | Verso-s/Ractis | VIOS |
| Vista/Vista Ardeo | VITZ | VITZ HV | VOLTZ |
| WIGO | WiLL Cypha | WiLL Vi | WiLL VS |
| WINDOM | WISH | xA | xB |
| xD | Yaris | YARIS HV | YARIS VERSO/ECHO VERSO |
| YARIS/ECHO | ZELAS | ZZZ1_P3S | ZZZ3_P4C |

BLD Function List (Note:For reference only)

2nd Sys. Air Bleeding

Air Bleeding

B1 Air Bleeding

Coolant (fuel cell) air bleeding

ECB-R Utility (Brake Fluid Replacement)

Parts Exchange

VSC/TR(A)C/4WD Control Prevention Mode

TOYOTA/LEXUS/SCION BMS Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|------------------------|------------------------------|----------------------|-----------------------------|
| 4Runner | ALLION/PREMIO | ALPHARD | ALPHARD HV |
| ALPHARD HV/VELLFIRE HV | ALPHARD/VELLFIRE | AQUA | AURIS |
| AURIS HV | Avalon | Avalon HV | AVENSIS |
| AYGO | before 2000 | before 2003 | before 2005 |
| BELTA | BLADE | CAMRY | CAMRY HV |
| CAMRY/AURION | CELSIOR | CENTURY | C-HR |
| C-HR HV | COASTER | COMFORT | COROLLA |
| COROLLA AXIO | COROLLA AXIO HV/FIELDER HV | COROLLA AXIO/FIELDER | COROLLA HV |
| COROLLA HV/AURIS HV | Corolla iM | COROLLA RUMION | COROLLA VERSO |
| COROLLA/AURIS | CROWN | CROWN COMFORT | CROWN HV |
| CROWN MAJESTA | CROWN Mild Hybrid | CROWN PATROL CAR | CROWN SEDAN/COMFORT |
| CT200h | DYNA | ES200 | ES240 |
| ES250 | ES300h | ES350 | ESTIMA |
| ESTIMA HV | ETIOS | E' z | FCHV-adv |
| FJ CRUISER | FORTUNER/HILUX SW4 | GS F | GS200t |
| GS250 | GS300 | GS300h | GS350 |
| GS430 | GS450h | GS460 | GX400 |
| GX460 | GX470 | HARRIER | HARRIER HV |
| HIACE | HIACE/REGIUSACE/HIMEDIC | Highlander | HIGHLANDER HV |
| HIGHLANDER/KLUGER | Hilux | HILUX SURF | HONGQI |
| HS250h | iM | INNOVA/KIJANG INNOVA | iQ |
| IS F | IS200D | IS200t | IS220D |
| IS250 | IS250C | IS300 | IS300C |
| IS300h | IS350 | IS350C | ISIS |
| ist | Japan SDF Vehicle | KLUGER HV | LAND CR PRADO |
| LAND CR. | LAND CRUISER | LAND CRUISER PRADO | LC500 |
| LC500h | LEVIN | LEVIN HV | LFA |
| LS350 | LS430 | LS460 | LS500 |
| LS500h | LS600h | LX450d | LX460 |
| LX470 | LX570 | MARK X | MARK X Zio |
| Matrix | NOAH | NOAH HV/VOXY HV | NOAH HV/VOXY HV/ESQUIRE HV |
| NOAH/VOXY | NOAH/VOXY/ESQUIRE | NX200 | NX200t |
| NX300 | NX300h | PORTE/SPADE | PREVIA HV |
| PREVIA/TARAGO | PRIUS | PRIUS +/PRIUS V | PRIUS +/PRIUS V/PRIUS ALPHA |
| PRIUS alpha | PRIUS C | PRIUS PHV | PRIUS Plug-in |
| Prus Prime | Prus V | PRIUS α | PROBOX/SUCCEED |
| QUICKDELIVERY | RACTIS | RAUM | RAV4 |
| Rav4 HV | RC200t | RC300 | RC300h |
| RC350 | RC-F | REIZ | RUKUS |
| RX200t | RX270 | RX300 | RX350 |
| RX400H | RX450h | SAI | SC430 |
| SEQUOIA | Sienna | SIENTA | SIENTA HV |
| Solara | SPADE | SURF | Tacoma |
| tC | TOYOACE/CAMROAD/DYNA 150/100 | TOYOACE/DYNA 150/100 | TOYOACE/DYNA 200 |
| TUNDRA | URBAN CRUISER | VANGUARD | VELLFIRE |
| Venza | VERSO | Verso-s | Verso-s/Ractis |
| VIOS | VITZ | VITZ HV | WISH |
| xA | xB | xD | Yaris |

| YARIS HV | YARIS/ECHO | ZELAS | ZZZ1_P3S |
|--|------------|----------|----------|
| ZZZ2_P4S | ZZZ3_P4C | ZZZ4_P5C | |
| BMS Function List (Note:For reference only) | | | |
| All Readiness | | | |
| All Readiness | | | |
| Auxiliary Battery Exchange | | | |
| Battery Diagnosis | | | |
| Battery Status Info Update | | | |
| Check Mode | | | |
| High Voltage Fuse Accumulated Load History Reset | | | |
| HV Batt Cell Low Volt Ready ON Prevention Cancel | | | |
| Initialization | | | |
| Inspection Mode | | | |
| Integrated Current Value Initialization | | | |
| Normal Battery Stack Average Voltage Calculation | | | |
| Prediagnostic Battery Charge | | | |
| ROM/RAM Check | | | |
| Switch Battery Type | | | |
| Temporary Vehicle Start Up | | | |

TOYOTA/LEXUS/SCION BSC Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|-------------------------|----------------------------|------------------------------|---------------------------|
| 86 | 4Runner | ALPHARD HV/VELLFIRE HV | ALLION/PREMIO |
| ALPHARD | ALPHARD HV | ALPHARD/VELLFIRE | ALTEZZA/ALTEZZA GITA |
| AQUA | ARISTO | AURIS | AURIS HV |
| Avalon | Avalon HV | AVENSIS | AVENSIS VERSO/PICNIC |
| AYGO | BB | before 1997 | before 2000 |
| before 2005 | BELTA | BLADE | CALDINA |
| CAMRY | CAMRY HV | CAMRY/AURION | CARINA |
| Celica | Celica/CURREN | CELSIOR | CENTURY |
| C-HR | C-HR HV | COASTER | COMFORT |
| COROLLA | COROLLA AXIO | COROLLA AXIO HV/FIELDER HV | COROLLA AXIO/FIELDER |
| COROLLA HV | COROLLA HV/AURIS HV | Corolla iM | COROLLA RUMION |
| COROLLA RUNX/ALLEX | COROLLA SPACIO | COROLLA VERSO | COROLLA/AURIS |
| CORONA | CROWN | CROWN COMFORT | CROWN ESTATE |
| CROWN HV | CROWN MAJESTA | CROWN Mild Hybrid | CROWN PATROL CAR |
| CROWN SEDAN/COMFORT | CT200h | DYNA | Echo |
| eQ | ES200 | ES240 | ES250 |
| ES300 | ES300h | ES330 | ES350 |
| ESTIMA | ESTIMA HV | ETIOS | E' z |
| FCHV-adv | FJ CRUISER | FORTUNER/HILUX SW4 | FR-S |
| FT-86 | Fun Cargo | GAIA | Granvia/GRAND HIACE |
| GS F | GS200t | GS250 | GS300 |
| GS300h | GS350 | GS400 | GS430 |
| GS450h | GS460 | GX400 | GX460 |
| GX470 | HARRIER | HARRIER HV | HIACE |
| HIACE/REGIUSACE/HIMEDIC | Highlander | HIGHLANDER HV | HIGHLANDER/KLUGER |
| Hilux | HILUX SURF | HONGQI | HS250h |
| INNOVA/KIJANG INNOVA | IPSUM | iQ | iQ EV |
| IS F | IS200 | IS200D | IS200t |
| IS220D | IS250 | IS250C | IS300 |
| IS300C | IS300h | IS350 | IS350C |
| ISIS | ist | KLUGER | KLUGER HV |
| LAND CR PRADO | LAND CR. | LAND CRUISER | LAND CRUISER PRADO |
| LC500 | LC500h | LEVIN | LEVIN HV |
| LFA | LITEACE | LS350 | LS400 |
| LS430 | LS460 | LS500 | LS500h |
| LS600h | LX450d | LX460 | LX470 |
| LX570 | MARK X | MARK X Zio | MARK2 QUALIS/CAMRY GRACIA |
| MARK2/MARK2 BLIT | Matrix | MIRAI | MR2 |
| MR2 Spyder | MR-S | NADIA | NOAH |
| NOAH HV/VOXY HV | NOAH HV/VOXY HV/ESQUIRE HV | NOAH/VOXY | NOAH/VOXY/ESQUIRE |
| NX200 | NX200t | NX300 | NX300h |
| Opa | PASSO | PASSO SETTE | PIXIS Truck/Van |
| PLATZ | PORTE/SPADE | PREVIA HV | PREVIA/TARAGO |
| PRIUS | PRIUS +/-PRIUS V | PRIUS +/-PRIUS V/PRIUS ALPHA | PRIUS alpha |
| PRIUS C | PRIUS PHV | PRIUS Plug-in | Prius Prime |
| PRIUS α | PROBOX/SUCCEED | PROGRES/BREVIS | Pronard |
| QUICKDELIVERY | RACTIS | RAUM | RAV4 |
| Rav4 HV | RC200t | RC300 | RC300h |

| | | | |
|------------------------|------------------------------|----------------------|------------------|
| RC350 | RC-F | REGIUS/TOURING HIACE | REIZ |
| RUKUS | RUSH | RX200t | RX270 |
| RX330 | RX350 | RX400H | RX450h |
| SC430 | SDF Vehicle | SEQUOIA | Sienna |
| SIENTA | SIENTA HV | SOARER | Solara |
| SPADE | SUPRA | SURF | Tacoma |
| TOWNACE | TOYOACE/CAMROAD/DYNA 150/100 | TOYOACE/DYNA 150/100 | TOYOACE/DYNA 200 |
| TUNDRA | URBAN CRUISER | VANGUARD | VELLFIRE |
| Venza | Verossa | VERSO | Verso-s |
| Verso-s/Ractis | VIOS | Vista/Vista Ardeo | VITZ |
| VITZ HV | VOLTZ | Will Cypha | Will Vi |
| Will VS | WINDOM | WISH | xA |
| xB | xD | Yaris | YARIS HV |
| YARIS VERSO/ECHO VERSO | YARIS/ECHO | ZELAS | ZZZ1_P3S |
| ZZZ3_P4C | | | |

BSC Function List (Note:For reference only)

| |
|---------------------------------|
| ECB Utility |
| ES Calibration |
| Inspection Mode |
| Reset Memory (A/T) |
| Reset Memory (ABS) |
| Reset Memory (D-Door Motor) |
| Reset Memory (Four Wheel Drive) |
| Reset Memory (Master Switch) |
| Reset Memory (P-Door Motor) |
| Reset Memory (RL-Door Motor) |
| Reset Memory (RR-Door Motor) |
| Test Mode |

TOYOTA/LEXUS/SCION Diagnostic Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|-----------------------------|---------------------------|------------------------|----------------------------|
| 4Runner | 86 | AGYA | ALLION/PREMIO |
| ALPHARD | ALPHARD HV | ALPHARD HV/VELLFIRE HV | ALPHARD/VELLFIRE |
| ALTEZZA/ALTEZZA GITA | AQUA | ARISTO | AURIS |
| AURIS HV | AVANZA | AVENSIS | AVENSIS VERSO/PICNIC |
| AYGO | Avalon | Avalon HV | BB |
| BELTA | BLADE | C-HR | C-HR HV |
| CALDINA | CALYA | CAMRY | CAMRY HV |
| CAMRY/AURION | CARINA | CELSIOR | CENTURY |
| COASTER | COMFORT | COROLLA | COROLLA AXIO |
| COROLLA AXIO HV/FIELDER HV | COROLLA AXIO/FIELDER | COROLLA HV | COROLLA HV/AURIS HV |
| COROLLA RUMION | COROLLA RUNX/ALEX | COROLLA SPACIO | COROLLA VERSO |
| COROLLA/AURIS | CORONA | CROWN | CROWN COMFORT |
| CROWN ESTATE | CROWN HV | CROWN MAJESTA | CROWN Mild Hybrid |
| CROWN PATROL CAR | CROWN SEDAN/COMFORT | CT200h | Celica |
| Celica/CURREN | Corolla iM | DYNA | E'z |
| ES200 | ES240 | ES250 | ES300 |
| ES300h | ES330 | ES350 | ESTIMA |
| ESTIMA HV | ETIOS | Echo | FCHV-adv |
| FJ CRUISER | FORTUNER/HILUX SW4 | FR-S | FT-86 |
| Fun Cargo | GAIA | GS F | GS200t |
| GS250 | GS300 | GS300h | GS350 |
| GS400 | GS430 | GS450h | GS460 |
| GX400 | GX460 | GX470 | Granvia/GRAND HIACE |
| HARRIER | HARRIER HV | HIACE | HIACE/REGIUSACE/HIMEDIC |
| HIGHLANDER HV | HIGHLANDER/KLUGER | HILUX SURF | HONGQI |
| HS250h | Highlander | Hilux | INNOVA/KIJANG INNOVA |
| IPSUM | IS F | IS200 | IS200D |
| IS200t | IS220D | IS250 | IS250C |
| IS300 | IS300C | IS300h | IS350 |
| IS350C | ISIS | Japan SDF Vehicle | KLUGER |
| KLUGER HV | LAND CR PRADO | LAND CR. | LAND CRUISER |
| LAND CRUISER PRADO | LC500 | LC500h | LEVIN |
| LEVIN HV | LFA | LITEACE | LS350 |
| LS400 | LS430 | LS460 | LS500 |
| LS500h | LS600h | LX450 | LX450d |
| LX460 | LX470 | LX570 | MARK X |
| MARK X Zio | MARK2 QUALIS/CAMRY GRACIA | MARK2/MARK2 BLIT | MIRAI |
| MR-S | MR2 | MR2 Spyder | Matrix |
| NADIA | NOAH | NOAH HV/VOXY HV | NOAH HV/VOXY HV/ESQUIRE HV |
| NOAH/VOXY | NOAH/VOXY/ESQUIRE | NX200 | NX200t |
| NX300 | NX300h | Opa | PASSO |
| PASSO SETTE | PIXIS EPOCH | PIXIS JOY | PIXIS MEGA |
| PIXIS SPACE | PIXIS Truck/Van | PLATZ | PORTE/SPADE |
| PREVIA HV | PREVIA/TARAGO | PRIUS | PRIUS +/PRIUS V |
| PRIUS +/PRIUS V/PRIUS ALPHA | PRIUS C | PRIUS PHV | PRIUS Plug-in |
| PRIUS alpha | PRIUS α | PROBOX/SUCCEED | PROGRES/BREVIS |
| Paseo | Previa | Prius Prime | Prius V |
| Pronard | QUICKDELIVERY | RACTIS | RAUM |
| RAV4 | RC-F | RC200t | RC300 |
| RC300h | RC350 | REGIUS/TOURING HIACE | REIZ |
| RUKUS | RUSH | RX200t | RX270 |

| | | | |
|------------|------------------------------|----------------------|------------------------|
| RX300 | RX330 | RX350 | RX400H |
| RX450h | Rav4 EV | Rav4 HV | SAI |
| SC300 | SC400 | SC430 | SDF Vehicle |
| SEQUOIA | SIENTA | SIENTA HV | SOARER |
| SPADE | SUPRA | SURF | Sienna |
| Solara | T100 | TANK | TANK/ROOMY |
| TOWNACE | TOYOACE/CAMROAD/DYNA 150/100 | TOYOACE/DYNA 150/100 | TOYOACE/DYNA 200 |
| TUNDRA | Tacoma | Tercel | URBAN CRUISER |
| VANGUARD | VELLFIRE | VERSO | VIOS |
| VITZ | VITZ HV | VOLTZ | Venza |
| Verossa | Verso-s | Verso-s/Ractis | Vista/Vista Ardeo |
| WIGO | WINDOM | WISH | Will Cypha |
| Will VS | Will Vi | YARIS HV | YARIS VERSO/ECHO VERSO |
| YARIS/ECHO | Yaris | Yaris R | Yaris iA |
| ZELAS | ZZZ1_P3S | ZZZ2_P4S | ZZZ3_P4C |
| ZZZ4_P5C | eQ | iA | iM |
| iQ | iQ EV | ist | tC |
| xA | xB | xD | |

Ecu List

| System Name | Read Codes | Erase Codes | LiveData | Act |
|--|------------|-------------|----------|-----|
| 4WD_CAN | ● | ● | ● | ● |
| A/B | ● | ● | ● | ● |
| A/T | ● | ● | ● | ● |
| ABS | ● | ● | ● | ● |
| ABS/DSC/TCS | ● | ● | ● | ● |
| ABS/VSC | ● | ● | ● | ● |
| ABS/VSC/ARS | ● | ● | ● | ● |
| ABS/VSC/TRAC | ● | ● | ● | ● |
| ABS/VSC/TRAC/EPB | ● | ● | ● | ● |
| ABS/VSC/TRC | ● | ● | ● | ● |
| ABS/VSC/TRC (TRAC) | ● | ● | ● | ● |
| ABS/VSC/TRC (TRAC) (CAN) | ● | ● | ● | ● |
| ABS/VSC/TRC (TRAC) (SIL) | ● | ● | ● | ● |
| ABS/VSC/TRC (TRAC) /EPB | ● | ● | ● | ● |
| ABS/VSC/TRC/EPB | ● | ● | ● | ● |
| ABS_CAN | ● | ● | ● | ● |
| AFS | ● | ● | ● | ● |
| AFS (CAN) | ● | ● | ● | ● |
| AFS (Sub) | ● | ● | ● | ● |
| AFS (SIL) | ● | ● | ● | ● |
| AHC | ● | ● | ● | ● |
| AHS | ● | ● | ● | ● |
| AHS (Sub) | ● | ● | ● | ● |
| AMT | ● | ● | ● | ● |
| ARS | ● | ● | ● | ● |
| ASC | ● | ● | ● | ● |
| ASG | ● | ● | ● | ● |
| Accessory Gateway | ● | ● | ● | ● |
| Active Headrest L | ● | ● | ● | ● |
| Active Headrest R | ● | ● | ● | ● |
| Active Headrest RL | ● | ● | ● | ● |
| Active Headrest RR | ● | ● | ● | ● |
| Active Noise Control | ● | ● | ● | ● |
| Active Rear Wing | ● | ● | ● | ● |
| Adaptive Variable Suspension System | ● | ● | ● | ● |
| Additional Heating | ● | ● | ● | ● |
| Adjustable Pedal | ● | ● | ● | ● |
| Advanced Parking Guidance/ICS/Intuitive P/A | ● | ● | ● | ● |
| Advanced Parking Guidance/Parking Assist Monitor | ● | ● | ● | ● |
| Air Conditioner | ● | ● | ● | ● |

| | | | | |
|--|---|---|---|---|
| Air Conditioner (CAN) | ● | ● | ● | ● |
| Air Conditioner (SIL) | ● | ● | ● | ● |
| Air Suspension | ● | ● | ● | ● |
| Anti-slip Mode Selecter | ● | ● | ● | ● |
| Anti-theft Alarm | ● | ● | ● | ● |
| Audio System | ● | ● | ● | ● |
| Auto A/C | ● | ● | ● | ● |
| Automatic High Beam | ● | ● | ● | ● |
| BODY | ● | ● | ● | ● |
| Back Door | ● | ● | ● | ● |
| Back Door Power Window | ● | ● | ● | ● |
| Battery | ● | ● | ● | ● |
| Battery Charge Status Unit | ● | ● | ● | ● |
| Blind Spot Monitor Master | ● | ● | ● | ● |
| Blind Spot Monitor Slave | ● | ● | ● | ● |
| Bluetooth Communication Module | ● | ● | ● | ● |
| Body No.2 | ● | ● | ● | ● |
| Body No.2 (JZS,GS17#) | ● | ● | ● | ● |
| Body No.2 (other JZS,GS17#) | ● | ● | ● | ● |
| Body No.3 | ● | ● | ● | ● |
| Body No.3 (except for GS, JZS, UZS) | ● | ● | ● | ● |
| Body No.3 (for GS, JZS, UZS) | ● | ● | ● | ● |
| Body No.4 | ● | ● | ● | ● |
| Body No.5 | ● | ● | ● | ● |
| Body/Gateway | ● | ● | ● | ● |
| Bodywork Conversion Unit | ● | ● | ● | ● |
| Built-In System Interface(BSI) | ● | ● | ● | ● |
| CARB Mode ECU | ● | ● | ● | ● |
| CVT | ● | ● | ● | ● |
| Camera | ● | ● | ● | ● |
| Center Console Switch | ● | ● | ● | ● |
| Central Gateway | ● | ● | ● | ● |
| Charging Control | ● | ● | ● | ● |
| Circumference Monitoring Camera Control Module | ● | ● | ● | ● |
| Clearance Sonar | ● | ● | ● | ● |
| Clearance Sonar (CAN) | ● | ● | ● | ● |
| Clearance Sonar (SIL) | ● | ● | ● | ● |
| Clearance Sonar / Simple-IPA. | ● | ● | ● | ● |
| Clearance Sonar/Simple-IPA | ● | ● | ● | ● |
| Combi SW | ● | ● | ● | ● |
| Combination Meter | ● | ● | ● | ● |
| Combination Meter (CAN) | ● | ● | ● | ● |
| Combination Meter(SIL) | ● | ● | ● | ● |
| Combination Switch | ● | ● | ● | ● |
| Cruise Control | ● | ● | ● | ● |
| Cruise Control (CAN Engine) | ● | ● | ● | ● |
| Cruise Control (CAN Hybrid Control) | ● | ● | ● | ● |
| Cruise Control (SIL Diesel Engine) | ● | ● | ● | ● |
| Cruise Control (SIL Gasoline Engine) | ● | ● | ● | ● |
| Cruise Control (SIL Hybrid Control) | ● | ● | ● | ● |
| Cruise Control (SIL2 Engine) | ● | ● | ● | ● |
| Cruise Control2 | ● | ● | ● | ● |
| D-Door Motor | ● | ● | ● | ● |
| D-SEAT SW | ● | ● | ● | ● |
| DC Quick Charging Control | ● | ● | ● | ● |
| DRS | ● | ● | ● | ● |
| Diagnostic Recorder | ● | ● | ● | ● |
| Driver Door | ● | ● | ● | ● |
| Driver Seat | ● | ● | ● | ● |
| Driving Support Computer | ● | ● | ● | ● |
| E-ACM | ● | ● | ● | ● |

| | | | | |
|---|---|---|---|---|
| ECB Gateway | ● | ● | ● | ● |
| ECM Gateway | ● | ● | ● | ● |
| ECT | ● | ● | ● | ● |
| ECT (CAN) | ● | ● | ● | ● |
| ECT(SIL) | ● | ● | ● | ● |
| ECT(SIL2) | ● | ● | ● | ● |
| EFI | ● | ● | ● | ● |
| EHPS | ● | ● | ● | ● |
| EMPS | ● | ● | ● | ● |
| EMPS (CAN Rack) | ● | ● | ● | ● |
| EMPS (CAN With Brush/Brushless) | ● | ● | ● | ● |
| EMPS (SIL NHW11 With Brush) | ● | ● | ● | ● |
| EMPS (SIL Other than NHW11 With Brush) | ● | ● | ● | ● |
| EMPS (SIL Rack) | ● | ● | ● | ● |
| EMPS (SIL ZZW EHPS) | ● | ● | ● | ● |
| EMS | ● | ● | ● | ● |
| EPS | ● | ● | ● | ● |
| EV | ● | ● | ● | ● |
| EV Battery | ● | ● | ● | ● |
| Electric Parking Brake | ● | ● | ● | ● |
| Electric Power Control | ● | ● | ● | ● |
| Electric Propulsion Control System | ● | ● | ● | ● |
| Electronic-Controlled Power Steering | ● | ● | ● | ● |
| Engine | ● | ● | ● | ● |
| Engine (CAN) | ● | ● | ● | ● |
| Engine (LH Bank) | ● | ● | ● | ● |
| Engine (RH Bank) | ● | ● | ● | ● |
| Engine (SIL) | ● | ● | ● | ● |
| Engine Relay Unit(BSM) | ● | ● | ● | ● |
| Engine and ECT | ● | ● | ● | ● |
| Engine(SIL2) | ● | ● | ● | ● |
| Engine2 | ● | ● | ● | ● |
| Entry&Start | ● | ● | ● | ● |
| Entry&Start (SIL) | ● | ● | ● | ● |
| Entry&Start (CAN) | ● | ● | ● | ● |
| FC | ● | ● | ● | ● |
| FC External Power Supply | ● | ● | ● | ● |
| FCDC | ● | ● | ● | ● |
| FCHV | ● | ● | ● | ● |
| Four Wheel Drive | ● | ● | ● | ● |
| Four Wheel Drive (CAN) | ● | ● | ● | ● |
| Four Wheel Drive (SIL) | ● | ● | ● | ● |
| Free-Tronic | ● | ● | ● | ● |
| Front Left Door | ● | ● | ● | ● |
| Front Left Seat A/C | ● | ● | ● | ● |
| Front Radar Sensor | ● | ● | ● | ● |
| Front Recognition Camera | ● | ● | ● | ● |
| Front Recognition Camera (Front Lighting Control) | ● | ● | ● | ● |
| Front Right Door | ● | ● | ● | ● |
| Front Right Seat A/C | ● | ● | ● | ● |
| Front Side Radar Master | ● | ● | ● | ● |
| Front Side Radar Slave | ● | ● | ● | ● |
| Front Stabilizer | ● | ● | ● | ● |
| Gateway | ● | ● | ● | ● |
| Gateway BEAN | ● | ● | ● | ● |
| Gateway CAN | ● | ● | ● | ● |
| Gateway V | ● | ● | ● | ● |
| Grill Shutter | ● | ● | ● | ● |
| HL AutoLeveling | ● | ● | ● | ● |
| HL AutoLeveling (Sub) | ● | ● | ● | ● |
| HV Battery | ● | ● | ● | ● |

| | | | | |
|-----------------------------------|---|---|---|---|
| HV Battery (CAN) | ● | ● | ● | ● |
| HV Battery (SIL Except For NHW11) | ● | ● | ● | ● |
| HV Gateway | ● | ● | ● | ● |
| Head Up Display | ● | ● | ● | ● |
| Heating Ventilation | ● | ● | ● | ● |
| High Frequency Receiver | ● | ● | ● | ● |
| Hybrid Control | ● | ● | ● | ● |
| Hybrid Control (CAN) | ● | ● | ● | ● |
| Hybrid Control (SIL) | ● | ● | ● | ● |
| IMB | ● | ● | ● | ● |
| IPA/ICS/Clearance Sonar | ● | ● | ● | ● |
| IPA/Parking Assist Monitor | ● | ● | ● | ● |
| ITC | ● | ● | ● | ● |
| ITS Connect | ● | ● | ● | ● |
| Illumination | ● | ● | ● | ● |
| Immobiliser | ● | ● | ● | ● |
| Immobiliser (Engine ECU) | ● | ● | ● | ● |
| Instrument Panel | ● | ● | ● | ● |
| Intelligent Clearance Sonar | ● | ● | ● | ● |
| Intuitive P/A | ● | ● | ● | ● |
| KDSS | ● | ● | ● | ● |
| KFS | ● | ● | ● | ● |
| LH Door | ● | ● | ● | ● |
| LKA/LDA | ● | ● | ● | ● |
| LKA/LDA (Sub) | ● | ● | ● | ● |
| Lane Control | ● | ● | ● | ● |
| Lane Departure Alert | ● | ● | ● | ● |
| Lane Keeping Assist | ● | ● | ● | ● |
| Laser Cruise | ● | ● | ● | ● |
| Main Body | ● | ● | ● | ● |
| Master Switch | ● | ● | ● | ● |
| Master Switch (CAN) | ● | ● | ● | ● |
| Master Switch (SIL) | ● | ● | ● | ● |
| Mayday Gateway | ● | ● | ● | ● |
| Meter | ● | ● | ● | ● |
| Mild Hybrid Control | ● | ● | ● | ● |
| Mirror | ● | ● | ● | ● |
| Mirror L | ● | ● | ● | ● |
| Mirror L/R | ● | ● | ● | ● |
| Mirror R | ● | ● | ● | ● |
| Monitor Camera | ● | ● | ● | ● |
| Motor Generator | ● | ● | ● | ● |
| Multi Bus Gateway | ● | ● | ● | ● |
| Multi Bus Monitor No.1 | ● | ● | ● | ● |
| Multi Bus Monitor No.2 | ● | ● | ● | ● |
| Multi-Mode M/T | ● | ● | ● | ● |
| Multifunction Display | ● | ● | ● | ● |
| Navigation Receiver | ● | ● | ● | ● |
| Navigation System | ● | ● | ● | ● |
| Night View | ● | ● | ● | ● |
| Occupant Detection | ● | ● | ● | ● |
| P Master Switch | ● | ● | ● | ● |
| P-Door Motor | ● | ● | ● | ● |
| PCB | ● | ● | ● | ● |
| PCS/LDA/RSA/LVN | ● | ● | ● | ● |
| PM1 Gateway | ● | ● | ● | ● |
| PM2 Gateway | ● | ● | ● | ● |
| PPS | ● | ● | ● | ● |
| PSD_LH | ● | ● | ● | ● |
| PSD_RH | ● | ● | ● | ● |
| Panoramic View Monitor | ● | ● | ● | ● |

| | | | | |
|-------------------------------------|---|---|---|---|
| Parking Assist Camera | ● | ● | ● | ● |
| Passenger Door | ● | ● | ● | ● |
| Passenger Seat | ● | ● | ● | ● |
| Pedestrian Protection | ● | ● | ● | ● |
| Plug-in Control | ● | ● | ● | ● |
| Power Integration No.1 | ● | ● | ● | ● |
| Power Integration No.2 | ● | ● | ● | ● |
| Power Integration No.3 | ● | ● | ● | ● |
| Power Source Control | ● | ● | ● | ● |
| Power Steering Electric Pump Unit | ● | ● | ● | ● |
| Pre-Collision | ● | ● | ● | ● |
| Pre-Collision (CAN) | ● | ● | ● | ● |
| Pre-Collision (SIL) | ● | ● | ● | ● |
| Pre-Collision 2 | ● | ● | ● | ● |
| Pre-Collision Seatback RL | ● | ● | ● | ● |
| Pre-Collision Seatback RR | ● | ● | ● | ● |
| Pre-Collision System | ● | ● | ● | ● |
| Pre-Crash | ● | ● | ● | ● |
| Pre-Crash 2 | ● | ● | ● | ● |
| RL-Door Motor | ● | ● | ● | ● |
| RR-Door Motor | ● | ● | ● | ● |
| Radar Cruise | ● | ● | ● | ● |
| Radar Cruise (CAN Engine) | ● | ● | ● | ● |
| Radar Cruise (SIL Engine) | ● | ● | ● | ● |
| Radar Cruise (SIL Hybrid Control) | ● | ● | ● | ● |
| Radar Cruise1 | ● | ● | ● | ● |
| Radar Cruise2 | ● | ● | ● | ● |
| Radio or Radiotelephone(Radio Part) | ● | ● | ● | ● |
| Rain and Brightness Sensor | ● | ● | ● | ● |
| Rain and/or Humidity Sensor | ● | ● | ● | ● |
| Rear Camera | ● | ● | ● | ● |
| Rear Console Switch | ● | ● | ● | ● |
| Rear Left Door | ● | ● | ● | ● |
| Rear Left Door (CAN) | ● | ● | ● | ● |
| Rear Left Door (SIL) | ● | ● | ● | ● |
| Rear Left Seat | ● | ● | ● | ● |
| Rear Left Seat A/C | ● | ● | ● | ● |
| Rear Motor Generator | ● | ● | ● | ● |
| Rear Right Door | ● | ● | ● | ● |
| Rear Right Door (CAN) | ● | ● | ● | ● |
| Rear Right Door (SIL) | ● | ● | ● | ● |
| Rear Right Seat | ● | ● | ● | ● |
| Rear Right Seat A/C | ● | ● | ● | ● |
| Rear Seat Switch | ● | ● | ● | ● |
| Rear Sliding Sunshade | ● | ● | ● | ● |
| Rear Stabilizer | ● | ● | ● | ● |
| Remote Engine Starter | ● | ● | ● | ● |
| Remote Security | ● | ● | ● | ● |
| Restraint Control Module | ● | ● | ● | ● |
| Retractable Hardtop | ● | ● | ● | ● |
| Road Sign Assist | ● | ● | ● | ● |
| SCBS | ● | ● | ● | ● |
| SRS Airbag | ● | ● | ● | ● |
| SRS Airbag (CAN) | ● | ● | ● | ● |
| SRS Airbag (SIL) | ● | ● | ● | ● |
| SRS Airbag (SIL2) | ● | ● | ● | ● |
| SRS Side Airbag | ● | ● | ● | ● |
| Seat Belt Control | ● | ● | ● | ● |
| Sequential M/T | ● | ● | ● | ● |
| Sliding Roof | ● | ● | ● | ● |
| Sliding Roof (CAN) | ● | ● | ● | ● |

| | | | | |
|--|---|---|---|---|
| Sliding Roof (SIL) | ● | ● | ● | ● |
| Sliding Sunshade | ● | ● | ● | ● |
| Smart Access | ● | ● | ● | ● |
| Smart Key | ● | ● | ● | ● |
| Solar Charging Control | ● | ● | ● | ● |
| Sonar | ● | ● | ● | ● |
| Stabilizer | ● | ● | ● | ● |
| Starting Control | ● | ● | ● | ● |
| Steering Angle Sensor | ● | ● | ● | ● |
| Steering Lock | ● | ● | ● | ● |
| Steering Pad Switch | ● | ● | ● | ● |
| Steering Sensor | ● | ● | ● | ● |
| Stereo Camera | ● | ● | ● | ● |
| Stop And Go | ● | ● | ● | ● |
| Stop And Start | ● | ● | ● | ● |
| Sub Battery Module | ● | ● | ● | ● |
| Switch Module Under The Steering Wheel | ● | ● | ● | ● |
| TRAC | ● | ● | ● | ● |
| TVD | ● | ● | ● | ● |
| TVSS | ● | ● | ● | ● |
| Telematics | ● | ● | ● | ● |
| Theft Deterrent | ● | ● | ● | ● |
| Theft Deterrent (CAN) | ● | ● | ● | ● |
| Theft Deterrent(SIL) | ● | ● | ● | ● |
| Tilt&Telescopic | ● | ● | ● | ● |
| Tire Pressure Monitor | ● | ● | ● | ● |
| Trailer Brake Controller | ● | ● | ● | ● |
| Traller Relay Unit (BSR) | ● | ● | ● | ● |
| Transmission | ● | ● | ● | ● |
| Transmission Control | ● | ● | ● | ● |
| Tyre Under-Inflation Detection (DSG) | ● | ● | ● | ● |
| VGRS | ● | ● | ● | ● |
| VSC | ● | ● | ● | ● |
| Vehicle Control | ● | ● | ● | ● |
| Vehicle Proximity Notification System | ● | ● | ● | ● |
| WIL Gateway | ● | ● | ● | ● |
| Wiper | ● | ● | ● | ● |
| eco IDLE | ● | ● | ● | ● |

TOYOTA/LEXUS/SCION DPF Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|------------------------|-----------------------------|------------------------------|----------------------------|
| 4Runner | ALLION/PREMIO | ALPHARD | ALPHARD HV |
| ALPHARD HV/VELLFIRE HV | ALPHARD/VELLFIRE | AQUA | AURIS |
| AURIS HV | Avalon | Avalon HV | AVENSIS |
| AYGO | before 2003 | before 2005 | BELTA |
| BLADE | CAMRY | CAMRY HV | CAMRY/AURION |
| CELSIOR | CENTURY | C-HR | COASTER |
| COMFORT | COROLLA | COROLLA AXIO | COROLLA AXIO HV/FIELDER HV |
| COROLLA AXIO/FIELDER | COROLLA HV | Corolla iM | COROLLA RUMION |
| COROLLA VERSO | COROLLA/AURIS | CROWN | CROWN COMFORT |
| CROWN HV | CROWN MAJESTA | CROWN PATROL CAR | CROWN SEDAN/COMFORT |
| CT200h | DYNA | ES240 | ES250 |
| ES300h | ES350 | ESTIMA | ESTIMA HV |
| ETIOS | E' z | FJ CRUISER | FORTUNER/HILUX SW4 |
| GS F | GS250 | GS300 | GS300h |
| GS350 | GS430 | GS450h | GS460 |
| GX400 | GX460 | GX470 | HARRIER |
| HARRIER HV | HIACE | HIACE/REGIUSACE/HIMEDIC | Highlander |
| HIGHLANDER HV | HIGHLANDER/KLUGER | Hilux | HILUX SURF |
| HONGQI | HS250h | iM | INNOVA/KIJANG INNOVA |
| iQ | IS F | IS200D | IS220D |
| IS250 | IS250C | IS300 | IS300C |
| IS300h | IS350 | IS350C | ISIS |
| ist | Japan SDF Vehicle | KLUGER HV | LAND CR PRADO |
| LAND CR. | LAND CRUISER | LAND CRUISER PRADO | LC500 |
| LEVIN | LEVIN HV | LFA | LS430 |
| LS460 | LS600h | LX450d | LX460 |
| LX470 | LX570 | MARK X | MARK X Zio |
| Matrix | NOAH | NOAH HV/VOXY HV | NOAH HV/VOXY HV/ESQUIRE HV |
| NOAH/VOXY | NOAH/VOXY/ESQUIRE | NX200 | NX300h |
| PORTE/SPADE | PREVIA HV | PREVIA/TARAGO | PRIUS |
| PRIUS +/PRIUS V | PRIUS +/PRIUS V/PRIUS ALPHA | PRIUS alpha | PRIUS C |
| PRIUS PHV | Prius V | PRIUS α | PROBOX/SUCCEED |
| QUICKDELIVERY | RACTIS | RAUM | RAV4 |
| Rav4 HV | RC300 | RC300h | RC350 |
| RC-F | REIZ | RUKUS | RX270 |
| RX350 | RX400H | RX450h | SAI |
| SC430 | SEQUOIA | Sienna | SIENTA |
| SIENTA HV | Solara | SPADE | SURF |
| Tacoma | tC | TOYOACE/CAMROAD/DYNA 150/100 | TOYOACE/DYNA 150/100 |
| TOYOACE/DYNA 200 | TUNDRA | URBAN CRUISER | VANGUARD |
| VELLFIRE | Venza | VERSO | Verso-s |
| Verso-s/Ractis | VIOS | VITZ | VITZ HV |
| WISH | xB | xD | Yaris |
| YARIS HV | YARIS/ECHO | ZELAS | ZZZ3_P4S |
| ZZZ3_P4C | | | |

DPF Function List (Note:For reference only)

DPF Deterioration Record Clear

DPF History Information Reset

DPF Rejuvenation Timing Reset

TOYOTA/LEXUS/SCION ECM Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|----------------------------|----------------------------|-----------------------------|---------------------|
| 4Runner | 86 | AGYA | ALLION/PREMIO |
| ALPHARD | ALPHARD HV | ALPHARD HV/VELLFIRE HV | ALPHARD/VELLFIRE |
| ALTEZZA/ALTEZZA GITA | AQUA | ARISTO | AURIS |
| AURIS HV | Avalon | Avalon HV | AVANZA |
| AVENSIS | AYGO | BB | before 1997 |
| before 2000 | before 2003 | before 2005 | BELTA |
| BLADE | CALDINA | CALYA | CAMRY |
| CAMRY HV | CAMRY/AURION | CARINA | Celica/CURREN |
| CELSIOR | CENTURY | C-HR | C-HR HV |
| COASTER | COMFORT | COROLLA | COROLLA AXIO |
| COROLLA AXIO HV/FIELDER HV | COROLLA AXIO/FIELDER | COROLLA HV | COROLLA HV/AURIS HV |
| Corolla iM | COROLLA RUMION | COROLLA RUNX/ALEX | COROLLA SPACIO |
| COROLLA VERSO | COROLLA/AURIS | CROWN | CROWN COMFORT |
| CROWN ESTATE | CROWN HV | CROWN MAJESTA | CROWN Mild Hybrid |
| CROWN PATROL CAR | CROWN SEDAN/COMFORT | CT200h | DYNA |
| eQ | ES200 | ES240 | ES250 |
| ES300h | ES350 | ESTIMA | ESTIMA HV |
| ETIOS | E'z | FJ CRUISER | FORTUNER/HILUX SW4 |
| FR-S | FT-86 | Fun Cargo | GAIA |
| Granvia/GRAND HIACE | GS F | GS200t | GS250 |
| GS300 | GS300h | GS350 | GS430 |
| GS450h | GS460 | GX400 | GX460 |
| GX470 | HARRIER | HARRIER HV | HIACE |
| HIACE/REGIUSACE/HIMEDIC | Highlander | HIGHLANDER HV | HIGHLANDER/KLUGER |
| Hilux | HILUX SURF | HONGQI | HS250h |
| iA | iM | INNOVA/KIJANG INNOVA | IPSUM |
| iQ | iQ EV | IS F | IS200D |
| IS200t | IS220D | IS250 | IS250C |
| IS300 | IS300C | IS300h | IS350 |
| IS350C | ISIS | ist | Japan SDF Vehicle |
| KLUGER | KLUGER HV | LAND CR PRADO | LAND CR. |
| LAND CRUISER | LAND CRUISER PRADO | LC500 | LC500h |
| LEVIN | LEVIN HV | LFA | LITEACE |
| LS350 | LS430 | LS460 | LS500 |
| LS500h | LS600h | LX450d | LX460 |
| LX470 | LX570 | MARK X | MARK X Zio |
| MARK2 QUALIS/CAMRY GRACIA | MARK2/MARK2 BLIT | Matrix | MIRAI |
| MR2 | MR-S | NADIA | NOAH |
| NOAH HV/VOXY HV | NOAH HV/VOXY HV/ESQUIRE HV | NOAH/VOXY | NOAH/VOXY/ESQUIRE |
| NX200 | NX200t | NX300 | NX300h |
| Opa | PASSO | PASSO SETTE | PIXIS EPOCH |
| PIXIS JOY | PIXIS MEGA | PIXIS SPACE | PIXIS Truck/Van |
| PLATZ | PORTE/SPADE | PREVIA HV | PREVIA/TARAGO |
| PRIUS | PRIUS +/PRIUS V | PRIUS +/PRIUS V/PRIUS ALPHA | PRIUS alpha |
| PRIUS C | PRIUS PHV | PRIUS Plug-in | Prius Prime |
| Prius V | PRIUS α | PROBOX/SUCCEED | PROGRES/BREVIS |
| Pronard | QUICKDELIVERY | RACTIS | RAUM |
| RAV4 | Rav4 EV | Rav4 HV | RC200t |

| | | | |
|----------------------|------------------|----------------|------------------------------|
| RC300 | RC300h | RC350 | RC-F |
| REGIUS/TOURING HIACE | REIZ | RUKUS | RUSH |
| RX200t | RX270 | RX300 | RX350 |
| RX400H | RX450h | SAI | SC430 |
| SDF Vehicle | SEQUOIA | Sienna | SIENTA |
| SIENTA HV | SOARER | Solara | SPADE |
| SUPRA | SURF | Tacoma | TANK |
| TANK/ROOMY | tC | TOWNACE | TOYOACE/CAMROAD/DYNA 150/100 |
| TOYOACE/DYNA 150/100 | TOYOACE/DYNA 200 | TUNDRA | URBAN CRUISER |
| VANGUARD | VELLFIRE | Venza | Verossa |
| VERSO | Verso-s | Verso-s/Ractis | VIOS |
| Vista/Vista Ardeo | VITZ | VITZ HV | VOLTZ |
| WIGO | Will Cypha | Will Vi | Will VS |
| WINDOM | WISH | xA | xB |
| xD | Yaris | YARIS HV | Yaris iA |
| Yaris R | YARIS/ECHO | ZELAS | ZZZ1_P3S |
| ZZZ2_P4S | ZZZ3_P4C | ZZZ4_P5C | |

ECM Function List (Note:For reference only)

| |
|---|
| A/T Code Registration |
| AF/O2 Sensor Operation |
| ATF Thermal Degradation Estimate Reset |
| Crank Time Compensation Reset |
| CVT ECU Initial Learning |
| Deceleration Sensor Zero Point Calibration |
| Deceleration Sensor Zero Point Clear |
| ECU Exchange |
| EGR Learning Value Reset |
| Engine control initialization |
| Engine History Utility |
| Fuel Density Learning Value Reset |
| HICM Resistance Learning Value Reset |
| History Clear |
| i-ART Learning Value Reset |
| iMT Installation Information Reset |
| Key-On Engine Running Self-Test |
| Learning Value Reset |
| O2 Sensor Learning Value Reset |
| Pressure Discharge Valve Check |
| Reset Memory (ECT) |
| Reset Memory (EFI) |
| Reset Memory (Engine and ECT) |
| Reset Memory (Engine) |
| Reset Memory (Hybrid Control) |
| Servo motor initialization |
| Shift Control Synchronization |
| Starter Actuation Count Utility |
| Supply Pump Initialization |
| Supply Pump Learning Value Reset |
| Total Number of Engine Starts Reset |
| Vehicle Mileage Write |
| VVT Initial Position Learning Value Display |

TOYOTA/LEXUS/SCION EPB Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|------------------------|-----------------------------|----------------------------|---------------------------|
| 4Runner | ALLION/PREMIO | ALPHARD | ALPHARD HV |
| ALPHARD HV/VELLFIRE HV | ALPHARD/VELLFIRE | ALTEZZA/ALTEZZA GITA | AQUA |
| ARISTO | AURIS | AURIS HV | Avalon |
| Avalon HV | AVENSIS | AVENSIS VERSO/PICNIC | AYGO |
| BB | before 1997 | before 2000 | before 2003 |
| before 2005 | BELTA | BLADE | CALDINA |
| CAMRY | CAMRY HV | CAMRY/AURION | CARINA |
| Celica | Celica/CURREN | CELSIOR | CENTURY |
| C-HR | C-HR HV | COASTER | COMFORT |
| COROLLA | COROLLA AXIO | COROLLA AXIO HV/FIELDER HV | COROLLA AXIO/FIELDER |
| COROLLA HV | COROLLA HV/AURIS HV | Corolla iM | COROLLA RUMION |
| COROLLA RUNX/ALEX | COROLLA SPACIO | COROLLA VERSO | COROLLA/AURIS |
| CORONA | CROWN | CROWN COMFORT | CROWN ESTATE |
| CROWN HV | CROWN MAJESTA | CROWN Mild Hybrid | CROWN PATROL CAR |
| CROWN SEDAN/COMFORT | CT200h | DYNA | Echo |
| eQ | ES200 | ES240 | ES250 |
| ES300 | ES300h | ES330 | ES350 |
| ESTIMA | ESTIMA HV | ETIOS | E' z |
| FJ CRUISER | FORTUNER/HILUX SW4 | Fun Cargo | GAIA |
| Granvia/GRAND HIACE | GS F | GS200t | GS250 |
| GS300 | GS300h | GS350 | GS400 |
| GS430 | GS450h | GS460 | GX400 |
| GX460 | GX470 | HARRIER | HARRIER HV |
| HIACE | HIACE/REGIUSACE/HIMEDIC | Highlander | HIGHLANDER HV |
| HIGHLANDER/KLUGER | Hilux | HILUX SURF | HONGQI |
| HS250h | iM | INNOVA/KIJANG INNOVA | IPSUM |
| iQ | iQ EV | IS F | IS200 |
| IS200D | IS200t | IS220D | IS250 |
| IS250C | IS300 | IS300C | IS300h |
| IS350 | IS350C | ISIS | ist |
| Japan SDF Vehicle | KLUGER | KLUGER HV | LAND CR PRADO |
| LAND CR. | LAND CRUISER | LAND CRUISER PRADO | LC500 |
| LC500h | LEVIN | LEVIN HV | LFA |
| LITEACE | LS350 | LS400 | LS430 |
| LS460 | LS500 | LS500h | LS600h |
| LX450 | LX450d | LX460 | LX470 |
| LX570 | MARK X | MARK X Zio | MARK2 QUALIS/CAMRY GRACIA |
| MARK2/MARK2 BLIT | Matrix | MIRAI | MR2 |
| MR2 Spyder | MR-S | NADIA | NOAH |
| NOAH HV/VOXY HV | NOAH HV/VOXY HV/ESQUIRE HV | NOAH/VOXY | NOAH/VOXY/ESQUIRE |
| NX200 | NX200t | NX300 | NX300h |
| Opa | Paseo | PLATZ | PORTE/SPADE |
| Previa | PREVIA HV | PREVIA/TARAGO | PRIUS |
| PRIUS +/PRIUS V | PRIUS +/PRIUS V/PRIUS ALPHA | PRIUS alpha | PRIUS C |
| PRIUS PHV | PRIUS Plug-in | Prius Prime | Prius V |
| PRIUS α | PROBOX/SUCCEED | PROGRES/BREVIS | Pronard |
| QUICKDELIVERY | RACTIS | RAUM | RAV4 |
| Rav4 EV | Rav4 HV | RC200t | RC300 |

| | | | |
|--|----------------------|------------------|------------------------|
| RC300h | RC350 | RC-F | REGIUS/TOURING HIACE |
| REIZ | RUKUS | RX200t | RX270 |
| RX300 | RX330 | RX350 | RX400H |
| RX450h | SAI | SC300 | SC400 |
| SC430 | SDF Vehicle | SEQUOIA | Sienna |
| SIENTA | SIENTA HV | SOARER | Solara |
| SPADE | SUPRA | SURF | T100 |
| Tacoma | tC | Tercel | TOWNACE |
| TOYOACE/CAMROAD/DYNA 150/100 | TOYOACE/DYNA 150/100 | TOYOACE/DYNA 200 | TUNDRA |
| URBAN CRUISER | VANGUARD | VELLFIRE | Venza |
| Verossa | VERSO | Verso-s | Verso-s/Ractis |
| VIOS | Vista/Vista Ardeo | VITZ | VITZ HV |
| VOLTZ | Will Cypha | Will Vi | Will VS |
| WINDOM | WISH | xA | xB |
| xD | Yaris | YARIS HV | YARIS VERSO/ECHO VERSO |
| YARIS/ECHO | ZELAS | ZZZ1_P3S | ZZZ2_P4S |
| ZZZ3_P4C | | | |
| EPB Function List (Note:For reference only) | | | |
| A/F Sensor Compensation Reset | | | |
| Catalyst Record Clear | | | |
| ECB 2.0/2.5 Utility | | | |
| Reset Memory(Engine (RH Bank)) | | | |
| Reset Memory(Engine and ECT) | | | |
| Reset Memory(EPB) | | | |

TOYOTA/LEXUS/SCION ETC Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|--------------------|----------------------------|-------------------------|------------------------|
| 4Runner | ALPHARD | ALPHARD HV/VELLFIRE HV | ALPHARD/VELLFIRE |
| AQUA | AURIS | AURIS HV | Avalon |
| AVENSIS | AVENSIS VERSO/PICNIC | AYGO | CAMRY |
| CAMRY HV | Celica | CENTURY | COASTER |
| COROLLA | COROLLA AXIO HV/FIELDER HV | COROLLA AXIO/FIELDER | COROLLA VERSO |
| CORONA | CROWN | CROWN COMFORT | CROWN HV |
| CROWN MAJESTA | CROWN PATROL CAR | CROWN SEDAN/COMFORT | CT200h |
| DYNA | ES300 | ES330 | FJ CRUISER |
| GS F | GS250 | GS300 | GS300h |
| GS350 | GS430 | GS450h | HARRIER |
| HARRIER HV | HIACE | HIACE/REGIUSACE/HIMEDIC | Highlander |
| HIGHLANDER/KLUGER | Hilux | IS200 | IS250 |
| IS300 | IS300h | IS350 | LAND CR. |
| LAND CRUISER PRADO | LC500 | LFA | LS400 |
| LS430 | LX470 | LX570 | MR2 |
| NOAH HV/VOXY HV | NOAH HV/VOXY HV/ESQUIRE HV | NOAH/VOXY | NOAH/VOXY/ESQUIRE |
| NX300h | PORTE/SPADE | PREVIA/TARAGO | PRIUS |
| PRIUS PHV | PROBOX/SUCCEED | RAV4 | RC300h |
| RC350 | RC-F | RX270 | RX300 |
| RX330 | RX450h | SC300 | SC430 |
| SEQUOIA | Sienna | SIENTA | SIENTA HV |
| T100 | TUNDRA | VIOS | VITZ |
| VITZ HV | WISH | xA | YARIS VERSO/ECHO VERSO |
| YARIS/ECHO | | | |

ETC Function List (Note:For reference only)

Electric Throttle Learning

TOYOTA/LEXUS/SCION IDL Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|------------------|---------|---------------|---------|
| AVENSIS | CarName | COROLLA/AURIS | RAV4 |
| TOYOACE/DYNA 200 | VERSO | | |

IDL Function List (Note:For reference only)

Idle Speed Adjustment

Idling Stop Information

TOYOTA/LEXUS/SCION IMM Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|----------------------|---------------------------|----------------------|------------------------|
| 4Runner | ALLION/PREMIO | ALPHARD | ALPHARD HV/VELLFIRE HV |
| ALPHARD/VELLFIRE | ALTEZZA/ALTEZZA GITA | ARISTO | AURIS |
| AURIS HV | Avalon | AVENSIS | AVENSIS VERSO/PICNIC |
| AYGO | BB | before 1997 | before 2000 |
| before 2003 | before 2005 | BELTA | BLADE |
| CALDINA | CAMRY | CAMRY/AURION | CARINA |
| CarName | Celica/CURREN | CELSIOR | CENTURY |
| COASTER | COROLLA | COROLLA AXIO/FIELDER | COROLLA RUNX/ALLEX |
| COROLLA SPACIO | COROLLA VERSO | COROLLA/AURIS | CROWN |
| CROWN ESTATE | CROWN MAJESTA | CROWN Mild Hybrid | CROWN PATROL CAR |
| CROWN SEDAN/COMFORT | DYNA | Echo | ES300 |
| ES330 | ESTIMA | ESTIMA HV | ETIOS |
| E' z | FJ CRUISER | FORTUNER/HILUX SW4 | Fun Cargo |
| GAIA | Granvia/GRAND HIACE | GS300 | GS400 |
| GS430 | GX470 | HARRIER | HARRIER HV |
| HIACE | HIACE/REGIUSACE/HIMEDIC | Highlander | HIGHLANDER HV |
| HIGHLANDER/KLUGER | Hilux | HILUX SURF | HONGQI |
| INNOVA/KIJANG INNOVA | IPSUM | iQ | IS300 |
| ISIS | ist | KLUGER | KLUGER HV |
| LAND CR PRADO | LAND CR. | LAND CRUISER | LAND CRUISER PRADO |
| LITEACE | LS400 | LS430 | LX470 |
| MARK X | MARK2 QUALIS/CAMRY GRACIA | MARK2/MARK2 BLIT | Matrix |
| MR2 | MR2 Spyder | MR-S | NADIA |
| NOAH/VOXY | Opa | PLATZ | PORTE/SPADE |
| PREVIA/TARAGO | PRIUS | PROBOX/SUCCEED | PROGRES/BREVIS |
| Pronard | QUICKDELIVERY | RACTIS | RAUM |
| RAV4 | REGIUS/TOURING HIACE | REIZ | RX300 |
| RX330 | RX350 | RX400H | SC300 |
| SC400 | SC430 | SDF Vehicle | SEQUOIA |
| Sienna | SIENTA | SOARER | Solara |
| SUPRA | SURF | Tacoma | tC |
| TOWNACE | TOYOACE/DYNA 150/100 | TOYOACE/DYNA 200 | TUNDRA |
| URBAN CRUISER | VANGUARD | Venza | Verossa |
| Verso-s | Verso-s/Ractis | VIOS | Vista/Vista Ardeo |
| VITZ | VOLTZ | Will Cypha | Will Vi |
| Will VS | WINDOM | WISH | xB |
| xD | Yaris | YARIS/ECHO | ZZZ1_P3S |

IMM Function List (Note:For reference only)

ECU Communication ID Registration

Key Number Change

Key Number Registration

Transponder Code Erasure

Transponder Code Registration

TOYOTA/LEXUS/SCION INJ Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|-----------------------------|------------------------------|----------------------------|-------------------|
| 4Runner | ALLION/PREMIO | ALPHARD | ALPHARD HV |
| ALPHARD HV/VELLFIRE HV | ALPHARD/VELLFIRE | AQUA | AURIS |
| AURIS HV | Avalon | Avalon HV | AVENSIS |
| AVENSIS VERSO/PICNIC | AYGO | before 2003 | before 2005 |
| BELTA | BLADE | CAMRY | CAMRY HV |
| CAMRY/AURION | CELSIOR | CENTURY | C-HR |
| COASTER | COMFORT | COROLLA | COROLLA AXIO |
| COROLLA AXIO HV/FIELDER HV | COROLLA AXIO/FIELDER | COROLLA HV | Corolla iM |
| COROLLA RUMION | COROLLA VERSO | COROLLA/AURIS | CORONA |
| CROWN | CROWN COMFORT | CROWN HV | CROWN MAJESTA |
| CROWN PATROL CAR | CROWN SEDAN/COMFORT | CT200h | DYNA |
| ES240 | ES250 | ES300h | ES350 |
| ESTIMA | ESTIMA HV | ETIOS | E' z |
| FJ CRUISER | FORTUNER/HILUX SW4 | GS F | GS250 |
| GS300 | GS300h | GS350 | GS430 |
| GS450h | GS460 | GX400 | GX460 |
| GX470 | HARRIER | HARRIER HV | HIACE |
| HIACE/REGIUSACE/HIMEDIC | Highlander | HIGHLANDER HV | HIGHLANDER/KLUGER |
| Hilux | HILUX SURF | HONGQI | HS250h |
| iM | INNOVA/KIJANG INNOVA | iQ | IS F |
| IS200D | IS220D | IS250 | IS250C |
| IS300 | IS300C | IS300h | IS350 |
| IS350C | ISIS | ist | Japan SDF Vehicle |
| KLUGER HV | LAND CR PRADO | LAND CR. | LAND CRUISER |
| LAND CRUISER PRADO | LC500 | LEVIN | LEVIN HV |
| LFA | LITEACE | LS430 | LS460 |
| LS600h | LX450d | LX460 | LX470 |
| LX570 | MARK X | MARK X Zio | Matrix |
| NOAH | NOAH HV/VOXY HV | NOAH HV/VOXY HV/ESQUIRE HV | NOAH/VOXY |
| NOAH/VOXY/ESQUIRE | NX200 | NX300h | PORTE/SPADE |
| PREVIA HV | PREVIA/TARAGO | PRIUS | PRIUS +/PRIUS V |
| PRIUS +/PRIUS V/PRIUS ALPHA | PRIUS alpha | PRIUS C | PRIUS PHV |
| Prius V | PRIUS α | PROBOX/SUCCEED | QUICKDELIVERY |
| RACTIS | RAUM | RAV4 | Rav4 HV |
| RC300 | RC300h | RC350 | RC-F |
| REIZ | RUKUS | RX270 | RX350 |
| RX400H | RX450h | SAI | SC430 |
| SEQUOIA | Sienna | SIENTA | SIENTA HV |
| Solara | SPADE | SURF | Tacoma |
| tC | TOYOACE/CAMROAD/DYNA 150/100 | TOYOACE/DYNA 150/100 | TOYOACE/DYNA 200 |
| TUNDRA | URBAN CRUISER | VANGUARD | VELLFIRE |
| Venza | VERSO | Verso-s | Verso-s/Ractis |
| VIOS | VITZ | VITZ HV | WISH |
| xA | xB | xD | Yaris |
| YARIS HV | YARIS/ECHO | ZELAS | ZZZ3_P4S |
| ZZZ3_P4C | | | |

INJ Function List (Note:For reference only)

| |
|--------------------------------------|
| Air Flow Meter Learning Value Reset |
| Injector Compensation |
| Injector Compensation(12byte) |
| Injector Compensation(30byte) |
| Pilot Quantity Learning |
| Pilot Quantity Learning Values Reset |
| Pilot Quantity Learning values Clear |
| Pilot Quantity Learning(Detail) |
| Secondary Air Injection Check |

TOYOTA/LEXUS/SCION LAP Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|-----------------------------|------------------------|---------------------|---------------|
| ALPHARD HV | ALPHARD HV/VELLFIRE HV | ALPHARD/VELLFIRE | AURIS |
| AURIS HV | Avalon | Avalon HV | AVENSIS |
| AYGO | CAMRY | CAMRY HV | CAMRY/AURION |
| CENTURY | C-HR | C-HR HV | COROLLA |
| COROLLA AXIO | COROLLA HV | COROLLA HV/AURIS HV | COROLLA VERSO |
| COROLLA/AURIS | CROWN | CROWN HV | CROWN MAJESTA |
| CT200h | ES200 | ES250 | ES300h |
| ES350 | FORTUNER/HILUX SW4 | GS F | GS200t |
| GS250 | GS300 | GS300h | GS350 |
| GS450h | GX400 | GX460 | HARRIER |
| Highlander | HIGHLANDER HV | HIGHLANDER/KLUGER | Hilux |
| IS200t | IS250 | IS300 | IS300h |
| IS350 | LAND CR PRADO | LAND CR. | LAND CRUISER |
| LAND CRUISER PRADO | LC500 | LC500h | LS350 |
| LS460 | LS500 | LS500h | LS600h |
| LX450d | LX570 | MIRAI | NX200 |
| NX200t | NX300 | NX300h | PRIUS |
| PRIUS +/PRIUS V/PRIUS ALPHA | PRIUS C | PRIUS PHV | PRIUS Plug-in |
| Prius Prime | RAV4 | Rav4 HV | RC200t |
| RC300 | RC300h | RC350 | RC-F |
| RX200t | RX300 | RX350 | RX450h |
| SEQUOIA | Sienna | Tacoma | TUNDRA |
| VERSO | Yaris | YARIS HV | ZZZ3_P4C |

LAP Function List (Note:For reference only)

BSM Master Abnormal History

BSM Master Beam Axis Adjustment

BSM Master Beam Axis Display

BSM Master Beam Axis Inspection

BSM Slave Abnormal History

BSM Slave Beam Axis Adjustment

BSM Slave Beam Axis Display

BSM Slave Beam Axis Inspection

Headlight Type Setting

TOYOTA/LEXUS/SCION OIL Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|-----------------------------|----------------------|------------------------------|----------------------|
| 4Runner | ALLION/PREMIO | ALPHARD | ALPHARD HV |
| ALPHARD HV/VELLFIRE HV | ALPHARD/VELLFIRE | AQUA | AURIS |
| AURIS HV | Avalon | Avalon HV | AVENSIS |
| AYGO | before 2003 | before 2005 | BELTA |
| BLADE | CAMRY | CAMRY HV | CAMRY/AURION |
| CELSIOR | CENTURY | C-HR | C-HR HV |
| COASTER | COMFORT | COROLLA | COROLLA AXIO |
| COROLLA AXIO HV/FIELDER HV | COROLLA AXIO/FIELDER | COROLLA HV | COROLLA HV/AURIS HV |
| Corolla iM | COROLLA RUMION | COROLLA VERSO | COROLLA/AURIS |
| CROWN | CROWN COMFORT | CROWN HV | CROWN MAJESTA |
| CROWN PATROL CAR | CROWN SEDAN/COMFORT | CT200h | DYNA |
| ES200 | ES240 | ES250 | ES300h |
| ES350 | ESTIMA | ESTIMA HV | ETIOS |
| E' z | FJ CRUISER | FORTUNER/HILUX SW4 | GS F |
| GS200t | GS250 | GS300 | GS300h |
| GS350 | GS430 | GS450h | GS460 |
| GX400 | GX460 | GX470 | HARRIER |
| HARRIER HV | HIACE | HIACE/REGIUSACE/HIMEDIC | Highlander |
| HIGHLANDER HV | HIGHLANDER/KLUGER | Hilux | HILUX SURF |
| HONGQI | HS250h | iM | INNOVA/KIJANG INNOVA |
| iQ | IS F | IS200D | IS200t |
| IS220D | IS250 | IS250C | IS300 |
| IS300C | IS300h | IS350 | IS350C |
| ISIS | ist | Japan SDF Vehicle | KLUGER HV |
| LAND CR PRADO | LAND CR. | LAND CRUISER | LAND CRUISER PRADO |
| LC500 | LC500h | LEVIN | LEVIN HV |
| LFA | LS350 | LS430 | LS460 |
| LS500 | LS500h | LS600h | LX450d |
| LX460 | LX470 | LX570 | MARK X |
| MARK X Zio | Matrix | NOAH | NOAH HV/VOXY HV |
| NOAH HV/VOXY HV/ESQUIRE HV | NOAH/VOXY | NOAH/VOXY/ESQUIRE | NX200 |
| NX200t | NX300 | NX300h | PORTE/SPADE |
| PREVIA HV | PREVIA/TARAGO | PRIUS | PRIUS +/PRIUS V |
| PRIUS +/PRIUS V/PRIUS ALPHA | PRIUS alpha | PRIUS C | PRIUS PHV |
| PRIUS Plug-in | Prius Prime | Prius V | PRIUS α |
| PROBOX/SUCCEED | QUICKDELIVERY | RACTIS | RAUM |
| RAV4 | Rav4 HV | RC200t | RC300 |
| RC300h | RC350 | RC-F | REIZ |
| RUkus | RX200t | RX270 | RX300 |
| RX350 | RX400H | RX450h | SAI |
| SC430 | SEQUOIA | Sienna | SIENTA |
| SIENTA HV | Solara | SPADE | SURF |
| Tacoma | tC | TOYOACE/CAMROAD/DYNA 150/100 | TOYOACE/DYNA 150/100 |
| TOYOACE/DYNA 200 | TUNDRA | URBAN CRUISER | VANGUARD |
| VELLFIRE | Venza | VERSO | Verso-s |
| Verso-s/Ractis | VIOS | VITZ | VITZ HV |
| WISH | xB | xD | Yaris |
| YARIS HV | YARIS/ECHO | ZELAS | ZZZ1_P3S |

| ZZZ2_P4S | ZZZ3_P4C | ZZZ4_P5C | |
|---|----------|----------|--|
| OIL Function List (Note:For reference only) | | | |
| CVT Oil Pressure Calibration | | | |
| CVT fluid pressure learn | | | |
| Engine Oil Pressure Control Check | | | |
| Oil Pump Air Bleeding | | | |
| Switch Oil Maintenance Display | | | |

| TOYOTA/LEXUS/SCION SAS Function List (Note:For reference only) | | | |
|---|------------------------|----------------------------|-----------------------------|
| NOTES: | | | |
| ● This function is supported. | | | |
| ※ This function may be supported, which depends on the actual condition of the vehicle. | | | |
| ○ This function is not supported. | | | |
| ▲ This function is the new feature in this version. | | | |
| Car List | | | |
| CarMode | CarMode | CarMode | CarMode |
| 4Runner | 86 | ALLION/PREMIO | ALPHARD |
| ALPHARD HV | ALPHARD HV/VELLFIRE HV | ALPHARD/VELLFIRE | ALTEZZA/ALTEZZA GITA |
| AQUA | ARISTO | AURIS | AURIS HV |
| Avalon | Avalon HV | AVENSIS | AYGO |
| before 2003 | before 2005 | BELTA | BLADE |
| CAMRY | CAMRY HV | CAMRY/AURION | CarName |
| CELSIOR | CENTURY | C-HR | C-HR HV |
| COASTER | COMFORT | COROLLA | COROLLA AXIO |
| COROLLA AXIO HV/FIELDER HV | COROLLA AXIO/FIELDER | COROLLA HV | COROLLA HV/AURIS HV |
| Corolla iM | COROLLA RUMION | COROLLA VERSO | COROLLA/AURIS |
| CROWN | CROWN ESTATE | CROWN HV | CROWN MAJESTA |
| CROWN Mild Hybrid | CROWN PATROL CAR | CROWN SEDAN/COMFORT | CT200h |
| eQ | ES200 | ES250 | ES300h |
| ES350 | ESTIMA | ESTIMA HV | E' z |
| FORTUNER/HILUX SW4 | FR-S | FT-86 | GS F |
| GS200t | GS250 | GS300 | GS300h |
| GS350 | GS430 | GS450h | GS460 |
| HARRIER | HARRIER HV | HIACE/REGIUSACE/HIMEDIC | Highlander |
| HIGHLANDER HV | HIGHLANDER/KLUGER | Hilux | HILUX SURF |
| HS250h | iM | INNOVA/KIJANG INNOVA | iQ |
| iQ EV | IS F | IS200D | IS200t |
| IS220D | IS250 | IS250C | IS300 |
| IS300C | IS300h | IS350 | IS350C |
| ISIS | ist | KLUGER | KLUGER HV |
| LAND CR PRADO | LAND CR. | LAND CRUISER | LAND CRUISER PRADO |
| LC500 | LC500h | LEVIN | LEVIN HV |
| LFA | LITEACE | LS350 | LS460 |
| LS500 | LS500h | LS600h | LX450d |
| LX460 | LX470 | LX570 | MARK X |
| MARK X Zio | MARK2/MARK2 BLIT | Matrix | MIRAI |
| NOAH | NOAH HV/VOXY HV | NOAH HV/VOXY HV/ESQUIRE HV | NOAH/VOXY |
| NOAH/VOXY/ESQUIRE | NX200 | NX200t | NX300 |
| NX300h | Opa | PORTE/SPADE | PREVIA HV |
| PREVIA/TARAGO | PRIUS | PRIUS +/PRIUS V | PRIUS +/PRIUS V/PRIUS ALPHA |
| PRIUS alpha | PRIUS C | PRIUS PHV | PRIUS Plug-in |
| Prius Prime | Prius V | PRIUS α | PROBOX/SUCCEED |
| PROGRES/BREVIS | QUICKDELIVERY | RACTIS | RAUM |
| RAV4 | Rav4 EV | Rav4 HV | RC200t |
| RC300 | RC300h | RC350 | RC-F |
| REIZ | RUKUS | RX200t | RX270 |
| RX300 | RX350 | RX450h | SAI |
| SDF Vehicle | SEQUOIA | Sienna | SIENTA |
| SIENTA HV | SOARER | SPADE | tC |
| TOWNACE | TOYOACE/DYNA 150/100 | TOYOACE/DYNA 200 | TUNDRA |
| URBAN CRUISER | VANGUARD | VELLFIRE | Venza |
| Verossa | VERSO | Verso-s | Verso-s/Ractis |
| VIOS | VITZ | VITZ HV | WINDOM |
| WISH | xB | xD | Yaris |

| | | | |
|----------|------------|-------|----------|
| YARIS HV | YARIS/ECHO | ZELAS | ZZZ1_P3S |
| ZZZ3_P4C | | | |

| SAS Function List (Note:For reference only) |
|---|
| Reset A/C Information |
| Stabilizer System Check |
| Starter Exchange |
| Steering Angle Adjust |
| Torque Sensor Adjustment |
| VSC Sensor Neutral Memorization |

TOYOTA/LEXUS/SCION SIT Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|---------------|-----------------|-----------------------------|-------------------|
| 4Runner | Avalon | Avalon HV | CAMRY |
| CAMRY HV | C-HR | COROLLA | Corolla iM |
| COROLLA/AURIS | CT200h | ES300h | ES330 |
| ES350 | FJ CRUISER | FORTUNER/HILUX SW4 | GS F |
| GS200t | GS250 | GS300 | GS350 |
| GS430 | GS450h | GS460 | GX460 |
| GX470 | Highlander | HIGHLANDER HV | HIGHLANDER/KLUGER |
| Hilux | HS250h | iM | iQ |
| iQ EV | IS F | IS200t | IS250 |
| IS250C | IS300 | IS350 | IS350C |
| LAND CR. | LAND CRUISER | LC500 | LC500h |
| LFA | LS460 | LS500 | LS500h |
| LS600h | LX470 | LX570 | Matrix |
| MIRAI | NX200t | NX300 | NX300h |
| PRIUS | PRIUS +/PRIUS V | PRIUS +/PRIUS V/PRIUS ALPHA | PRIUS C |
| PRIUS PHV | PRIUS Plug-in | Prius Prime | Prius V |
| RAV4 | Rav4 EV | Rav4 HV | RC200t |
| RC300 | RC350 | RC-F | RX330 |
| RX350 | RX400H | RX450h | SC430 |
| SEQUOIA | Sienna | Solara | Tacoma |
| tC | TUNDRA | Venza | xA |
| xB | xD | Yaris | ZELAS |

SIT Function List (Note:For reference only)

ECU Exchange

Sensitivity Check

Zero Point Calibration

TOYOTA/LEXUS/SCION TCM Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|-----------------------------|----------------------|------------------------------|----------------------|
| 4Runner | ALLION/PREMIO | ALPHARD | ALPHARD HV |
| ALPHARD HV/VELLFIRE HV | ALPHARD/VELLFIRE | AQUA | AURIS |
| AURIS HV | Avalon | Avalon HV | AVENSIS |
| AYGO | before 2003 | before 2005 | BELTA |
| BLADE | CAMRY | CAMRY HV | CAMRY/AURION |
| CELSIOR | CENTURY | C-HR | C-HR HV |
| COASTER | COMFORT | COROLLA | COROLLA AXIO |
| COROLLA AXIO HV/FIELDER HV | COROLLA AXIO/FIELDER | COROLLA HV | COROLLA HV/AURIS HV |
| Corolla iM | COROLLA RUMION | COROLLA VERSO | COROLLA/AURIS |
| CROWN | CROWN COMFORT | CROWN HV | CROWN MAJESTA |
| CROWN PATROL CAR | CROWN SEDAN/COMFORT | CT200h | DYNA |
| ES200 | ES240 | ES250 | ES300h |
| ES350 | ESTIMA | ESTIMA HV | ETIOS |
| E' z | FJ CRUISER | FORTUNER/HILUX SW4 | GS F |
| GS200t | GS250 | GS300 | GS300h |
| GS350 | GS430 | GS450h | GS460 |
| GX400 | GX460 | GX470 | HARRIER |
| HARRIER HV | HIACE | HIACE/REGIUSACE/HIMEDIC | Highlander |
| HIGHLANDER HV | HIGHLANDER/KLUGER | Hilux | HILUX SURF |
| HONGQI | HS250h | iM | INNOVA/KIJANG INNOVA |
| iQ | IS F | IS200D | IS200t |
| IS220D | IS250 | IS250C | IS300 |
| IS300C | IS300h | IS350 | IS350C |
| ISIS | ist | Japan SDF Vehicle | KLUGER HV |
| LAND CR PRADO | LAND CR. | LAND CRUISER | LAND CRUISER PRADO |
| LC500 | LC500h | LEVIN | LEVIN HV |
| LFA | LS350 | LS430 | LS460 |
| LS500 | LS500h | LS600h | LX450d |
| LX460 | LX470 | LX570 | MARK X |
| MARK X Zio | Matrix | NOAH | NOAH HV/VOXY HV |
| NOAH HV/VOXY HV/ESQUIRE HV | NOAH/VOXY | NOAH/VOXY/ESQUIRE | NX200 |
| NX200t | NX300 | NX300h | PORTE/SPADE |
| PREVIA HV | PREVIA/TARAGO | PRIUS | PRIUS +/PRIUS V |
| PRIUS +/PRIUS V/PRIUS ALPHA | PRIUS alpha | PRIUS C | PRIUS PHV |
| PRIUS Plug-in | Prius Prime | Prius V | PRIUS α |
| PROBOX/SUCCEED | QUICKDELIVERY | RACTIS | RAUM |
| RAV4 | Rav4 HV | RC200t | RC300 |
| RC300h | RC350 | RC-F | REIZ |
| RUkus | RX200t | RX270 | RX300 |
| RX350 | RX400H | RX450h | SAI |
| SC430 | SEQUOIA | Sienna | SIENTA |
| SIENTA HV | Solara | SPADE | SURF |
| Tacoma | tC | TOYOACE/CAMROAD/DYNA 150/100 | TOYOACE/DYNA 150/100 |
| TOYOACE/DYNA 200 | TUNDRA | URBAN CRUISER | VANGUARD |
| VELLFIRE | Venza | Verso-s | Verso-s/Ractis |
| VIOS | VITZ | VITZ HV | WISH |
| xA | xB | xD | Yaris |
| YARIS HV | YARIS/ECHO | ZELAS | ZZZ2_P4S |

| ZZZ3_P4C | ZZZ4_P5C | | |
|---|----------|--|--|
| TCM Function List (Note:For reference only) | | | |
| A/T Code Reset | | | |
| CVT Oil Pressure Calibration | | | |
| Deceleration Sensor Zero Point Calibration | | | |
| Reset Memory (Engine) | | | |
| Reset Memory (TCM) | | | |
| Transmission History Utility | | | |

TOYOTA/LEXUS/SCION TPM Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Car List

| CarMode | CarMode | CarMode | CarMode |
|----------------------|--------------------|-----------------------------|-----------------------|
| 4Runner | 86 | ALPHARD HV/VELLFIRE HV | ALPHARD/VELLFIRE |
| ALTEZZA/ALTEZZA GITA | ARISTO | AURIS HV | Avalon |
| Avalon HV | AVANZA | AVENSIS | before 2003 |
| before 2005 | BLADE | CAMRY | CAMRY HV |
| CAMRY/AURION | CENTURY | C-HR | C-HR HV |
| COROLLA | COROLLA HV | Corolla iM | COROLLA VERSO |
| COROLLA/AURIS | CROWN | CROWN ESTATE | CROWN HV |
| CROWN MAJESTA | CROWN Mild Hybrid | CT200h | ES200 |
| ES250 | ES300h | ES350 | ESTIMA |
| FJ CRUISER | FORTUNER/HILUX SW4 | FR-S | GS F |
| GS200t | GS250 | GS300 | GS300h |
| GS350 | GS430 | GS450h | GS460 |
| GX400 | GX460 | GX470 | HARRIER |
| HIACE | Highlander | HIGHLANDER HV | HIGHLANDER/KLUGER |
| Hilux | HS250h | iM | INNOVA/KI.JANG INNOVA |
| iQ | iQ EV | IS F | IS200t |
| IS250 | IS250C | IS300 | IS300C |
| IS300h | IS350 | IS350C | KLUGER |
| KLUGER HV | LAND CR PRADO | LAND CR. | LAND CRUISER |
| LAND CRUISER PRADO | LC500 | LC500h | LEVIN |
| LEVIN HV | LFA | LS350 | LS460 |
| LS500 | LS500h | LS600h | LX450d |
| LX460 | LX470 | LX570 | MARK X |
| MARK2/MARK2 BLIT | Matrix | MIRAI | NX200 |
| NX200t | NX300 | NX300h | PREVIA/TARAGO |
| PRIUS | PRIUS +/PRIUS V | PRIUS +/PRIUS V/PRIUS ALPHA | PRIUS C |
| PRIUS PHV | PRIUS Plug-in | Prius Prime | Prius V |
| PROGRES/BREVIS | RAV4 | Rav4 EV | Rav4 HV |
| RC200t | RC300 | RC300h | RC350 |
| RC-F | RX200t | RX270 | RX300 |
| RX350 | RX400H | RX450h | SC430 |
| SEQUOIA | Sienna | SIENTA | SOARER |
| Solara | Tacoma | tC | TUNDRA |
| Venza | Verossa | VERSO | Verso-s/Ractis |
| VIOS | Vista/Vista Ardeo | WINDOM | xB |
| xD | Yaris | YARIS HV | ZELAS |
| ZZZ1_P3S | ZZZ3_P4C | | |

TPM Function List (Note:For reference only)

ID Registration

Tire position writing